

VEVOR

 
Upgrade · The Home Creator Way

Slatwall Panels

VEVOR Support Center

1	YLP-SS-2W		2	YLP-SS-2B	
3	YLP-SS-2G		4	YLP-SS-4W	
5	YLP-SS-4B		6	YLP-SS-4G	
7	YLP-SS-8W-1		8	YLP-SS-8B-1	
9	YLP-SS-8G-1		10	YLP-SS-8W-2	
11	YLP-SS-8G-2				

MODEL: YLP-SS-2W, YLP-SS-2B, YLP-SS-2G, YLP-SS-4W, YLP-SS-4B, YLP-SS-4G, YLP-SS-8W-1, YLP-SS-8B-1, YLP-SS-8G-1, YLP-SS-8W-2, YLP-SS-8G-2

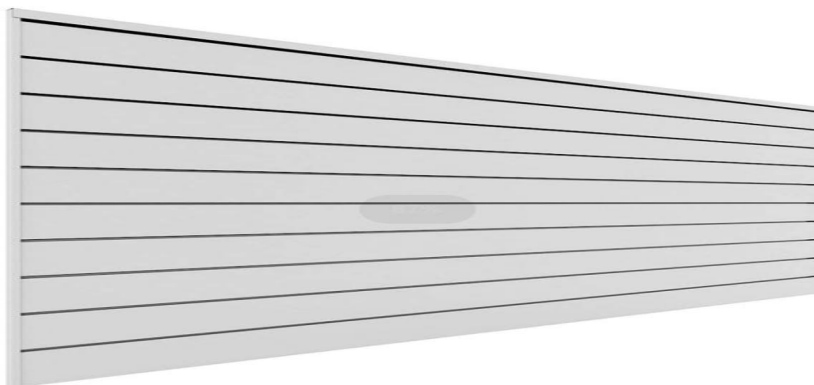

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

INSTRUCTIONS

Thank you very much for choosing this Slatwall Panels

- Please read all of the instructions before using it. The information will help you achieve the best possible results.

WARNING:

1. Operate in a safe work environment. Keep your work area clean, well-lit, and free of distractions.
2. Wear heavy-duty work gloves during assembly.
3. Over-loading is strictly forbidden.
4. Slatwall can be cut horizontally or vertically to accommodate room dimensions.
5. Preferably use an electric saw with a thin, sharp blade for slatwall cutting .

SAVE THESE INSTRUCTIONS

1. The product complies with relevant standards and regulations. Installation of this device must comply with all applicable regulations, and it should only be operated in well-ventilated areas. Please read the user manual before installing and using this equipment.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
3. Children shall not play with the appliance.
4. This appliance is intended to be used in household and similar applications such as: Warehousing & Logistics & Manufacturing & Factories & Office & Facility & Management & Agriculture & Gardening & Residential & Moving Services Event Management
5. Please properly keep product. Check whether the product is abnormal before use. If it is abnormal, please stop using it.
6. Please use the product according to the intended use, warn of potential injury from misuse.

MODEL AND PARAMETERS

Model	YLP-SS-2W YLP-SS-2B YLP-SS-2G	YLP-SS-4W YLP-SS-4B YLP-SS-4G	YLP-SS-8W-1 YLP-SS-8B-1 YLP-SS-8G-1	YLP-SS-8W-2 YLP-SS-8G-2
Quantity (pieces)	2	4	8	8
Size of each piece (ft)	4 * 1			
Total area (sq.ft)	8	16	32	32
Trim strip	2ft *2pcs 4ft *2pcs	4ft *4pcs	4ft *8pcs	4ft *8pcs
Hook rack	without			single arm (4inch) *12PCS both arms (8inch) *2PCS both arms (3inch) *2PCS both arms (4inch) *2PCS J arm (5inch) *2PCS
Material	PVC			
Capacity load	75lbs (34kg) per square foot			

YLP-SS-2W,YLP-SS-4W,YLP-SS-8W-1, YLP-SS-8W-2 are **white**.

YLP-SS-2B,YLP-SS-4B,YLP-SS-8B-1 are **black**.

YLP-SS-2G,YLP-SS-4G,YLP-SS-8G-1, YLP-SS-8G-2 are **gray**.

ASSEMBLY AND USE

1. Install the direction of the slatwall panel, see Figure 1.

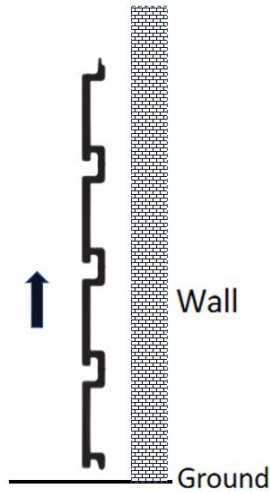 


Figure 1

2. It is recommended to install the wooden strips to the wall at intervals of 12" (305mm). Then install screws in the slots of the wall panels, as shown in Figure 2 and Figure 3. Be sure to level the Slatwall before screwing them into the wooden studs. Screw the slatwall pane, the torque of electric drill is recommended 18-38 N.M.

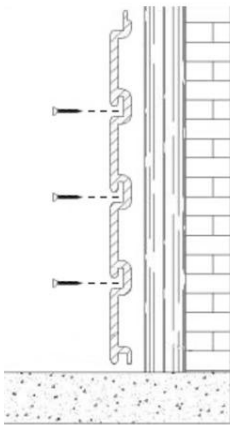 


Figure 2

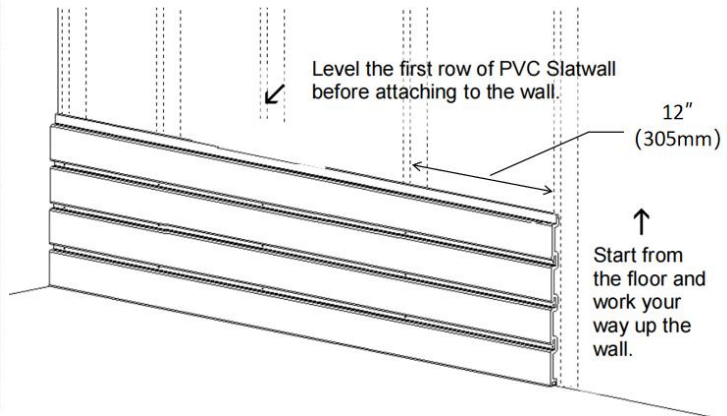 


Figure 3

MAINTENANCE

1. Avoid prolonged exposure to the sun to avoid aging.

