


Item # 68542.00  
Model # 68542.00

# HAMPTON BAY®

## USE AND CARE GUIDE

---

### CORAL CREST - CLUB CHAIR- BEIGE

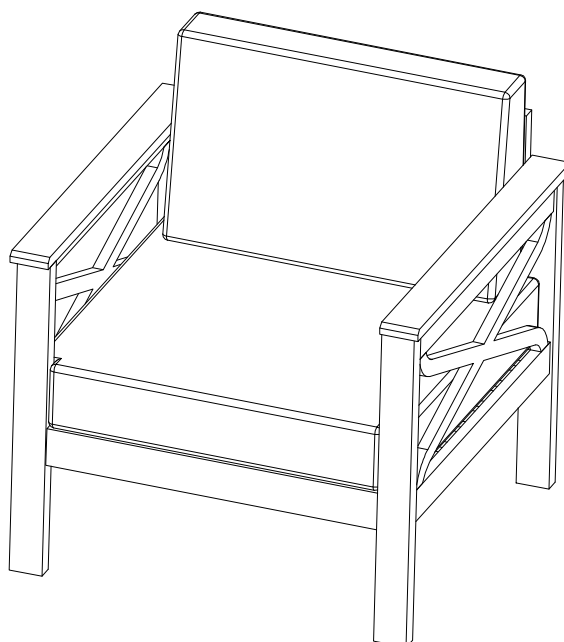

Questions, problems, missing parts? Before returning to the store,  
call Hampton Bay Customer Service  
8 a.m. – 7 p.m., EST, Monday – Friday, 9 a.m. – 6 p.m., EST, Saturday

**1-855-HD-HAMPTON**

**HAMPTONBAY.COM**

---

**THANK YOU**

*We appreciate the trust and confidence you have placed in Hampton Bay through the purchase of this chair. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Hampton Bay!*

# Table of Contents

Table of Contents .....	2	Package Contents .....	5
Safety Information .....	2	Assembly .....	6
Warranty .....	3	Maintenance .....	8
Pre-Assembly .....	4		
Planning Assembly.....	4		
Hardware Included.....	4		

## Safety Information

### SAVE THESE INSTRUCTIONS

 **WARNING:** Do not use the chair before all the bolts are fully tightened. If the bolts are not fully tightened, the chair section can become loose and may cause the chair to collapse and may result in injury or damage.

 **WARNING:** When not in use, secure the product in a cool and covered location.

### READ ALL INSTRUCTIONS BEFORE USE

To reduce the risk of injury to persons:

- Close supervision is necessary when this furnishing is used by or near children, or disabled persons, if applicable.
- Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.

### SET UP YOUR FURNITURE PROPERLY

- Ensure that all parts are assembled properly and fully tightened as per the instructions.
- When placing in the desired location, ensure that all legs are resting on the same surface.

### EXAMINE YOUR FURNITURE

Examine occasionally to ensure that there are no loose parts. If loose parts are found, they must be re-tightened fully.

### OBSERVE WEIGHT LIMITS

The weight limits for the following products are listed bellow:

- |  |   |
|--|---|
| <input type="checkbox"/> Chair: 300 lbs        | <input type="checkbox"/> Sofa: 700 lbs          |
| <input type="checkbox"/> Swivel Chair: 300 lbs | <input type="checkbox"/> Rocking Chair: 300 lbs |
| <input type="checkbox"/> Loveseat: 500 lbs     | <input type="checkbox"/> Chaise Lounge: 300 lbs |
| <input type="checkbox"/> Ottoman: 150 lbs      | <input type="checkbox"/> Dining Table: 100 lbs  |
| <input type="checkbox"/> Table: 50 lbs         | <input type="checkbox"/> Dining Chair: 200 lbs  |

# Warranty

## WHAT IS NOT COVERED

The furniture is warranted to be free from defects in material and workmanship of the original product when purchased from one of our authorized dealers. If a product fails and is under the terms of our limited warranty, the item will be replaced, usually for a small fee. In the case of discontinued models, an item of similar quality and style will be offered to the customer.

## 1 YEAR LIMITED FRAME WARRANTY

**Frames** are warranted to be free from defects in material and workmanship. Fading or discoloring caused by putting the product under sunlight or rain is not covered by this limited warranty. Damage to the frame due to improper assembly or exposure to water and subfreezing temperatures is not covered. Do NOT allow water to accumulate inside the frame.

**The Finish** is warranted against peeling, cracking, or blistering for a period of 1 year, provided the unit has not been scratched or abraded. Scratches and chips resulting from normal wear and use are not covered. Peeling resulting from exposure to elements is not covered.

## WHAT IS NOT COVERED

Furniture used for commercial, contractor or any non-residential purposes; clearance items, display models or items purchased "as is"; freight damage; furniture damaged by acts of nature, vandalism, fire, abuse, lack of proper care and maintenance, or improper assembly; straps and fabric against fading or discoloration from exposure to elements, oil spills, fluids or chemicals; glass against breakage; hardware against corrosion or rusting; buckling or splitting of tubing resulting from exposure to water and freezing temperatures.

Also excluded: Loss of use or time, inconvenience, money, travel, packaging or any other consequential or incidental damages. In no event shall the manufacturer's responsibility exceed the value of the replacement product.

Warranty is to the original purchaser when items are purchased from one of our authorized retailers and is not transferable. All warranty claims must be submitted with a dated register receipt within the warranty period. Should replacement of the warranty item be unavailable, the manufacturer reserves the right to substitute items of our choice that are of similar style and quality. For quality control purposes and verification, we reserve the right to request photography of the damaged item(s). The terms of this warranty are subject to change without notice.

Contact the Customer Service Team at 1-855-HD-HAMPTON or visit [www.Hamptonbay.com](http://www.Hamptonbay.com)

# Pre-Assembly

 
## PLANNING ASSEMBLY

To prevent damage, place all parts on a soft surface during assembly. Remove all protective caps before beginning assembly. Please read the instructions carefully, and verify all parts are included.

## HARDWARE INCLUDED




NOTE: Hardware not shown to actual size.



Part	Description	Quantity
AA	M6 x 65 Bolt	10+1
BB	M6 x 32 Bolt	2+1
CC	Flat Washer	8+1
DD	Spring Washer	8+1
EE	Allen Key	1

# Pre-Assembly (continued)

## PACKAGE CONTENTS

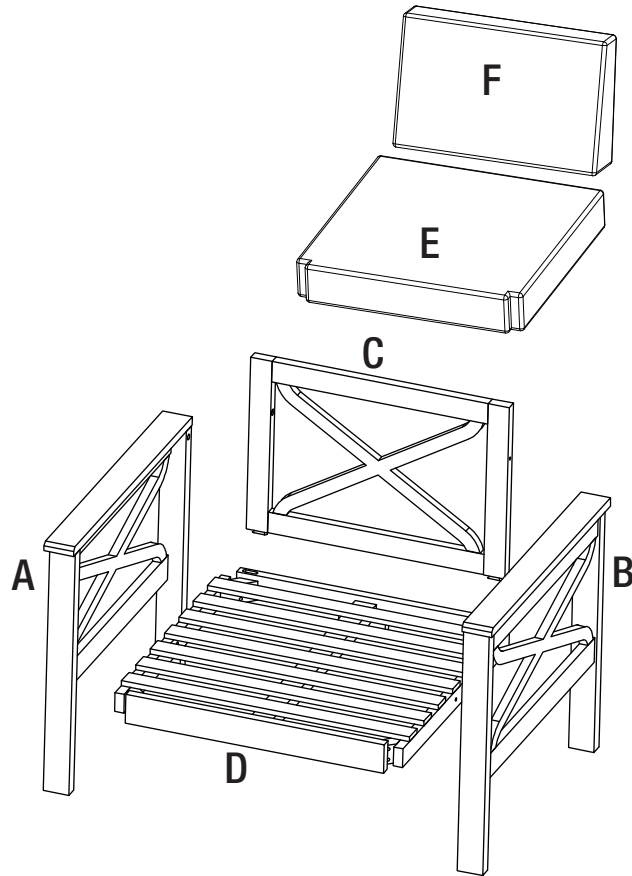


Part	Description	Quantity
A	Left Leg Frame	1
B	Right Leg Frame	1
C	Backrest	1
D	Seat	1
E	Seat Cushion	1
F	Back Cushion	1

# Assembly


## 1 Attaching the Seat (D) to the Right Leg Frame (B)

- Place the Right Leg Frame (B) on a soft surface.
- Attach the Seat (D) to the Right Leg Frame (B) using Bolts (AA) with Spring Washers (DD), Washers (CC) and Bolt (BB). Loosely tighten using the Allen Key (EE).

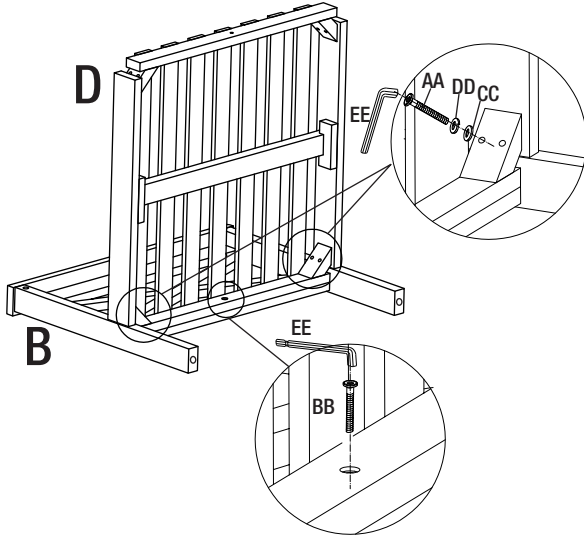


## 2 Attaching the Backrest (C) to the Right Leg Frame (B)

- Attach the Backrest (C) to the Right Leg Frame (B) using Bolt (AA). Loosely tighten using the Allen Key (EE).

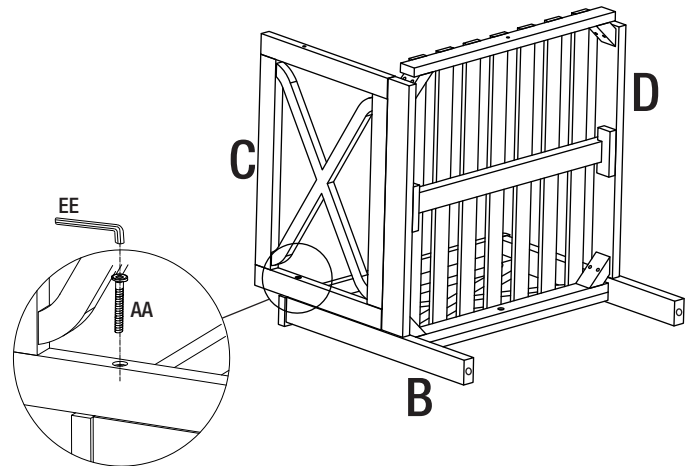


## 3 Attaching the Left Leg Frame (A) to the Chair Assembly

- Attach the Left Leg Frame (A) to the Chair Assembly using Bolts (AA) with Spring Washers (DD), Washers (CC) and Bolt (BB). Loosely tighten the Bolts using the Allen Key (GG).

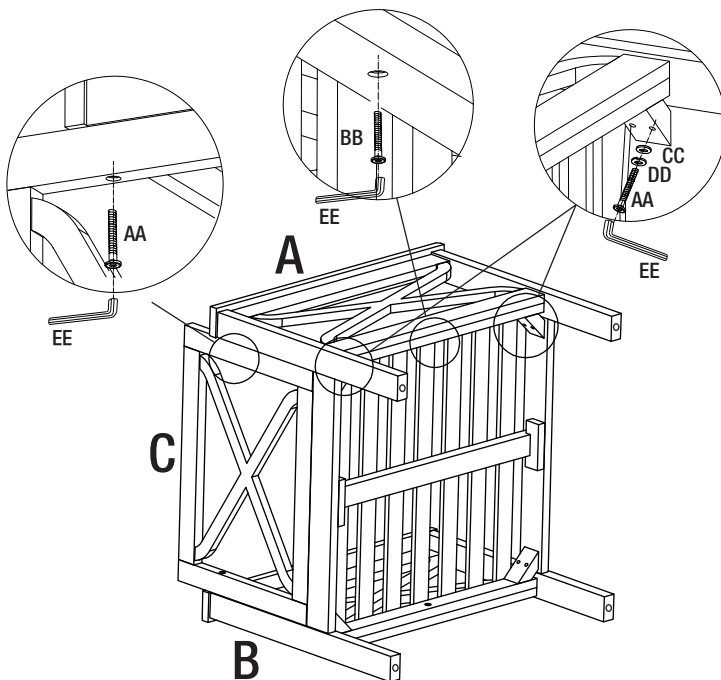

## 4 Checking the Chair


- Once all the Bolts are in place, fully tighten the Bolts.
- Turn the Chair right side up.
- Use levelers to adjust the height to achieve stability only after the unit is moved into the desired location. DO NOT drag the unit, as this may damage the levelers.

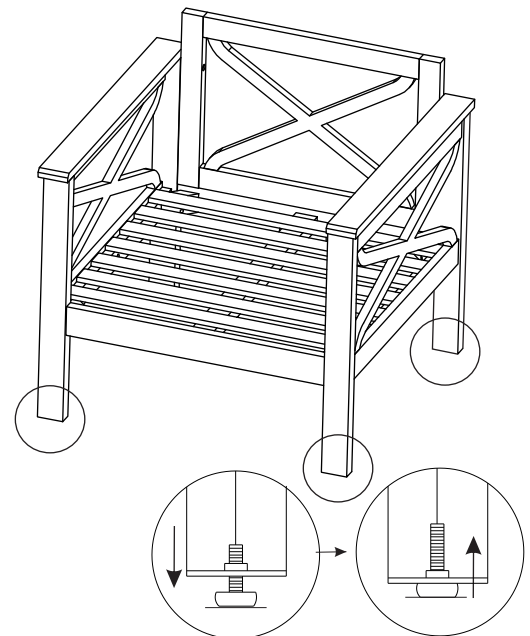

## Assembly (continued)


### 5 Attaching the Seat Cushion (E) to the Back Cushion (F)

- Attach the Seat cushion (E) to the Back cushion (F) with the velcro strap.

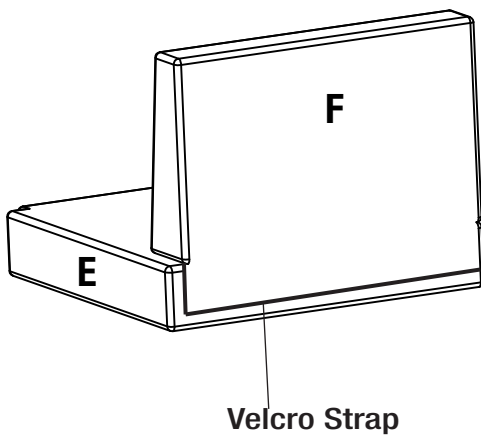

### 6 Completing the Assembly

- Place the Seat Cushion (E) and the Back Cushion (F) on the Chair.
- Tie the velcro strap of Seat cushion (E) to the slat of Seat (D).
- Inspect the chair and make sure all parts are adequately connected.
- This Chair is now ready for your enjoyment.

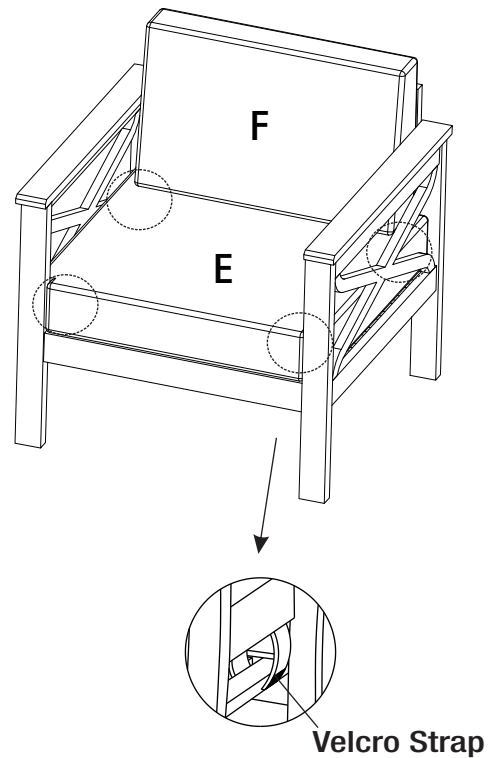

# Maintenance

Wood is a living material that continues to respond to climate conditions even after being made into a piece of furniture.

After assembly rub the furniture with a soft rag to remove any residual dust. Wood is a natural material whose appearance will change when left outdoors. This product has been treated prior to leaving the factory. To clean, use mild soap and warm water. Do not use abrasive material, cleansers or bleach products. Dry thoroughly with a soft cloth.

Even though this piece of furniture is extremely durable and long-lasting, to prolong life we recommend bringing it indoors during freezing temperatures. Place it in a shaded area and do not leave it in standing water or on wet ground.

Do not put hot items directly on the furniture surface.

Do not store furniture in areas that have central heating or cooling vents to prevent excessive drying of the wood. This will decrease the furniture's longevity.

Do not write on furniture without a padded barrier to protect the surface.

In order to maintain the product's durability, please read carefully.

Cover your furniture during winter months or move into covered storage, if in wet climates.

The manufacturer supports protection of the world's forest resources and is diligent in sourcing legally harvested wood.

# HAMPTON BAY®

Questions, problems, missing parts? Before returning to the store,  
call Hampton Bay Customer Service  
8 a.m. – 7 p.m., EST, Monday – Friday, 9 a.m. – 6 p.m., EST, Saturday

**1-855-HD-HAMPTON**

**HAMPTONBAY.COM**

Retain this manual for future use.