


Computer Desk with Drawers & File Cabinet

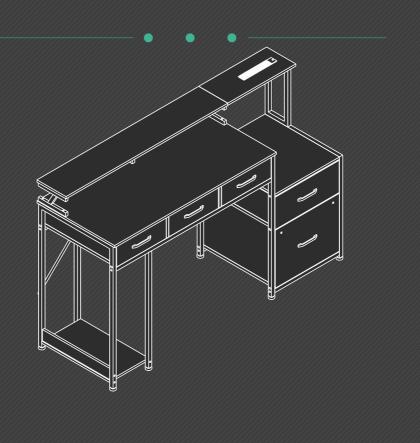

USER MANUAL

TOPIC			PAGE
01	SAF 1-1 1-2	ETY INSTRUCTIONS Thank You For Choosing Our Product Precautions	01-01 01 01
_	INS	TALLING MODULES	02-38
02	2-1	Disassembly Diagram	02
UZ	2-2	Parts List	03-38
	2-3	Assembly Instructions	05-38
	CUSTOMER SERVICE		39
03	3-1	1-Year Warranty	39
03	3-2	Quick Response Within 24 Hours	39
	PRO	DBLEMS YOU MAY ENCOUNTER	40
04	4-1	Problems You May Encounter	40

Safety Instructions

Thank You For Choosing Our Product

Before assembly, please read this USER MANUAL first, and check according to Parts List to make sure all parts are included.

Feel free to contact us if you have any concerns or questions about your product, we are always ready to help. Your satisfaction is our first priority!

Precautions



 Avoid long-term direct sunlight exposure.



Keep away from sharp objects.



Keep away from heat.



 Keep infants/children away from assembly parts to avoid choking and suffocation.




 Keep away from corrosive substances.



 Pay attention to avoid over-tightening fasteners, or they may induce cracking within the board.


Disassembly Diagram

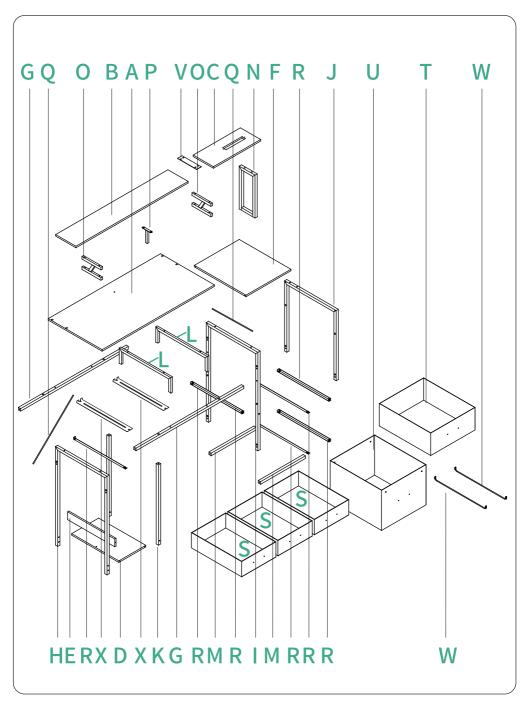


Parts List

For ease and safety, we recommend two people for assembly.



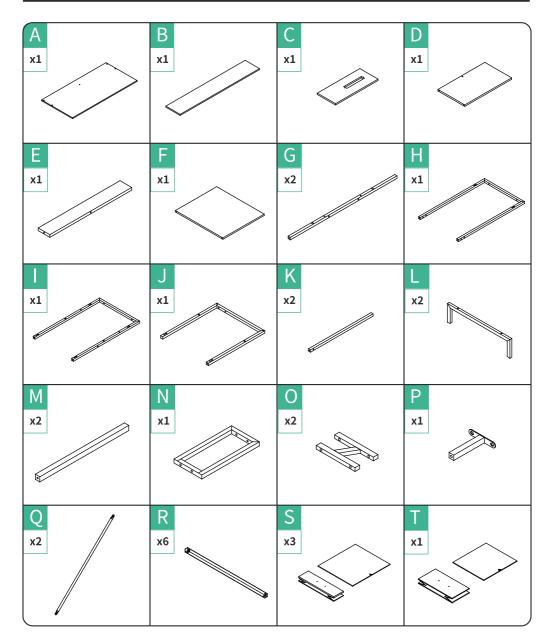



Parts List

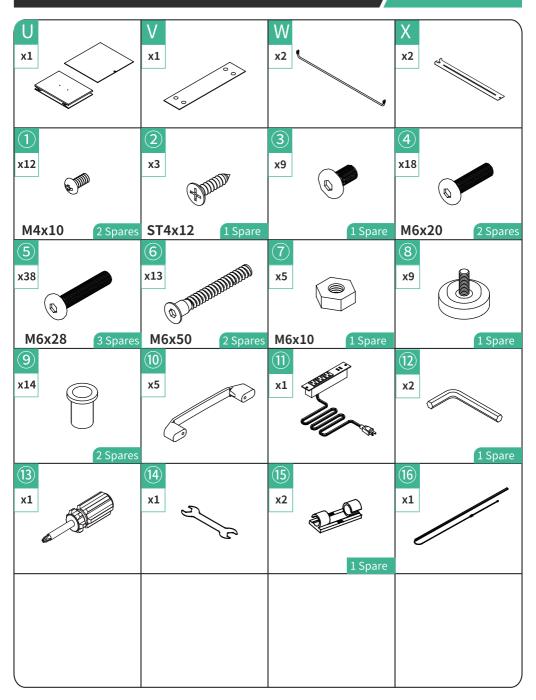






Attention: The shelves can be installed on either side, you can choose one Instruction as you prefer.

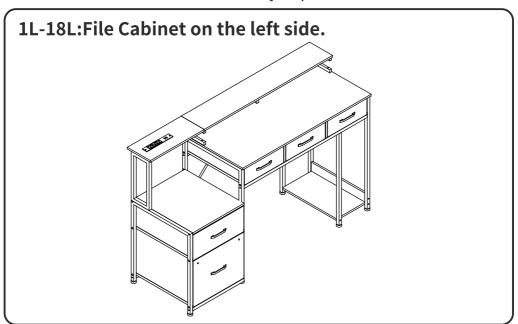


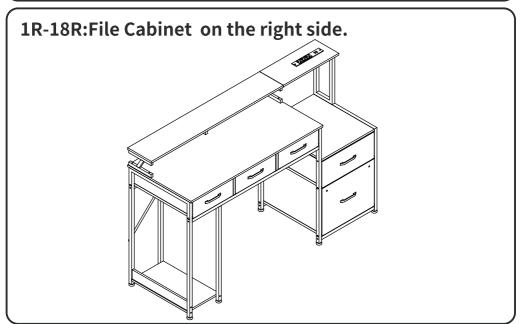


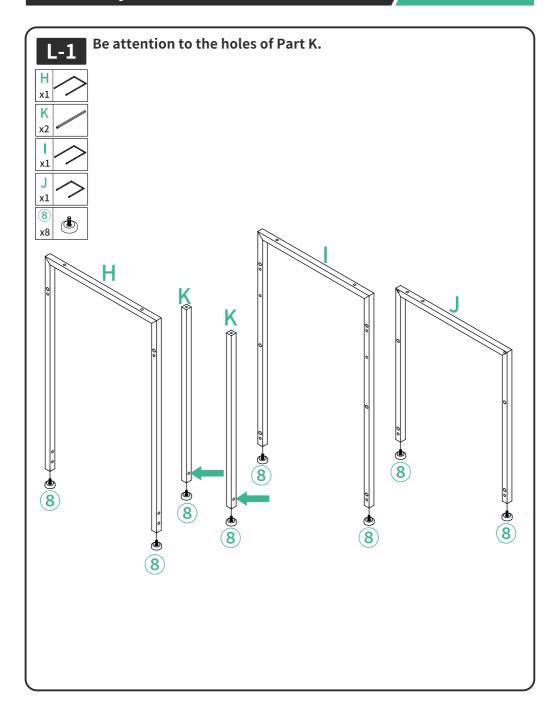


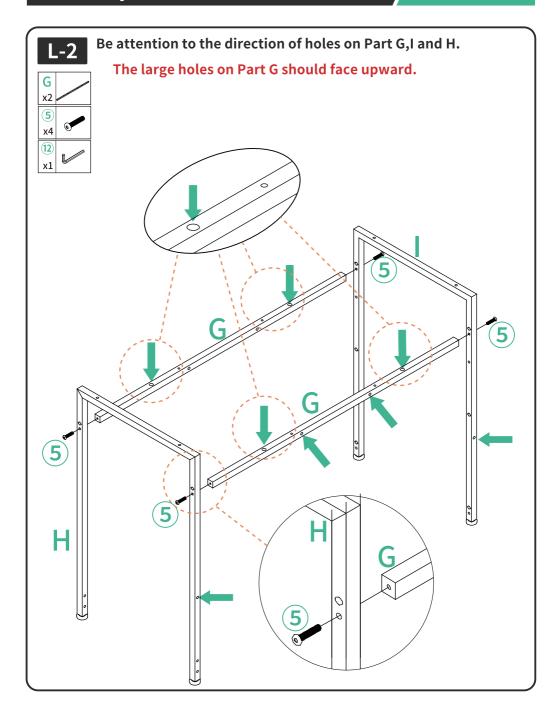


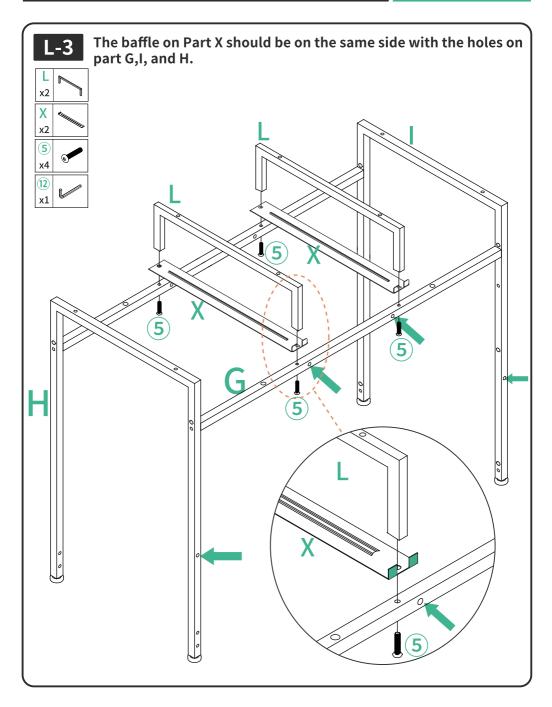


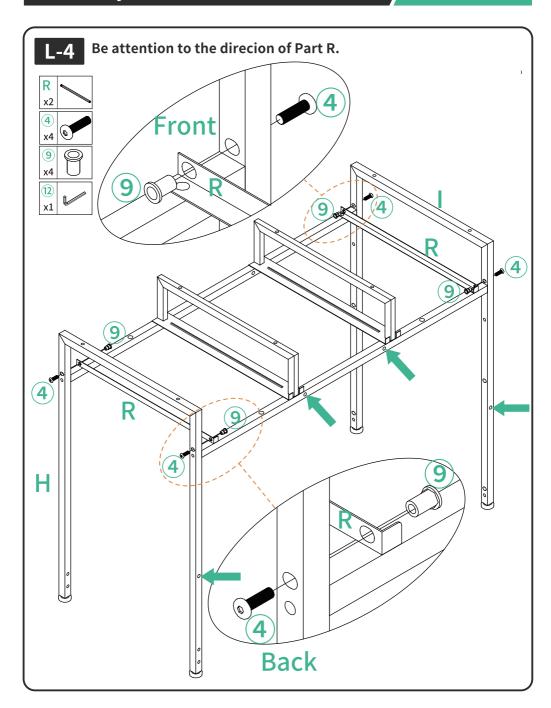


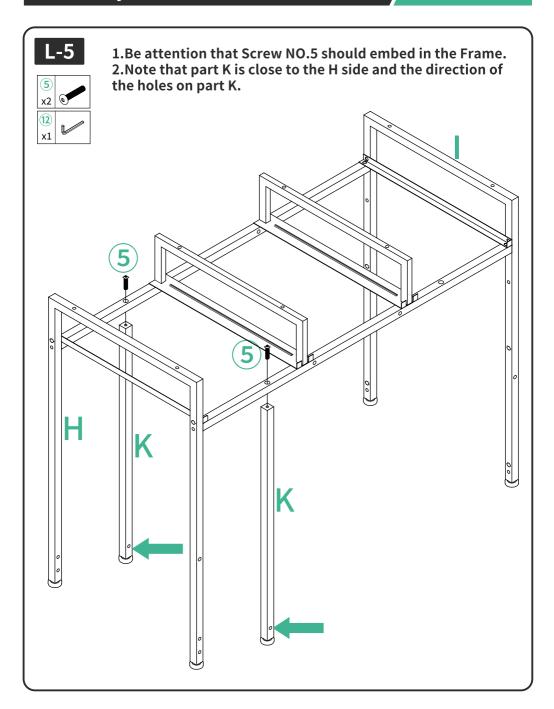


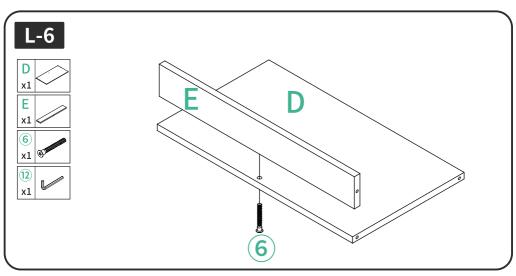


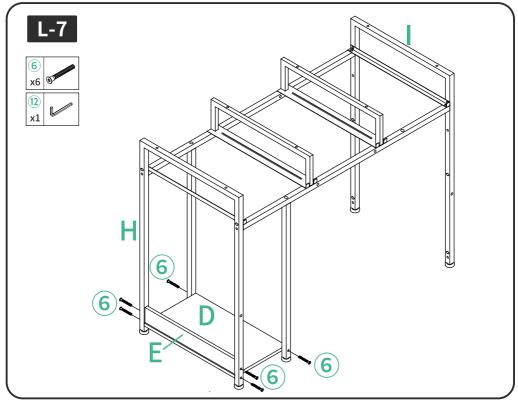


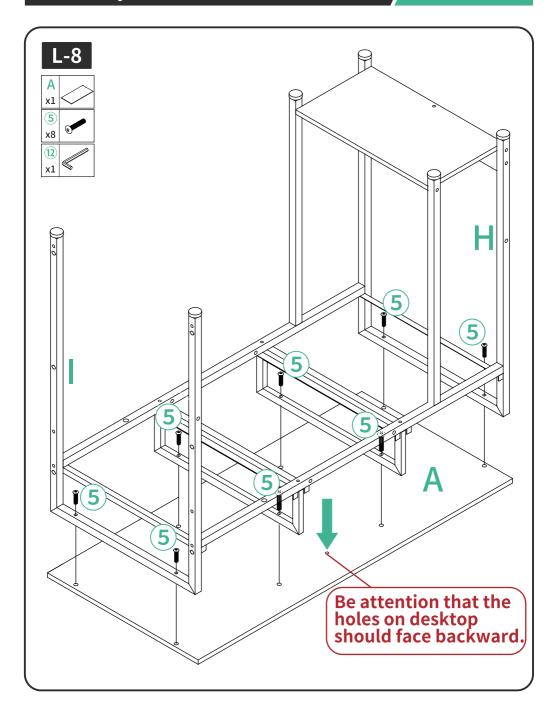


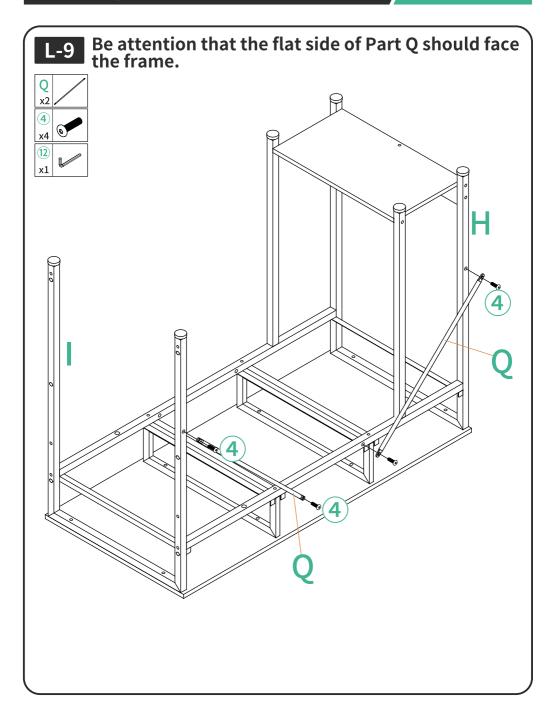


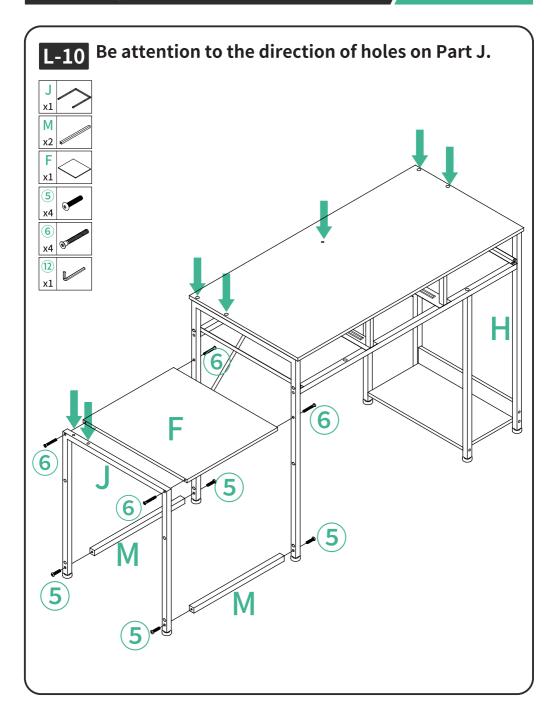


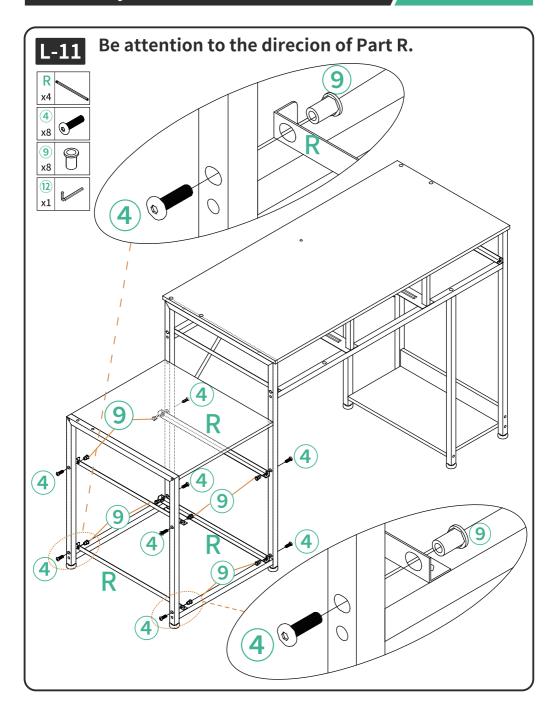


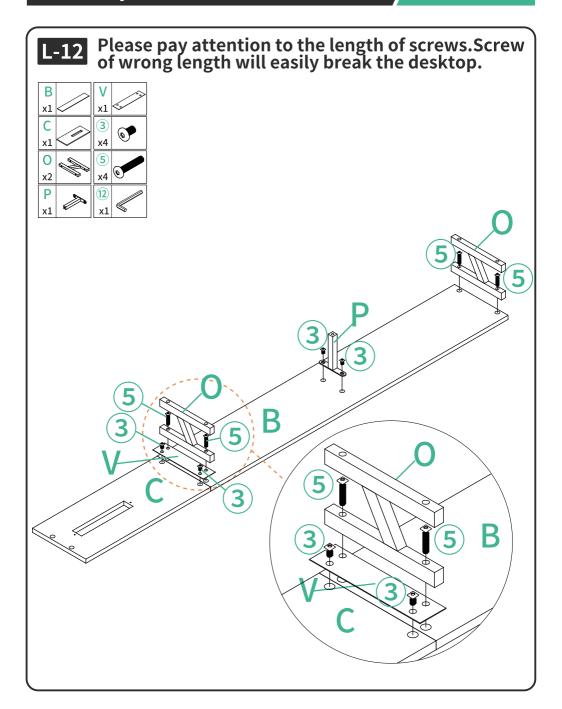


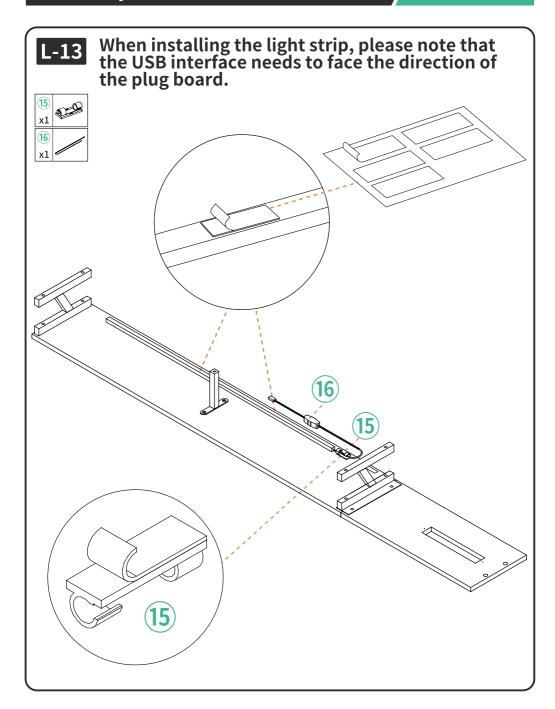


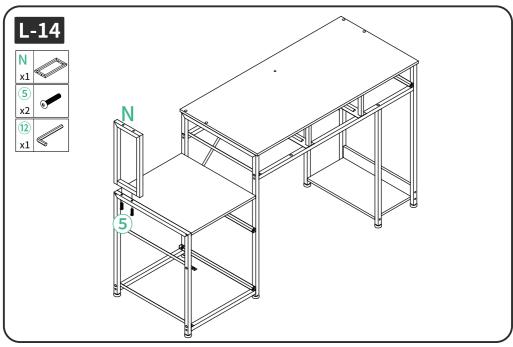


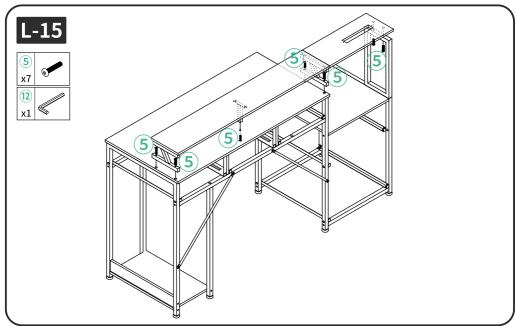


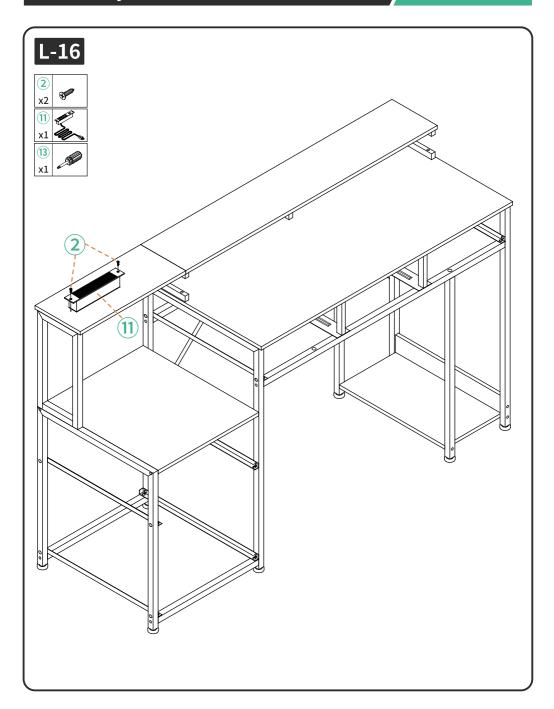


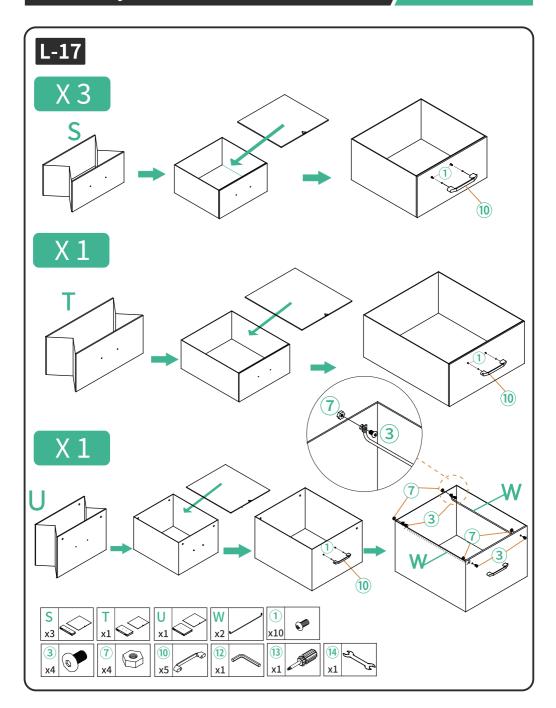


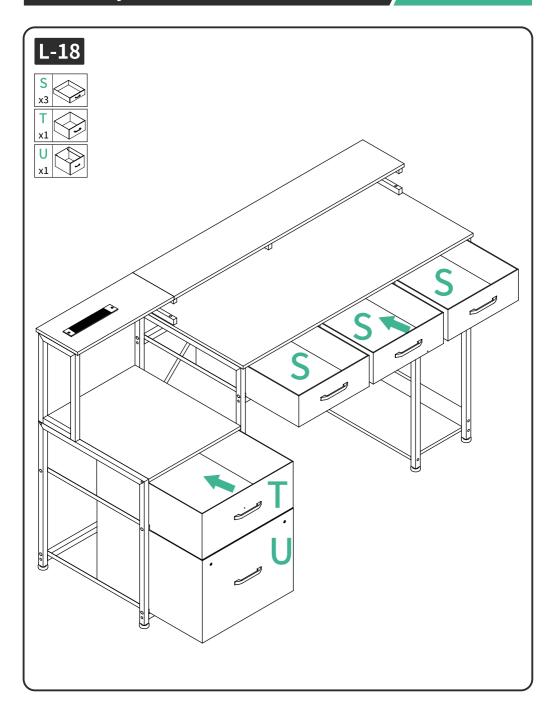


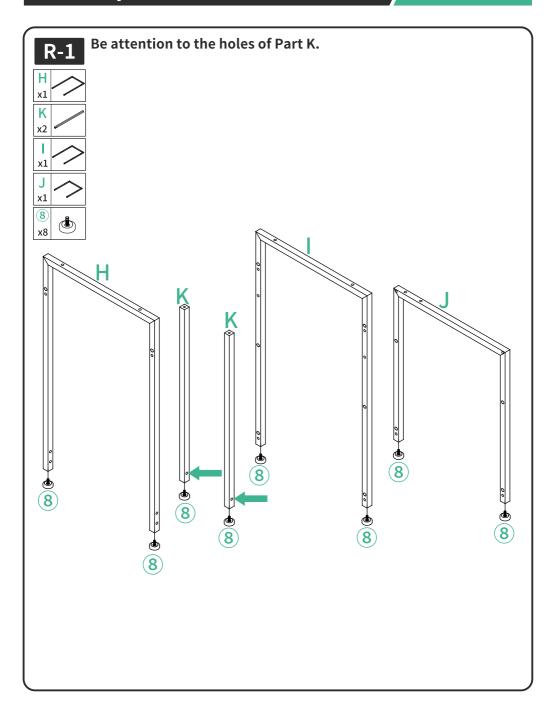


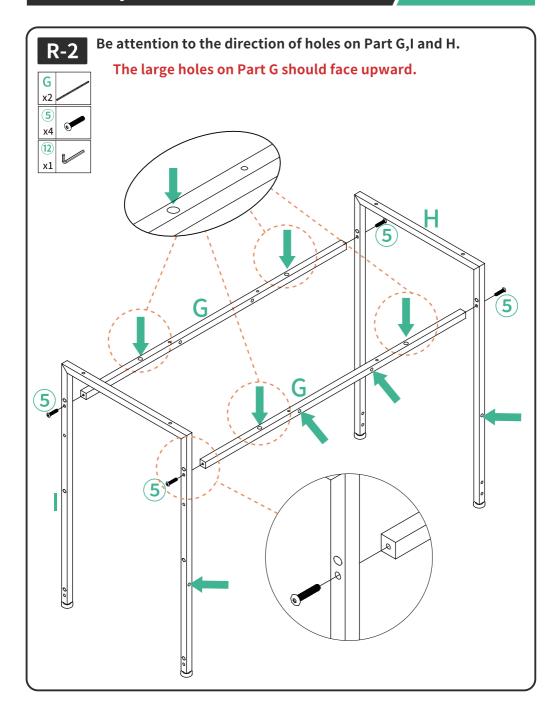


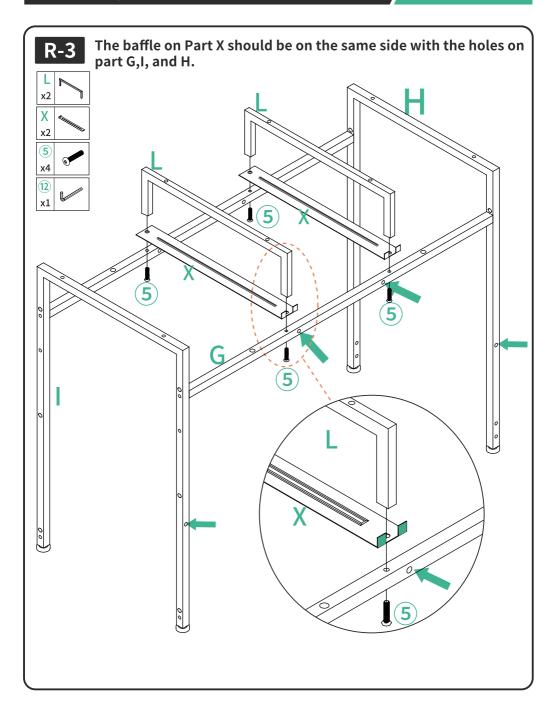


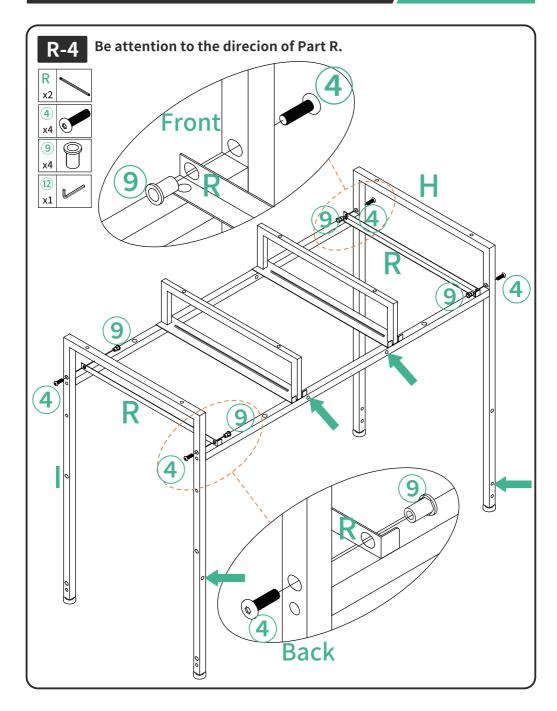


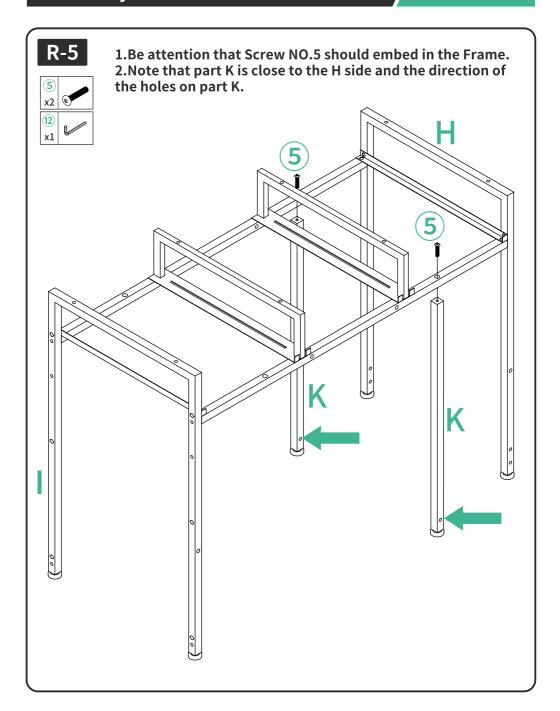


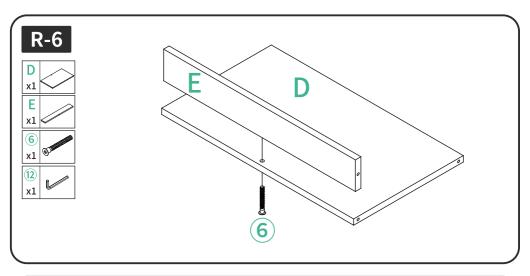


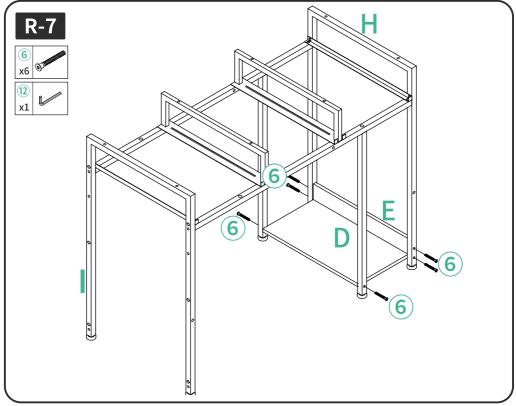


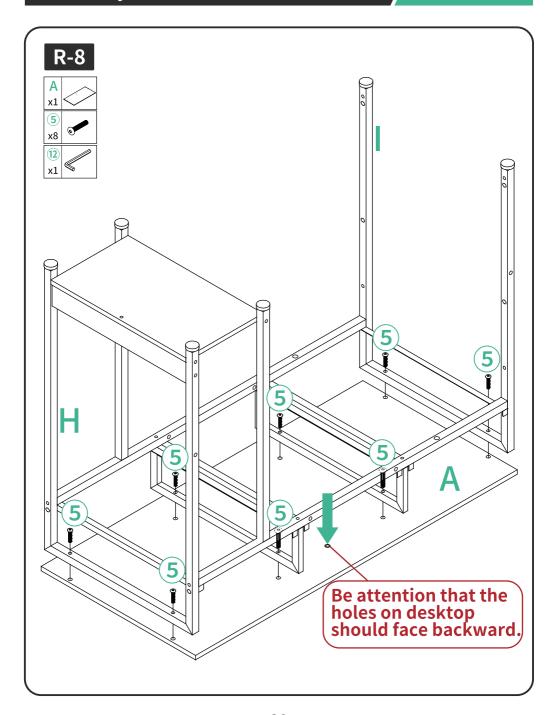


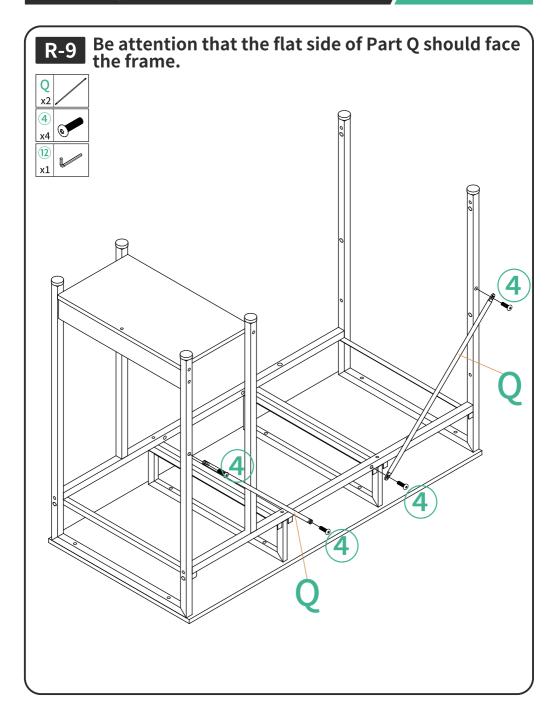


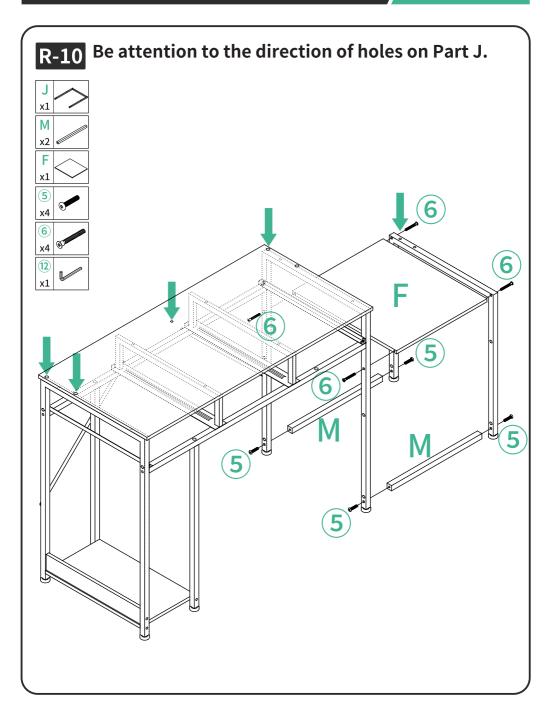


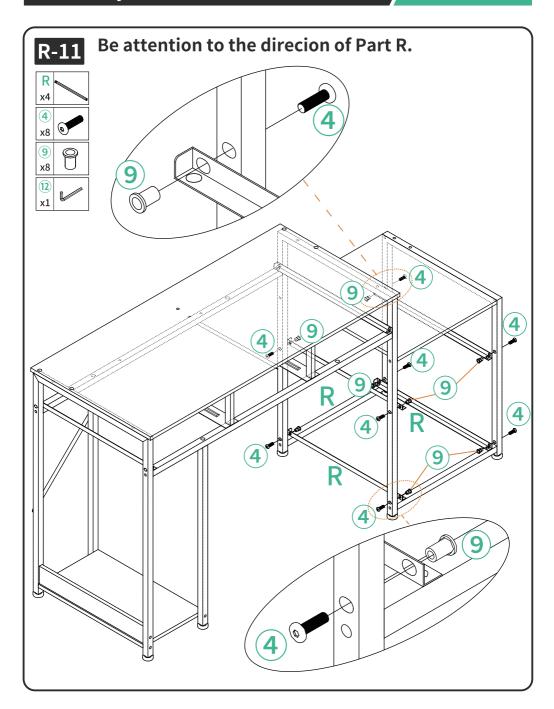


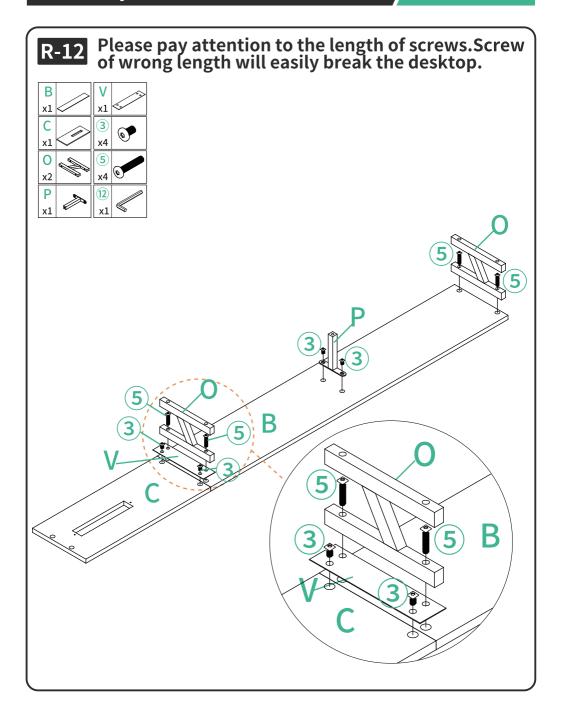


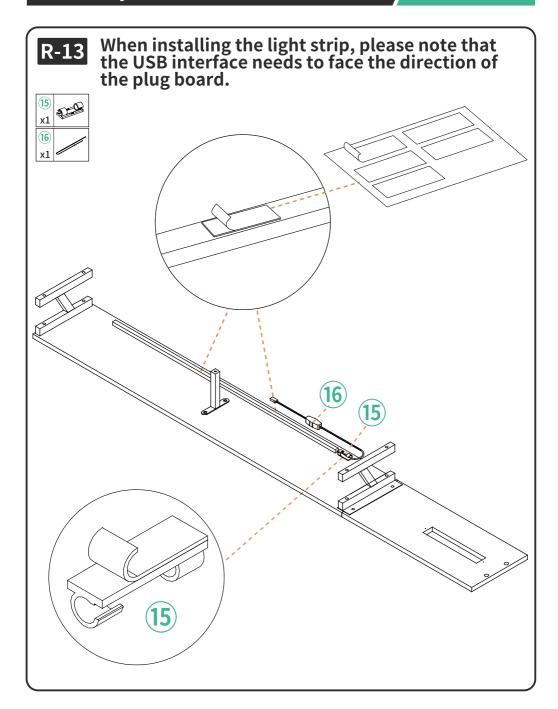


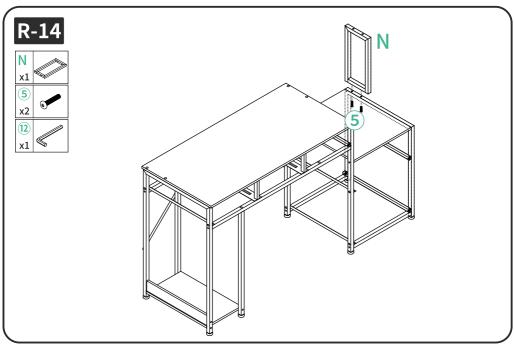

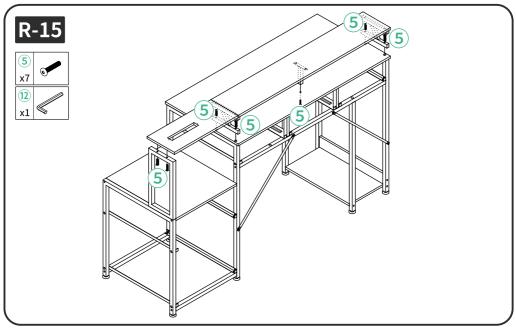

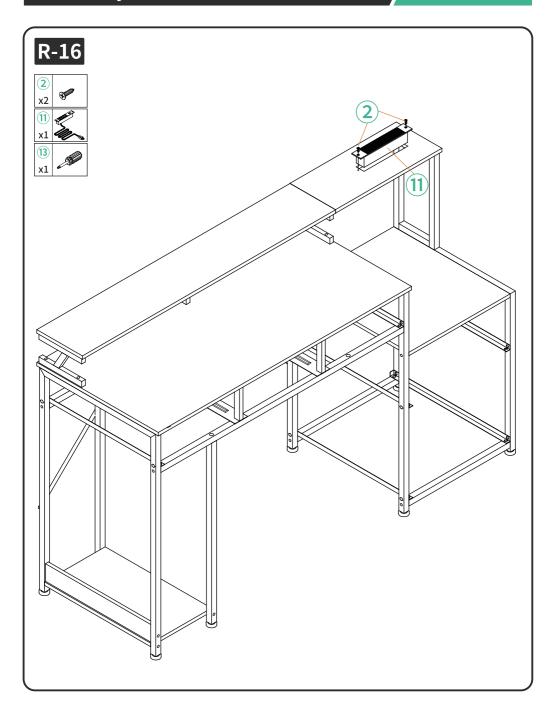

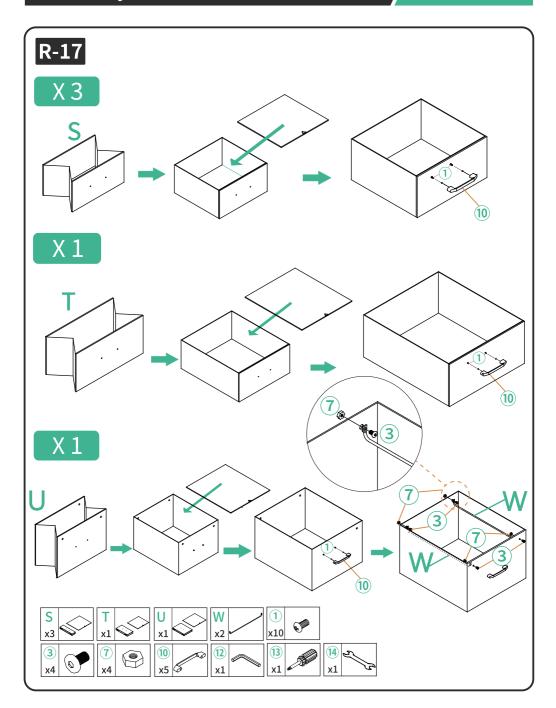

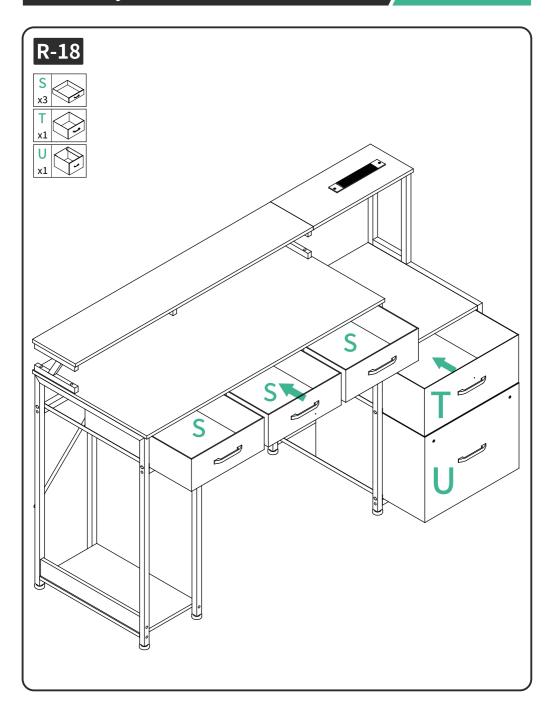







Speed & Brightness and Power Button



STATIC COLOR BUTTON

Press this button once to switch to the static color mode, and then each pressing can change the color.

DYNAMIC MODE BUTTON

Press this button once to switch to the dynamic mode effect, and then each pressing can change the dynamic mode.

Press this button for more than 2s to switch to the demo mode; In the demo mode, the strip will automatically cycle through various dynamic modes.

SPEED & BRIGHTNESS AND POWER BUTTON

A. In the static mode, press this button to adjust the brightness of the light bar; each press can switch to a brightness level.

B. In the dynamic mode, press this button to adjust the dynamic mode speed; each press can switch to a speed level.

C. Press and hold this button to shut it down when the strip is on. Press this button to turn it on when the strip is off.

The product has a power-off memory function; the strip can restore the color, brightness, and mode in the next power-on.

Customer Service



1-Year Warranty

We guarantee your product is free from defects in product material and workmanship for one (1) year starting from the date of purchase during normal use of household conditions. If your appliance fails to operate properly within our warranty period, we will arrange a new one. Replacement is free and all shipping costs are covered.

Quick Response within 24 Hours



If you are still unable to resolve the issue you are experiencing, please contact us immediately via our support email. It doesn't matter if the product has been installed or not, our customer support team will respond within 24 hours and assist you quickly and efficiently. The most efficient way to confirm your problem to us is to attach a video, which illustrates your product issues.

Problems You May Encounter

PART	PROBLEM	SOLUTION	
Whole Product	Parts are missing, defective or having wrong parts in package.	You can contact us and we will get back to you within 24 hours. Or, you can reach us via after-sales email.	
	Having issue(s) while reading the instruction or completing the assembly.	You can contact us and we will get back to you within 24 hours. Or, you can reach us via after-sales email.	
	Encountering non-human caused damage during usage.	If the product is damaged due to non-human causes, please keep the product and send us photos of it. We will ascertain the cause of the product damage within 48 hours and provide you with a satisfactory solution.	
Table Surface	Board Surface is broken, scratched or lack of somescrew holes.	You can contact us and we will get back to you within 24 hours. Or, you can reach us via after-sales email.	
	The screw holes that on the board and the steel frame don't line up.	 Please tighten the screws on the board by 70%, do not tighten completely. Adjusting board and steel frame until the screw holes are lined up, then tighten all the screws. 	
	The desk board is uneven or not tight that has gaps after being assembled.	Loosen the screws in the uneven or gap positions; adjust until the desktops are flat and tight, and then tighten the screws. If your problem still can't be solved, please feel free to contact us.	
Steel Frame	The steel frame is bent, broken, painted, rusted or damaged.	You can contact us and we will get back to you within 24 hours. Or, you can reach us via after-sales email.	
	The table is unstable after being assembled.	 Check if the screws are tightened. Read throughout the manual, check are there any parts installed incorrectly or missing assembled. If your problem still can't be solved, please feel free to contact us. 	
	Encountering non-human caused damage during usage.	If the product is damaged due to non-human causes, please keep the product and send us photos of it. We will ascertain the cause of the product damage within 48 hours and provide you with a satisfactory solution.	