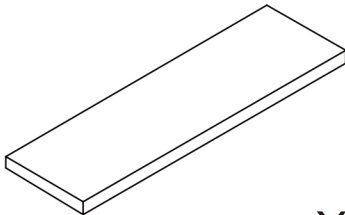 
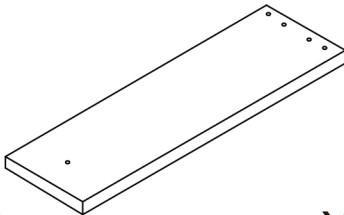 
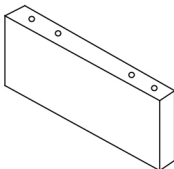 
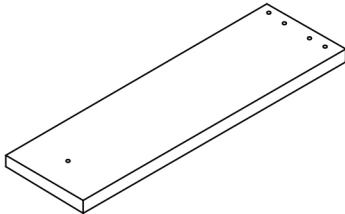 
 
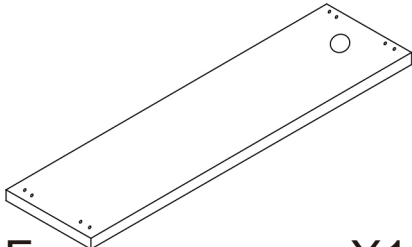 
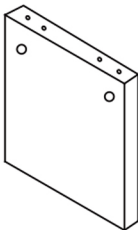 

 


 
 
 

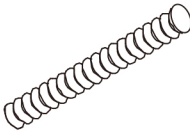 
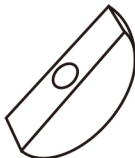 

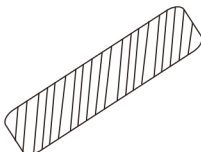 
 
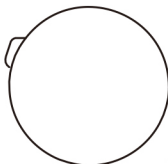 
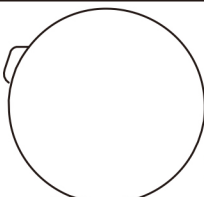 
 



Please read these instructions and warranty information carefully before use and keep them properly for future reference.


OPERATING INSTRUCTIONS

Part List


 A X1	 B X3	 C X1			
 D X1	 E X2	 F X1			
 G X1	 H X2	 I X2			
 J X2	 1 X4	 2 X8	 3 X4		
 4 X8	 5 X8	 6 X4	 7 X4		
 8 X4	 9 X 20	 X6		 X8	 X4
					

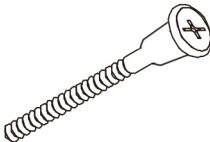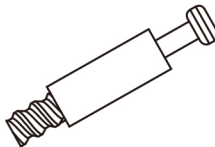Assembly Instructions

 
1

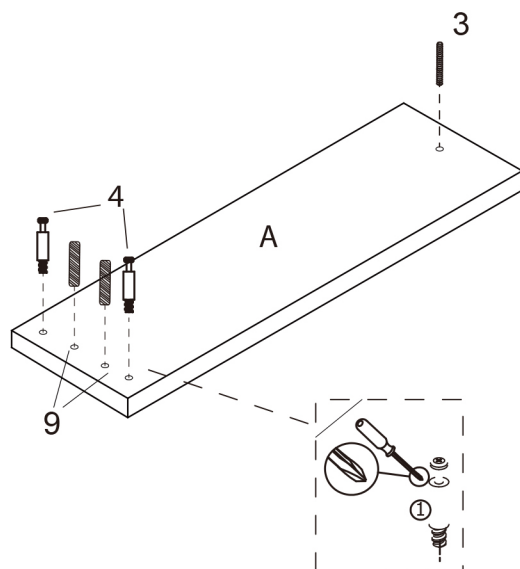


2

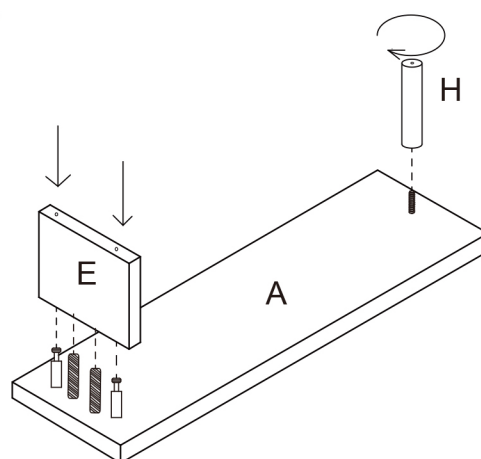 


3

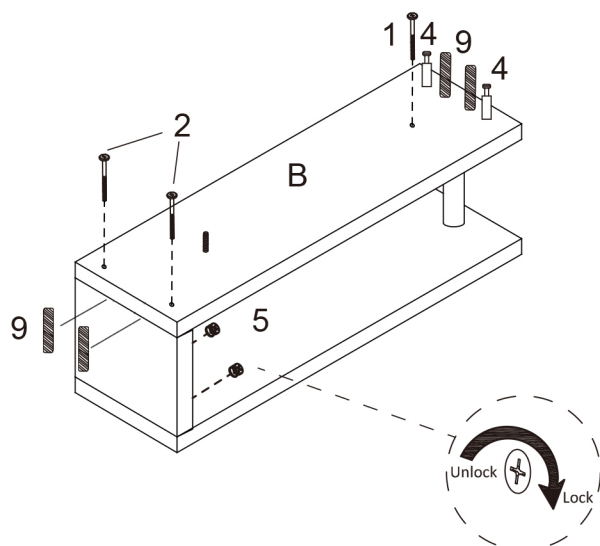 


4

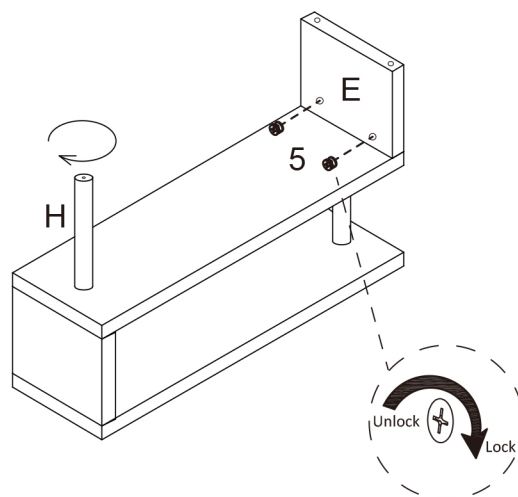 

5

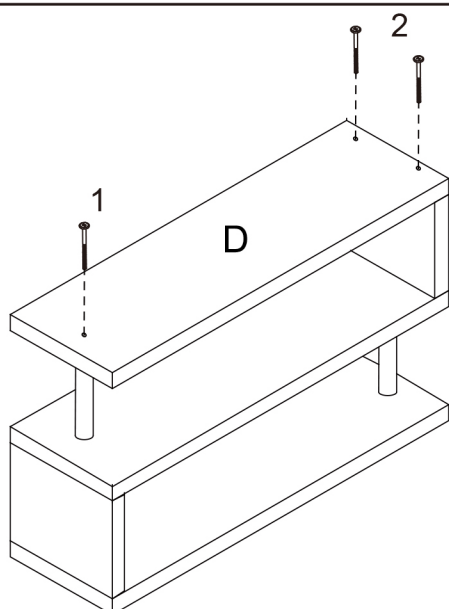 


6

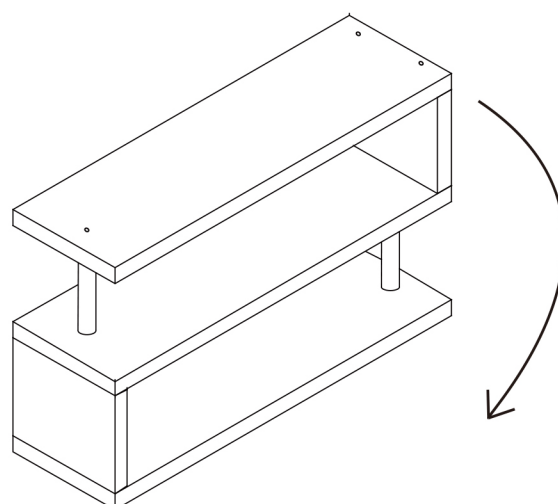 


Assembly Instructions

 7

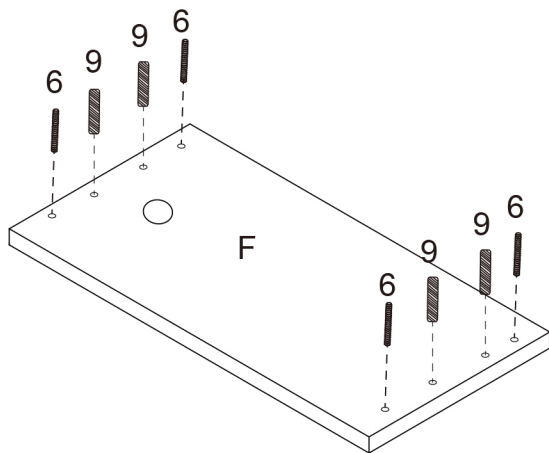


8

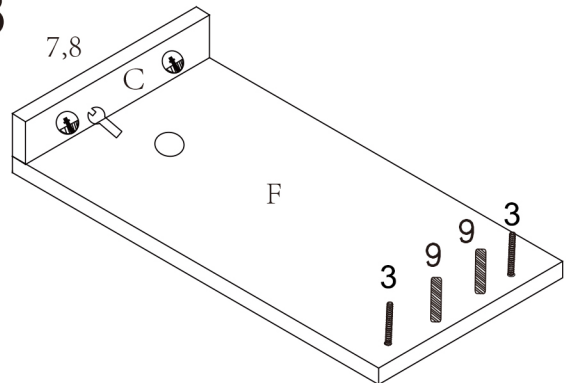 


put the table panle(C) on the top(F).
then setup the quadrant link(7) on the
screw(6), then use tools and nut(8) tighten.

 
9

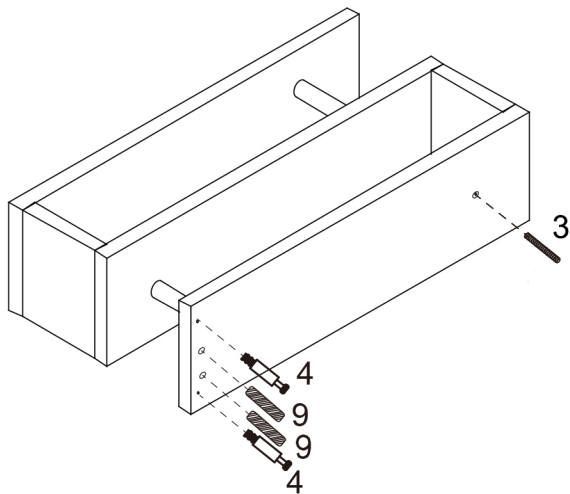


10

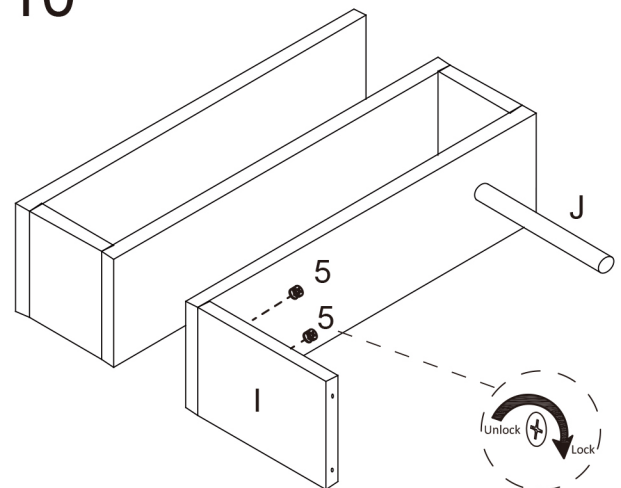 

11

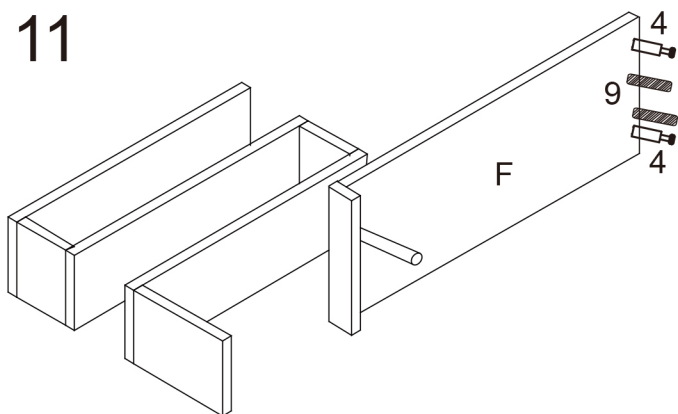 


12

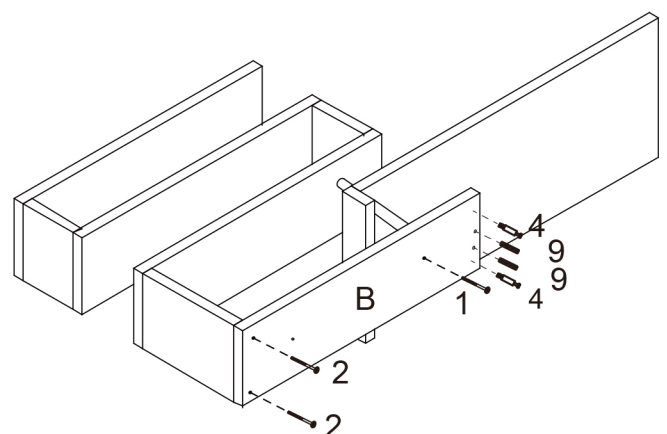 


Assembly Instructions

 13

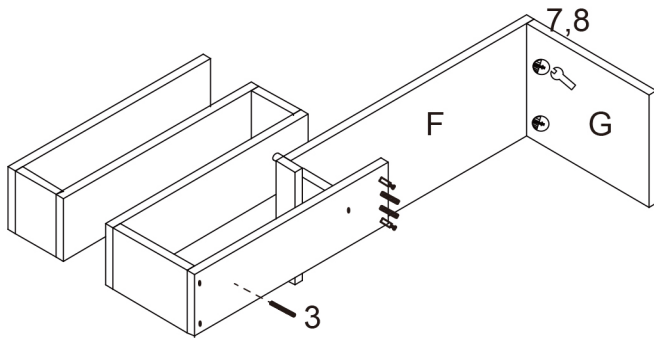


put the table panle(G) on the top(F).
then setup the quadrant link(7) on the
screw(6), then use tools and nut(8) tighten

 
14

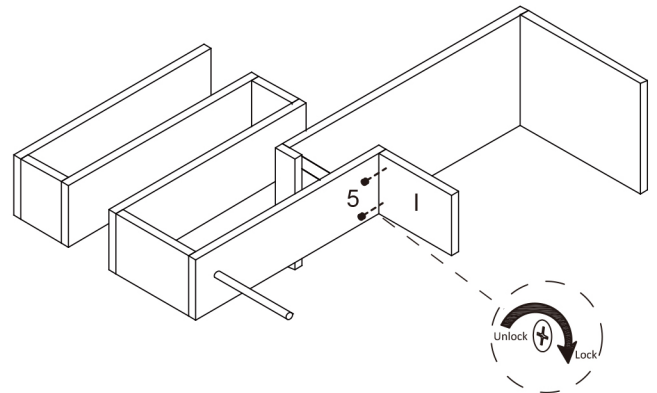


15

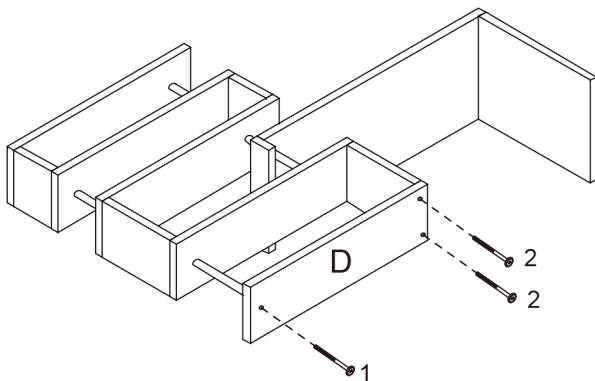 

16

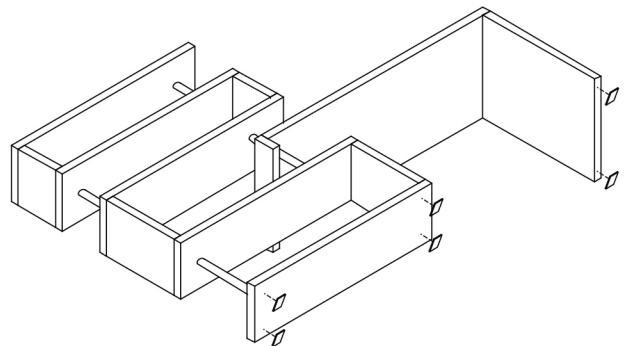 

17

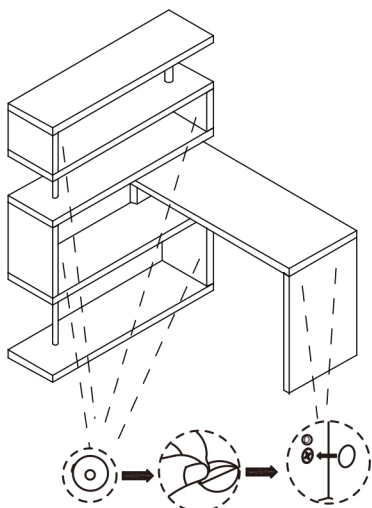 

use PVC sticker stick the hole.
there have two sizes holes.