


Installing your **SCHWUNG** Cloud 250 7 Globes

Collection

Cloud 250 7 Globes

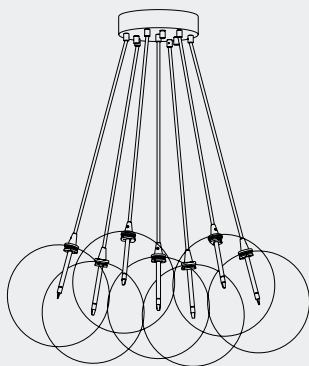

Our goal is to bring energy, warmth and pleasure into your personal space. It's great to be here.

Safety instructions	6
------------------------	---

Components and features	8
----------------------------	---

Assembly instructions	9
--------------------------	---

Cleaning and maintenance	13
-----------------------------	----

Troubleshooting	14
-----------------	----

Safety instructions



We recommend installation by a licensed electrician.

Safety instructions

These instructions are provided for your safety. It is very important that they are read completely before beginning the installation of your fixture.

1. Turn off electricity at the main circuit breaker panel before beginning installation.
2. We highly recommend that the direct wire fixture shall be installed by a certified and licensed electrician. The customer should not attempt to install.
3. This fixture has been rated for up to 71.6W max 12V G4 base bulbs. To avoid the risk of fire, do not exceed the recommended wattage.
4. If any special control devices are used with this fixture, follow the instructions to assure full compliance with the N.E.C. requirements.
5. This fixture should only be used with a trailing edge dimmer.
6. Mounting hooks and wall anchors are not included. To select the proper type of mounting hook /wall anchor for your wall/ceiling please contact your local hardware store for assistance. If you have any questions, contact a licensed electrical contractor.

Warnings

- Do not mount or unmount the glass globes if the fixture or light bulbs are hot.
- All wires are connected. Do not remove the ceiling light from its packaging by pulling on the power cord, as a bad connection may result.
- Do not use if the light cable/cord is damaged.
- To reduce the risk of fire, electrical shock or personal injury, always turn off the light fixture and allow it and the globes to cool prior to replacing light bulb.
- When mounting the fixture, always use the cotton gloves included.
- Do not touch bulb when fixture is turned on. Do not look directly at lit bulb.
- Keep flammable materials away from lit bulb.

Federal Communications Commission

FCC Statement

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that might cause undesired operation.

Contact: Schwung Home, 501S. Centennial Street, High Point, NC 27260, +1 336 307 3712

Components and features

FEATURES

- Hand-crafted in brass
- Mouth-blown glass globes



1ST CHOICE RECOMMENDED DIMMERS REQUIRING NEUTRAL WIRE

- Lutron Skylark SELV-300P
- Lutron Maestro MA-PRO-WH 250W
- Lutron Diva DVELV-300P-WH

2ND CHOICE RECOMMENDED DIMMERS NOT REQUIRING NEUTRAL WIRE

- Lutron Ariadni AYCL-153P
- Lutron Ariadni AYLTV-603P
- Lutron Ariadni AYLTV-600P
- Lutron Diva DVCL-153P

COMPONENTS

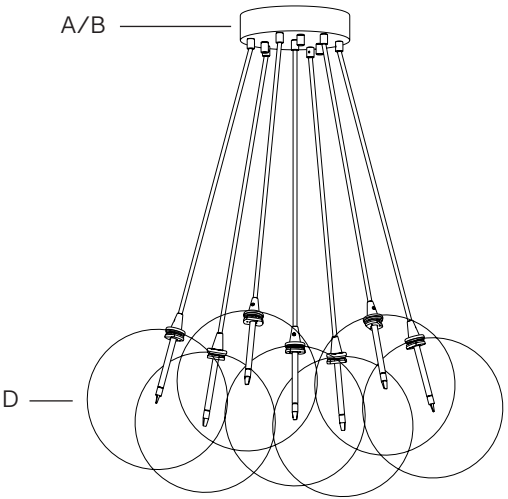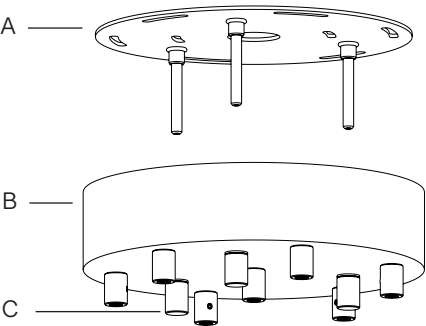

- A Top ceiling plate (1x)
- B Bottom ceiling plate (1x)
- C Plate nuts (3x)
- D Glass globes (7x)
1.6W LED G4 bulbs (7x)

Not Included
(recommended for installation):
Anchors
Screws
Electric drill
Pencil


Tools Enclosed:
Pair of cotton gloves

Assembly instructions



Make sure you cut off power supply at the main fuse box/circuit breaker before commencing any work.


1

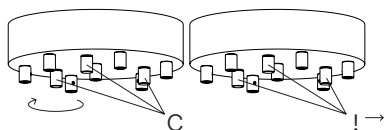

Take out the ceiling plate and unscrew the 3 plate nuts [C].

NOTE: The washers are to be removed, they are only used for transportation. Place the fixture and nuts on a soft surface. Please notice the bottom ceiling plate is shown without the cords for clarity only. The cords are fixed to the plate.


2

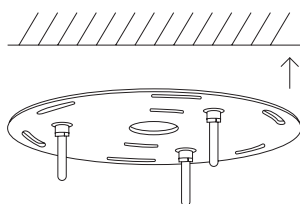

Lift the top ceiling plate from the fixture and place it flush against the ceiling, pull electrical cords through the hole and mark anchor spots. Drill holes in all the marked spots and place anchors in if needed.


NOTE: Consult your local hardware store for proper anchors for top ceiling plate.

3

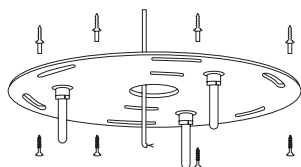

Pull wires protruding from the ceiling through the ceiling plate and screw the anchor screws in.


4

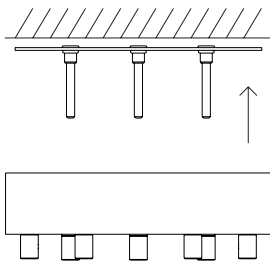

Carefully lift the fixture.

NOTE: Two people are needed for this and the following steps.


5

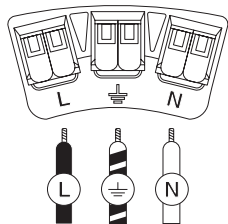

Make all necessary electrical connections. Junction boxes may vary depending on location. The diagram on the left shows the most common markings and manner of connecting the cords.


NOTE: We recommended installation by a licensed electrician.

6

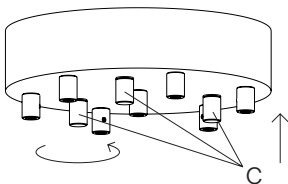


Slide the bottom ceiling plate on the three bolts and use the nuts to secure the ceiling plate in place.

 7




Carefully insert 7 1.6 LED G4 bulbs into slots on the tip of each line.

 7



Carefully insert 7 1.6 LED G4 bulbs into slots on the tip of each line.


8

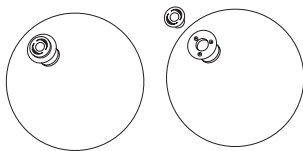

Start mounting glass globe from the top arm downwards by first removing the plastic stopper from the globe to be mounted.


NOTE: Included cotton gloves must be worn when handling glass globes.

9

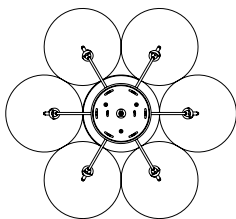

This the desired arrangement of the globes.

10

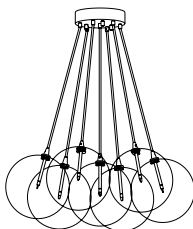

Restore power and enjoy your Schwung Lamp.

Cleaning and maintenance



Make sure you cut off power supply to the lamp before commencing cleaning operations.

Components	Maintenance	Tools
Brass Frame	Clean every month using a soft cloth, dampened slightly with water. Make sure the frame is dry before switching the lamp back on.	Soft cloth, water
Glass globes	Clean regularly with a soft dry cloth. Clean only the outside of the globe. If especially dirty, use a wet cloth first. Grease can be removed with a gentle glass cleaner.	Soft cloth, Cotton gloves (!)
Light bulbs	Make sure your power supply is off before changing the bulb. Unscrew the globe where bulb needs replacing. Gently remove the bulb by pulling it out and replace with a LED bulb of the same parameters.	LED bulbs, Cotton gloves (!)

NOTE: Please remember, solid brass may tarnish over time. This is a natural process. Make sure you follow our guidelines to preserve the great look of Schwung lighting for years.

Troubleshooting

Problem	Possible Cause	Action
Tarnishing	Oxidation of brass is a natural process. Although it is lacquered, its color may change slightly over time.	No action is necessary apart from regular cleaning. See the Maintenance section.
Noise	If a humming noise occurs, this is normally caused by transformers.	Check electrical connections and make sure the right dimmer is used - ELV.
Globe deformations	Mouth-formed glass globes are beautiful but not perfect. The process leaves a slight deformation at the bottom of the globe.	No action is necessary. All globes undergo a quality check. Should you have any doubts, please send us a photo of the deformed globe and we will act accordingly.

NOTE: Dear client, please be assured our team strives to deliver highest quality products. The handmade nature of the products offers a unique aesthetic experience and allows for small imperfections, which is inherent in crafts. If solutions offered below are not sufficient, please do not hesitate and contact our customer service.

Having trouble?

We're sorry to hear that.

Our enlightened objects are designed for longevity.

Each piece is made by hand to ensure the highest possible quality and a unique aesthetic experience.

This means you may encounter small surface imperfections. We like to think of them as whispered greetings from our craftspeople. But should you have any concerns about your product and the previous solutions fail to help, please don't hesitate to email us at info@schwung.design

