
 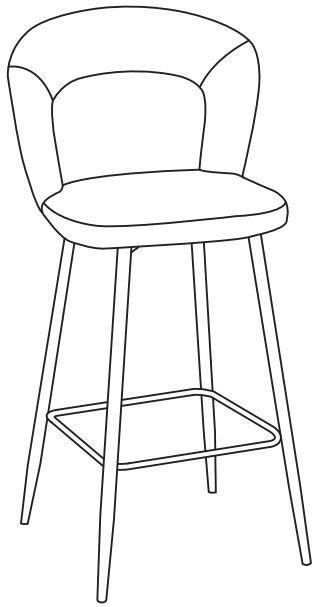





Ax1 	Bx1 	Cx4 	Dx1 
Ex16  6x14mm	Fx4  6x25mm	Gx1 	Hx1 
Ix4 			


SPARE (Ersatzteile)

Ex1  6x14mm	Fx1  6x25mm	Ix1 		
--	---	--	--	--


STEP1

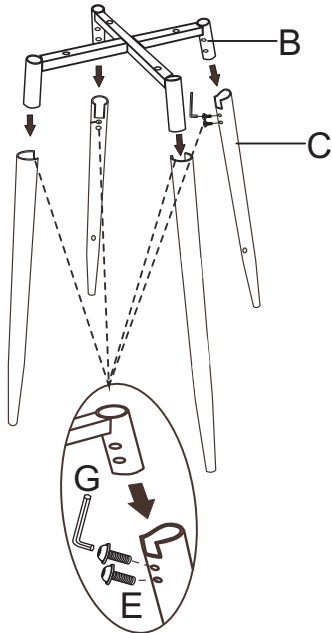


E	 6x14mm	8
H		1

 


STEP2

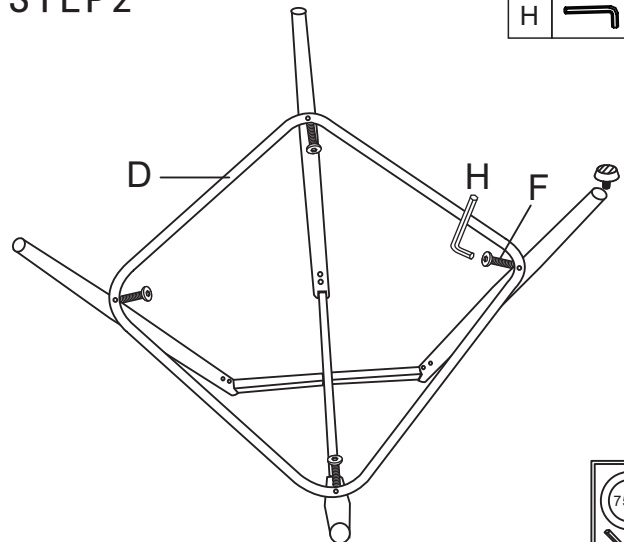

F	 6x25mm	4
H		1

 


STEP3

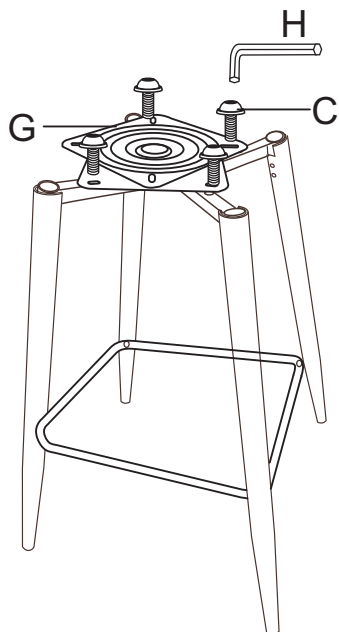

E	 6x14mm	4
H		1



STEP4

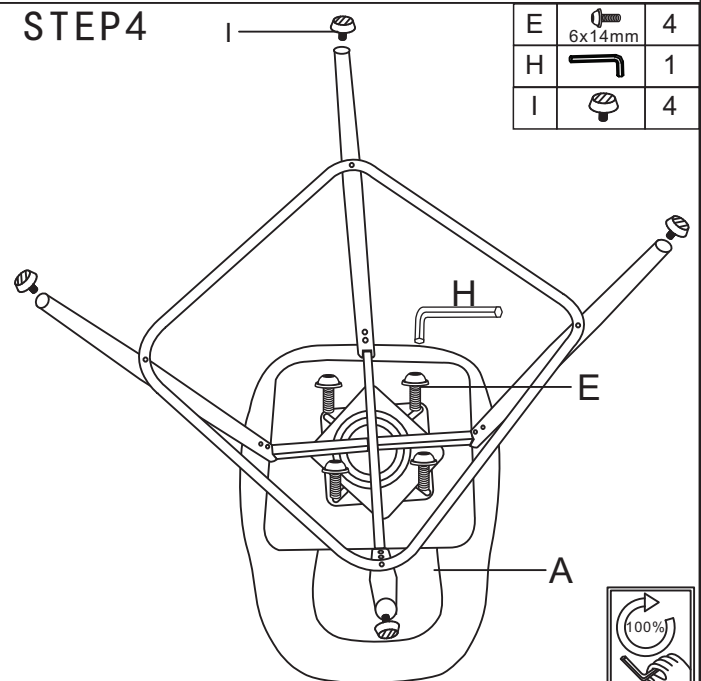

E	 6x14mm	4
H		1
I		4

