

Assembly Instructions

Caution : You must read this before you proceed

Care & Maintenance



- Not for commercial use. For residential use only.



- Furniture may scratch floors. We recommend using furniture pads to protect your floors.



- Do not put hot items directly on furniture surface.



- Do not clean furniture with harsh cleansers or polish.



- Do not place furniture under direct sunlight.



- Do not place furniture near heating or cooling vents.



- Do not write on furniture without a padded barrier to protect the surface.



- Do not place furniture outside . For indoor use only.



- Stains may be removed with mild soap solution and damp cloth.



 
- Children should not climb or jump on the furniture.





- Dust and pick-up spills using a clean, non-colored, lint-free cloth.

Please look in Chair Seat for hardware pack and legs.


DINING CHAIR

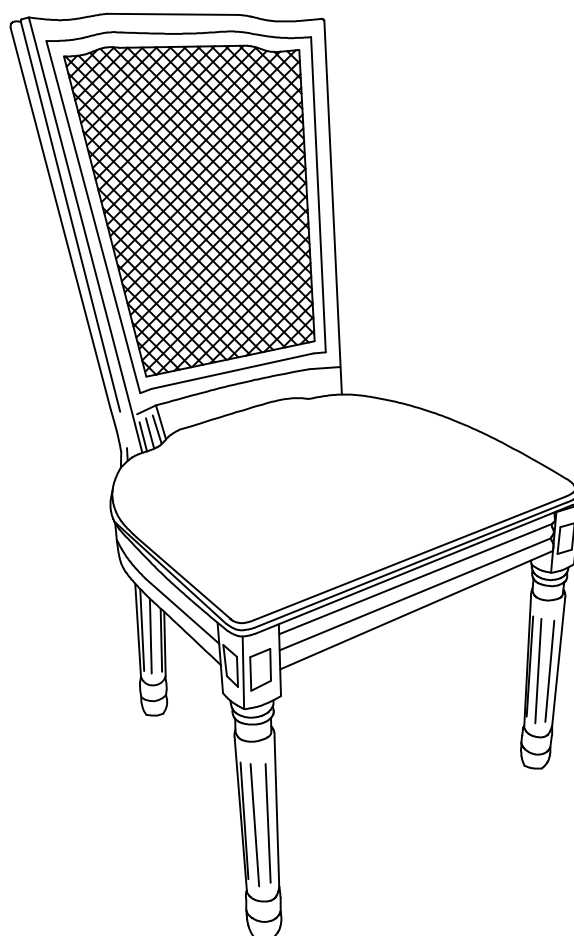

Parts List


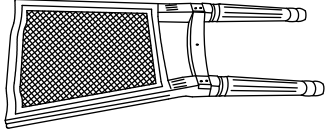 
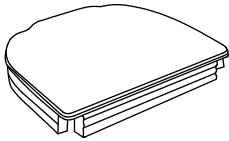 
Label	Picture	Description	QTY
A		Chair Back	1
B		Chair Seat	1
C		Front Leg	2

 Hardware

Label	Picture	Description	QTY
①		Bolt (M8*65mm)	10
②		Spring Washer (M8)	10
③		Flat Washer (M8)	10
④		5mm Allen Wrench	1

Assembly Preparation

   **Before
Beginning
Assembly:**

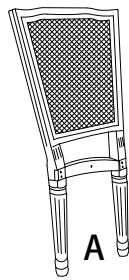

- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



- Do not assemble on flooring or carpet-



 
- Assemble on a clean non-marring surface (packing foam)-



- Save all packaging until finished-


Assembly Steps

Overview

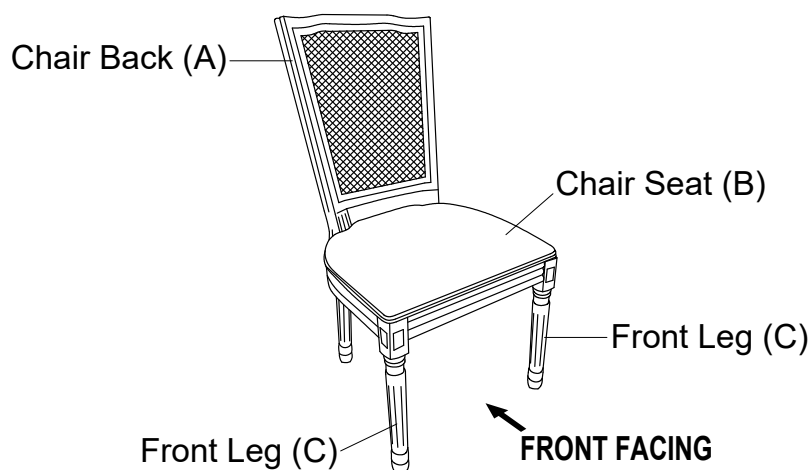


This Dining Chair has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the Dining Chair parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly

 Step 1

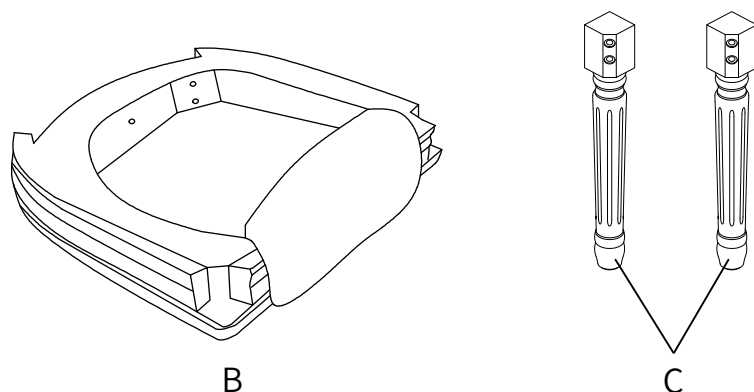

REMOVE the Seat Base Cover from the Chair Seat(B), take out the Front Legs(C).
Place all the parts on a clean, non-marring surface.

 Step 2

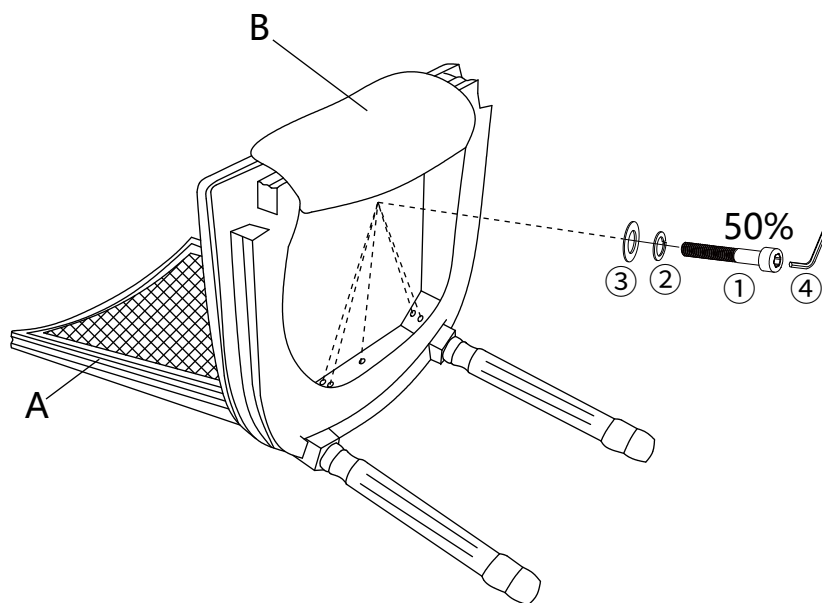


Now, place the Chair Back (A) on a clean and undamaged surface. With the help of another adult, connect the Chair Seat (B) to the Chair Back (A) and use 5 Bolts (①), 5 Spring Washers (②), 5 Flat Washers (③), and Allen Wrench (④) to lock the Chair Back (A) and Chair Seat (B), as shown in the above figure.

Regular attention: If consecutive positions cannot be aligned well, it will be obstructed.

After installation, gently swing the Chair Seat (B) while locking the bolts.

This action helps prevent the bolt from getting stuck and ensures stability, with all screws tightened by 50%.

 Step 3

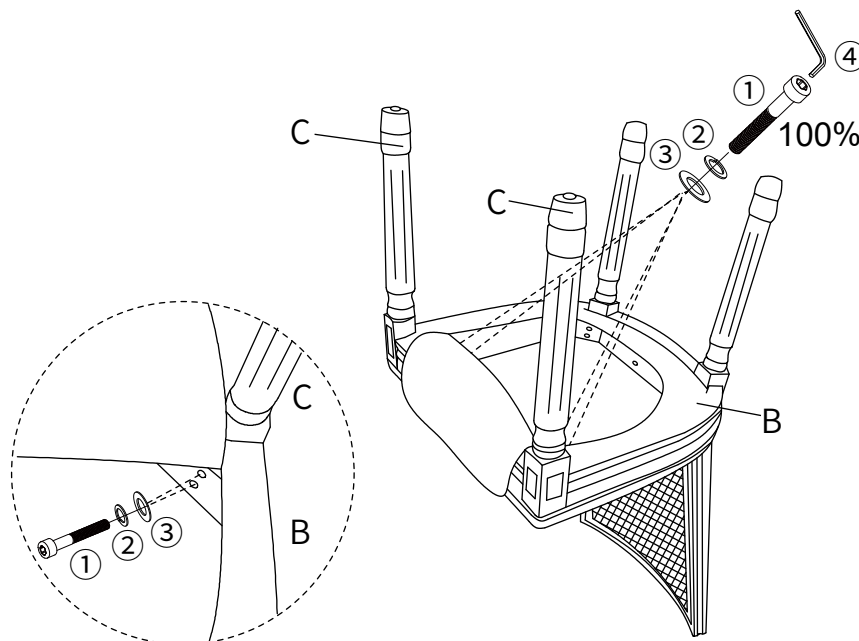


You will make the bottom of the Chair Seat (B) and the Front Legs (C) face upwards. Insert the Front Legs (C) completely vertically into the seat frame joint.

At the assembly point, use 4 Bolts(①) +4 Spring Washers (②), 4 Flat Washers (③) and Allen Wrench (④) to tighten to 100%.

WARNING !! LOOSELY TIGHTEN.OVER TIGHTENING COULD LEAD TO DAMAGE OF THE PRODUCT. TIGHTEN ONLY UNTIL SECURE.

 
Step 4

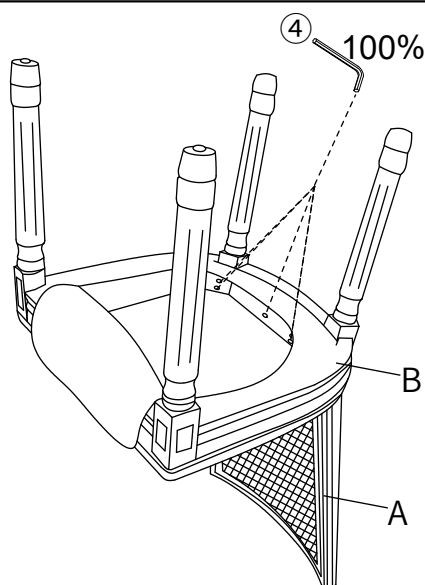

Then tighten all the screws behind the seat to 100%.

WARNING !! LOOSELY TIGHTEN.OVER TIGHTENING COULD LEAD TO DAMAGE OF THE PRODUCT. TIGHTEN ONLY UNTIL SECURE.

 Step 5

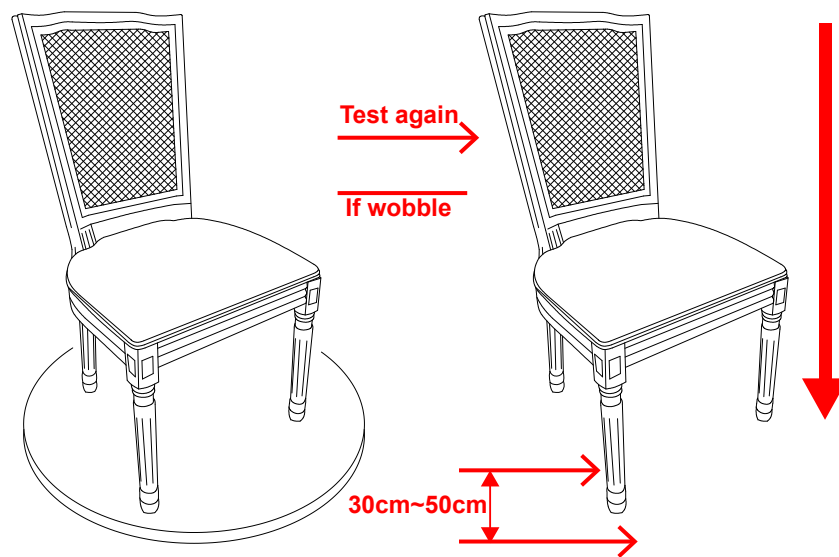

Place the DINNING CHAIR on a LEVEL SURFACE to check if it wobbles.

If it wobbles, lift the DINNING CHAIR some 30cm to 50cm high from the ground, keep your feet and toes well away from the drop zone.

Drop the DINNING CHAIR freely and vertically with the four legs, hitting the ground at the same time.

This Drop Test will help to ensure that all the bolts and gaps to all reach full alignment.

Test again for evenness on LEVEL SURFACE.

If no wobbles are found, proceed to tighten all the Bolts.

 
CAUTION: When tightening the Bolts, tighten sequentially.

DO NOT tighten any screw fully and then towards the next one, this would cause the frame to warp.

If it still wobbles, loosen the bolts and execute this same drop test.


WARNING!!! IF THE DINING CHAIR IS NOT STABLE IT COULD LEAD TO DAMAGE TO THE PRODUCT.

Step 6

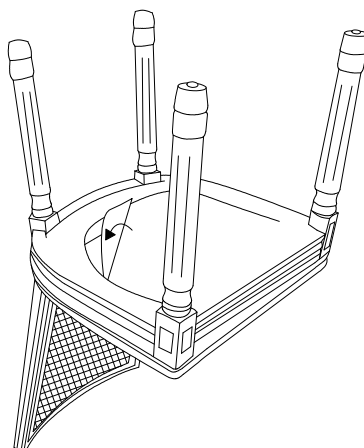

Place the Seat Base Cover back as shown in picture.
Smooth the Magic Tape down, Make sure all parts are connected and
securely locked into position.

 Step 7

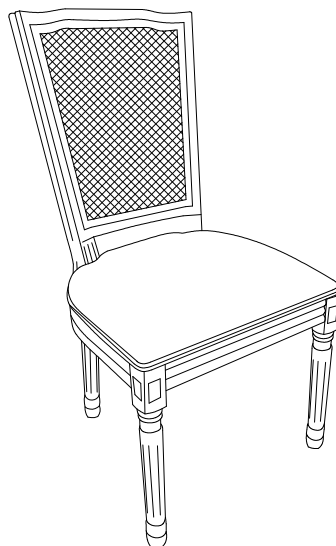

Your Chair is ready for use.
This Dining Chair can only be used on a flat, level surface.