



SnapeeShade Tent

10 ft x 10 ft

ITEM# KCCP-SPKWH-1010

CASE PACK-1

Meets CPAI-84: 1995

Clause 3:2 Fire

Standard Specifications




IMPORTANT

- Do not store canopy top inside the wheeled bag when wet. If wet, let the top completely dry before storing the canopy inside.
- Canopy top is water resistant, not waterproof. Do not set up or continue to use in any rain, wind, or stormy conditions.
- Secure the frame tightly with the inside Velcro strap before closing the wheeled bag.
- Always stake down or use weights during use.
- Kittrich Canopy does not warranty any damage to the canopy due to wind or rain damage.

1 OPENING THE CANOPY FRAME

- With a person standing on opposite sides, lift and pull canopy frame until fully expanded.

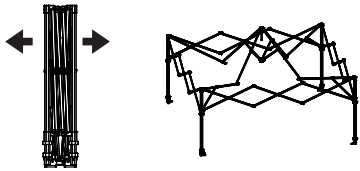


2 ATTACHING THE CANOPY TOP

- Unfold the canopy top and drape it over the canopy frame. Try to align the center of the top with the center of the tent frame.
- Secure the canopy top to the corners of the frame using the Velcro vertical connections. Ensure the corner seams of the top are aligned with the corners of the frame.



3 SECURING THE CANOPY TOP


- Unscrew top attachment T-nut with a coin (dime, nickel etc.), align the fabric top through the round grommets onto each bolt. Screw on the attachment T-nut and tighten it until secure. T- Nuts should rotate easily, do not over tighten.
- NOTE: Spare T-nut (2 pieces) enclosed inside the pocket of the wheeled bag.

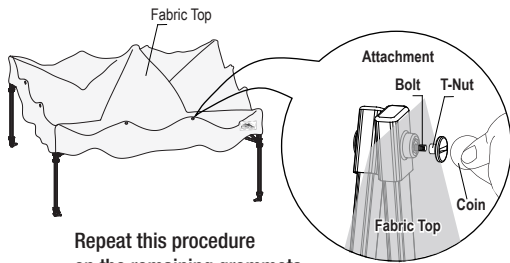

Repeat this procedure on the remaining grommets.

4 LOCKING CANOPY

- With two hands firmly placed on the triangle truss bar, lift the canopy and walk directly underneath.
- Locate center hub, and push straight up until it locks into the central pole.

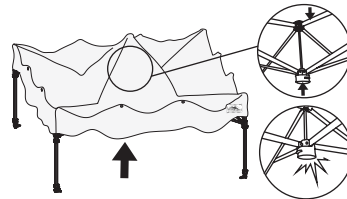

KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC.


Be cautious not to pinch your fingers in the frame during setup and take down.

Never set up or continue to use in any rain, wind, or stormy conditions, especially in lightning storms.

Setting Up the Canopy


5 ADJUSTING THE CANOPY HEIGHT

- Press the red button adjuster on each frame leg to raise or lower the canopy until you've reached the desired height.

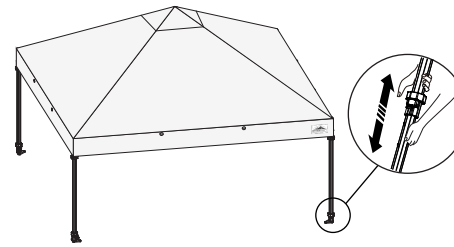

6 SECURING THE CANOPY IN PLACE


- Insert a stake through the foot pad of each frame leg.
- Repeat steps above to secure all four stakes for each leg.
- Tie one end of the rope to a canopy corner and one end to the stake that will be put into the ground. Measure a proper distance from each frame leg to ensure the rope has the proper tension by adjusting the plastic adjusters.

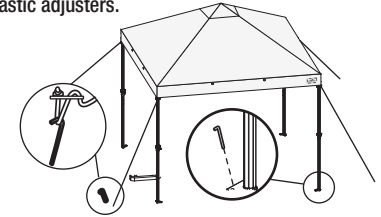

Taking Down the Canopy


1 REMOVE STAKES AND RETRACT THE LEGS

- Pull up all stakes from the ground.
- Press the red lock button on each leg and retract the legs to their original height.

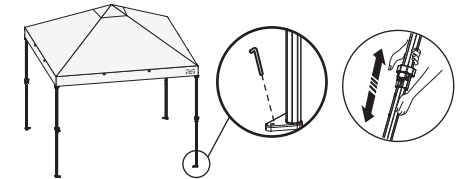


2 UNLOCK CENTRAL HUB

- Underneath the canopy, press the red release button on the central hub to unlock the canopy.
- Pull down on the central hub until separated from the center pole.

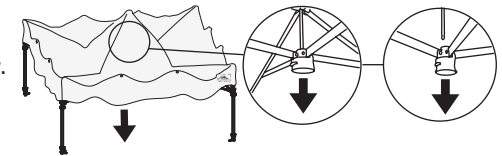

3 FOLDING FRAME


- Slightly lift one corner of the frame leg.
- Lift and push inward towards the opposite corner until the frame is fully closed.
- The canopy top may remain on the frame, and be stored inside the wheeled bag.

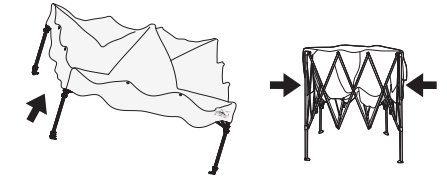

Note: Make sure the top is not wet prior to storing in storage bag.

4 PACKING AND STORING THE CANOPY

- Slip the wheeled bag over the closed canopy frame.
- Secure web harness strap and tighten.
- Close the zipper on the wheeled bag. Roll the wheeled bag using the handle.

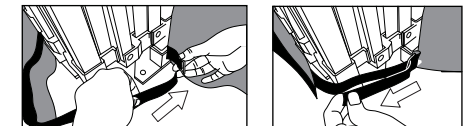

IMPORTANT:

Secure the frame tightly with the inside velcro strap before zipping the bag.