Mop plate installation









the shaft

Insert the shaft with the nut on into

How to install mop head







Align the attched mop plate with the plastic hoop on mop head install a half

vouhear a "pop" sound it means the

TIPS:When replacing the mop head just need to step on mop hair and then do the steps reversed

How to keep the mop pole upright

Pictures are for reference only, please in kind prevail

As figure 1 shows, step on one side of the mop plate, and then straighten the pole.





FIGURE 1 FIGURE 2

Please Turn the Switch on while Using



Pictures are for reference only please in kind prevail



How To Clean mop head

- 1. Open the blue switch(between bottom 1 and 2 rod)
- 2. Align the groove under mop head with the white head in metal basket
- 3.Keep mop pole upright
- 4. Hold the mop pole and then keep your hand go up and down
- 5.Keep the mop head rotating to clean it

You could add some detergent to help clean more ceaier

How To Dehydrate

- 1. Open the blue switch between botom 1 and botom 2 rod
- 2. Align the mop head with the metal basket
- 3.Keep the mop pole upright
- 4. Hold the mop pole and then keep your hand go up and down

5. Keep the mop head rotating to dehydrate it by centrifugal force. The faster the mop head rotates, the better dehydration effcet vou will aet.

Push the mop head down and immediately lift it up, and then push it down again(7-8 rounds will get a dehydrated mop head)

