




INSTRUCTION MANUAL

Christmas Tree with Multi-Color Lights

CONTENTS

● Accessories Diagram and Quantity List	1
● Install Instructions and Dual Color Lights Operation	2
● Install Instructions and Dual Color Lights Operation Video	2
● Branch Shaping Instructions	3
● Branch Shaping Instructions Video	3
● Remote Control	4
● Solutions for Remote Control not Working	4
● Storage Instructions	5
● After-sales Statement and Warranty	5
● Solutions for Christmas tree lights not working	6
● Questions and Answers	6
● Safety and Usage Instructions	6
● Please be sure to contact us before returning the trees. Maybe we can provide you with a satisfactory solution.	
● If there is any problem with the product, please contact us as soon as possible and attach photos or videos with order number.	


ACCESSORIES DIAGRAM AND QUANTITY LIST

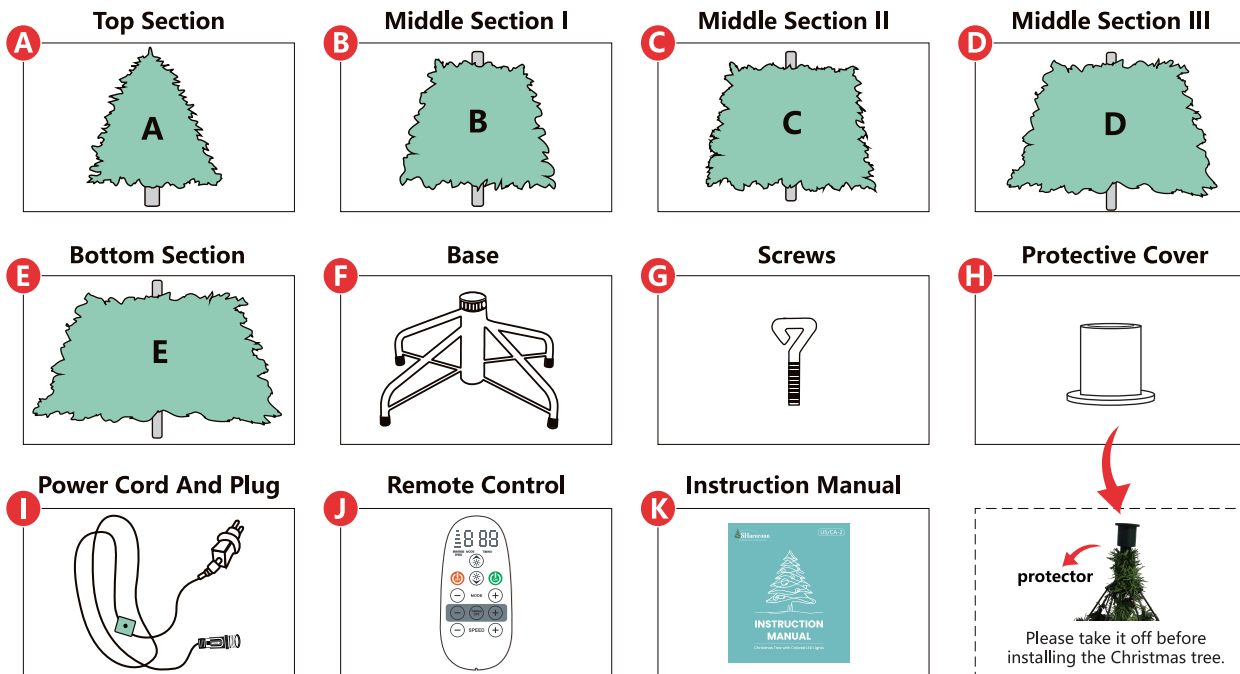


Accessories	Accessories Pictures	Number of accessories for different tree sizes			
		4/4.5ft	5/5.5/6/6.5 /7/7.5/8ft	8.5/9/9.5/10ft	12ft
Section Quantity of the tree	/	2	3	4	5
Section Quantity Numbering	/	 	  	   	    
Power Cord And Plug		1	1	1	1
Base		1	1	1	1
Screws		1	1	1	1
Remote Control		1	1	1	1
Instruction Manual		1	1	1	1
Protective Cover		1	2	3	4

INSTALL INSTRUCTIONS AND DUAL COLOR LIGHTS OPERATION


5/5.5/6/6.5/7/7.5/8 ft

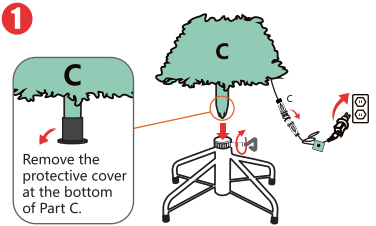

Insert the bottom section (part C) into the stand (Part F) and tighten the screw evenly to secure to the stand.


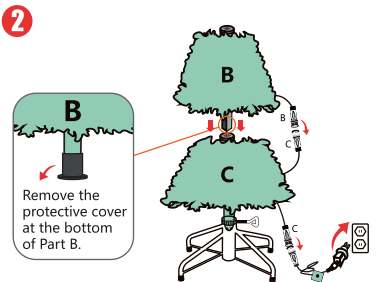


Insert the part B into the Part C and Connect the plug.




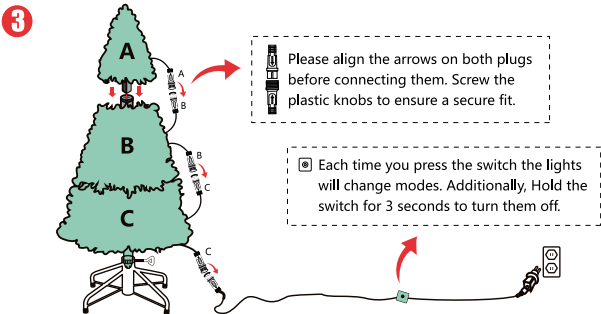


Insert the part A into the Part B and Connect the plug.






4/4.5 ft

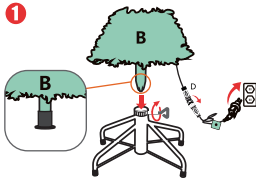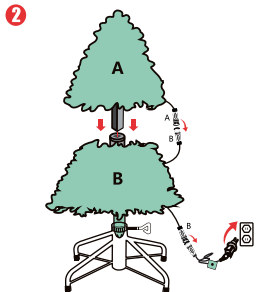

8.5/9/9.5/10 ft

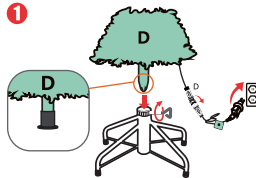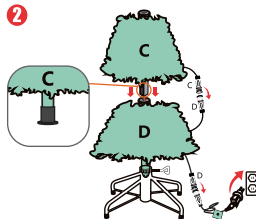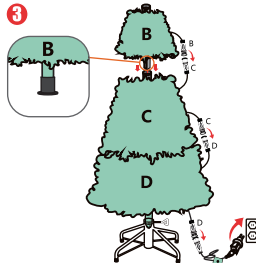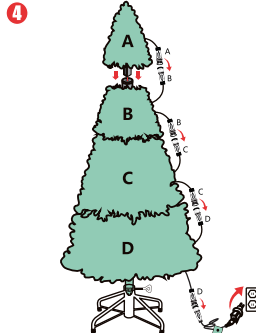

12 ft

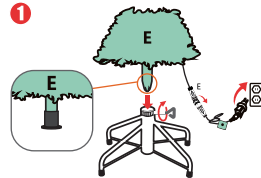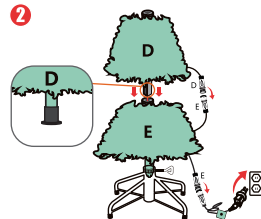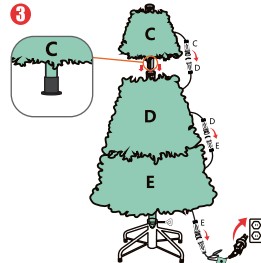
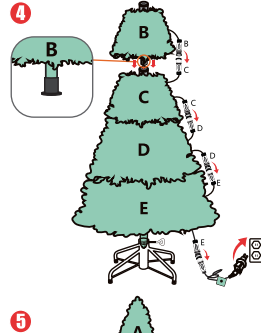
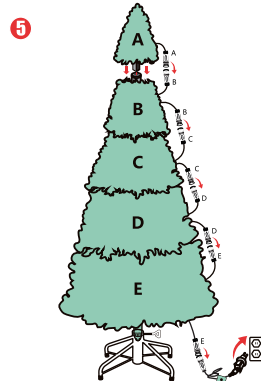


BRANCH SHAPING INSTRUCTIONS

Tools/Materials Needed

Soft gloves
(optional, to protect branches)

Mild cleaning cloth
(for dust removal)

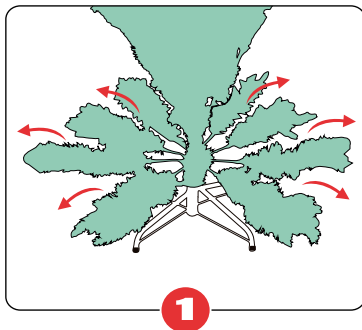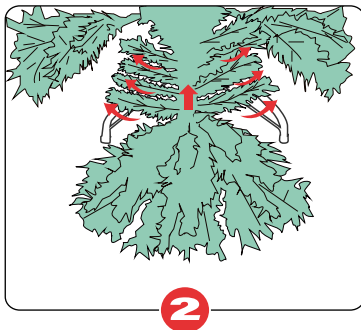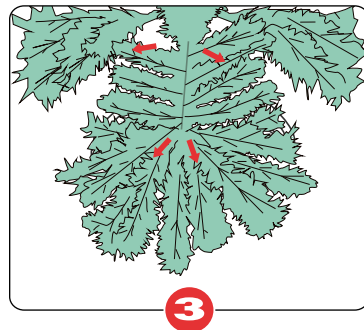

1. Prepare the Tree

1.1 Unfold branches: Gently pull down collapsed branches from the central pole. Start from the bottom layer and work upward.

1.2 Power off: Ensure the tree's lights are unplugged during shaping to avoid electrical hazards.

2. Layer-by-Layer Arrangement

2.1 Bottom layer:

2.1.1 Spread the largest branches horizontally, forming a wide base.

2.1.2 Angle tips slightly upward (15~30°) for a natural look.

2.2 Middle layers:

2.2.1 Arrange branches in staggered directions to fill gaps.

2.2.2 Bend inner metal wires to lift tips for fullness.

2.3 Top section:

2.3.1 Shape upward-pointing branches to frame the tree topper (e.g., star).

3. Branch Shaping Tips

3.1 Fluffing foliage:

3.1.1 Separate compressed needles by hand. Work from the branch base to the tip.

3.1.2 Rotate the tree periodically to ensure even shaping.

4. Adjusting angles:

4.1 Use gentle pressure to bend metal stems. Avoid over-twisting to protect light wiring.

4.2 Create depth by alternating branch angles (some forward, some backward).

5. Final Adjustments

5.1 Trim gaps: Tuck stray branches into sparse areas.

5.2 Symmetry check: Step back and rotate the tree to balance shape and light distribution.

6. Safety & Maintenance


6.1 Avoid tugging LED strings when shaping branches.

6.2 Dust branches lightly with a dry cloth; avoid water near wiring.

6.3 Store disassembled branches in a cool, dry place to retain shape.

Enjoy your beautifully shaped Christmas tree! 🎄

REMOTE CONTROL

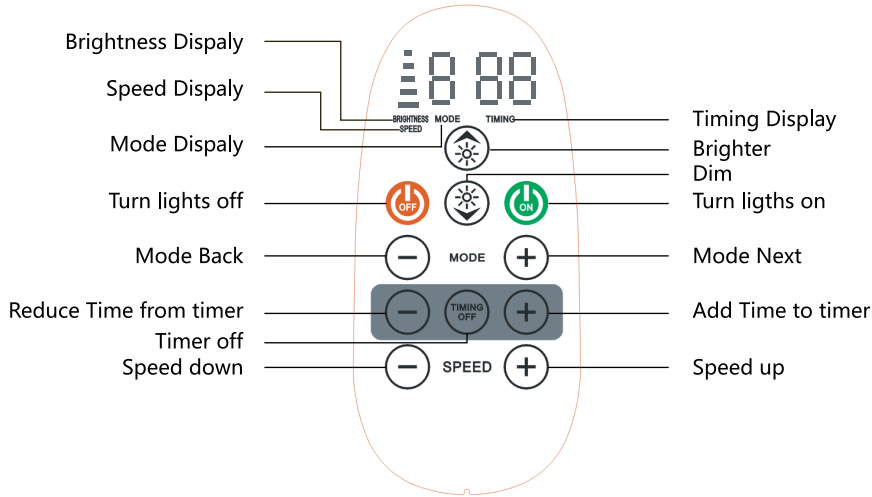

【Brightness】 There are 5 brightness degrees for you to choose.

【Speed】 There are 5 speed degrees for you to choose.

【Mode】 There are 12 modes for you to choose. Shown as following:

- | | |
|-------------------------------------|---|
| 1. Warm White Steady on | 7. Multi-color Breathing |
| 2. Multi-color Steady on | 8. Warm White/Multi-color Flash Switching |
| 3. Warm White Twinkle/Flash | 9. Warm White/Multi-color Breathing Switching |
| 4. Multi-color Twinkle/Flash | 10. All Colors Breathing/Flash Switching |
| 5. Warm White/Multi-color Switching | 11. All Colors Slow Fade |
| 6. Warm White Breathing | 12. Automatic |

【23 Timer Types Choices】


Start Timer:

Press the **"Timer +"** or **"Timer -"** button to begin a 1-23 hours timing function.

24-Hour Cycle Mode:

As shown below: take timing 6H as an example

(Tips: A cycle will last 24 hours, if you start a new cycle that will restart the cycle period.)

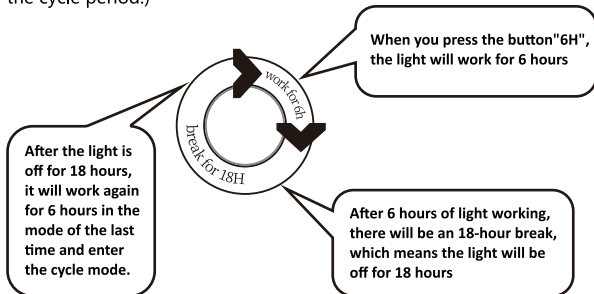

【Remote Control Troubleshooting】

Step 1. Check the Batteries:

Make sure the batteries are charged and installed correctly.

Step 2. Check the Christmas Tree Lights:

Ensure the lights on the tree are working properly.

(If the lights doesn't work, Don't hesitate to contact customer service in time)

Step 3. Contact Us:

If everything is fine but the remote still doesn't work, contact us right away. We'll help you resolve the issue as soon as possible.

【Some Special Tips】

1. Please make sure that the battery is installed correctly before using the remote control.
2. Lights on, if you switch lighting mode+brightness at will, which will not affect the timing function.
3. Lights off, if you switch lighting mode+brightness at will, which will restart the timing function.
4. Every timing selection operates independently.
(Take timing 1H and 2H as an example)
 - Firstly, set the timer to 1H.
 - Secondly, switch timer to 2H when the 1H is not finished running.
 - Finally, the system will execute the new command: restart the timer for 2h.

STORAGE INSTRUCTIONS

1. Disassembly Steps

- 1.1 Unplug First: Always disconnect the tree from the power source before disassembling.
- 1.2 Remove Decorations: Take off any additional ornaments, tinsel, or garlands.
- 1.3 Fold/Collapse Sections: If your tree is sectional, gently collapse each segment. For pre-lit trees, avoid bending wires or LED strands.

2. Clean Thoroughly

- 2.1 Wipe down branches and lights with a dry or slightly damp cloth to remove dust.
- 2.2 Ensure the tree is completely dry before storing to prevent mold or corrosion.

3. Use Proper Storage

- 3.1 Original Box: Ideal for maintaining shape. Label the box clearly.
- 3.2 Plastic Storage Bin: Choose a sturdy, waterproof container with a lid.

4. Avoid Compression:

Do not stack heavy items on top to prevent crushing branches or lights.

5. Environment Matters

- 5.1 Store in a cool, dry place (e.g., closet, under-bed storage) away from humidity, heat, or direct sunlight.
- 5.2 Add silica gel packets to the container to absorb moisture.

6. Pre-Use Check Next Year

- 6.1 Inspect wires and LEDs for damage before reassembling.
- 6.2 Test the lights to ensure they work properly.

⚠ Pro Tips:

Avoid storing in attics or garages where extreme temperatures may damage electronics. For artificial trees, consider using a dedicated tree storage bag for added protection.

- 💡 By following these steps, your LED Christmas tree will stay safe, functional, and ready to shine brightly next holiday season!

AFTER-SALES STATEMENT AND WARRANTY

Thank you for choosing our product! **For any issues with your Christmas tree, please contact our after-sales service team. Customer support is available 24/7 for troubleshooting and repairs.** Below is the warranty information for your Christmas tree!

Warranty Coverage:

- 🌲 Our trees and lights come with a 1-year free replacement from the date of purchase.
- 🌲 The warranty covers manufacturing defects and malfunctions under normal use.

How to Claim Warranty Service:

- 🌲 If your Christmas tree has a defect, please contact our customer service team with your proof of purchase.
- 🌲 We will provide repair, replacement, or refund options based on the issue.

What's Not Covered Warranty:

- 🌲 Damage caused by accident, misuse, abuse, negligence.
- 🌲 Abnormal wear, or self modification will invalidate the warranty.

⚠ Notice:

- * Please retain the product carton for storage purposes and / or for use in the event of warranty service for product shipment.
- * Our christmas tree lights are already tied to the tree. If you need to replace them, you need to manually disassemble the old ones and tie the new ones.

SOLUTIONS FOR CHRISTMAS TREE LIGHTS NOT WORKING

If the lights on your Christmas tree are not working properly after correct installation and power connection, follow these steps:

1. Partial Lights Not Working:

- If only some lights are out, contact our customer service and describe the issue (send pictures or video). We will promptly send you a replacement light string.

2. All Lights Not Working:

- If none of the lights are working, contact our customer service and describe the issue (send pictures or video). We will promptly send you a replacement light string and main line.

QUESTIONS AND ANSWERS

Q1: Why don't my branches look so thick?

A1: After the Christmas tree is installed, arrange the branches. For details, refer to page 3. Branch Shaping Instructions.

Q2: What is it?

A2: It's a protector. Please take it off before installing the Christmas tree.



Q3: Lights do not coordinate correctly As the following pictures shown

A3: Please check whether the nut is connected arrow to arrow.

1. No, please connect the nuts arrow to arrow to solve your problem.

2. Yes, the lighting color is still inconsistent. We will solve the problem for you asap.



SAFETY AND USAGE INSTRUCTIONS

⚠ Notice

- The product is for indoor use only. Don't use it outdoors.
- This seasonal use product is not intended for permanent installation or use.
- Do not mount or place near gas or electric heaters, fireplaces, candles or other similar sources of heat.
- Do not secure the wiring of product with staples or nails, or place on sharp hooks or nails.
- Do not let lamps rest on the supply cord or on any wire.
- Unplug the product when leaving the house, when retiring for the night, or if left unattended.
- Do not use this product for other purpose than its intended use.
- Do not hang ornaments or other objects from cord, wire, or light string.
- Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
- Do not cover the product with cloth, paper or any material not part of the product when in use.
- This product is equipped with push-in type lamps. Do not twist lamps.
- **This is an electric product – NOT a toy! To avoid risk of fire, burns, personal injury and electric shock, it should not be played with or placed where children can reach it.**