


C O O P E R



G R A H A M

## INSTALLATION INSTRUCTIONS

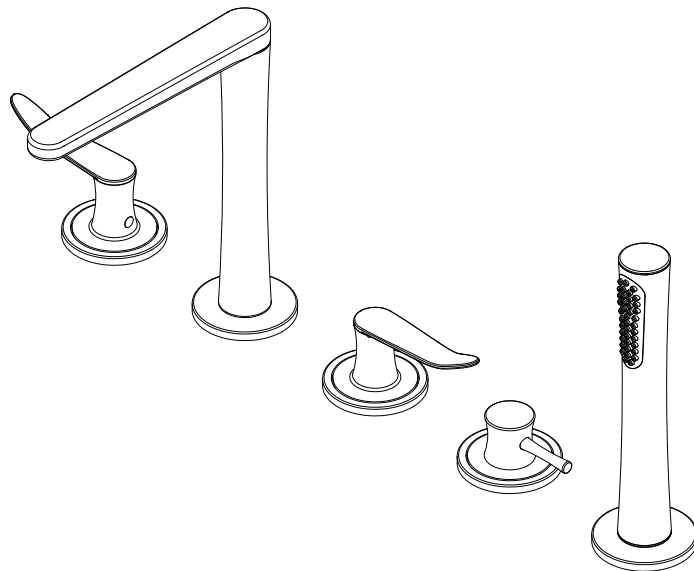


**EMILE 5-HOLE TUB FILLER TRIM**


EMI-11400

# DIMENSIONS In Inches & Millimetres

## EMILE 5-HOLE TUB FILLER TRIM

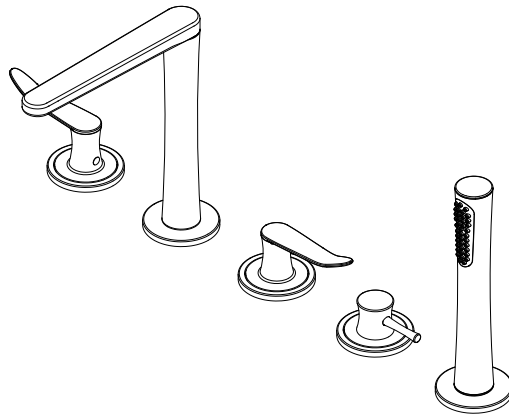


### TOP VIEW

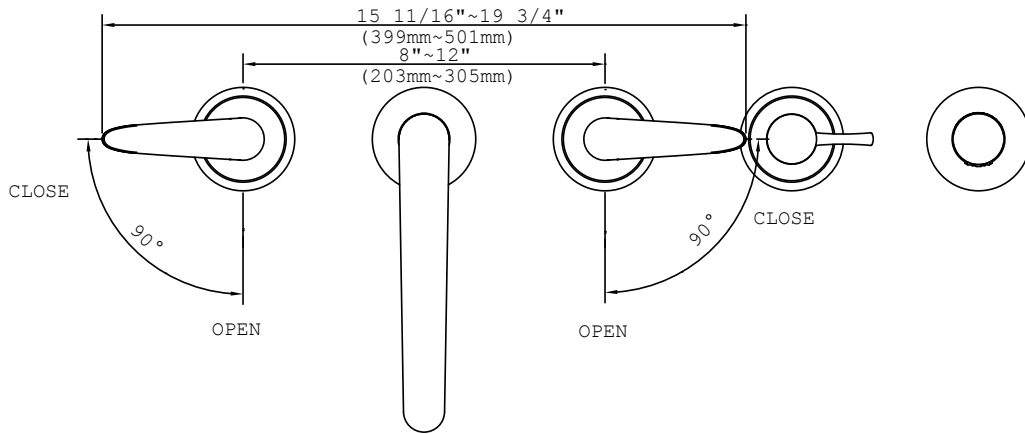

### FRONT VIEW

### SIDE VIEW

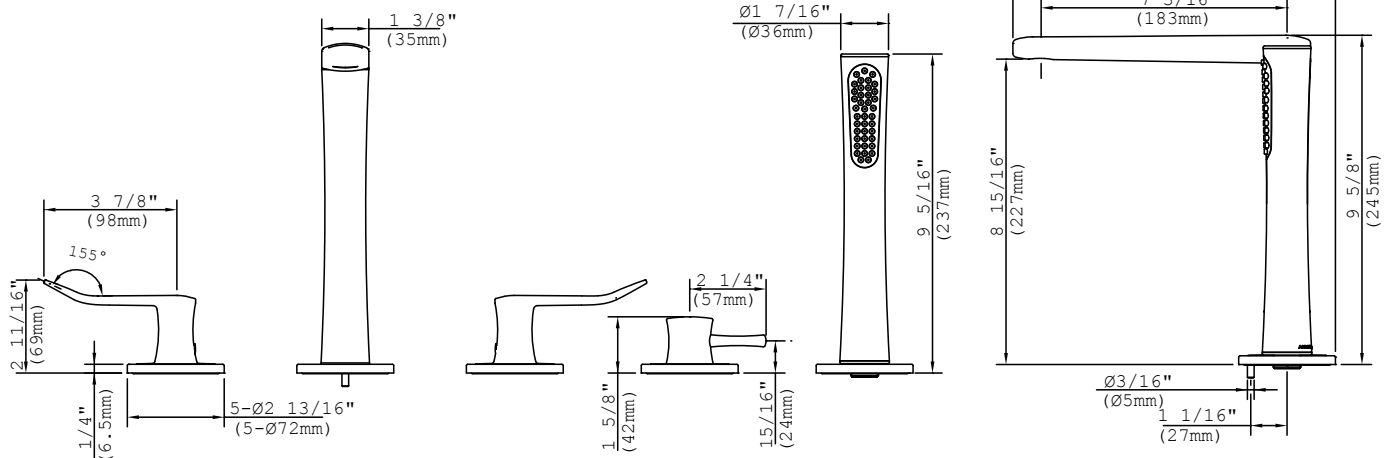

# PRODUCT INFORMATION


## TOOLS



Groove Joint Pliers




Adjustable Wrench

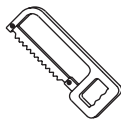

Hacksaw



 Phillips Screwdriver



Level



Pipe Tape



Spatula

## MAINTENANCE

- Your new Cooper and Graham product is designed for years of trouble-free performance.
- Keep it looking new by cleaning it periodically with a soft cloth. Avoid abrasive cleaners, wire wool and harsh chemicals as these will dull the finish and void your warranty.

## IMPORTANT POINTS

- Prior to beginning installation, turn off the cold and hot water lines. If applicable, open the existing valve to release built-up pressure.
- Overtightening nuts may cause damage.
- Wrap all threaded connections with pipe tape available at your local plumbing supply store. Always wrap in clockwise direction. The fittings should be installed by a state licensed plumber.
- Note: When there is a difference in water pressure between hot and cold supplies to the mixing valve, the pressures should be equalized by a plumber in accordance with best practice and legislation.
- Note: This product is designed to function as part of the water system at a supply pressure between 140 and 860 kPa (20 and 125 psi). The leakage test to the water system should be carried out using water as this product contains the components are specifically designed for water, for which the viscosity and surface tension are much greater comparing to air or gas, both of these are unique forces that resist the tendency of water to flow, particularly through a small opening, however at the same condition the air or gas might be able to escape through. In the exceptional circumstances should pneumatic pressure testing using compressed inert gas or air be used, the pressure should be equal or less than 3bar. Conducting the pneumatic pressure test at a higher pressure can be very hazardous not only to the person who does the test, but also to the product itself or the users. Due to the air or gas is very compressible, the same pressure of compressed air or gas contains much more energy than the liquid therefore should a joint, pipe, or any other component fail under test pressure when using compressed air or gas, the energy can be released with dangerous force to human or damaging the system.

## SAFETY TIPS


- If you are soldering during faucet installation, remove cartridges, seats, gaskets and washers prior to applying flame, otherwise you will void the warranty.
- When cutting or soldering pipe, use safety glasses to protect your eyes.
- Cover drain openings to avoid losing small parts.

## CODES/STANDARDS

- Certifications: IAPMO(cUPC)
- Certifications: WaterSense(EPA) - applies to the handshower only, EMI-17350



## FLOW RATE

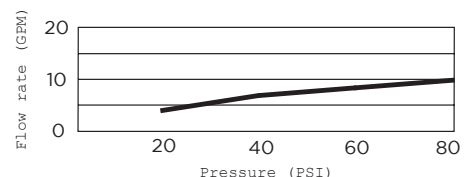

### WARNING!


- This product is engineered to meet the EPA WaterSense flow requirement. The flow rate is governed by the aerator or flow controller. If replacement is ever required, be sure to replace it with a WaterSense compliant aerator or flow controller to retain the water conserving flow rate of this product.
- For use with automatic compensating valves rated at 1.5 gpm(5.7 L/min) or less.

# INSTALLATION METHOD

STEPS 1-3


Cooper and Graham always recommends that plumbing products be installed by a licensed professional.

1.

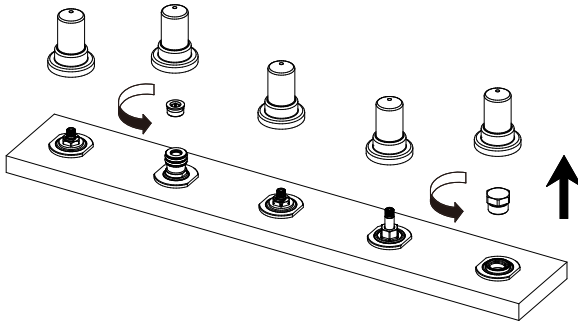


Make sure that main water supply is shut off before further installation. Take off all rubber protective caps, plugs from valves, as well as the underneath protective bubble bags.

2.

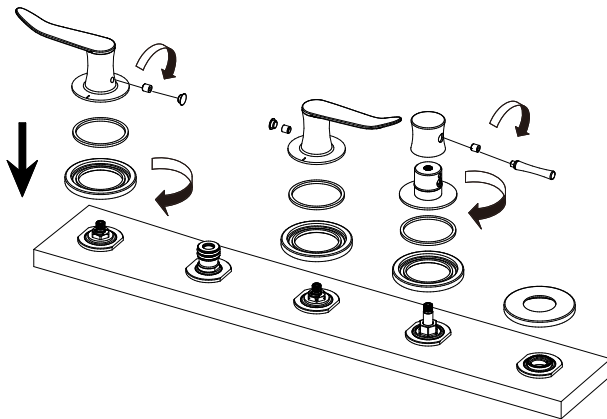

Install handles.

3.

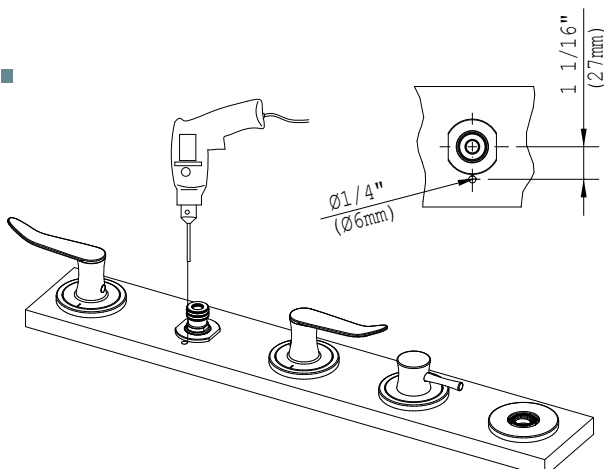

### Important:


It is recommended that to prevent the spout from accidentally rotating after installation, where possible, the small brass pin should be screwed into the spout base. Drill a 1/4" (6mm) diameter hole into the deck to a depth of about 7/16" - 9/16" (11-15mm), following the position indicated in the figure.

# INSTALLATION METHOD

STEPS 4-6


Cooper and Graham always recommends that plumbing products be installed by a licensed professional.

4.

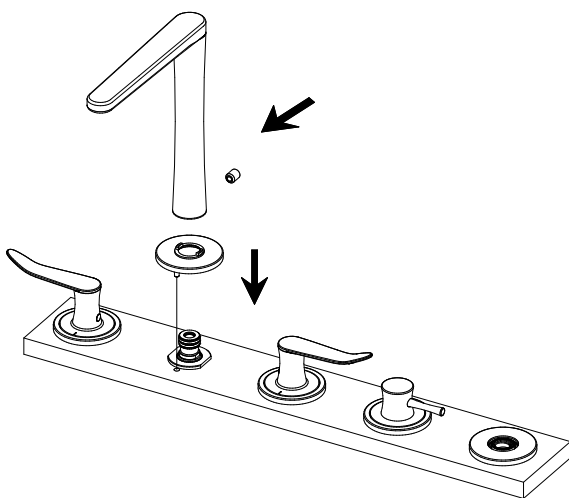


Place spout over spout hub and insert pin into the small hole on the deck. Finish installation by inserting set screw into access hole in back of spout and screw tightly.

5.

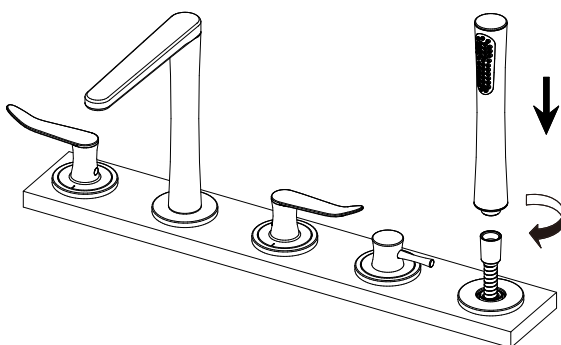


Attach hand shower with final trim installation.

6.

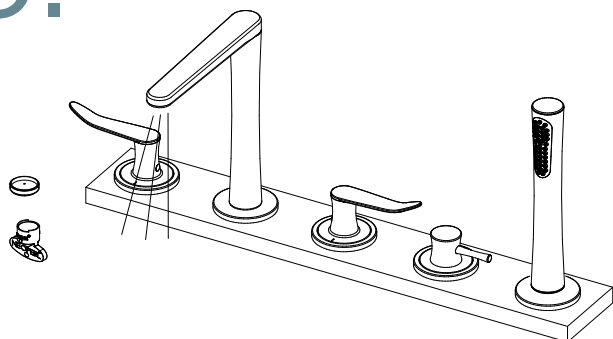

After installing faucet, remove the aerator and open the hot and cold supplies. Check for leaks. Turn on the faucet handle for one minute to flush debris from the faucet. Turn off the handle and re-assemble the aerator.

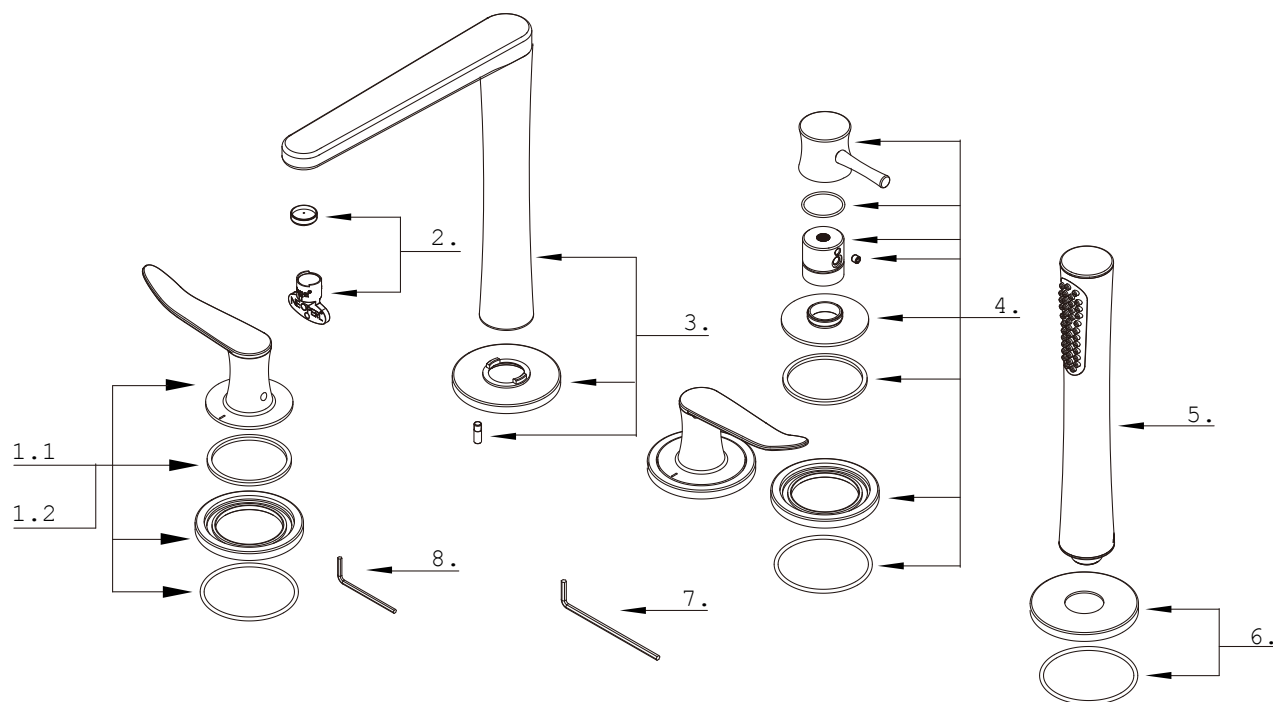

- 1.1** Handle Assembly - Cold (A662A32C-T)
- 1.2** Handle Assembly - Hot (A662A32H-T)
- 2** Aerator Assembly (A66G291)
- 3** Spout Assembly (A666A05)
- 4** Diverter Handle Assembly (A662A33)
- 5** Hand Shower (EMI-17350)
- 6** Escutcheon Plate Assembly (A667A17)
- 7** Allen Key (H2.5 \* 19mm \* 53mm) (A031000)
- 8** Allen Key (H3.18 \* 20mm \* 90mm) (A031017)



C O O P E R



G R A H A M

FOR ADDITIONAL ASSISTANCE OR SERVICE CALL

**T: 929.432.1699 F: 929.432.1833**

[CUSTOMERSERVICE@COOPERANDGRAHAM.COM](mailto:CUSTOMERSERVICE@COOPERANDGRAHAM.COM)

9AM-5PM EST, MONDAY - FRIDAY

**COOPER AND GRAHAM**

1828 TROUTMAN STREET, RIDGEWOOD, NY, 11385

[WWW.COOPERANDGRAHAM.COM](http://WWW.COOPERANDGRAHAM.COM)