 


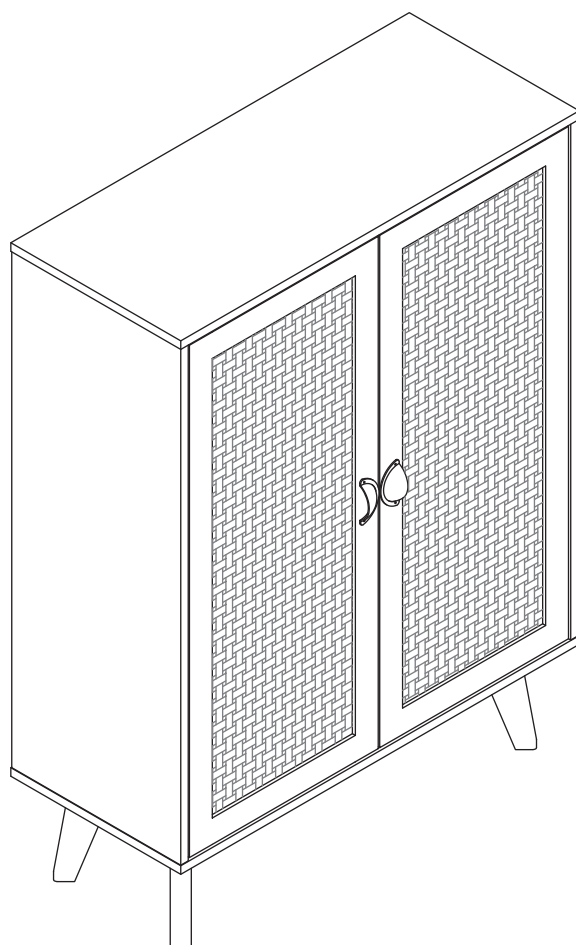

INSTRUCTION MANUAL

RATTAN CABINET IF-555





 
Estimated Time for Assembly

60 min






Weight Limitation (Evenly)

100lb overall

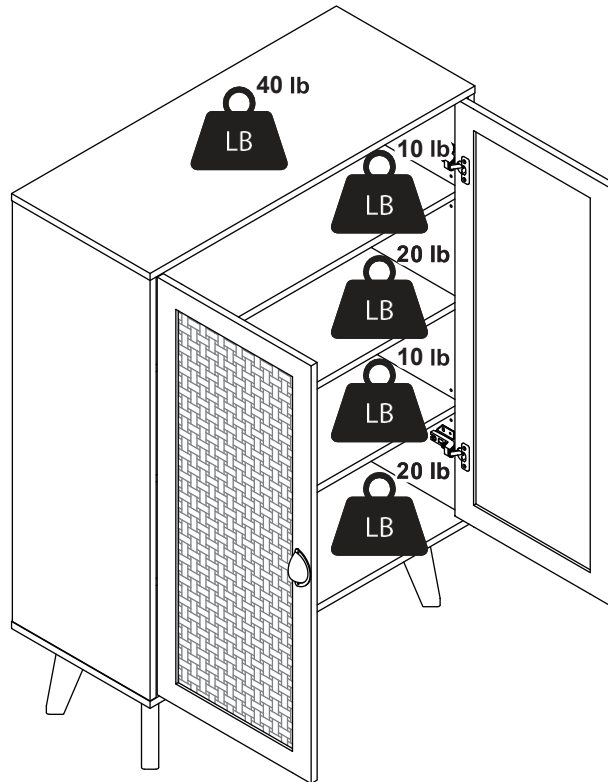


Tools Needed (Not included)

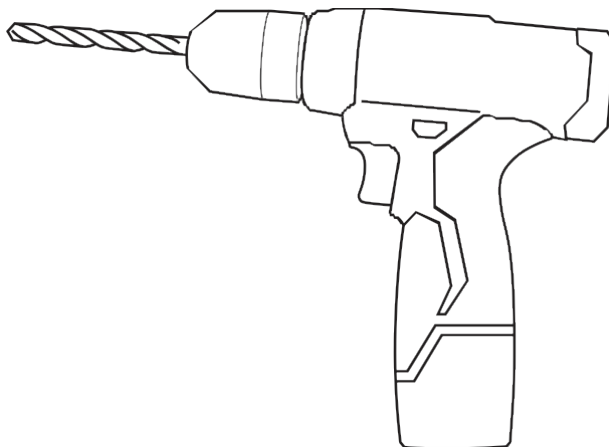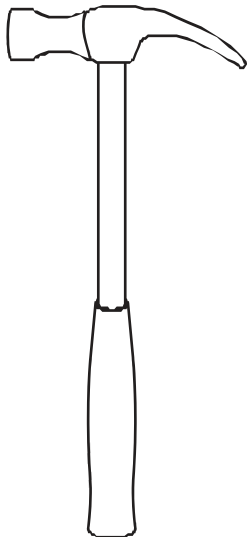  

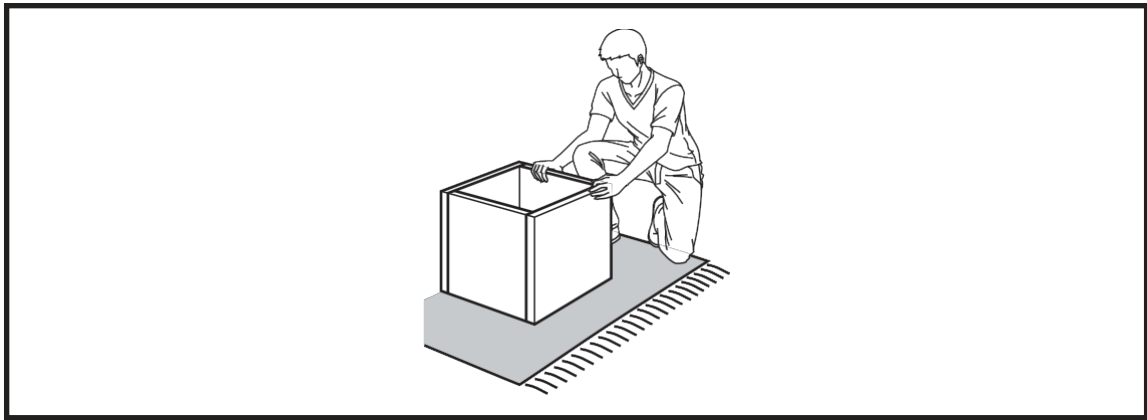 






 
Assemble the furniture on empty carton, carpet, or rug to prevent scratches or damage.

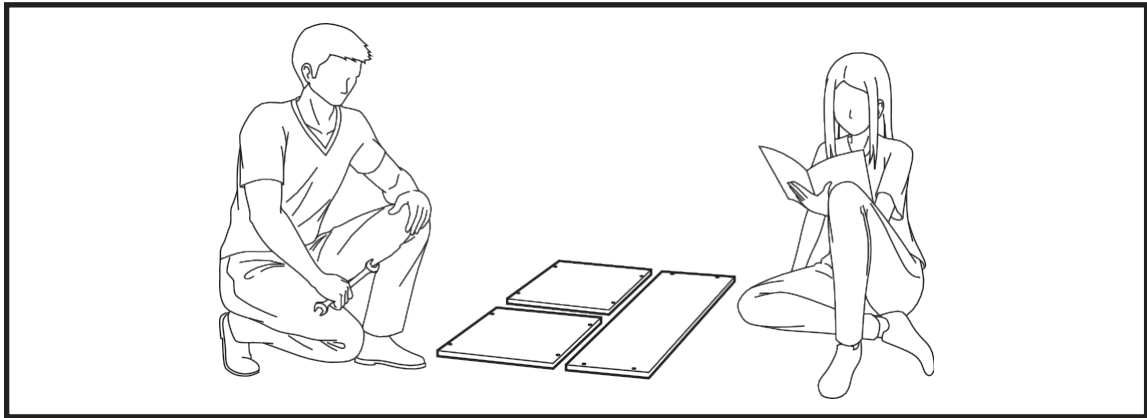








This furniture requires 2 people to assemble.

Make sure no parts are missing or damaged before assembly.

     
 
PART LIST

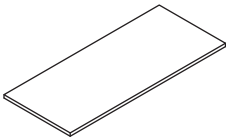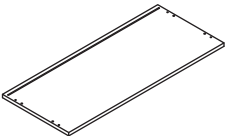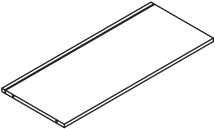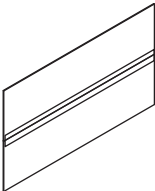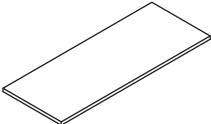									
①	1pc	②	1pc	③	1pc	④	1pc	⑤	1pc
									
⑥	2pcs	⑦	2pcs	⑧	2pcs	⑨	4pcs		

       HARDWARE LIST



						 4x35mm			
Ⓐ	8pcs	Ⓑ	8pcs	Ⓒ	4pcs	Ⓓ	4pcs	Ⓔ	4pcs
 4x14mm		 6x10mm		 M4		 5x40mm		 M3	
Ⓕ	24pcs	Ⓖ	16pcs	Ⓗ	1pcs	Ⓘ	8pcs	Ⓙ	1pcs
		 3x14mm						 4x12mm	
Ⓚ	2pcs	Ⓛ	16pcs	Ⓜ	12pcs	Ⓝ	2pcs	Ⓞ	2pcs
 4x35mm									
Ⓟ	2pcs	Ⓠ	2pcs	Ⓡ	8pcs	Ⓢ	4pcs	Ⓣ	4pcs

  Step 1

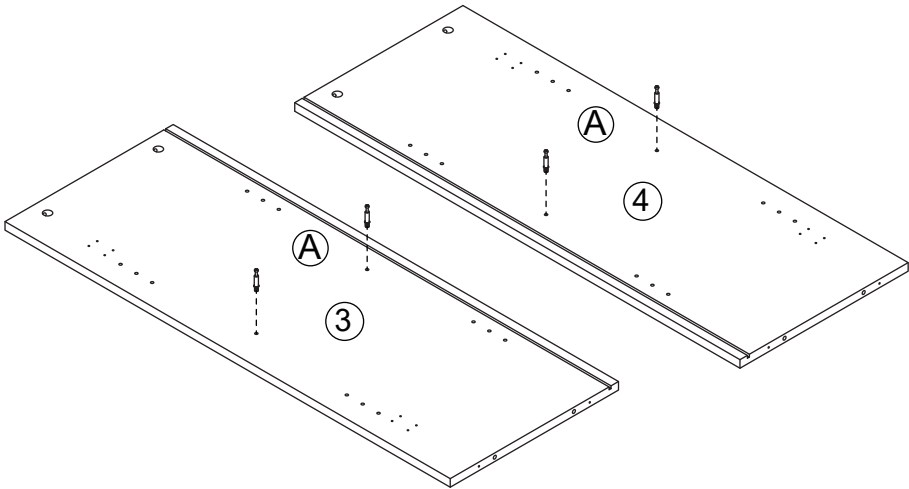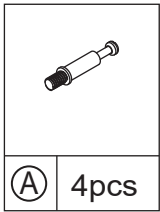


Ax4

  Step 2.

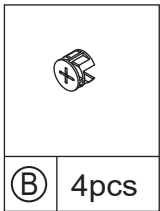
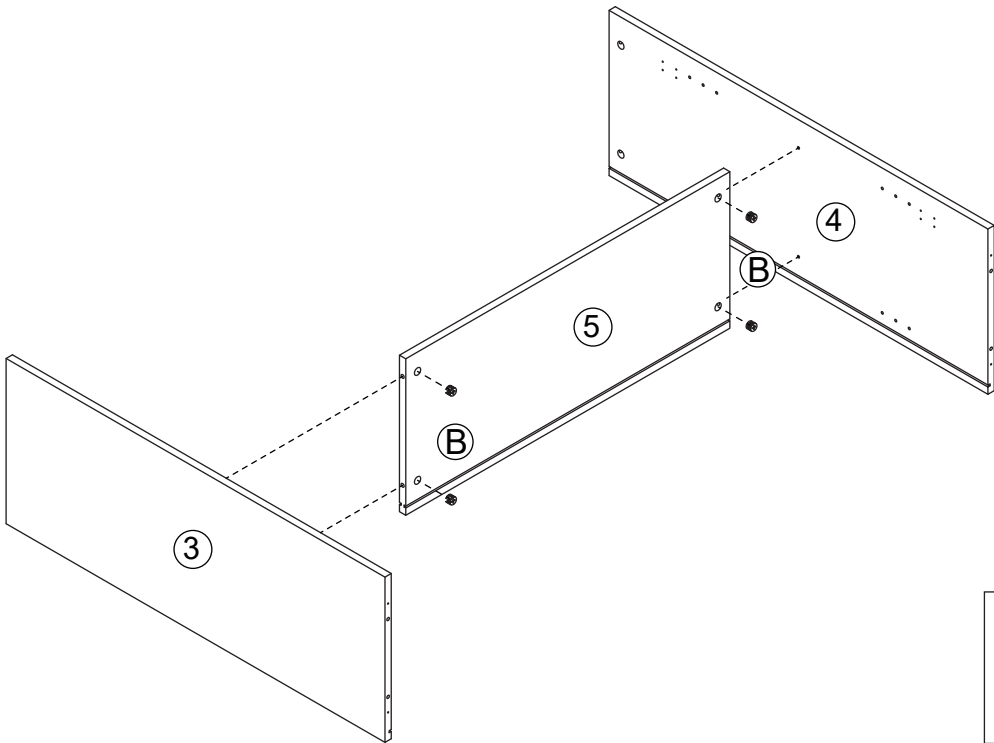


Bx4

 Step 3.


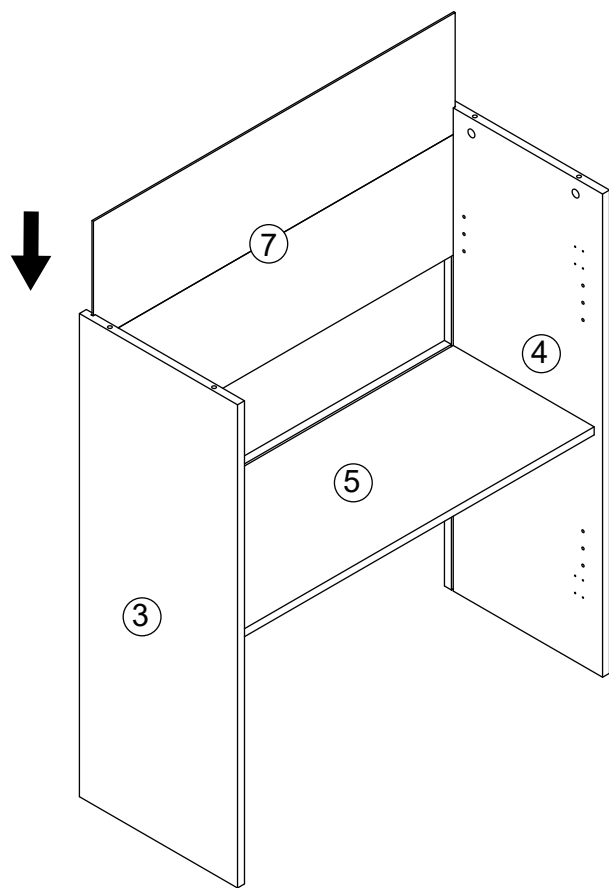


  Step 4.

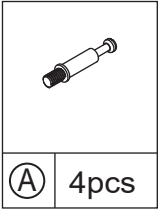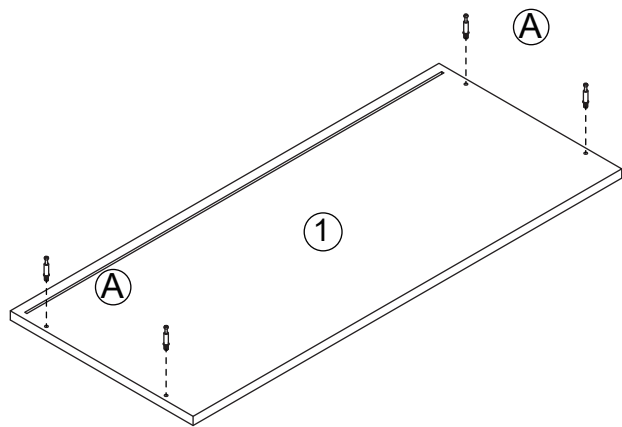


Ax4

  Step 5.

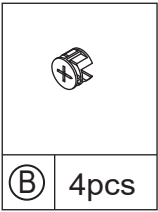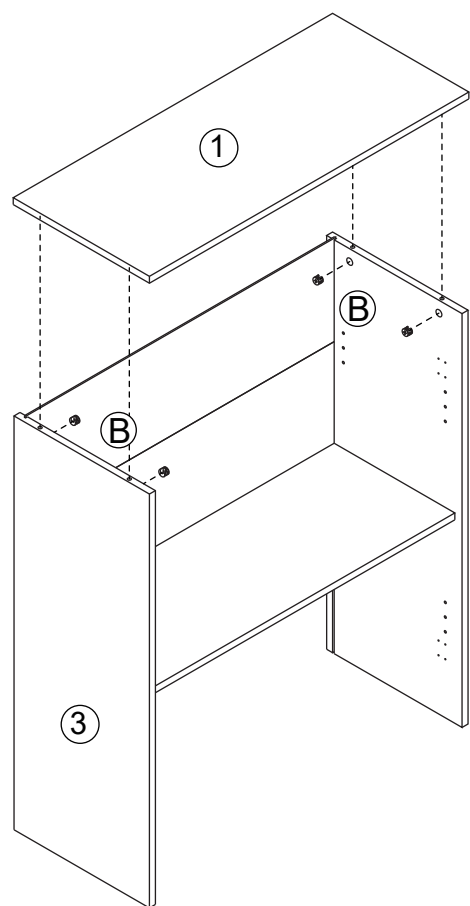


Bx4

 Step 6.

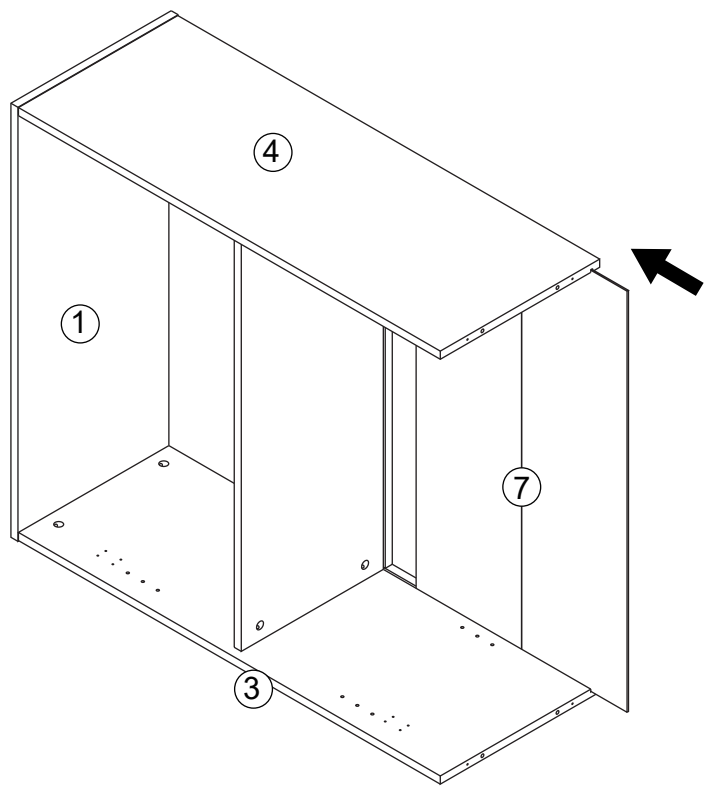

 
Step 7 .

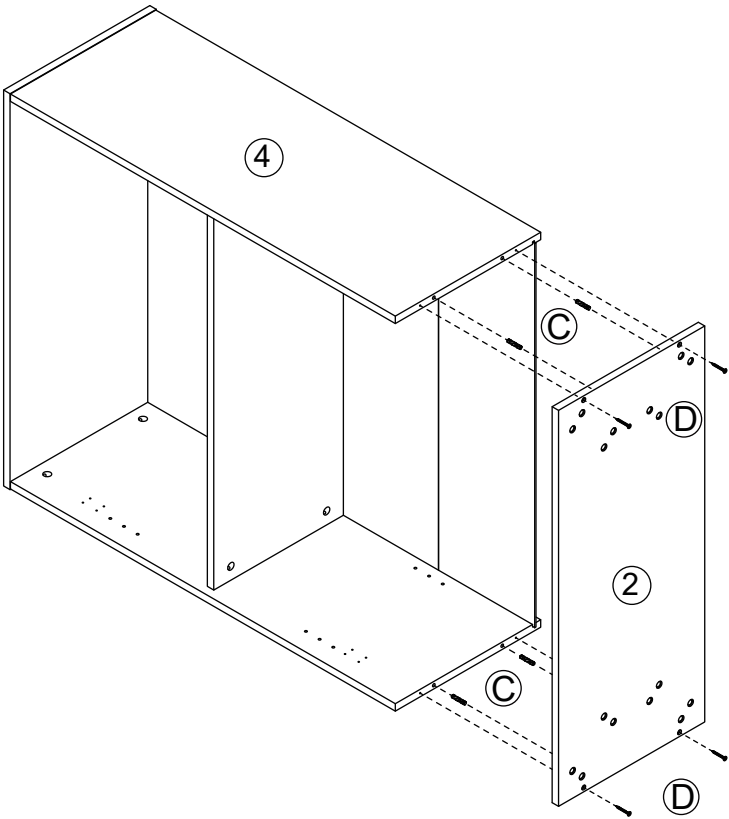

Ⓒ	4pcs
4x35mm	
Ⓓ	4pcs

Cx4 Dx4

 
Step 8.

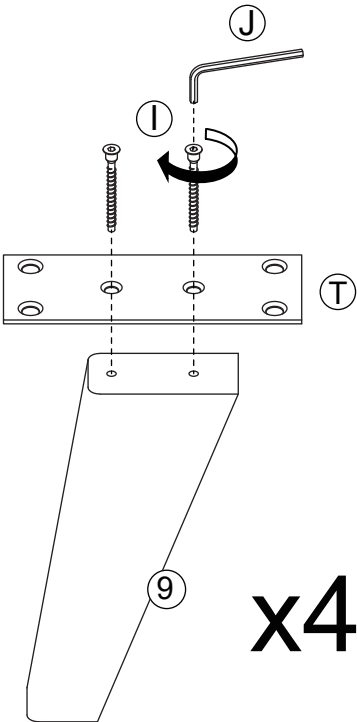

5x40mm	
Ⓘ	8pcs
M3	
Ⓙ	1pcs
Ⓣ	4pcs

Ix8 Jx1 Tx4

 
Step 9 .

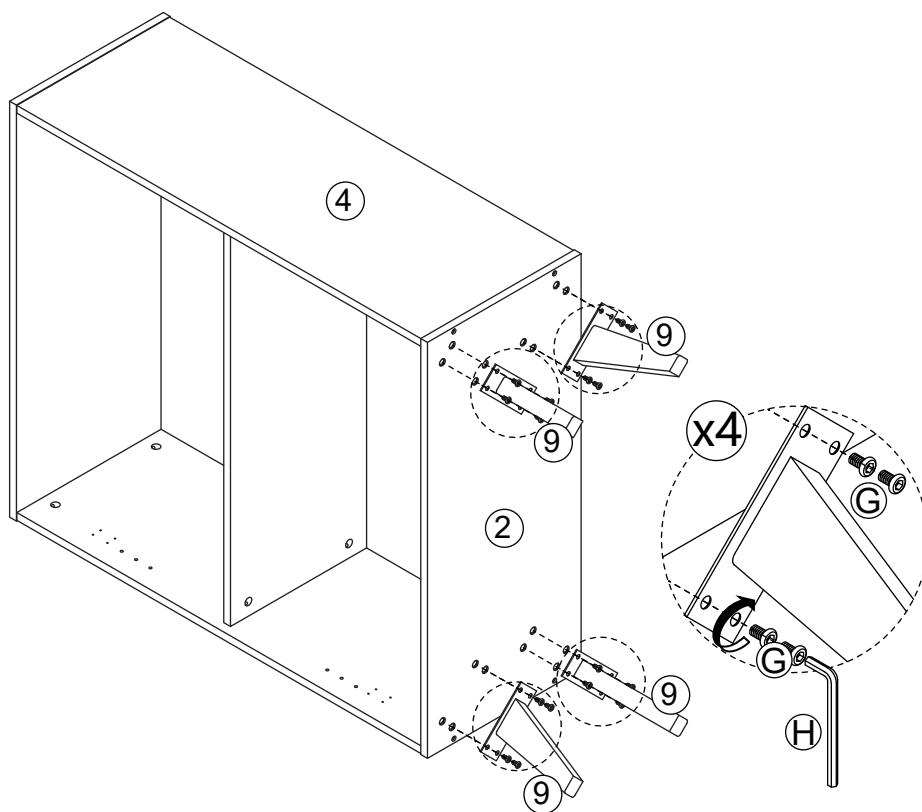

	
6x10mm	
G	16pcs
	
M4	
H	1pcs

Gx16 Hx1

 
Step 10.

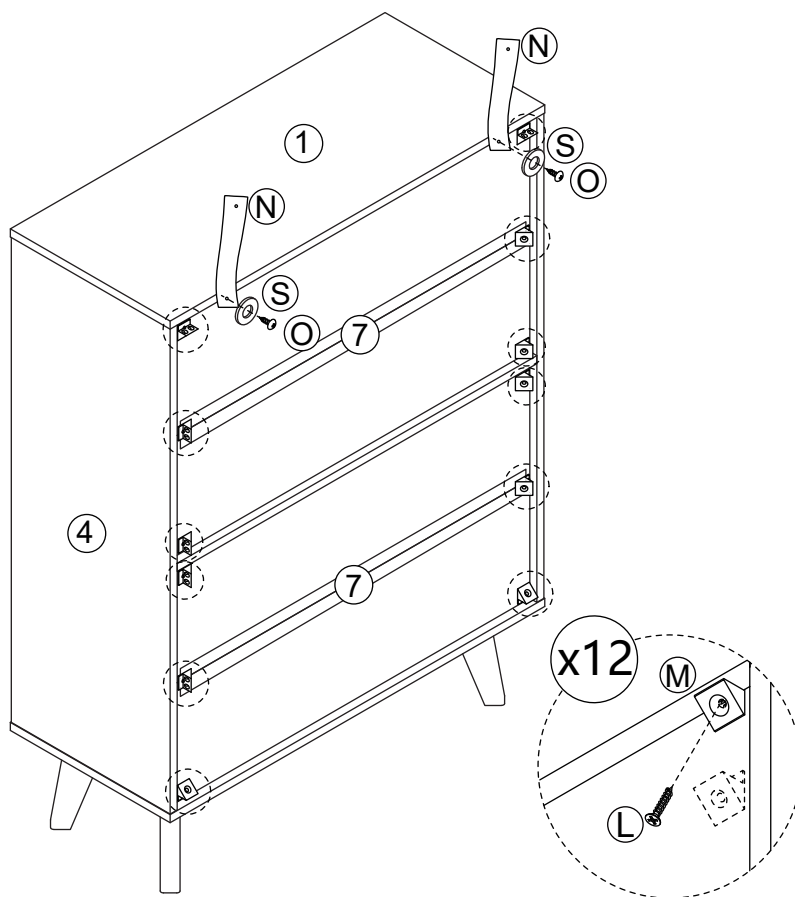

	
3x14mm	
L	12pcs
	
M	12pcs
	
N	2pcs
	
4x12mm	
O	2pcs
	
S	2pcs

Lx12 Mx12 Nx2 Ox2 Sx2

 
Step 11 .

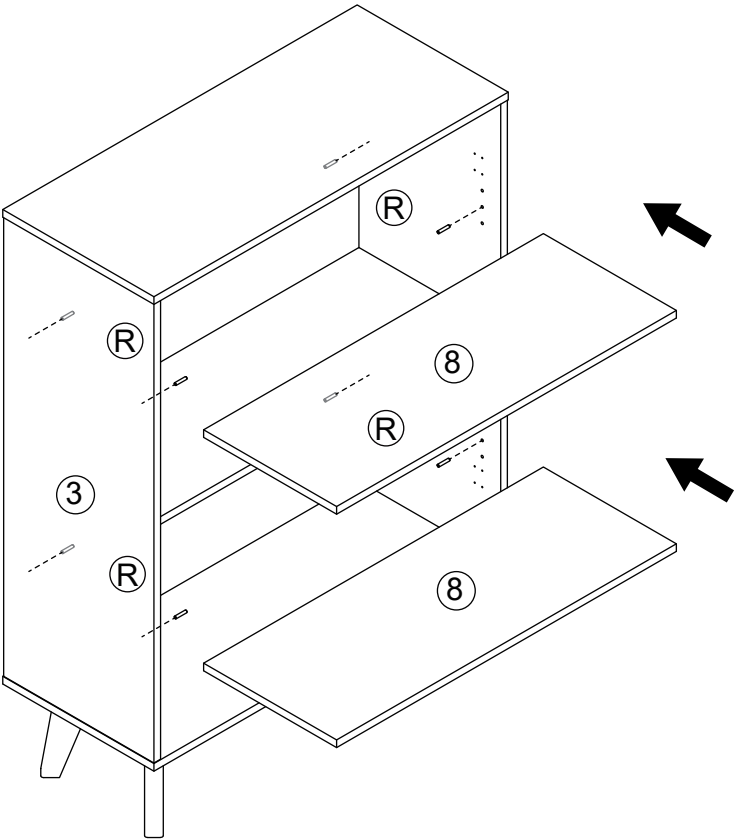

(R)	8pcs

Rx8

 
Step 12.

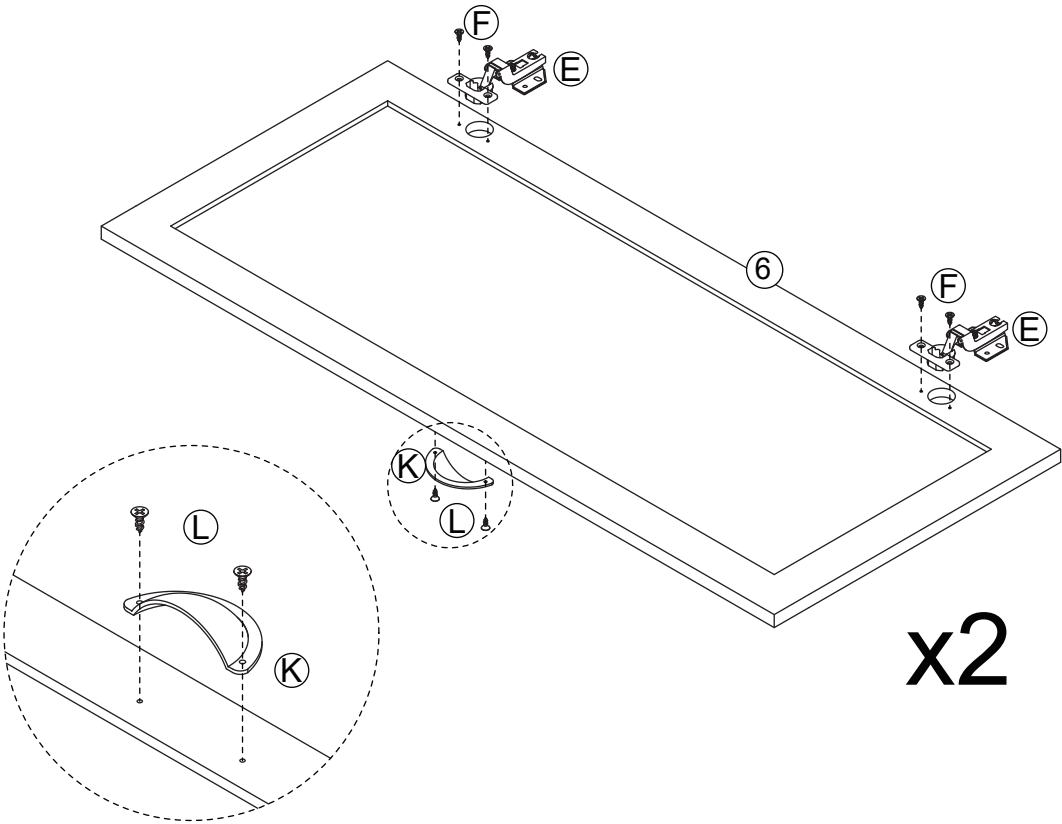


(E)	4pcs
 4x14mm	
(F)	8pcs
(K)	2pcs
 3x14mm	
(L)	4pcs

Ex4 Fx8 Kx2 Lx4

 Step 13 .

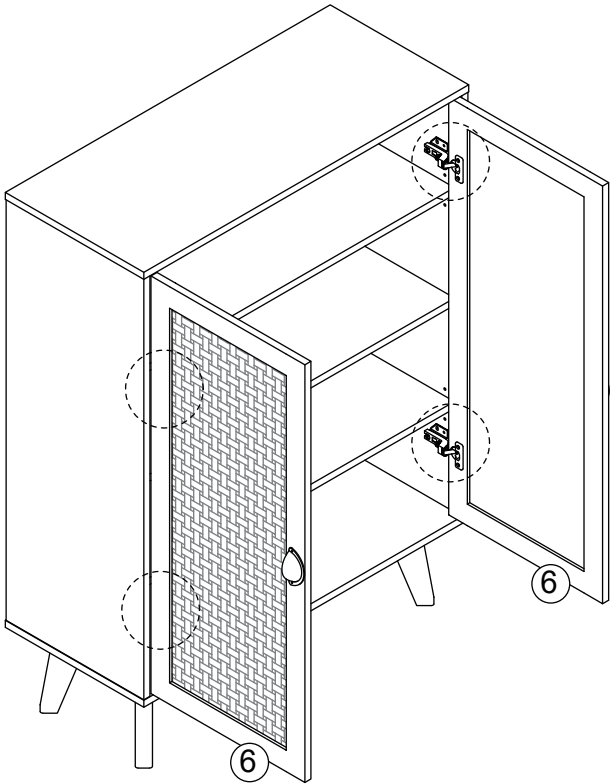


	
4x14mm	
(F)	16pcs

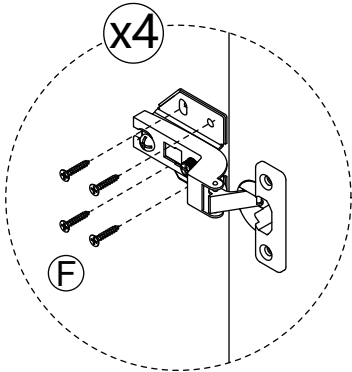 

Fx16

 Step 14.

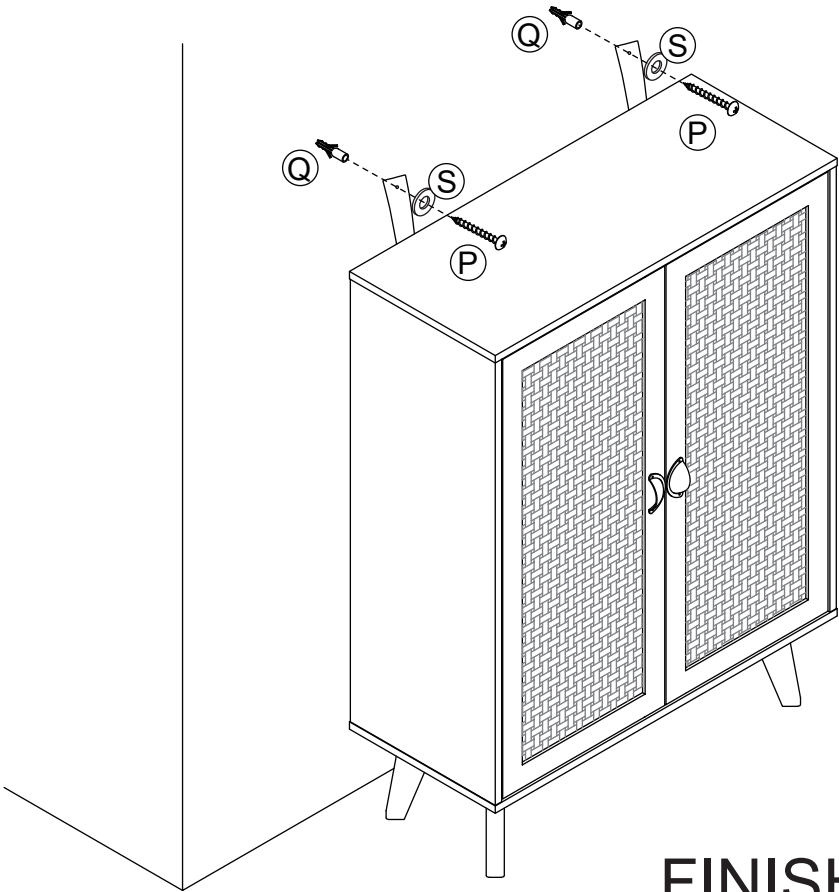

	
4x35mm	
(P)	2pcs
	
(Q)	2pcs
	
(S)	2pcs

Px2 Qx2 Sx2

FINISH !

How to adjust hidden cabinet hinges


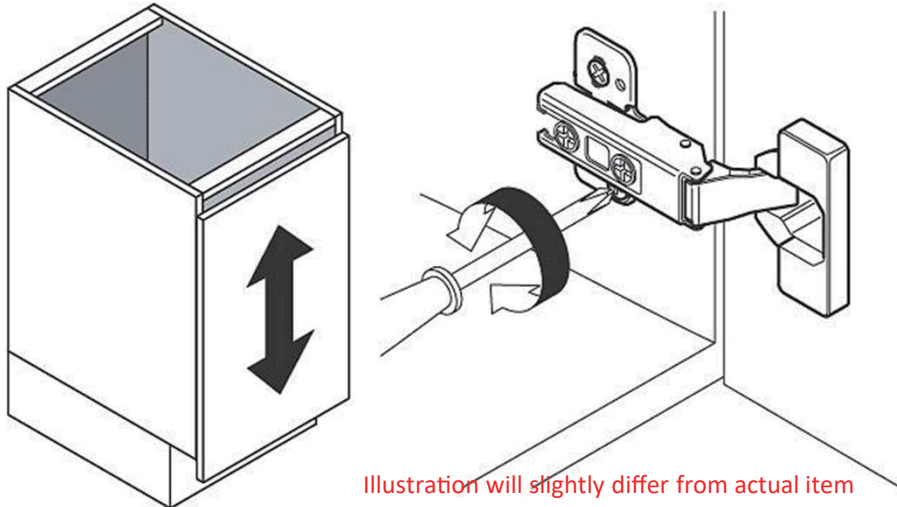 


Illustration will slightly differ from actual item

 Height Adjustment – helps you to adjust doors so they align at the top and bottom. Note: Run your hand along the underside of the doors. You will easily feel which doors are sitting lower than the others.

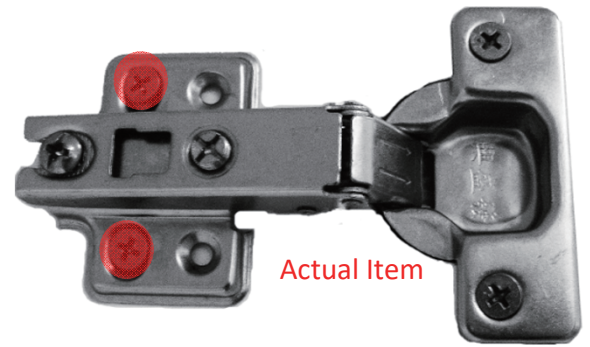

Actual Item

Screws must be loosen by turning CCW and the door can be adjusted to desire position. The screw then must be tighten by turning clockwise to fix the position.


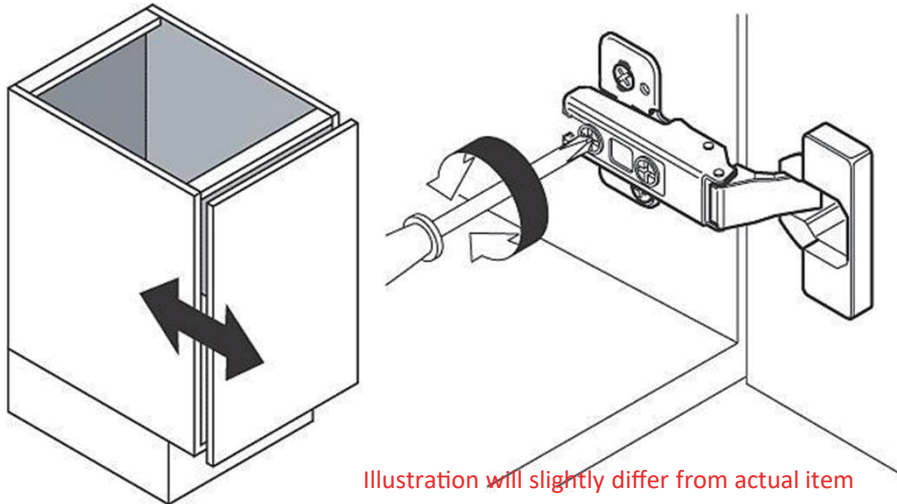 


Illustration will slightly differ from actual item

 Depth Adjustment- Lets you bring a door into alignment with vertical surfaces such as drawers

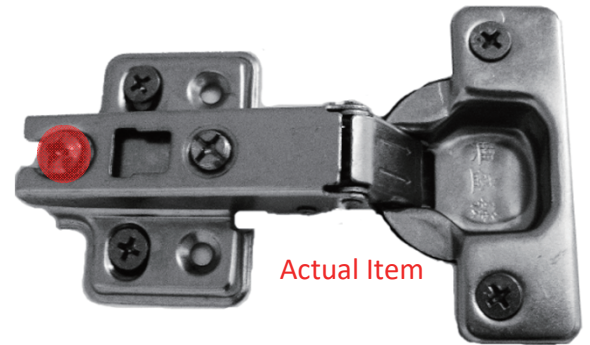

Actual Item

Screw must be loosen by turning CCW and the door can be push inwards or pull outwards to desire position. The screw then must be tighten by turning clockwise to fix the position.


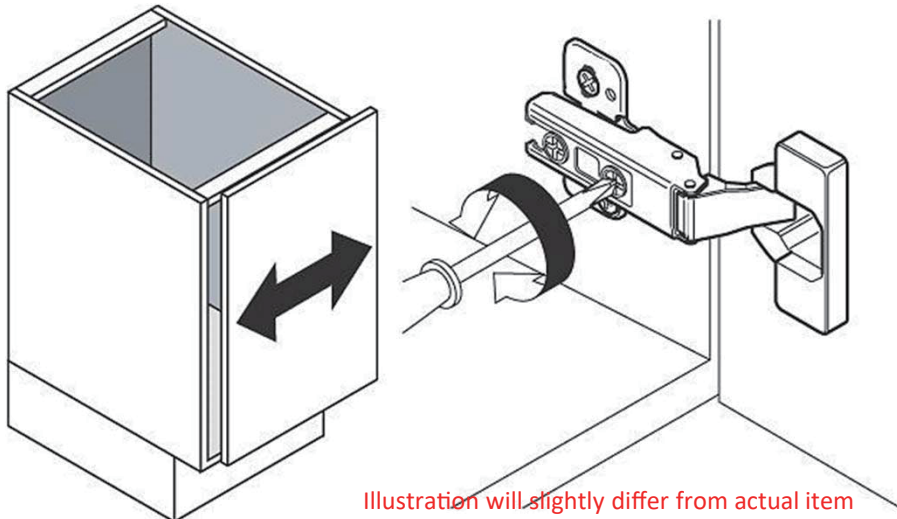 


Illustration will slightly differ from actual item

 Side Adjustment- adjusts gaps between doors and alleviates rubbing doors.
Note: Right Side Hinge: Clockwise moves door to RIGHT, CCW moves door to LEFT
Left Side Hinge: Clockwise moves door to LEFT, CCW moves door to RIGHT

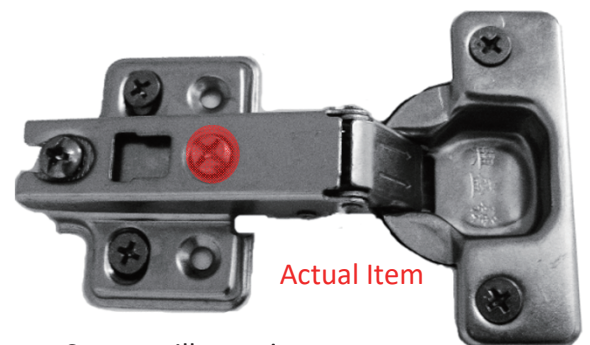

Actual Item

Same as illustration.

USE & CARE INSTRUCTIONS

KEEPING YOUR FURNITURE BEAUTIFUL

Quality furniture is a significant investment expected to last for years on end. To maintain its beauty & help it last, furniture needs the right care, as no finish is totally indestructible. However, with regular care, the finish will last much longer, providing years of enjoyment to you.

TIPS TO PROTECT & CARE FOR YOUR FURNITURE

1. Avoid placing your furniture in direct sunlight, as sunlight causes fading.
2. Avoid extreme changes in temperature by arranging furniture away from radiators, heat & air vents & air conditioning units.
3. Avoid placing plastic or rubber materials (lamp bases, notebooks, placemats, etc.) on your furniture, as certain plastics contain ingredients that may damage the finish.
4. Periodically rotate accessories on furniture, do not sit in the same place all the time.
5. Use pads, cloth or felt to protect the furniture surface from plastic, rubber, hot dishes beverages, bookends, flowerpots & vases.
6. Clean up spills immediately, using a blotting rather than wiping action, as water left over a long time will cause white spots in the finish. Alcohol, perfume, after-shave & medications can cause severe finish damage.
7. Use a protective pad when writing on the furniture surface.
8. Lift & place objects rather than dragging them across the furniture surface.
9. Avoid placing furniture directly under windows.
10. Use cutting boards and trivets for food preparation in order to avoid damaging the top of the furniture

WOOD FURNITURE CARE

We recommend dusting frequently with a clean, soft, dry, lint-free cloth. Wipe spills immediately with a clean cloth. Clean the surface by rubbing follow the direction of the grain and wipe dry. We recommend polishing your furniture approximately every six months. We do not recommend use aerosol-powered cleaners, polishes that contain silicone, waxes, abrasives, or oil based.

LEATHER FURNITURE CARE

To prevent cracks and surface damage we recommend keeping away from high humidity and low temperature rooms. Do not place close to fire, stoves or heaters. Wipe spills immediately with clean non-abrasive cloth or sponge. For spots or stains, clean with mild detergent and warm water. Wring out excess water make cloth is damp before use. Rinse cloth in clear water and wring out, then wipe again to remove detergent residue. To prevent damage use a dry cloth to wipe excess moisture. Also, do not use chemical cleaners that contain bleach.

GRANITE CARE

Our granite is sealed. We recommend cleaning spills promptly. For daily cleaning, use warm water and a soft clean cloth. Granite cleaners also can used for deep cleaning. We do not recommend using abrasive cleaners, chemical solvents, strong detergents, cleaners with bleach or vinegar. Be sure to use trivets, coasters, placemats, or adhesive felt pads to help prevent scratches.

FAUX WOOD/MARBLE CARE

We recommend dusting frequently with a clean, soft, dry, lint-free cloth. Wipe spills immediately with a clean cloth. We do not recommend use aerosol-powered cleaners, polishes that contain silicone, waxes, abrasives, or oil-based. To avoid damaging the surface of the furniture, always use a cutting board when cutting food or other items on the surface. Do not place hot items directly on the surface; always use pads or trivets to prevent damage.

METAL FURNITURE CARE

Because most metals, except aluminum, are subject to rust, metal furniture is usually finished with layers of clear varnish, paint, or a durable powder coating. To clean, use a mild soap solution, scrub, rinse and dry. For outdoor furniture, make sure to drain any water that may accumulate inside the frames after rinsing. After cleaning, apply a coat of quality liquid or paste wax with a lint-free cloth. Use a silicone spray to lubricate swivels and glides on chairs. If metal outdoor furniture is caught during a sudden rainstorm, please make sure to drain any water that may have accumulated inside the frame and dry completely. **Please always cover the furniture when not use, and store properly during inclement weather and the winter/rainy seasons.** For indoor furniture, do not use abrasives products as this may lead to the accidental removal of antique finishes, also to staining or damage to surrounding areas of fabric.

FABRIC MATERIALS CARE

Prevent stains by removing crumbs, dust, dirt, and debris. To remove dirt and debris, vacuum with a dust-brush attachment. Clean spills immediately! For Linen – If the linen item is removable, place the item in a clean sink or tub with cool water and a mild detergent. Gently agitate the linen items, then remove from the soapy water. Rinse with cool water and hang dry. If not removable, then spot clean by dabbing with solution of cool water and a mild detergent on a soft nonabrasive cloth. For Microfiber - If the microfiber item is removable, use machine-wash them in cold water with mild detergent. No fabric softeners as they will clog the open spaces in the microfiber, making the fabric useless. Avoid washing the cotton items because the microfiber will grab on to the lint. If not removable, then spray the area lightly with a water-based solution; using a soft cloth and a blotting motion to remove the stain. Fully air dry.

Your satisfaction is important to us!

If any problems or questions, please contact us at

service@alphamarts.com

or call our after sale support hotline 1-877-606-2818

Monday-Sunday PST 09:00AM--18:00PM

Please mention complete Order ID & model/SKU number.

Thank you for purchasing our product !