 


#### ◆ Replacing the Remote Control Battery

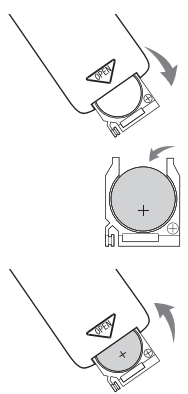

 
1. Gently press the battery cover and pull it down to remove the battery box cover.
2. Put the battery into the battery box. (Please pay attention to the positive and negative direction of the battery)
3. Send the battery cover into the original outlet and buckle completely.

#### ⚠ WARNING! Chemical Burn Hazard. Keep batteries away from children.

- This product contains a lithium button/coin cell battery. If a new or used lithium button/coin cell battery is swallowed or enters the body, it can cause severe internal burns and can lead to death in as little as 2 hours.
- Please remember to close your battery box all the time. If the battery box does not close securely, stop using the product, remove the batteries, and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek medical attention immediately.
- The cells shall be disposed of properly, including keeping them away from children.
- Even used cells may cause injury.

#### ◆ Accessory: Remote Control

1. Be sure to direct the remote control toward the receiver on the control panel.
2. Use the remote control within 5 meters from the receiver. If the remote control is not directed towards the receiver, the effectiveness will be reduced.
3. Do not place any obstacle between the receiver and remote control.
4. Please treat your remote control with care. Knocking or dropping it will reduce its reliability
5. Please store the remote control safely when not in use.
6. Remove battery from remote control before storage.

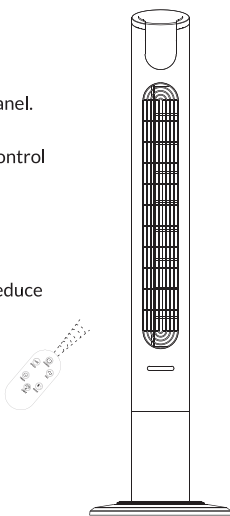

-6-

## CLEANING & CARE

1. Always turn off the power supply and unplug the appliance from the main socket before cleaning.
2. Do not use any chemical-based solutions for cleaning fan surfaces.
3. Slightly moisten a cloth and then wipe off the surfaces of the fan.
4. Ensure fan is completely dry before storage or reconnecting to electrical supply.
5. Never immerse the fan or fan motor in water or other liquid.
6. If the fan is not used for long time, protect with a suitable cover after cleaning, then store in a dry place or dismantle and return to retail carton for winter storage.

## TROUBLESHOOTING

If you have any problems during use, please check the following: Problem & Solutions

Symptom	Check items
The fan does not run when the power is on.	<ul style="list-style-type: none"><li>● Check if the power lead is correctly plugged into the socket &amp; the power is on.</li><li>● Check if the power cord is completed.</li></ul>
There is an abnormal sound when starting up.	<ul style="list-style-type: none"><li>● Check if any foreign matter has entered the body and foreign matter jammed fan .</li></ul>
The remote control does not work when the powers on.	<ul style="list-style-type: none"><li>● Check if the battery power supply is insufficient.</li><li>● Check if the battery is installed correctly.</li></ul>

 


if the power cord is damaged, in order to avoid danger, it must be replaced by professionals from the manufacturer's maintenance department or similar departments.

-7-

#### User Service instruction

- a) "Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
- b) "Open fuse cover." The manufacturer shall indicate the specific way to open the cover such as: "Slide open fuse access cover on top of attachment plug towards blades," or "Push on tabs located next to the blades.
- c) "Remove fuse carefully. The manufacturer shall indicate the appropriate way to remove the fuse, such as whether to push the fuse from the other side or turn fuse holder over to remove fuse.
- d) "Risk of fire. Replace fuse only with 5 Amp, 125 Volt fuse (provided with product)." The blank shall be filled in with the current rating of the fuse. Words located in parenthesis are applicable only if the replacement fuse is provided with the product.
- e) "Close fuse cover." The manufacturer shall indicate the specific way to close the cover, such as: "Slide closed the fuse access cover on top of attachment plug," or "Push cover closed so that all tabs latch."

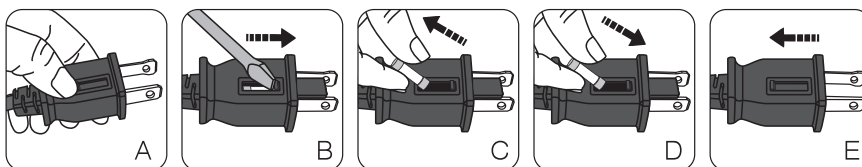

Risk of fire. Do not replace attachment plug. Contains a safety device (fuse, AFCI, LCDI) that should not be removed. Discard product if the attachment plug is damaged.


## SPECIFICATIONS

 Model	Voltage	Frequency	Power	Noise
A12-TF-004-BK	120V	60Hz	28W	48dB



-8-

# mollie

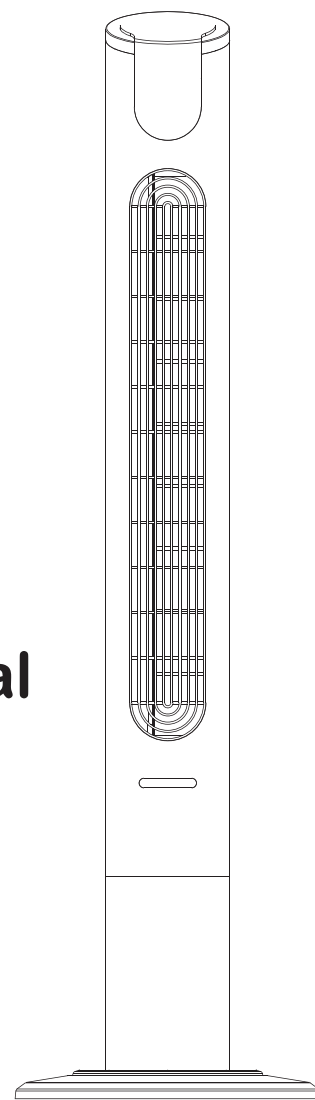

## Instruction Manual

TOWER FAN  
A12-TF-004-BK

 
- Thank you very much for purchasing our tower fan.
- Please read this instruction carefully before using this manual.
- For Household Use Only.

## SAFETY INSTRUCTIONS

1. Check the household voltage to ensure it matches the fan's rated specification before using
2. Always use this device in accordance with the instructions.
3. Close supervision is necessary when this fan is used near children and pets.
4. Do not allow children to play with the product or product packaging, such as plastic bags.
5. Repairs may only be carried out by a recognized repair center, incorrect handling and faulty repairs may lead to danger and invalidate warranty.
6. This fan is not intended for use in wet or damp locations.
7. Never position the fan in an area where it may fall into a bath or other water container.
8. Do not use this fan if it has any damaged parts or it has fallen into water. Return the product to a recognized repair center for examination and repair.
9. Do not insert any object into the grille whilst the fan is operating. It may cause damage to persons or property.
10. Always turn off the power supply before unplugging the product to move, store or clean it.
11. Always use both hands to carry this product. Do not lift by the carry handle alone - please support the fan base.
12. Do not operate the fan near an open flame, cooking or heating appliance or hot surface.
13. Always place your fan on a firm, dry, level surface, away from curtains & blinds.
14. This fan is intended for indoor, domestic & light commercial use only and is not to be operated outside.
15. Do not hang anything from the fan grille.
16. Disconnect the unit from the electrical outlet before cleaning.
17. To disconnect from the power supply, grip the plug and pull from the power socket. Never pull by the cord.
18. Arrange the power cord away from an area where it may be tripped over
19. Never place the power cord under a carpet or rug.
20. Do not direct the fan towards babies or the elderly for extended periods.
21. If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
22. Do not operate if the fan grille is removed or damaged.
23. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
24. To Reduce The Risk Of Fire Or Electric Shock, Do Not Use This Fan With Any Solid-State Speed Control Device.
25. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances.
26. This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded or returned to an authorized service facility for examination and/or repair.

-1-

## PARTS DESCRIPTION

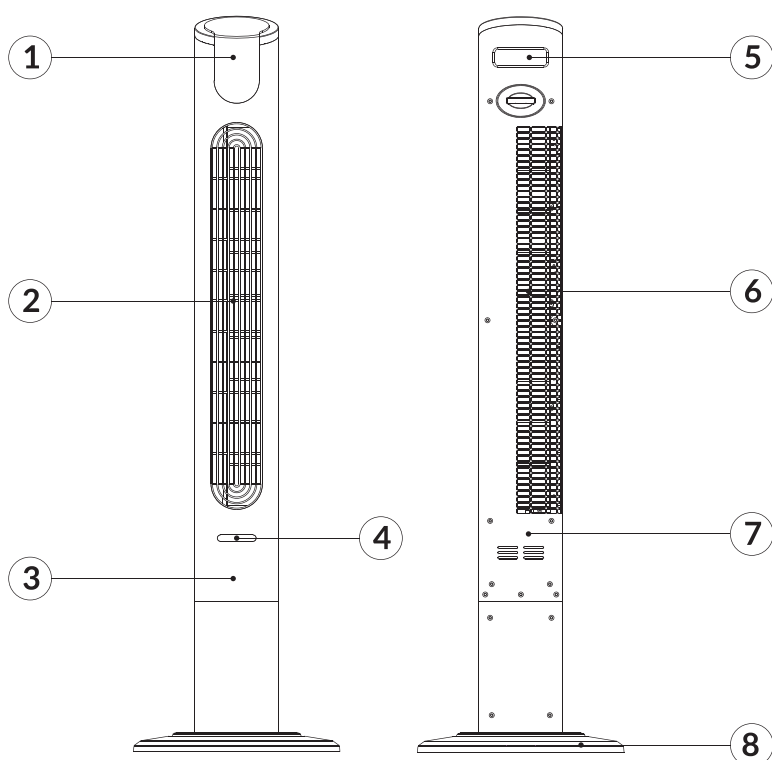


1. Control panel
2. Air outlet
3. Front cover
4. Light
5. Handle
6. Air inlet
7. Rear cover
8. Base plate


-2-

## ASSEMBLY METHOD

 
- Please assemble correctly according to the following sequence.
- Please keep the original packaging for future storage.

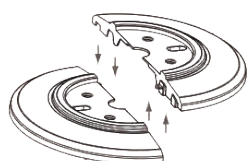

 1. Take the front and rear foot plates out of the packing box, align the rear footplate and the front foot plate hole positions and insert them.

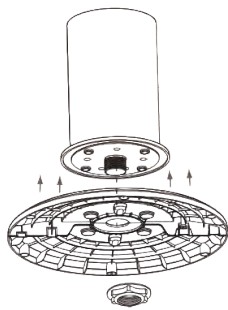

 
2. Align the positioning holes on the foot plate with the positioning holes of the fuselage turntable. After fixing, tighten the screws.

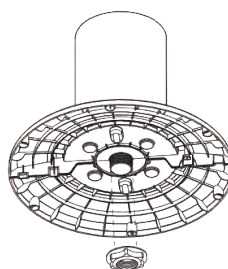

3. Tighten the screws, you have finished all install steps.

-3-

## OPERATING INSTRUCTIONS

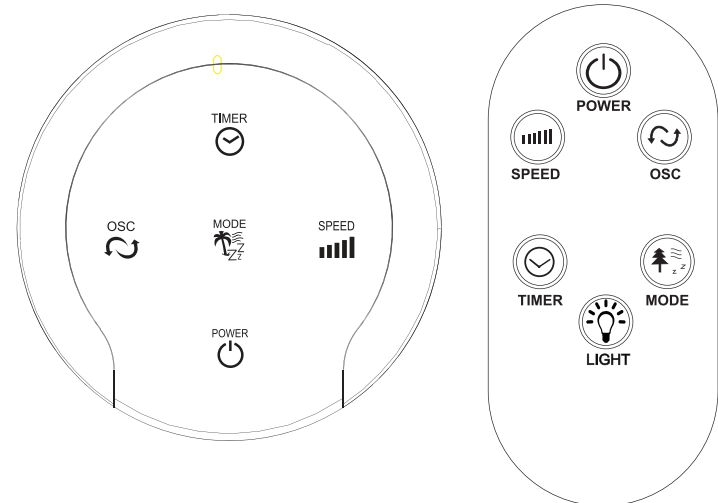 

#### Control Panel

#### Remote Control



 
POWER In the power-on state, press this button to start the fan, and press it again to turn off the fan.



SCREEN In the power-on state, the screen will automatically dim to 10% of the brightness if there is no operation for about 30 seconds. Press any button to wake up the screen.

-4-


**SPEED** Press this button to adjust the speed/airflow, speed 1 to speed 8, the adjustment sequence is as follows:



OSC Press this button in the power-on state to turn on the fan head swing; press this button again to stop the fan head swing.



 
MODE Press this button in the power-on state to adjust the mode, and the adjustment sequence is as follows:



AUTO MODE Auto Mode is an energy saving mode. It can change different windspeeds automatically according to indoor temperature. In case of 20 °C or under, it will change the windspeed into level 2. In case of 21-25 °C, it will change the windspeed into level 4. In case of 26-30 °C, it will change the windspeed into level 6. In case of 31 °C or above, it will change the windspeed into level 8.



 TIMER In the power-on state, press this button for timing, and then press this button to adjust off time. The sequence of setting time is as shown in the figure below. For Example, if you want to turn off the fan after 8 hours, please Set Timer for 8.



LIGHT You can press this button to switch on or off the LED lamp. It replaces the function of night light.

NOTE

The button of fan screen is touch button, there is no need to press the button hard. The most great way is to touch it gently.

-5-