

## Country Door Chest

Replaceable Parts



DESCRIPTION	QUANTITY
Bun Foot	4
Knob with screws	2
Pull with screws	2
Drawer Glide	1
Door Hinge	4
Magnetic Catch	2
Wood Shelf	1
Wood Shelf Clip	4
Leveler	4