 


TV STAND

Assembly Instructions - Please keep for future reference

N893P493564

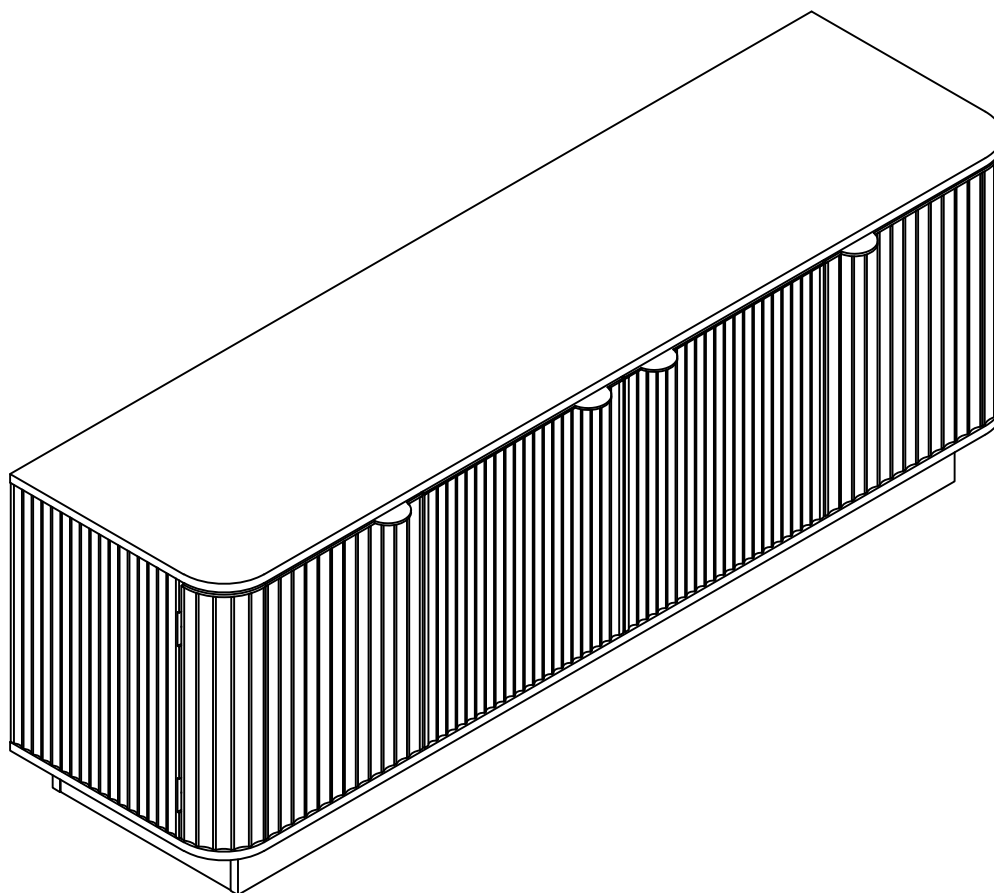

! WARNING	
	This product is NOT a Clothing Storage Unit (CSU). DO NOT use it for clothing storage. Improper use may cause furniture tipover.

Important - Please read these instructions fully before starting assembly.



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightened properly.

WARNING

In order to help prevent overturning – please follow these instructions

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
To help prevent product toppling over please follow the below steps:-

Use the anti tip strap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

Components - Fittings

Please check you have all the panels listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases, more fittings may be supplied than required.

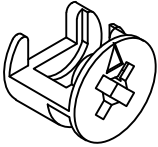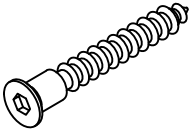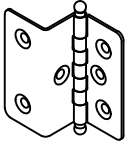A QTY: 32+2  CAM BOLT	B QTY: 32+2  CAM LOCK	C QTY: 30+2  WOOD DOWEL Ø8*30mm	D QTY: 8  ALLEN FLAT HEAD SCREW Ø10*45mm
E QTY: 4  HINGE	F QTY: 4  BUTT HINGE	G QTY: 24 White color  FLAT HEAD SCREW Ø7*12mm	H QTY: 24  FLAT HEAD SCREW Ø7*15mm
I QTY: 1  RUBBER DOOR STOP	J QTY: 2  MAGNET	K QTY: 2  MAGNET PLATE	L QTY: 12  SHELF SUPPORT PIN
M QTY: 12  CORNER BLOCK	N QTY: 12 White color  FLAT HEAD SCREW Ø6*19mm	O QTY: 4  PAN HEAD SCREW	P QTY: 4  FLAT HEAD SCREW Ø6*12mm
Q QTY: 14  FLAT HEAD SCREW Ø6*19mm	T QTY: 1  HEX KEY Ø10*45mm		

Using Camlocks


Step 1

 Connect the male camlock as directed in the assembly instructions using a screwdriver.

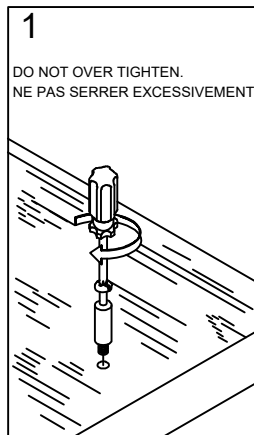

Step 2

 
Push the male camlock into the entry hole.

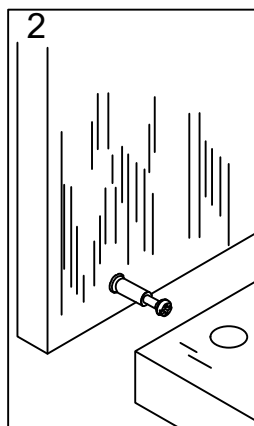

Step 3

Insert the female camlock as shown in the instruction.

 Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

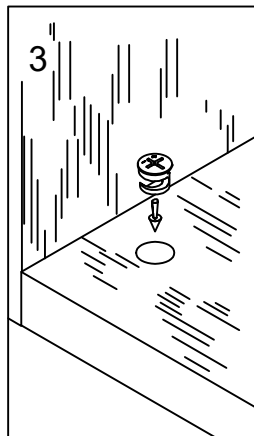


Step 4


Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.















 
The joint is now secure.

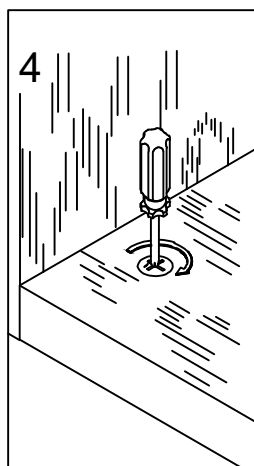

COMPONENTS - KEY DIAGRAM

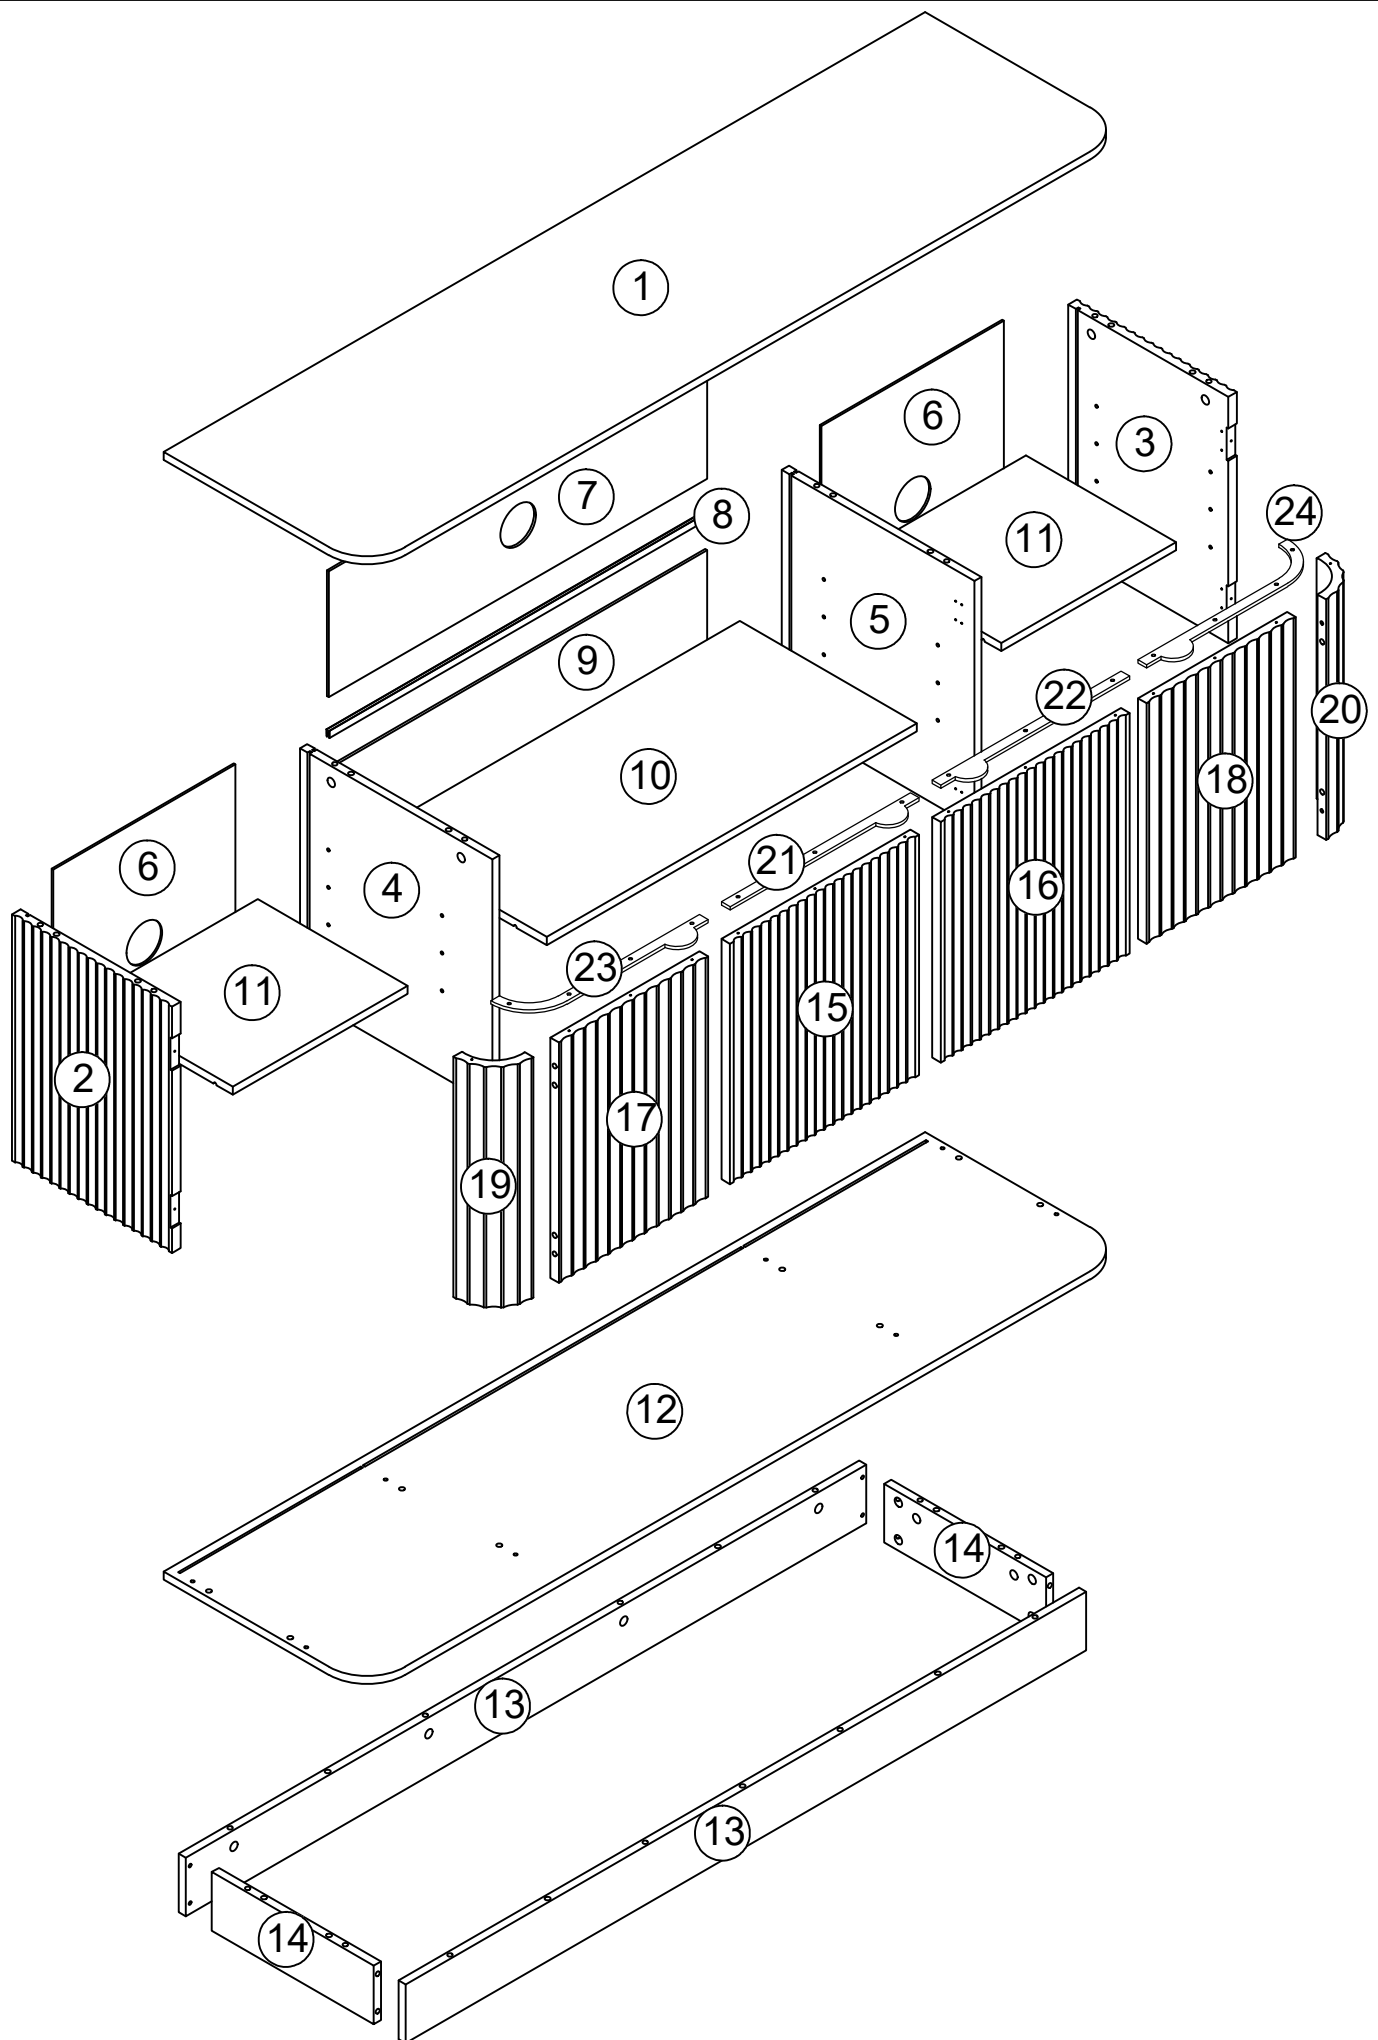 


COMPONENTS - KEY DIAGRAM

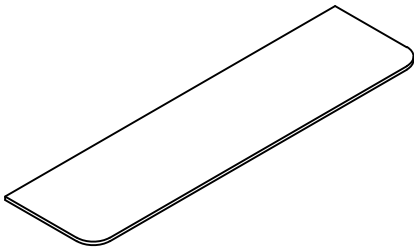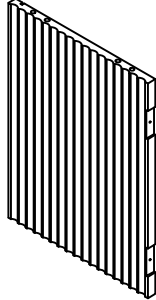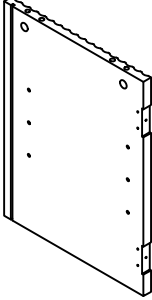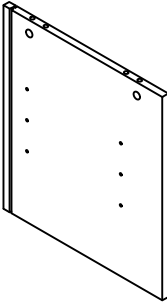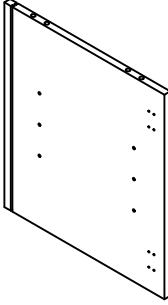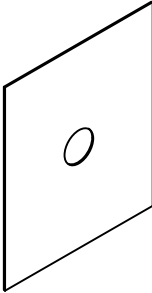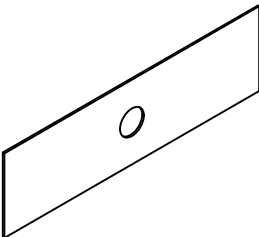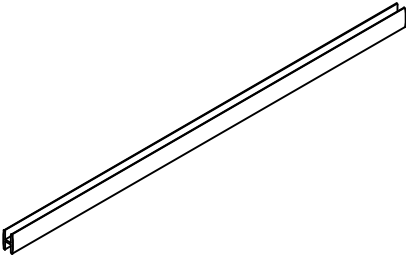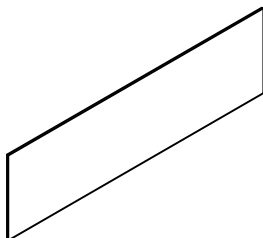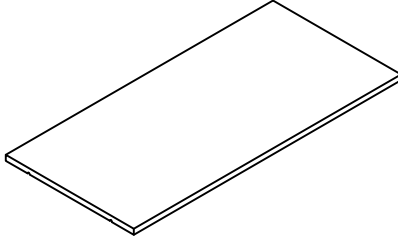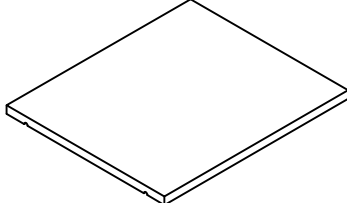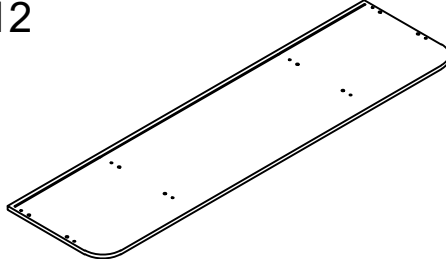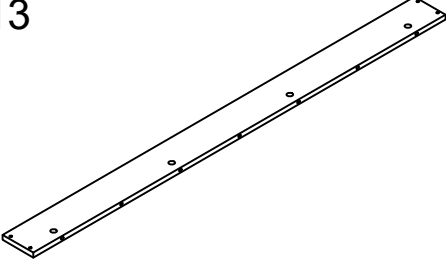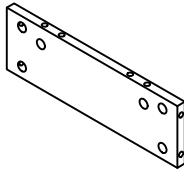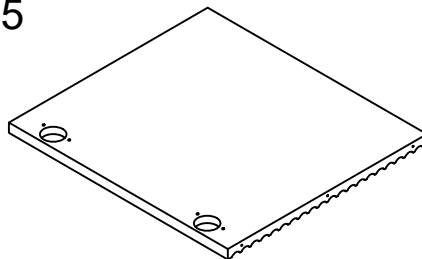               
1		2		3	
TOP PANEL	QTY: 1	LEFT SIDE PANEL	QTY: 1	RIGHT SIDE PANEL	QTY: 1
4		5		6	
LEFT VERTICAL PARTITION	QTY: 1	RIGHT VERTICAL PARTITION	QTY: 1	SIDE BACK PANEL	QTY: 2
7		8		9	
TOP BACK PANEL	QTY: 1	PLASTIC BACK PANEL STRIP	QTY: 1	BOTTOM BACK PANEL	QTY: 1
10		11		12	
ADJUSTABLE MIDDLE SHELF	QTY: 1	ADJUSTABLE SIDE SHELF	QTY: 2	BOTTOM PANEL	QTY: 1
13		14		15	
BOTTOM HORIZONTAL RAIL	QTY: 2	BOTTOM VERTICAL RAIL	QTY: 2	CENTER LEFT DOOR	QTY: 1

COMPONENTS - KEY DIAGRAM

 
16

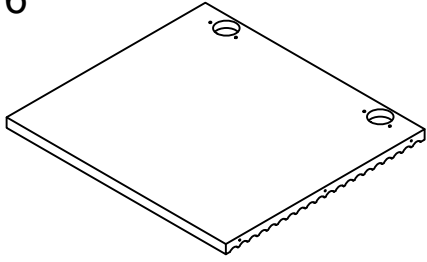

17

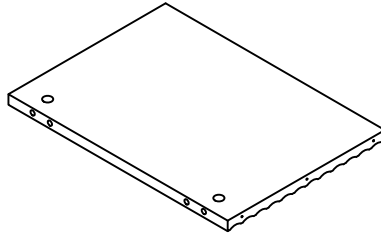 

18

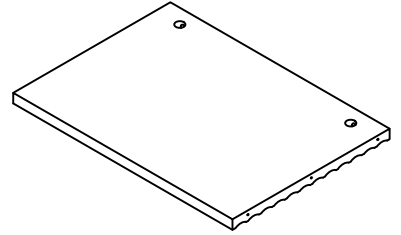 

CENTER RIGHT DOOR

QTY: 1

 
LEFT SIDE DOOR

QTY: 1


RIGHT SIDE DOOR

QTY: 1


19

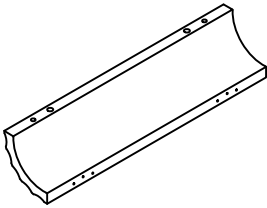

20

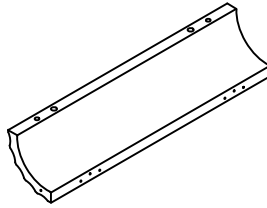 

21

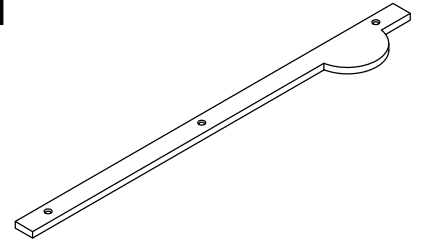 

LEFT DOOR STILE

QTY: 1

 
RIGHT DOOR STILE

QTY: 1


LEFT CENTER HANDLE

QTY: 1


22

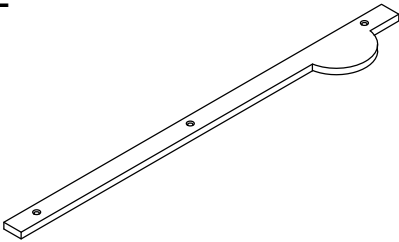

23

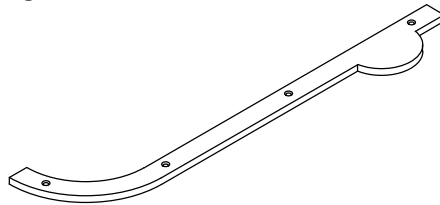 

24

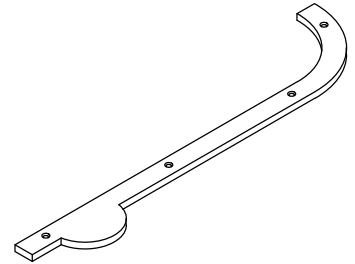 

RIGHT CENTER HANDLE

QTY: 1

LEFT SIDE HANDLE

QTY: 1

RIGHT SIDE HANDLE

QTY: 1



 
 
HARDWARE KIT


QTY: 1

ASSEMBLY INSTRUCTIONS


STEP 1


- ② x1
- ③ x1
- ④ x1
- ⑤ x1
- ⑫ x1

C		8PCS
D		8PCS

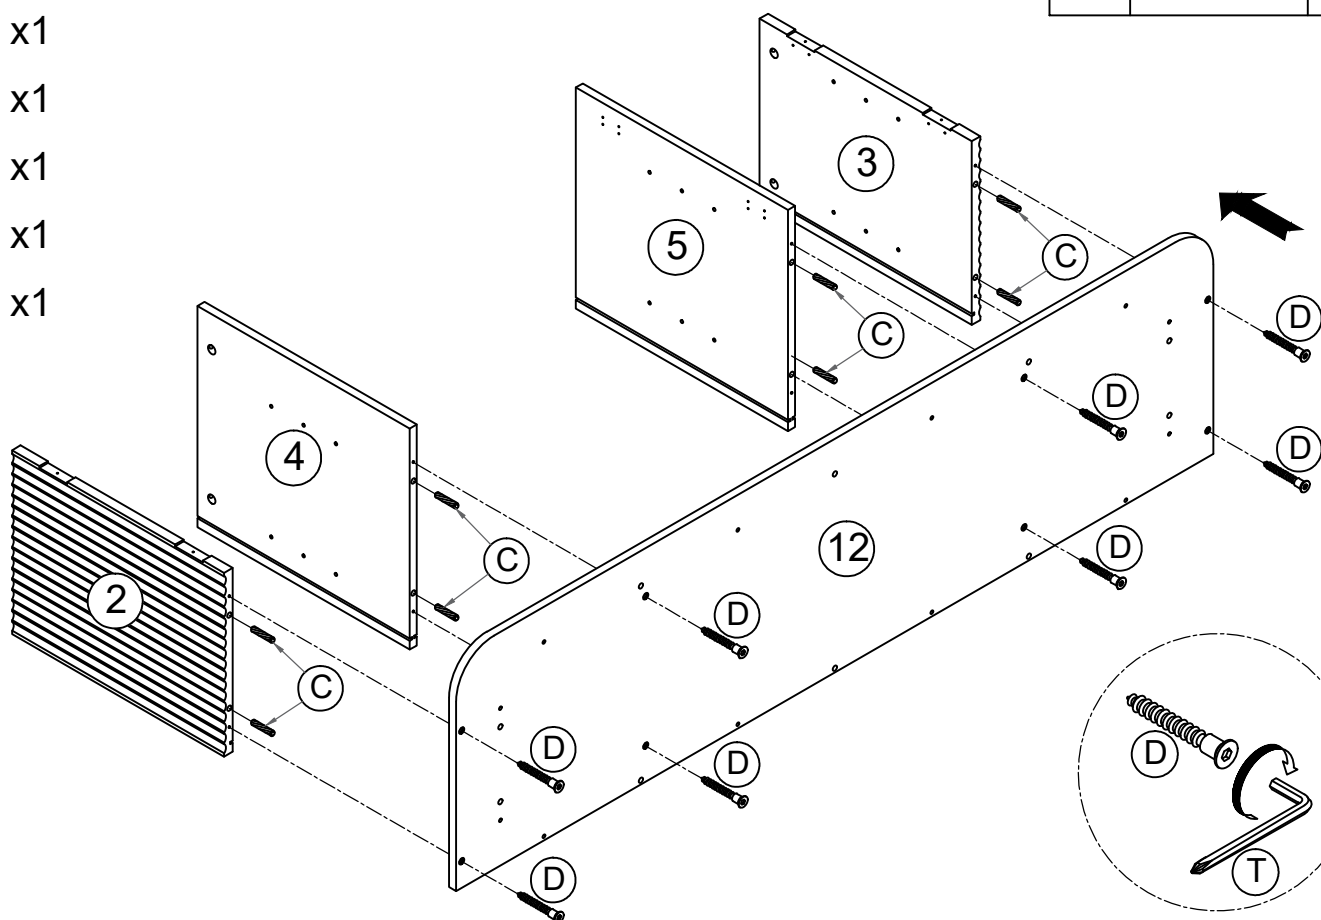 

 STEP 2


A		12PCS
C		10PCS

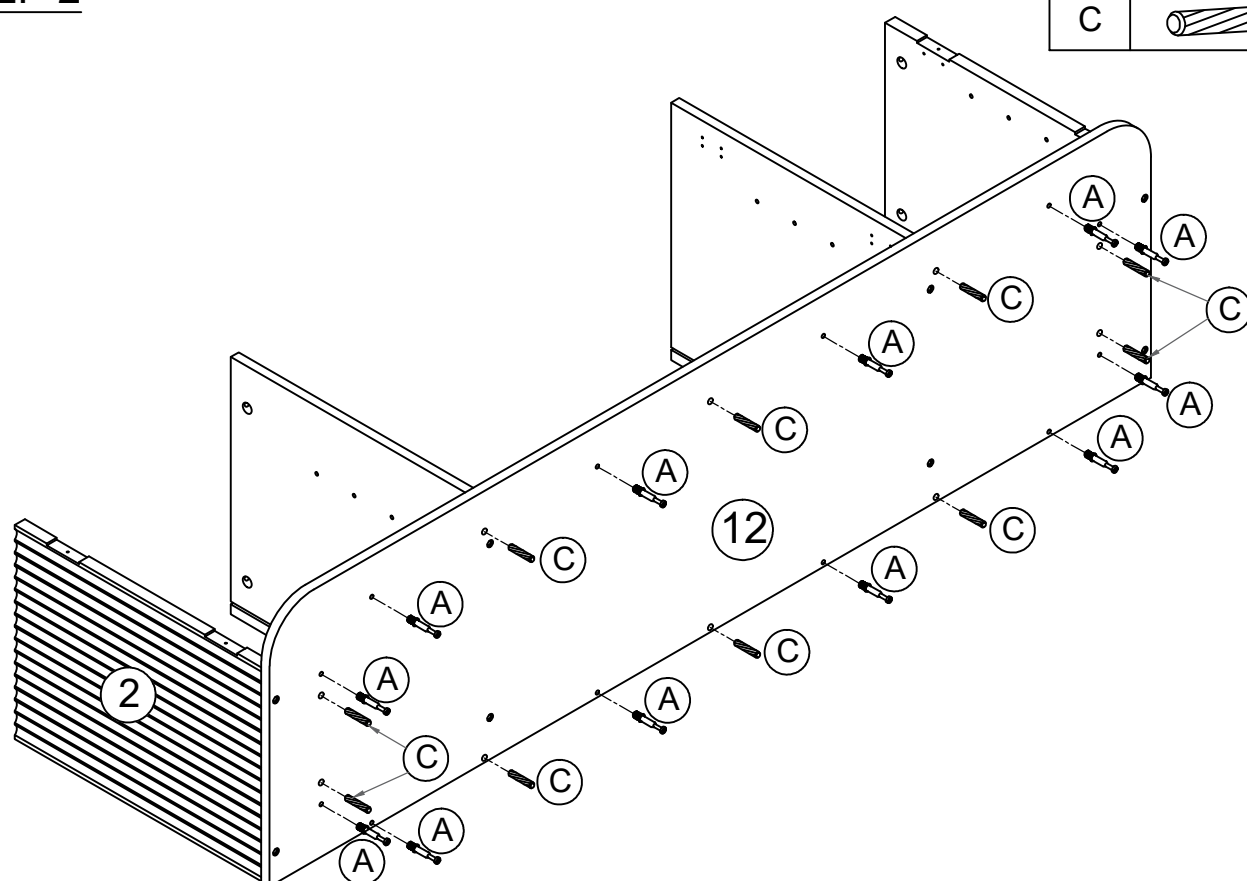 

ASSEMBLY INSTRUCTIONS


STEP 3

 A



8PCS

 ⑬ x2

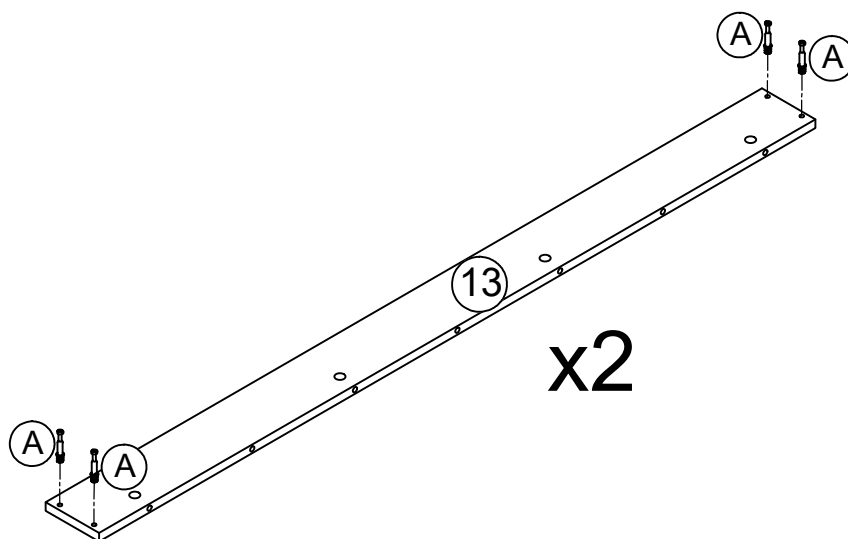

x2

 
 
 
 
STEP 4

B



8PCS

⑭ x2

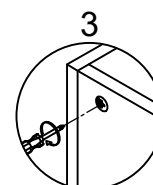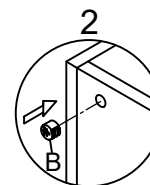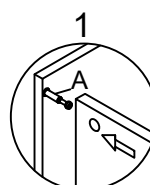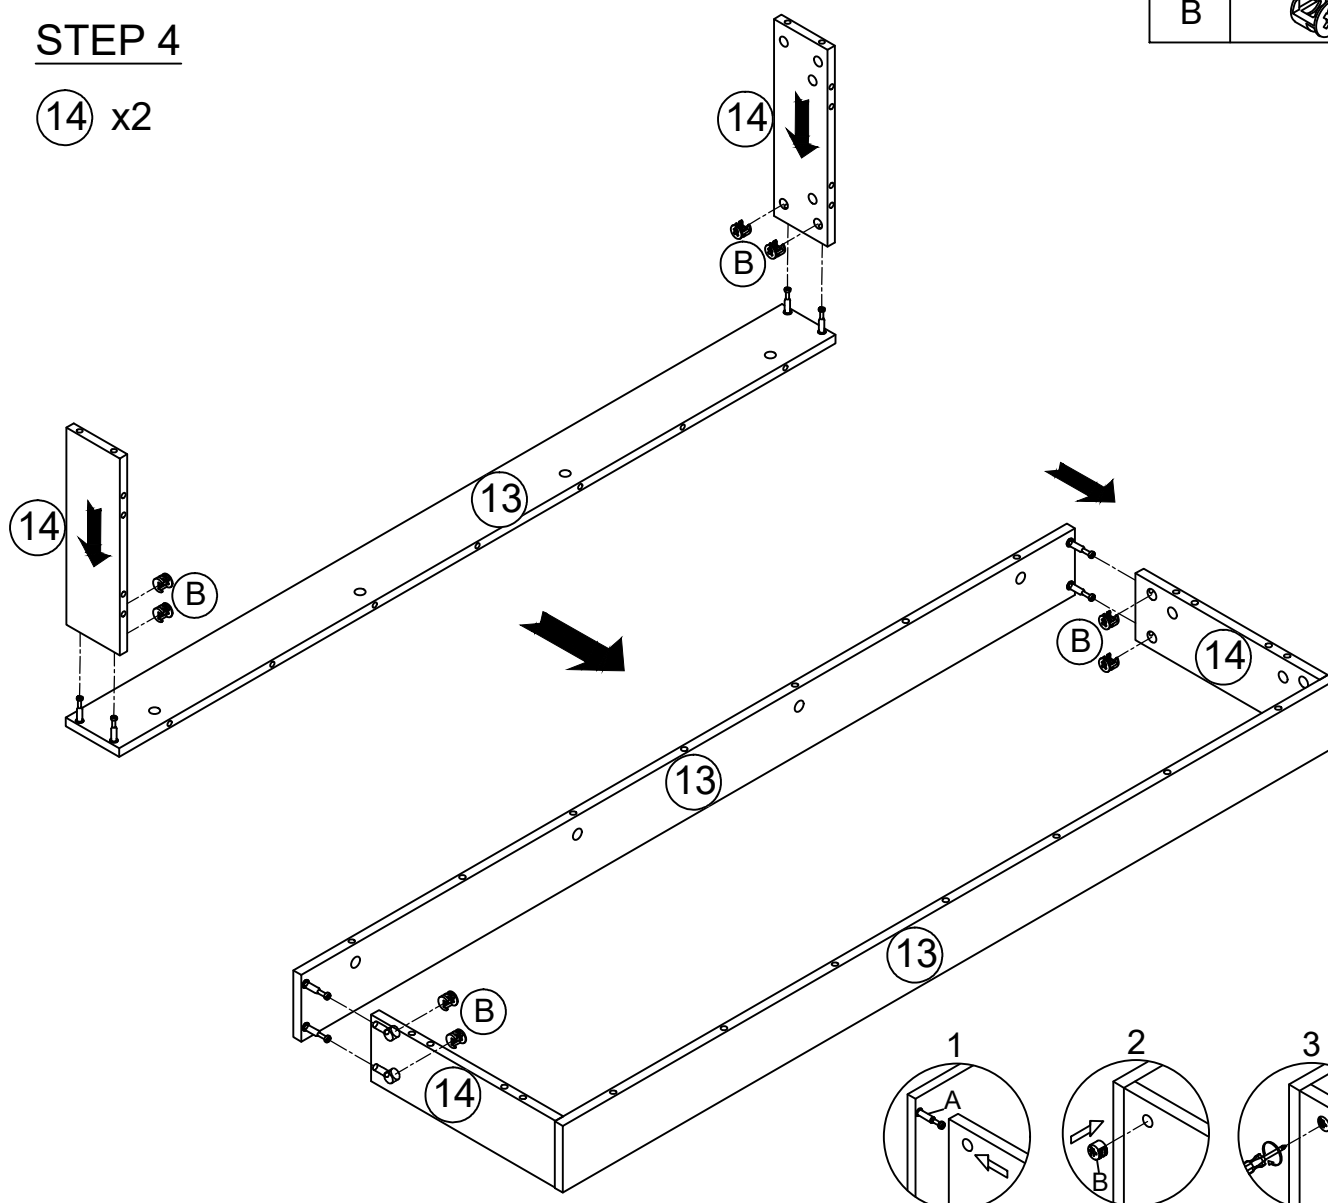


ASSEMBLY INSTRUCTIONS

STEP 5

B




 12PCS

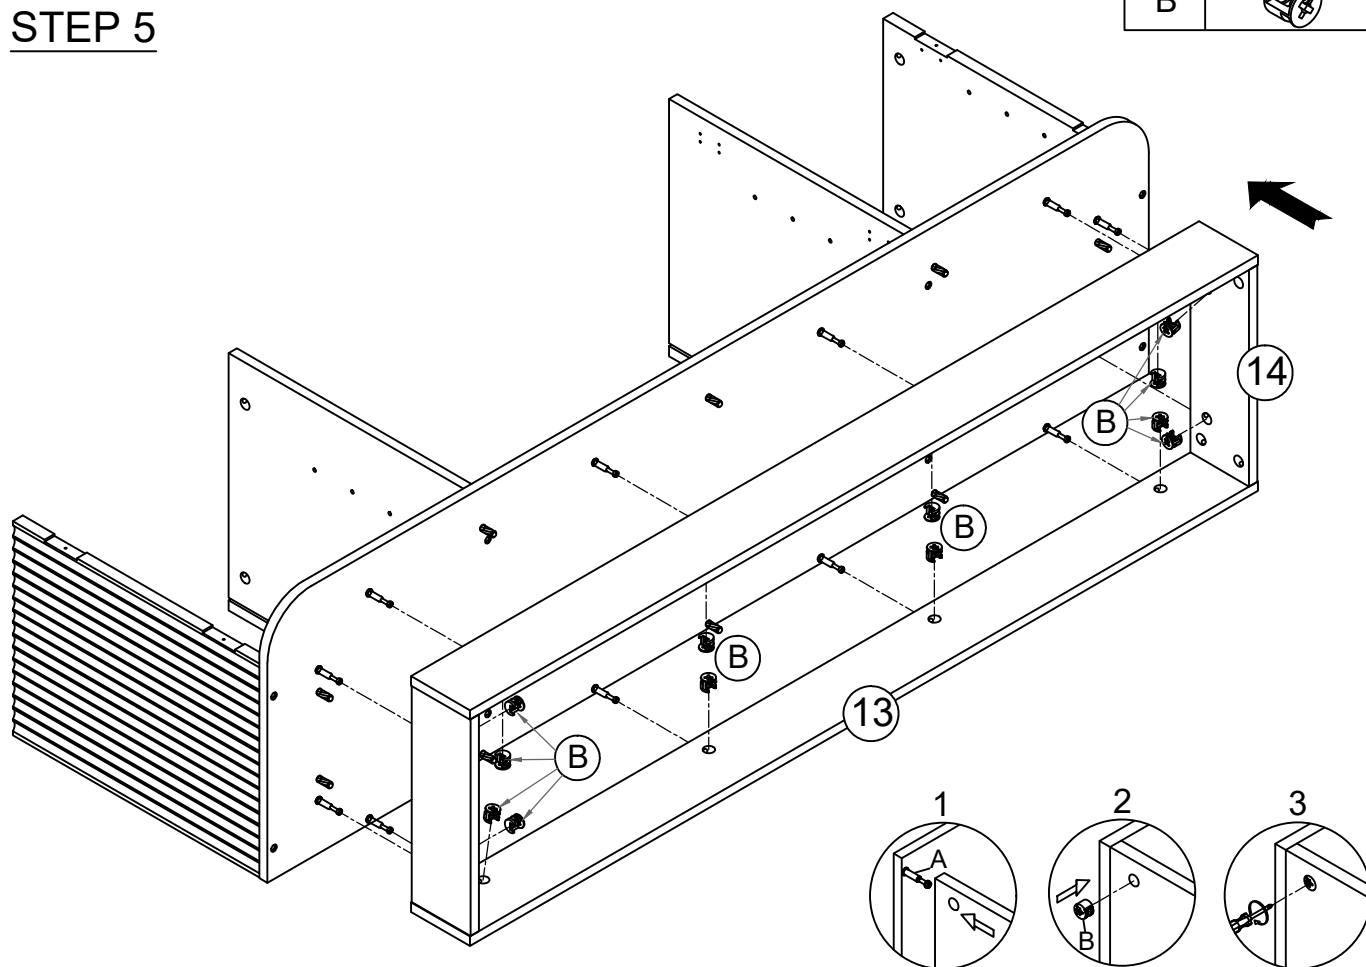

STEP 6

 
- ⑥ x2
- ⑦ x1
- ⑧ x1
- ⑨ x1

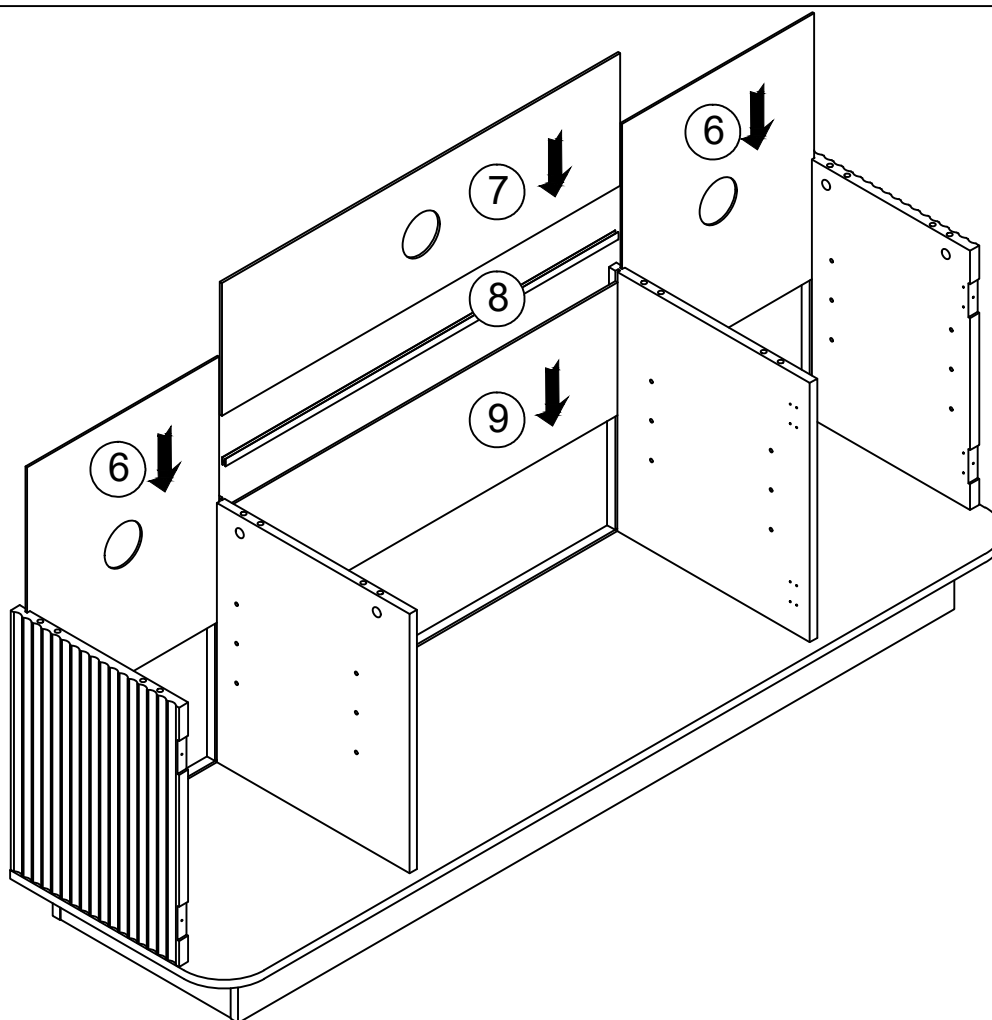


ASSEMBLY INSTRUCTIONS

STEP 7


 
① x1

J		2PCS	A		8PCS
O		4PCS	I		1PC
			P		2PCS

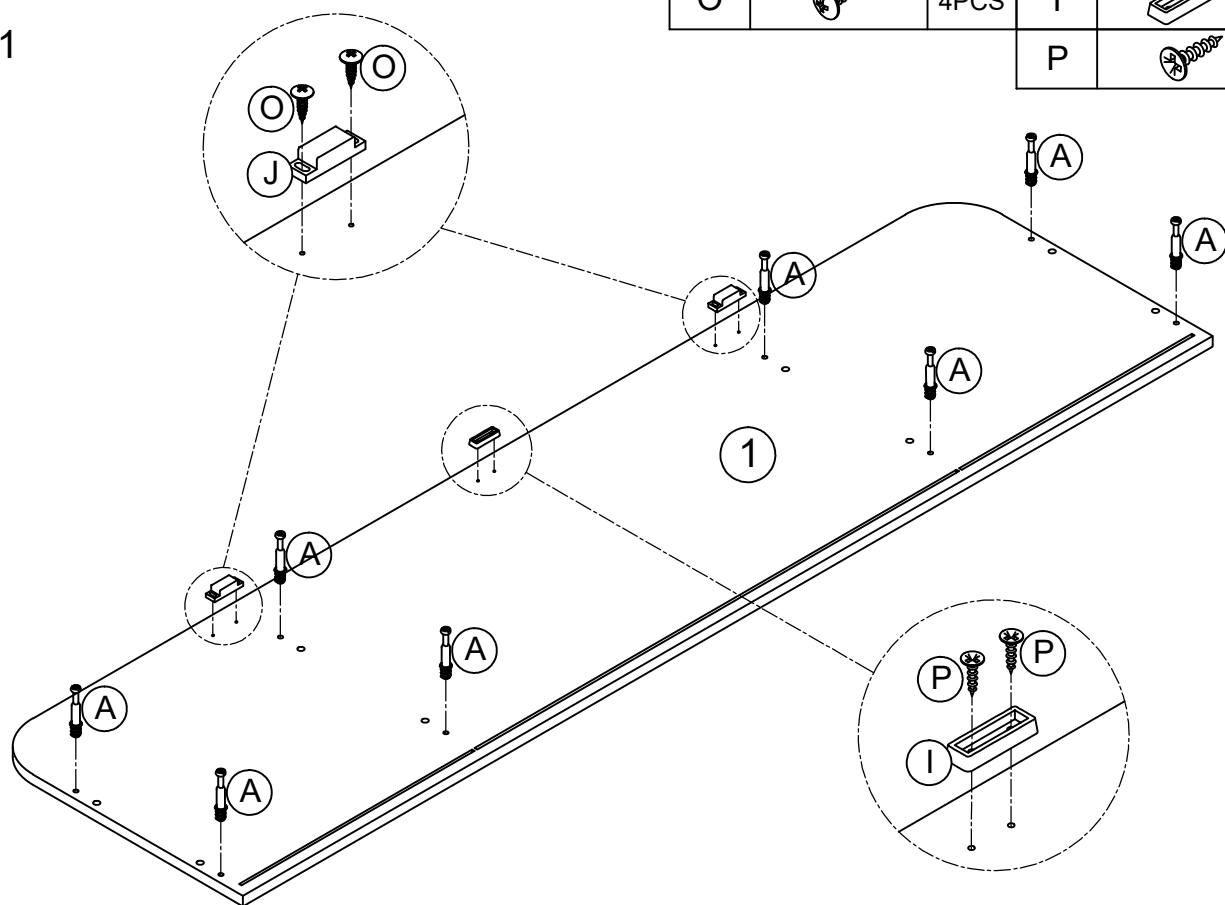 

STEP 8

B		8PCS
C		8PCS

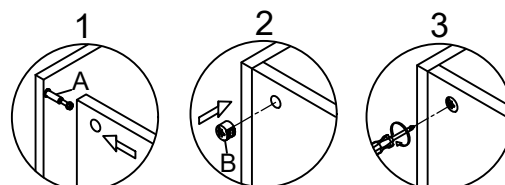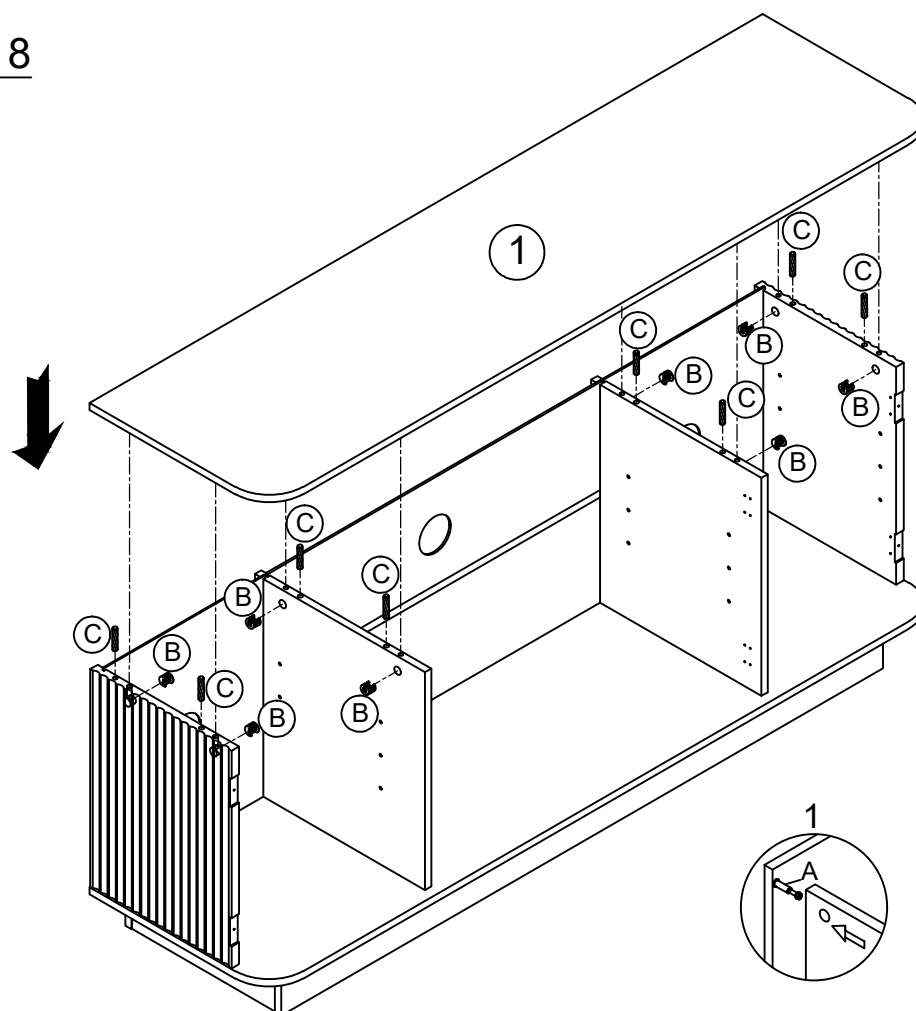  


ASSEMBLY INSTRUCTIONS

STEP 9

⑮ x1

⑯ x1

E		4PCS
G		8PCS

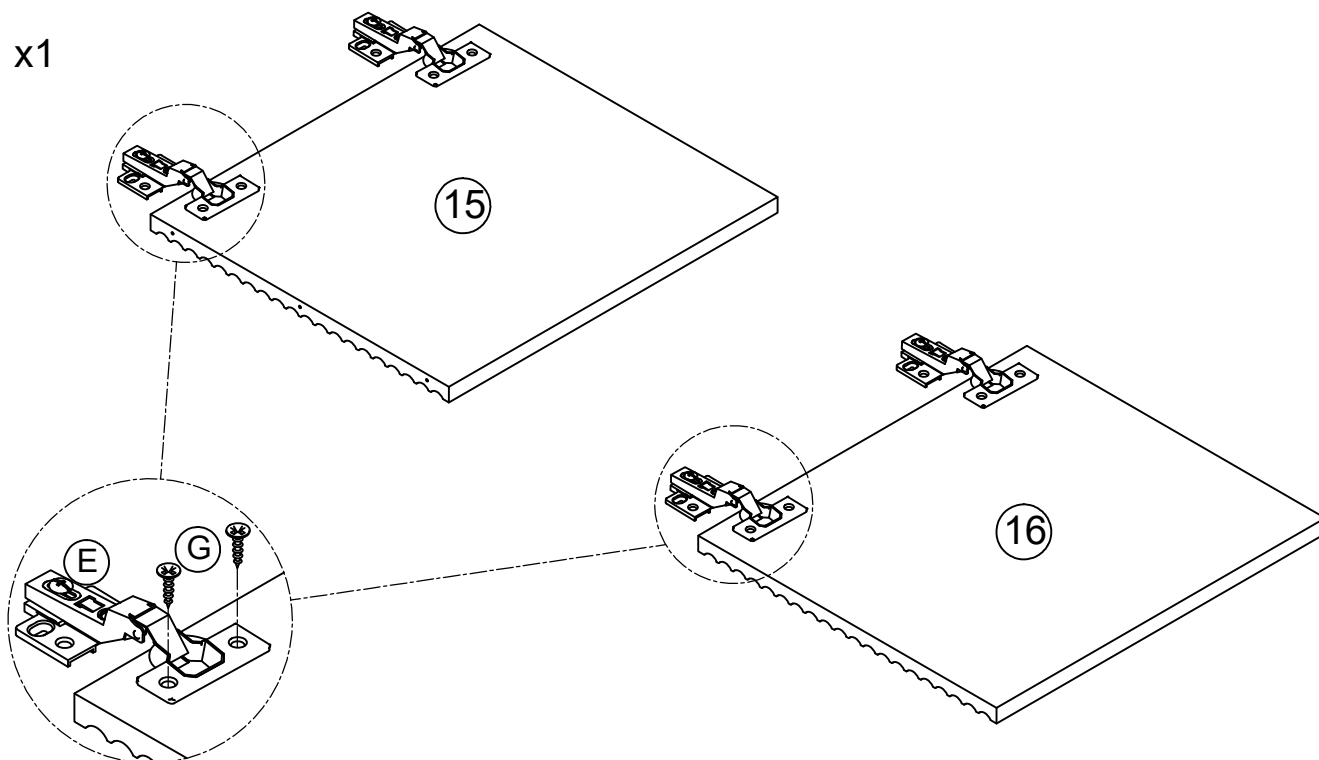 


STEP 10

⑳ x1

㉑ x1

Q		6PCS
---	---	------

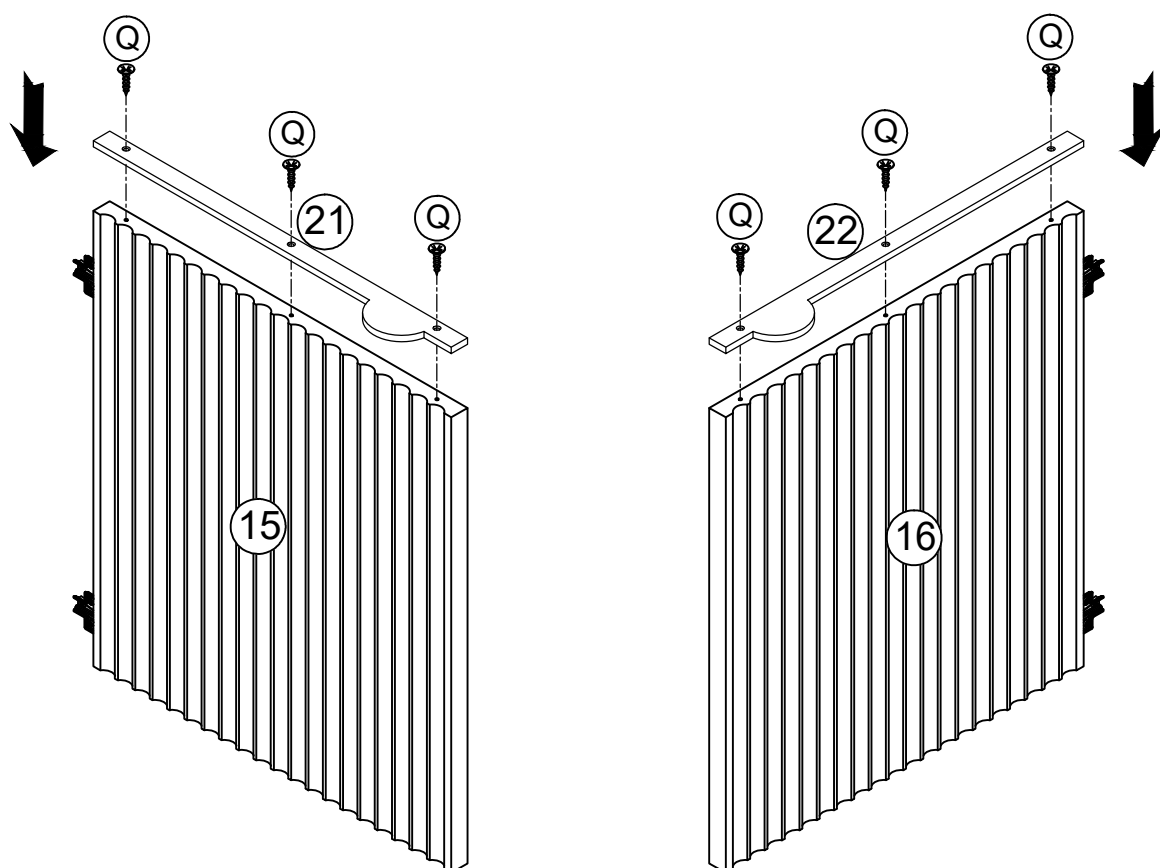 

ASSEMBLY INSTRUCTIONS

STEP 11

 
⑩ x1

⑪ x2

L



12PCS

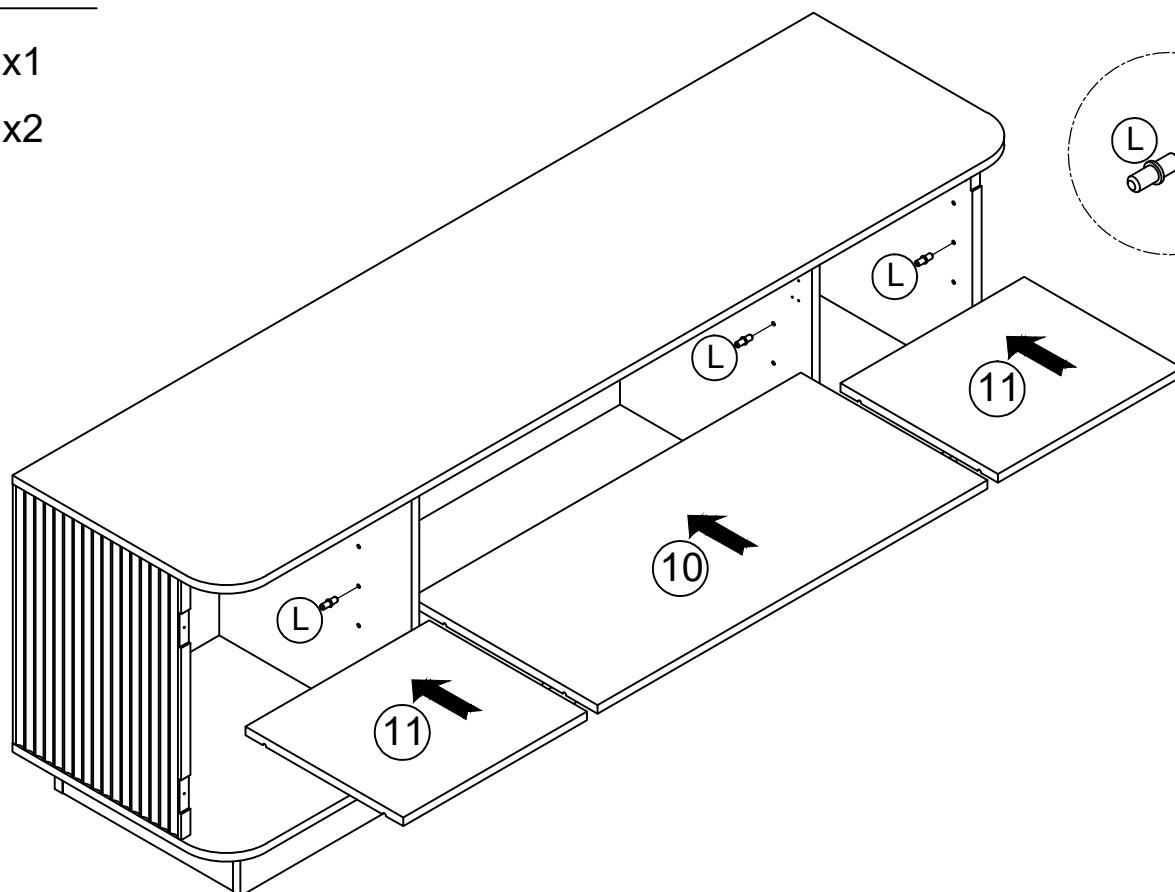


STEP 12

G




 16PCS


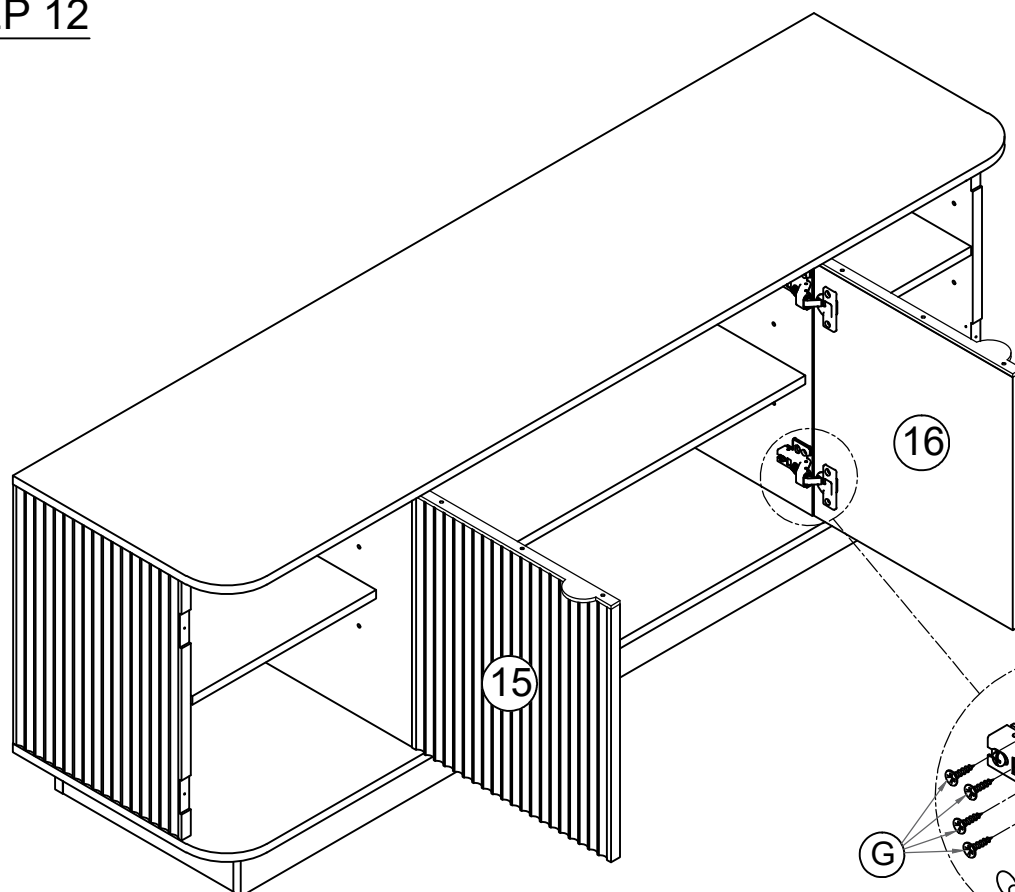


ASSEMBLY INSTRUCTIONS


 
When the hinges are installed, you can refer to the pictures to adjust the screws of the doors till it's perfect.

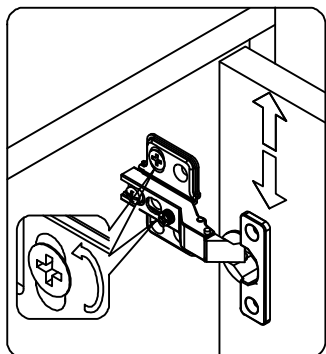

 
 
1. Adjust the screws shown in Figure 1 to adjust the door up and down.

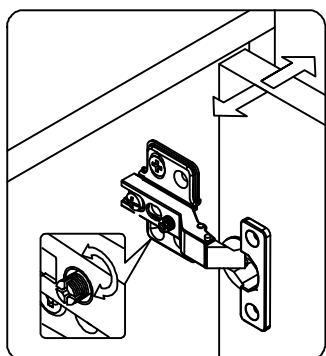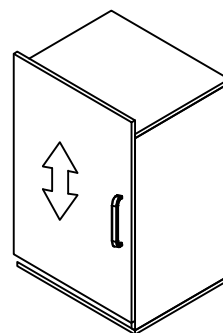

  2. Adjust the screws shown in Figure 2 to adjust the door left and right to the right position.

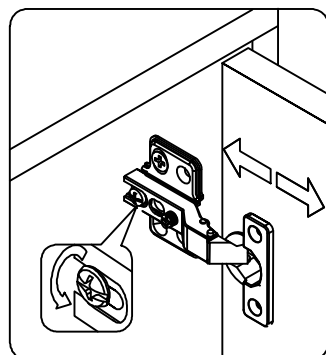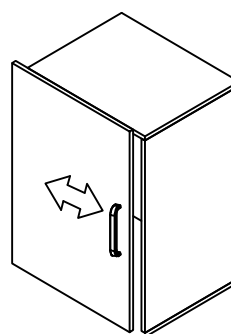

  3. Adjust the screws shown in Figure 3 and pull the door back and forth so that it can be opened smoothly.

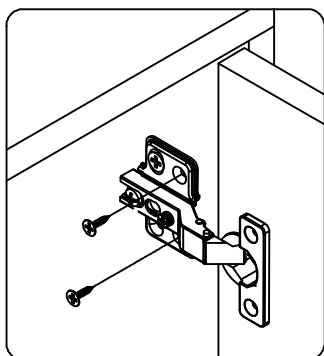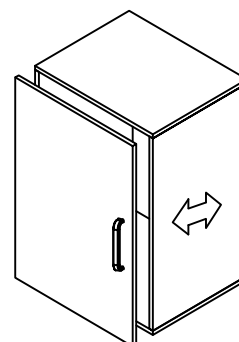

4. After the adjustment is complete, secure the remaining two screws to secure the door in place.

ASSEMBLY INSTRUCTIONS

 
STEP 13


①⑦ x1

①⑧ x1

①⑨ x1


②① x1

A		4PCS
B		4PCS
C		4PCS

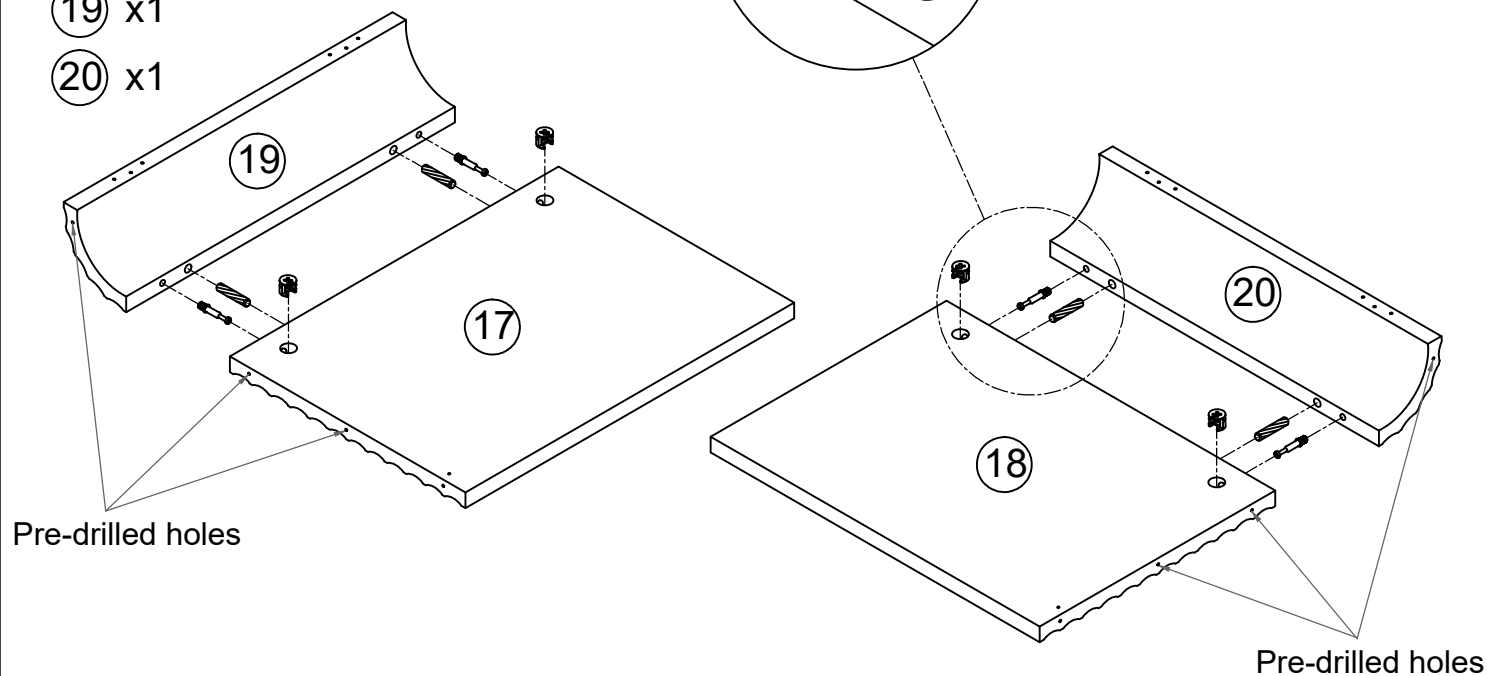 

STEP 14

F		4PCS
H		12PCS

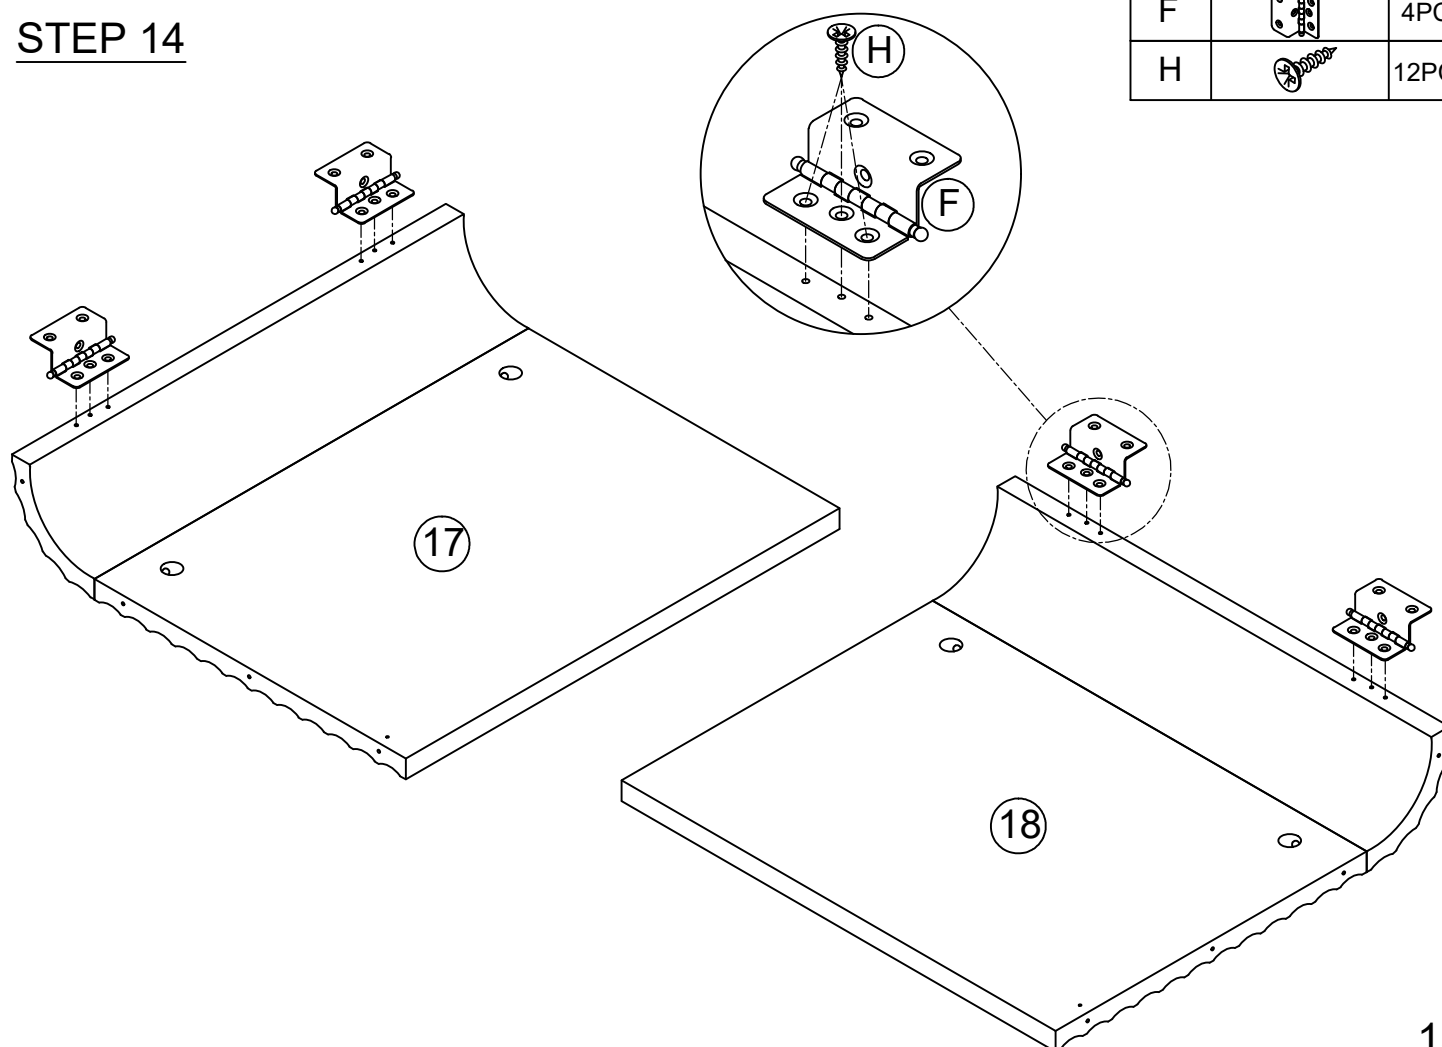 



ASSEMBLY INSTRUCTIONS

STEP 15

②3 x1


②4 x1

Q		8PCS
K		2PCS
P		2PCS

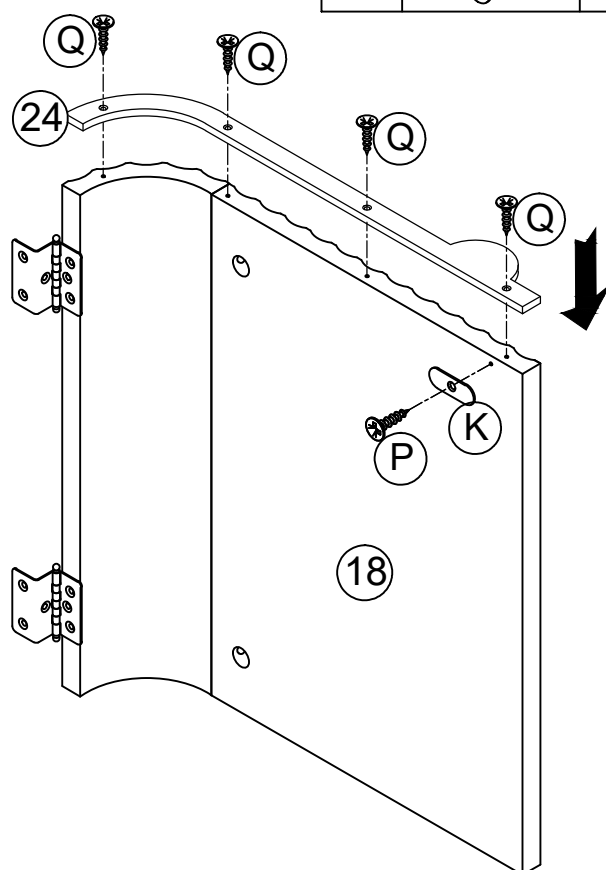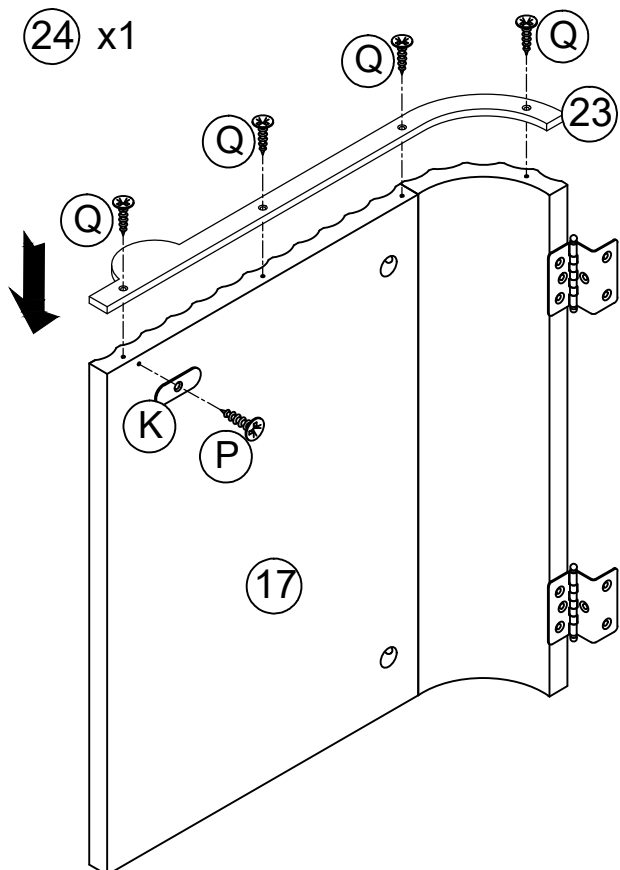  

STEP 16

H		12PCS
---	---	-------

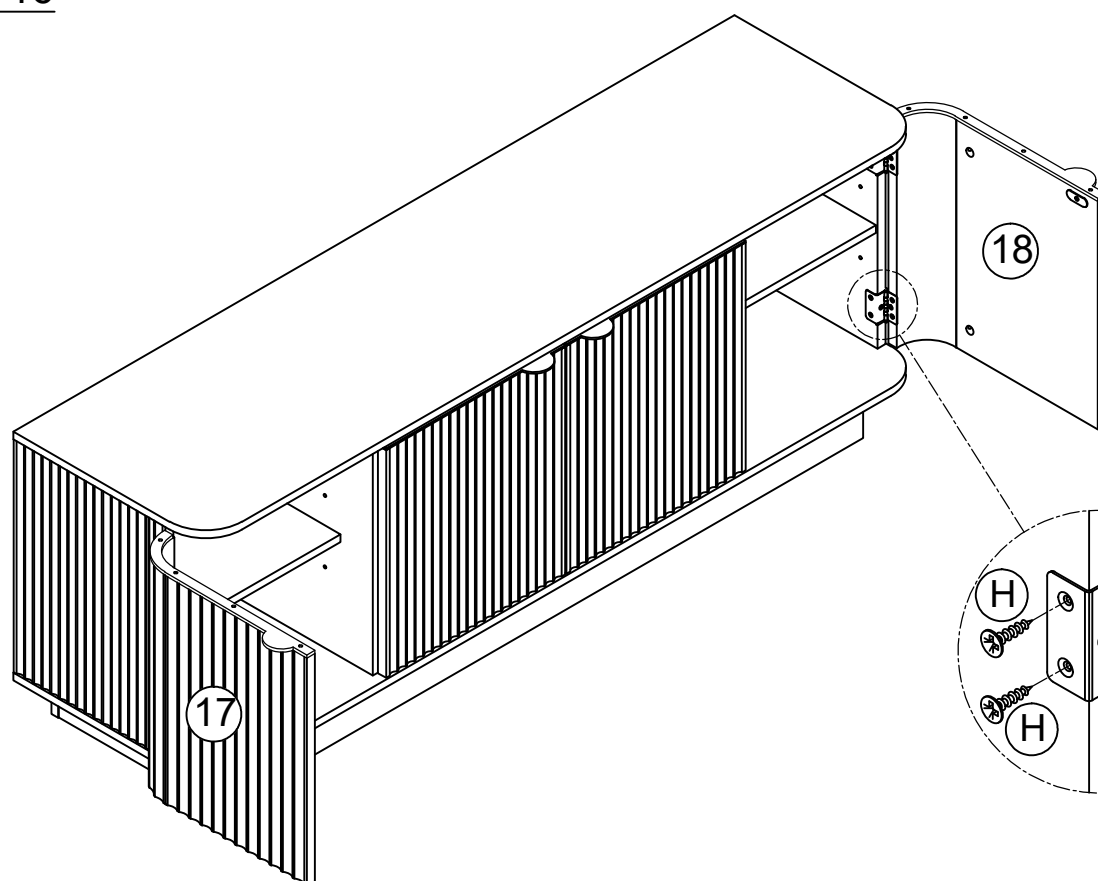 

ASSEMBLY INSTRUCTIONS

STEP 17

M		12PCS
N		12PCS

