

RL-6153
1800*1200*650mm

Instruction Manual

Preparations

Dear Customers:


Thank you for purchasing our products. Prior to the installation and initial use of the bathtub, please read carefully the instructions that can be helpful when using this product. We will not liable for improper use of our products. Our products are subject to constant development of our product. Because there maybe changes in design and use other components. If you have any questions, please contact us or distributors. We will help you.

Warning

1. People who suffer from heart disease, hypertension and diabetes should not use a steam shower or hot bath.(It is suggested that children should be accompanied by an adult to take a bath).
2. Don't take bath after you drink alcohol or have taken excessive sports.
3. The bathing water should be below 45°C, the recommended temperature is 30°C-38°C.
4. Don't take a bath for a long time.Suggested time: 15-21 minutes.
5. We reserve the right to change information at any time.
6. Also settings, configurations and details of products are subject to change.
7. For maintenance, you should contact the engineers, appointed by the dealer. Don't fix by yourself and don't break down, otherwise the supplier isn't liable for damages that may occur.


smaller frequency automatically; the digital phase locked loop will lock the FM station automatically and the liquid crystal shows the frequency of this station; When it reaches to the limit of 87.5MHz, press this button again and the frequency jumps to 108.0MHz.



8.4 When the FM radio is on, press  till the LCD blinks "VOL", and then press 


to increase the volume and press  to decrease the volume. The volume adjusting range is 0-20, and 21 in total.

8.5 Station storage/select


8.5.1 Station storage : when FM function is on and select the station frequency to be

stored, press  to select the location for storage "CH" and number below it shall


blink, and press the icon   to choose the location(1-18,all18); press the


icon , the station frequency shall be stored in the selected storage location.And


LCD will resume to current frequency.

8.5.2 Station select : When FM function is on , press  the corresponding stored

station can be selected by press  and  to choose from (1-18,all 18stations)

8.5.3 When pressing  and entering a certain function state, within 5 S without

pressing , , system will automatically exit that function operation state.Or

by pressing  function choosing key to exit that function.


7.4 When the water surf pump function is on, and the system checks the water level lower than the setting value, water surf pump function stops automatically, at the same time the pump icon blinks. When any time the system checks the water level achieves the setting value, the icon stops blink and the pump starts to work.

8 FM Radio (when the ozone is on , FM will be turned off automatically)


8.1 The FM frequency scope is 87.5MHz—108.0MHz.

8.2 When the system is on, press “” “” till the cursor moved to “”, and


then press “” to turn on the FM Radio Function, at the same time, the LCD displays

 
 
 
the current frequency and “FM”; press the icon “” again ,FM function stops while the current frequency and “FM” disappears.

 
 
8.3 When the FM function is on, press “” till the LCD blinks “FM” and “MHZ”, the system enter into the state of adjusting the frequency.

8.3.1 press “” to increase the length of one step (the length of one step =100KHz):

Press this button over 2 seconds, the system searches the radio stations of larger frequencies automatically; the digital phase locked loop will lock the FM station automatically and the LCD shows the present frequency, when it reaches to the limit of 108.0MHz, press this button again and the frequency jumps to 87.5MHz.

8.3.2 Press “” to decrease the length of one step (the length of one step =100KHz). Press this button over 2 seconds, the system searches the radio stations of

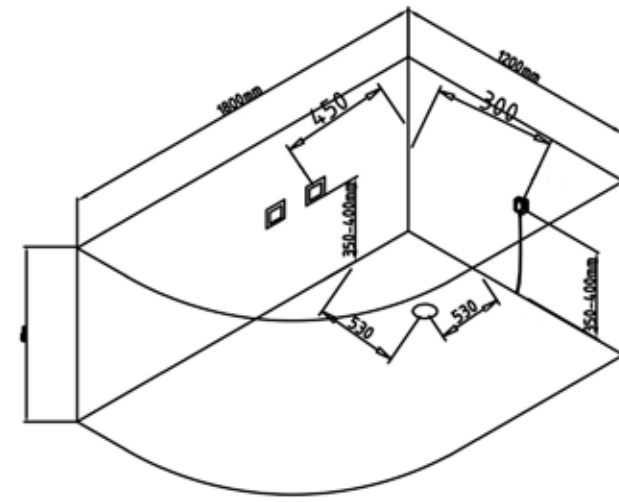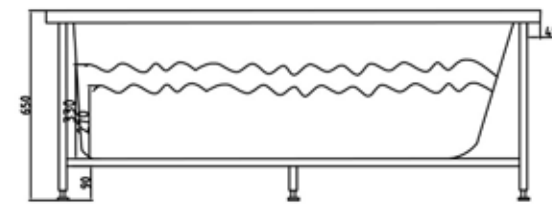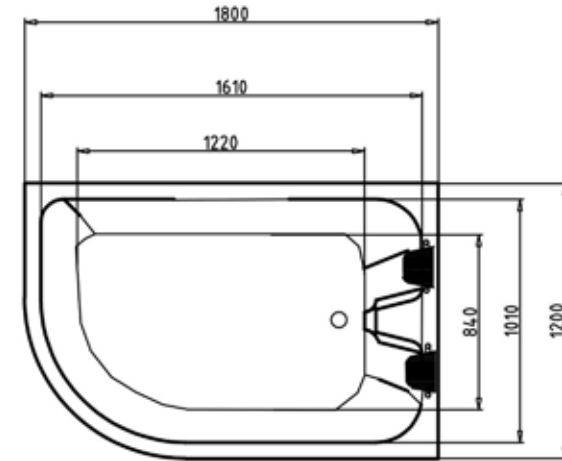

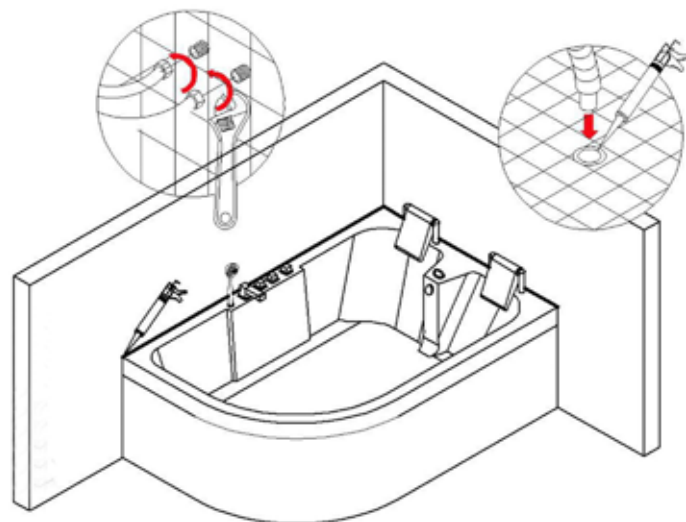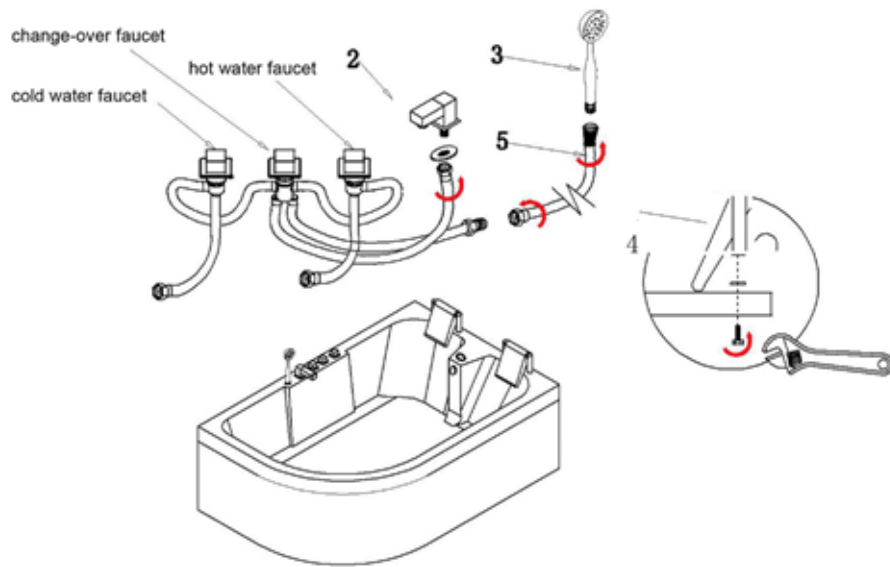




If no operation with the control panel for 3 minutes ,all the keys will be locked except “LOCK”, LCD displays “LOCK”.

When the keys were locked , press any key for 3 seconds , the keys will be unlocked after a“di...” , icon“LOCK”disappear.

5 Ozone (FM radio on , ozone will be turned off automatically)

5.1 When the system is on, press continuously “◀” , “▶” , when the cursor is on



“3”press“”ozone will be started. And LCD symbol will be displayed dynamically.

Press “”again , ozone will be turned off.

5.2 ozone will be turned off automatically after being started 10 minutes.

 

6 Blower

When the system is on, press continuously “◀” “▶”till the cursor moved to

“”,and then press “”to start the blower , the cursor blinks ; press again, blower is stopped.

7 Water pump surf

7.1 The water checking device of this controller protects the water pump from burning out.

7.2 When the system is on, press“◀” “▶”till the cursor moved to “”,while the water level achieves the setting value ,and then press “”to start the pump , the cursor blinks ; press again, Water pump surf is stopped.

7.3 When the water level lowers than the setting value, pump stops working.

3 . Control Panel Instruction

3.1. Control Panel Instruction


I、 Schematic Diagram of control panel



II、 Operation of Control Panel

1 When any function button works, there is a sound of “di...”

2 “” power

Press “” for 2 seconds to start the controller ,at the same time, the lamp is turned on ;press the icon again to stop the controller and all the loads is turned off.

3 LAMP

When the system is on, press continuously  and  till the cursor is on “” ; then

press “” , lamp is turned on ; press “” another time , lamp is turned off.

4 Lock

The steps of ordinary skirt massage bath :

Firstly,according to the Waterway control installation picture,you should prepare a floor drain,and install cold and hot water tub,15A three triplex receptacle power resource outlet.

Secondly,choosing a suitable place install pre-install QF and insert water swift.

Thirdly, put the bathtub on the selected installation position,adjusting screw stents feet.The distance with skirt at 5~10cm,then tightened with screw.

Fourthly,put into the floor drain,advising about 50cm is suitable,then sealing.

Fifth,link the purchased cold and hot tub.

Sixth,power should be strong enough and be ground.

Seventh, put the XP into the power ,turn on the swift of QF,turn on the water try to use it,then sealing with glass glue,after dry constantly then use it.

Eighth,please install pressure jet if it is specially.

Fault	Reason	Dealing
Can not turn on	1.without power 2.the swift of light is off 3.the burned-out fuse 4.broken of power line	1.turn on the power swift 2.press the earth leakage circuit breaker button 3.replace the fuse 4.replace the power line
Doesn't work	1.the electric current is not enough 2.the fault of install 3.the insert water pip broken	1.replace the power 2.correct installation 3.replace remote control
Without voice	1.bad contact 2.the voice is down	1.check all the installation and reinstallation 2.turn up the voice
The water pump can't work	1.the swift is broken or bad contact	1.change a new swift or reinstallation the line of swift
Press the button and work by water pump but stop after leave	.the air swift is broken	.the air swift is broken
No telephone	1.the line of telephone is bad contact or broken 2.the speaker broken	1.connecting the power line 2.replace a new speaker or reinstall it
Small water flow	1.the pressure is not enough 2.the pip is jam up 3.the swift doesn't open the outside tap completely	1.improve the water pressure 2.clear the rubbish 3.turn up the water swift
According to the state to correctly use it , If it can't work ,please contact with our company.		

IMPORTANT NOTES:

1. The installation must be performed by a technician qualifizeirten
2. The electronic parts should be well grounded, otherwise the manufacturer is not responsible for disruptions and damage.
3. For the functions that could not be activated after the above instructions, please contact the authorized technician or the local dealer.
4. If you do not use the product for a long time, please disconnect the main power and turn off the water.

Cleaning & Maintenance

1. During transit can loosen screws. Tighten all screws and check all connections before the pool building.
2. Removal with a soft cloth with mild detergent possible contamination form the surface, the metal parts (valves, etc), you can polish with a cloth.
3. The lime can be wiped clean with warm citric acid or vinegar with a soft cloth. Do not use acetone or ammonia-based cleaners.
4. Do not clean the tub and accessories with a hard or coarse material to prevent scratches.
5. Clean the tub and accessories come with gasoline to prevent damage.
6. It is not recommended to have water for a long time in the bathtub or use it for laundry washing. Allow the water to the bath off and disconnect the power supply.
7. Power should be strong enough and be grounded
8. To ensure your safety must be a professional engineer that the grounding the line is well grounded and RCCB fitted during installation.

Important

Bathing should not untreated into the environment! Waste water (sewage) must to be connected to public sewer or an approved sewage treatment plant.