 
 
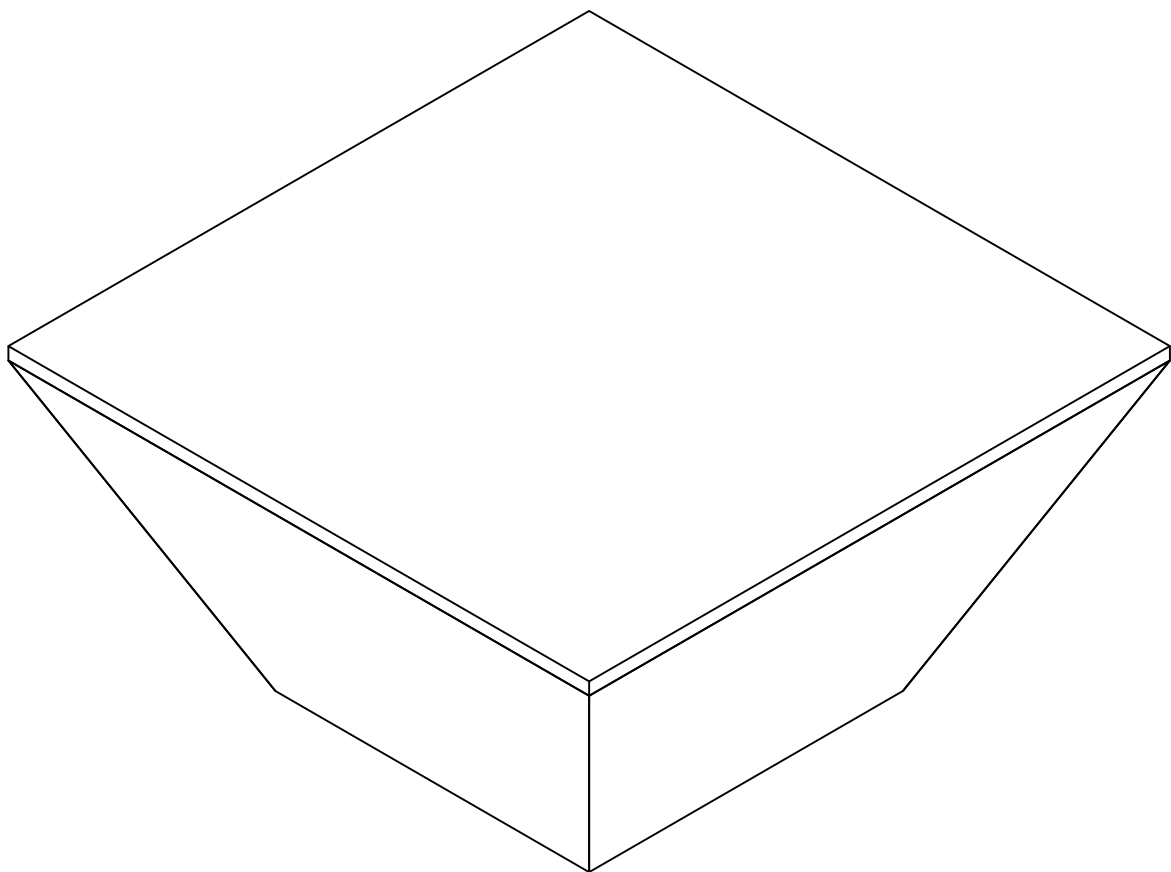 
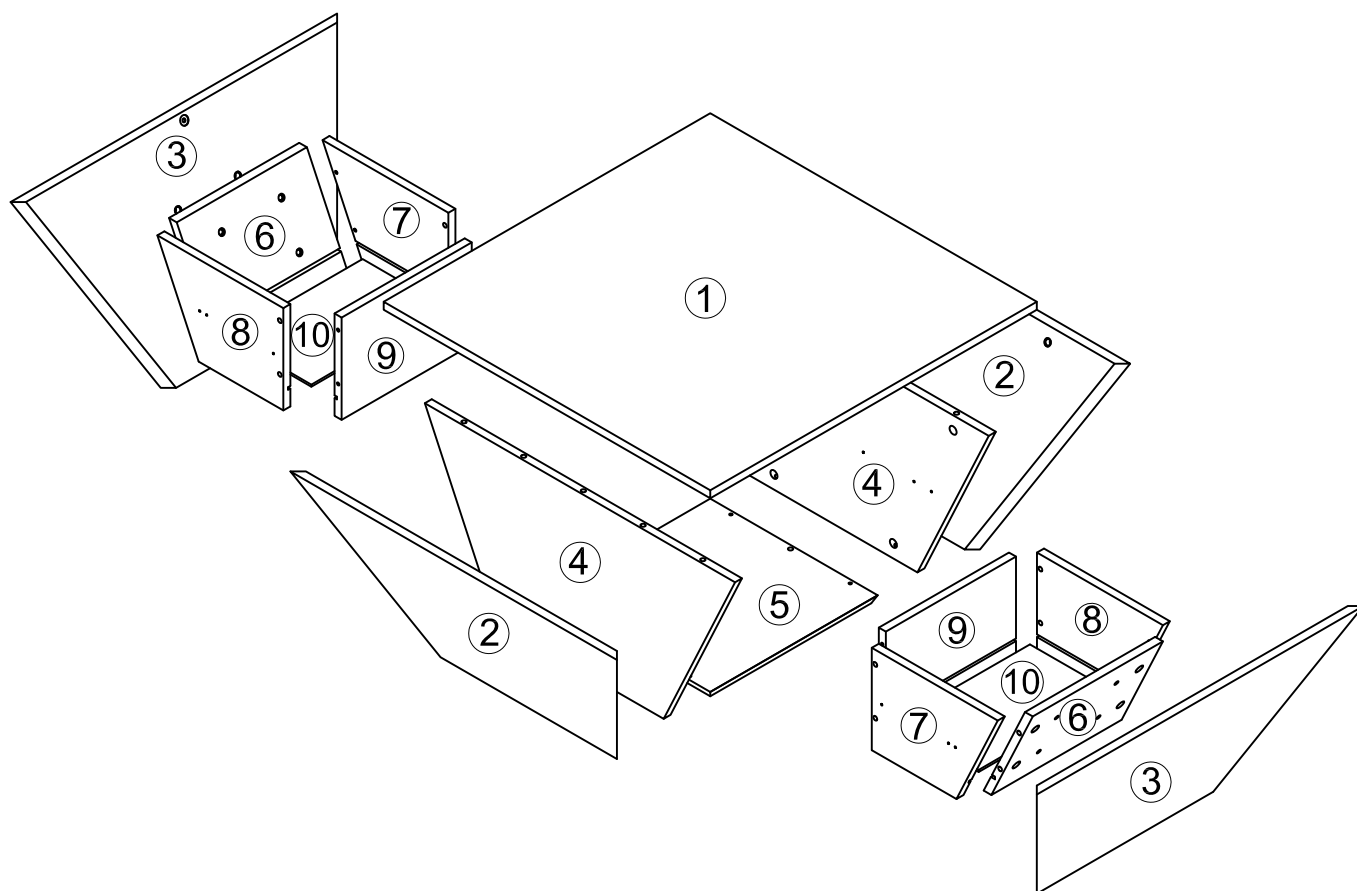 
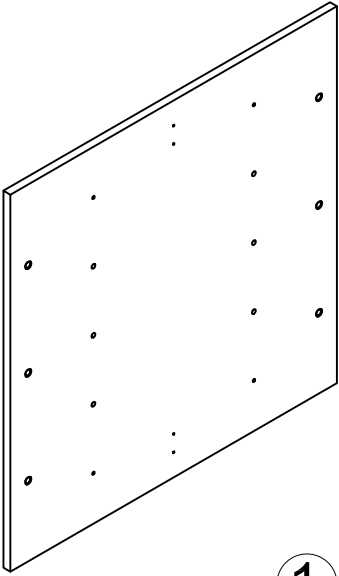 
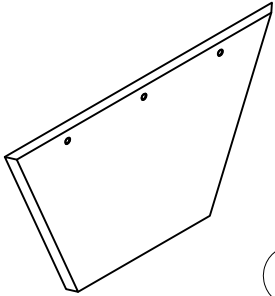 
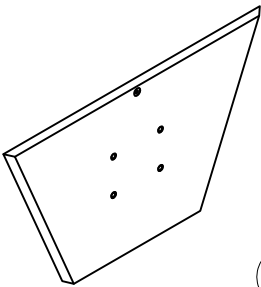 
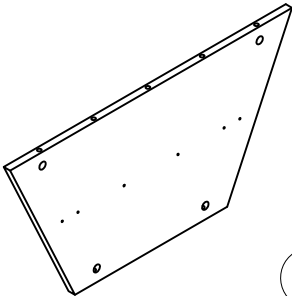 
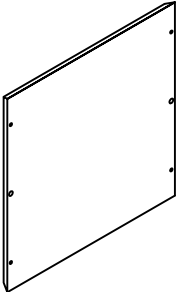 
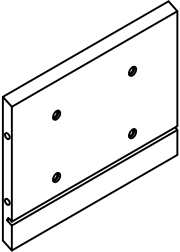 
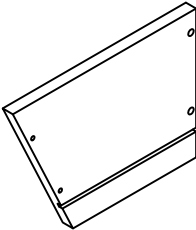 
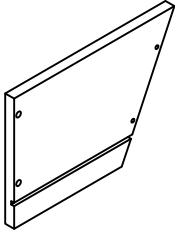 
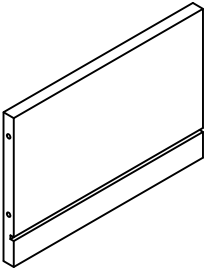 
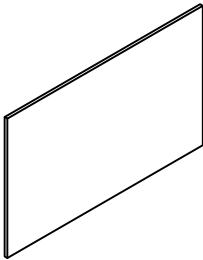 
 
 
 
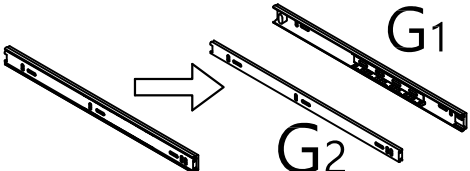 
 
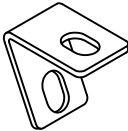 


ASSEMBLY INSTRUCTION



WF296681





 ① ×1		 ② ×2		 ③ ×2	
		 ④ ×2		 ⑤ ×1	
 ⑥ ×2		 ⑦ ×2		 ⑧ ×2	
 ⑨ ×2		 ⑩ ×2			
 A×16PCS	 B×16PCS	 Ø8×30mm C×8PCS	 M6×12mm D×12PCS	 M7×40mm E×8PCS	 Ø3.5×12mm F×38PCS
 G×4PCS		 H×4PCS	 I×6PCS	 J×4PCS	 M6×25mm K×8PCS
 L×1PC		 M×1PC	 Philips head screwdriver required for assembly (not included)		

 
 
1

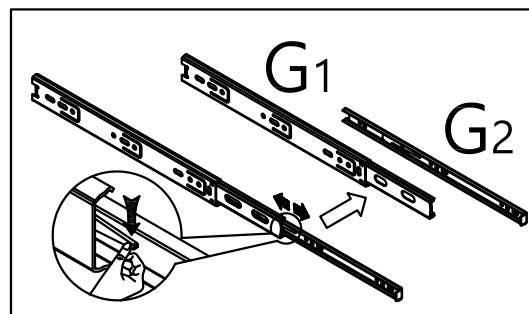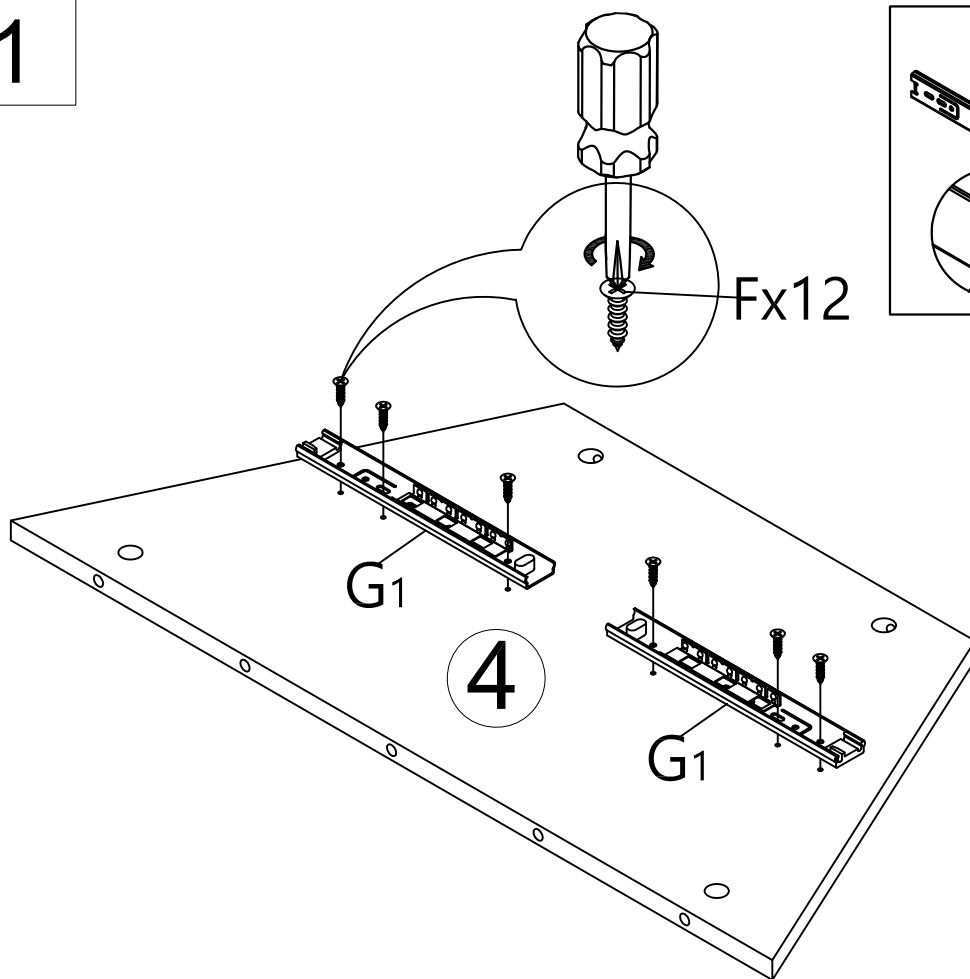

× 2

(F) ×12PCS	
(G1) ×4PCS	

  2

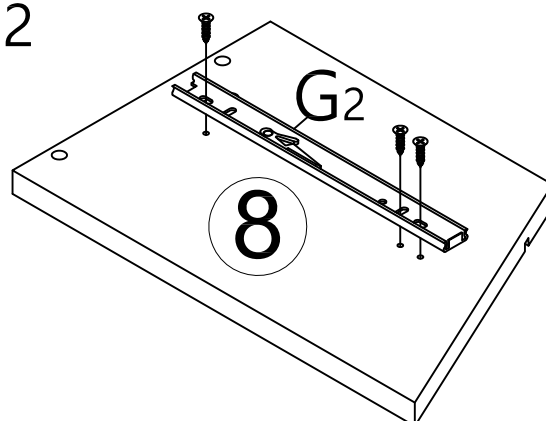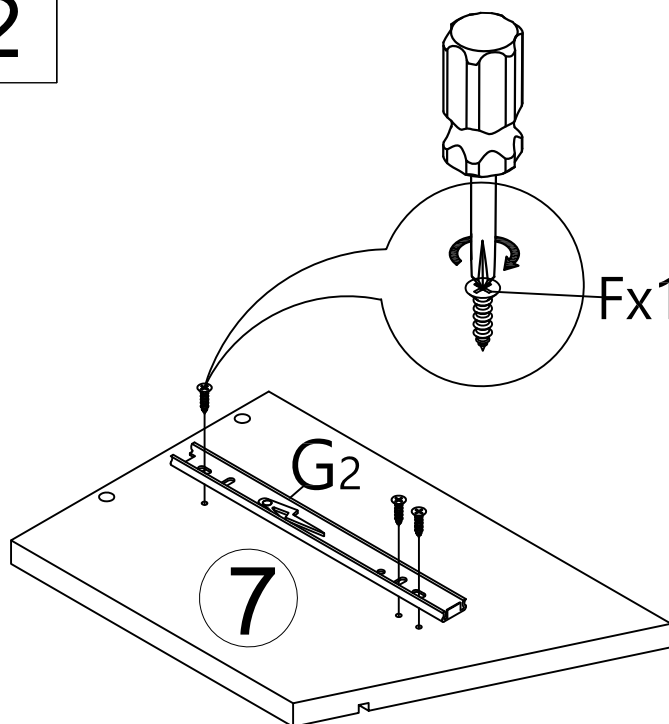


× 2


× 2

(F) ×12PCS	
(G2) ×4PCS	

 3

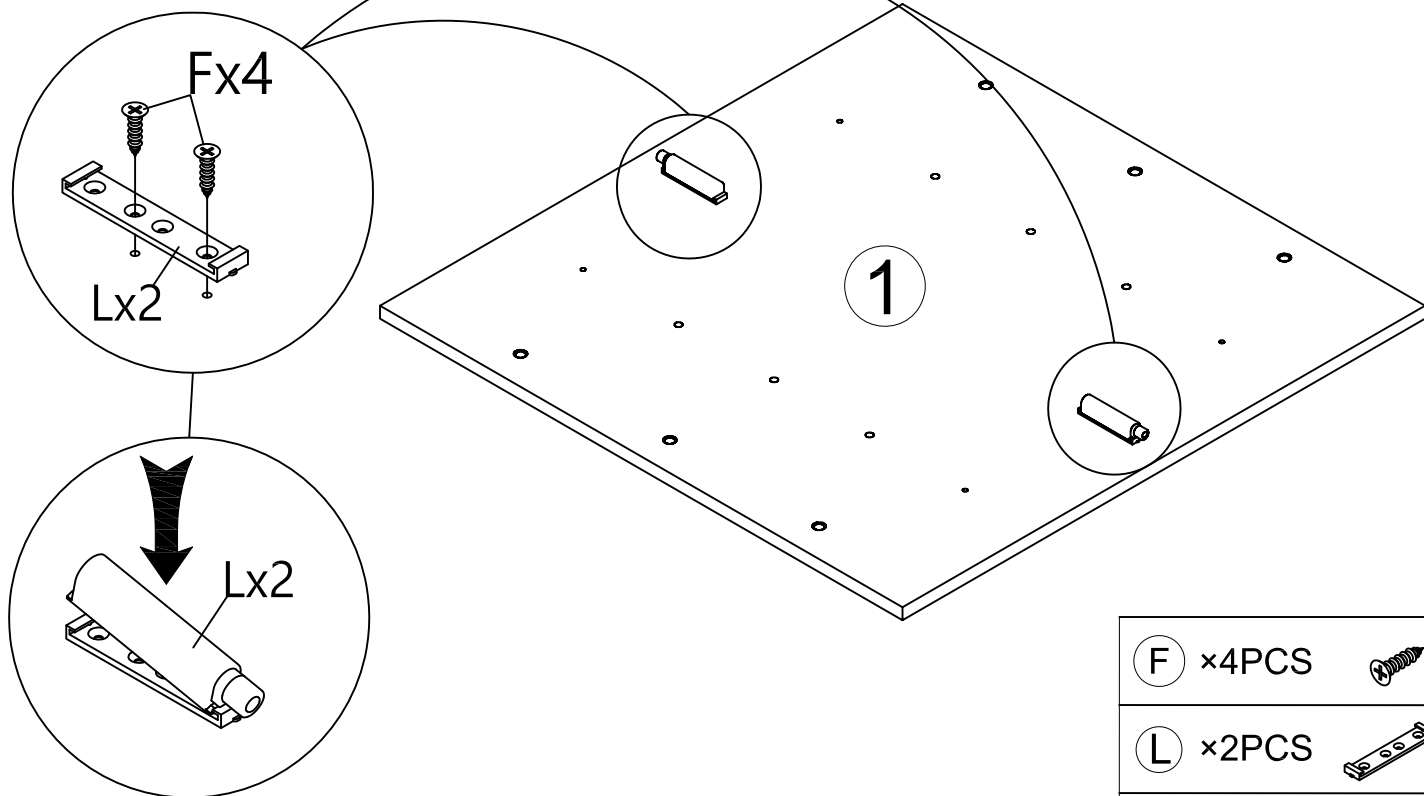


4

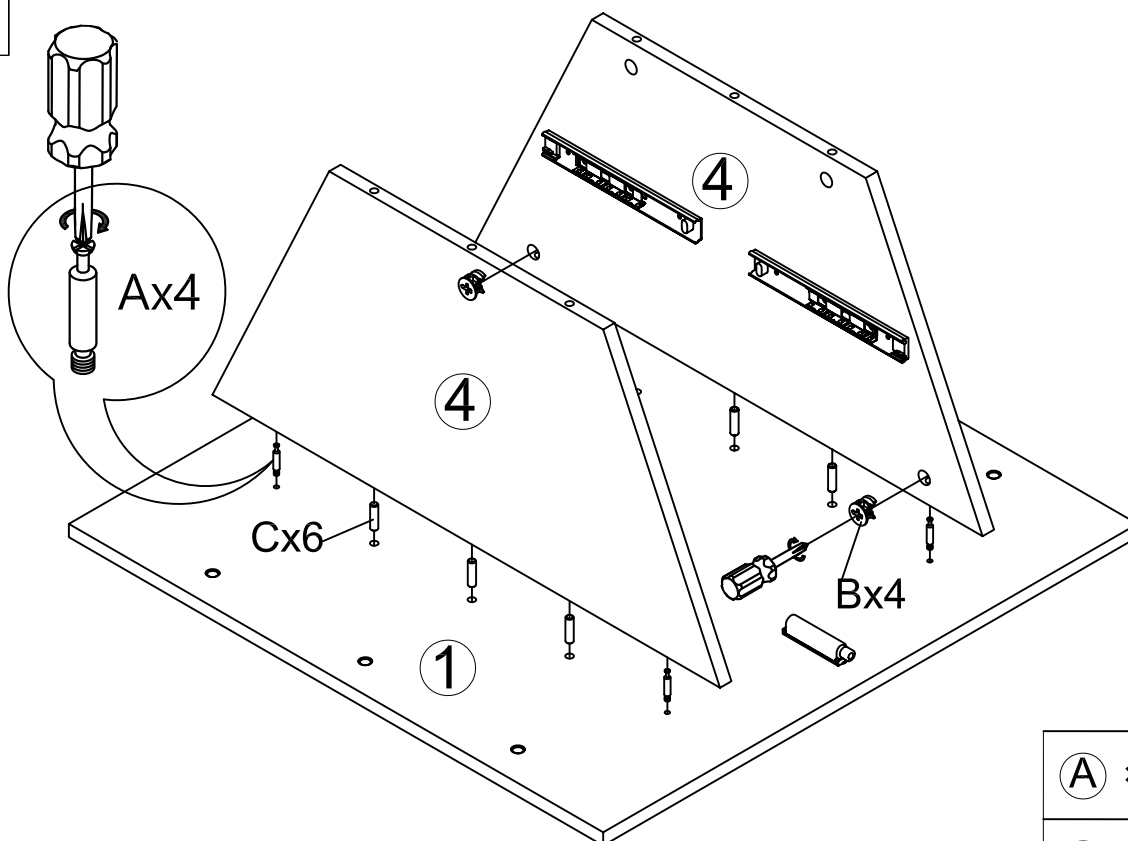 



7

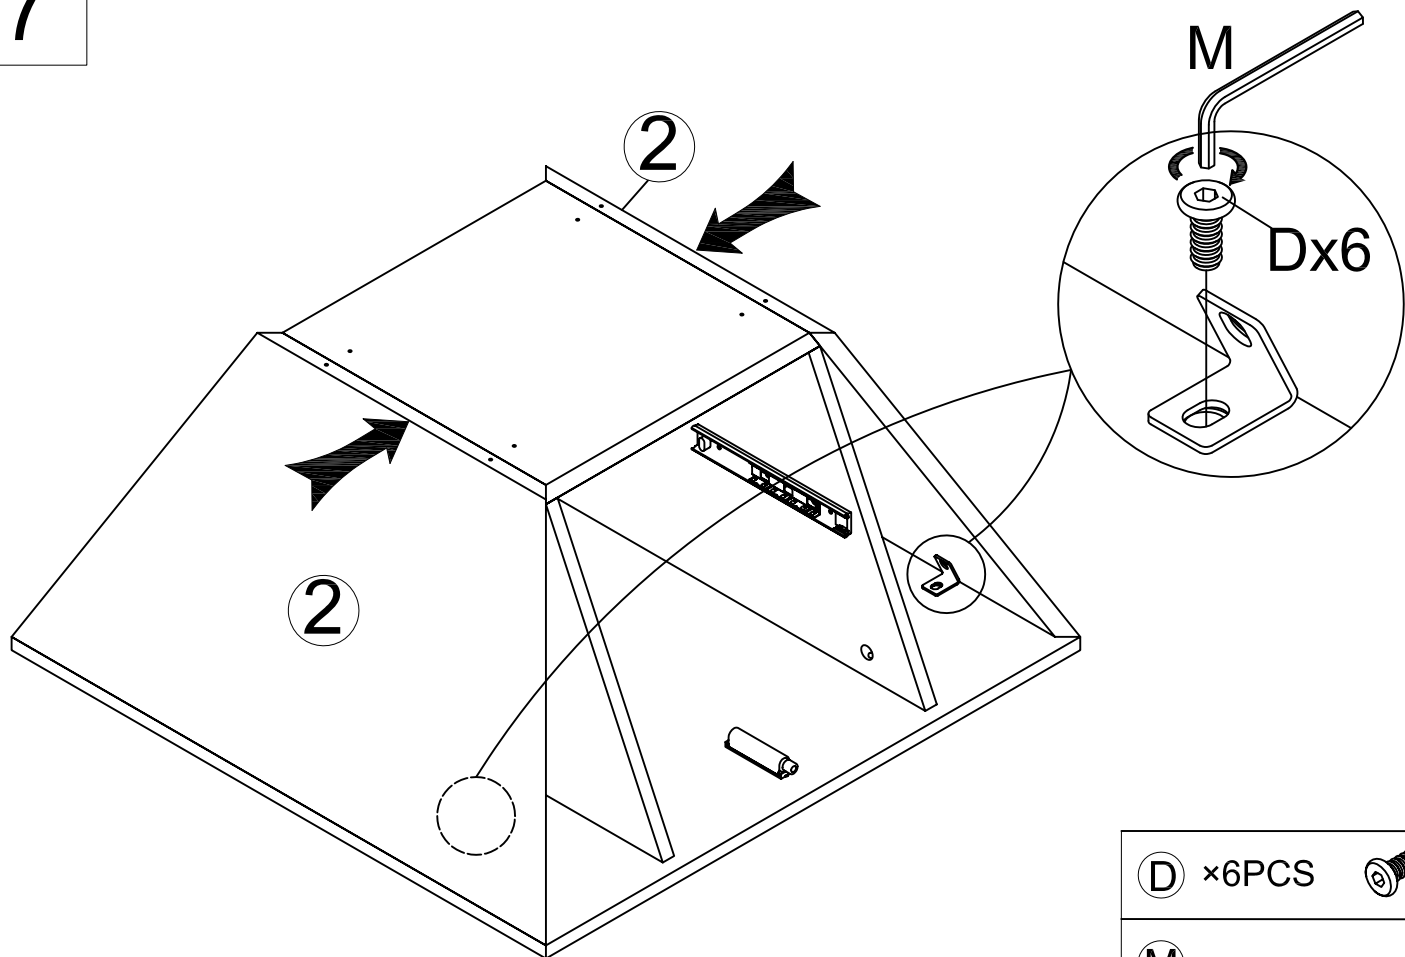 


(D) ×6PCS



(M)



 8

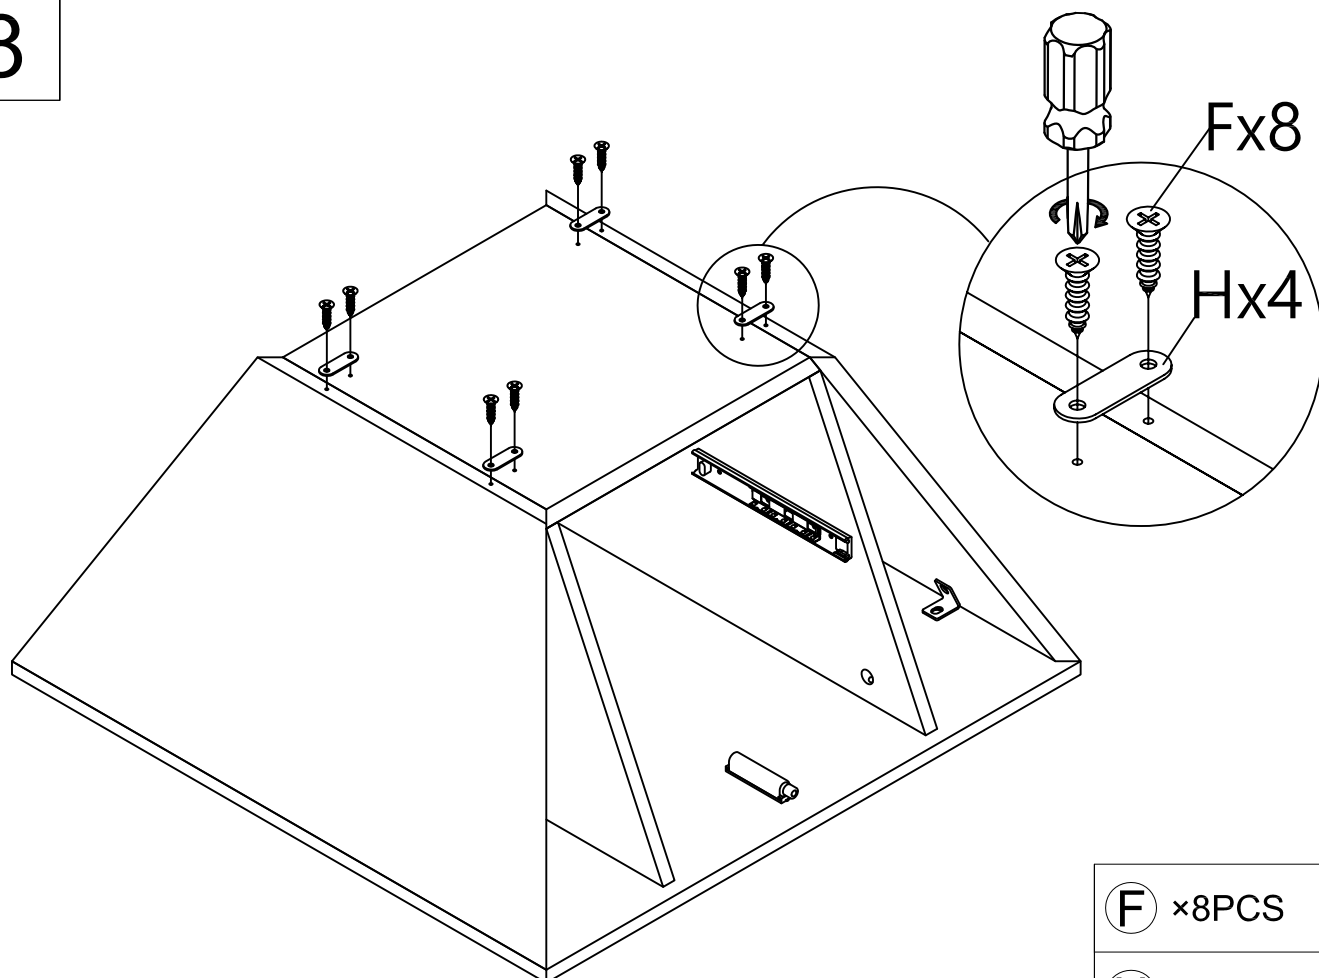


(F) ×8PCS



(H) ×4PCS



 
9

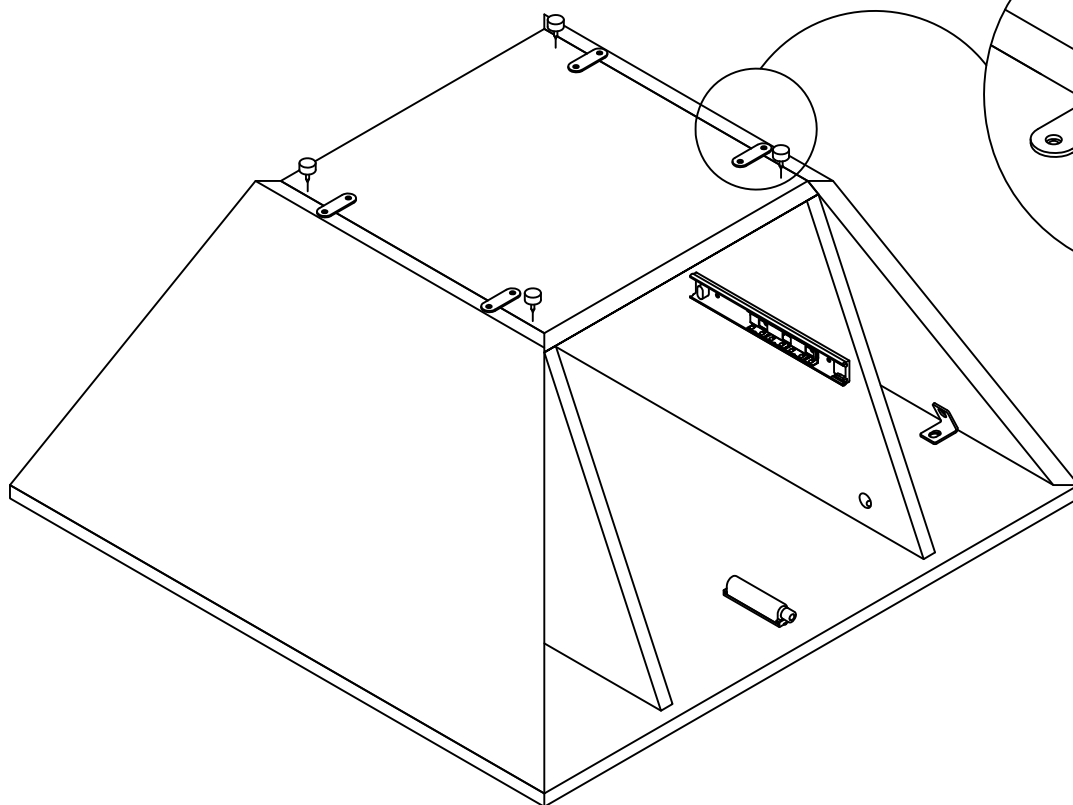

J × 4PCS



 10

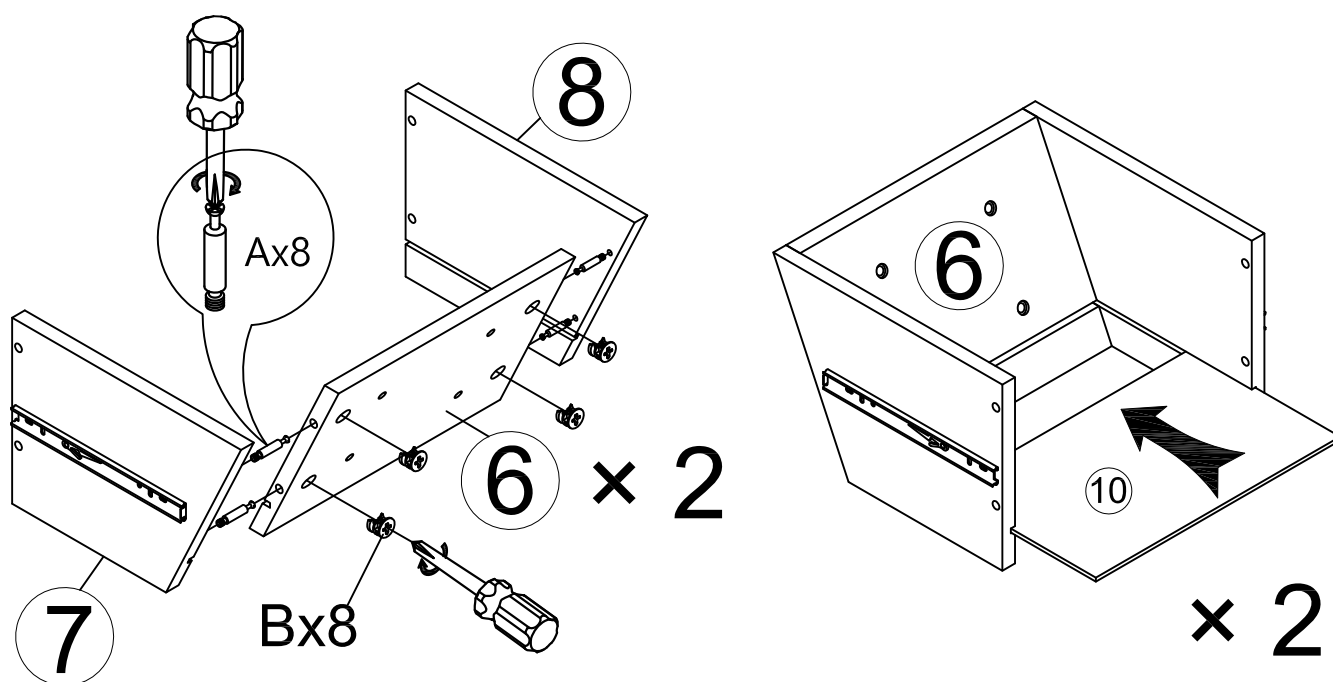


A × 8PCS



B × 8PCS



 11

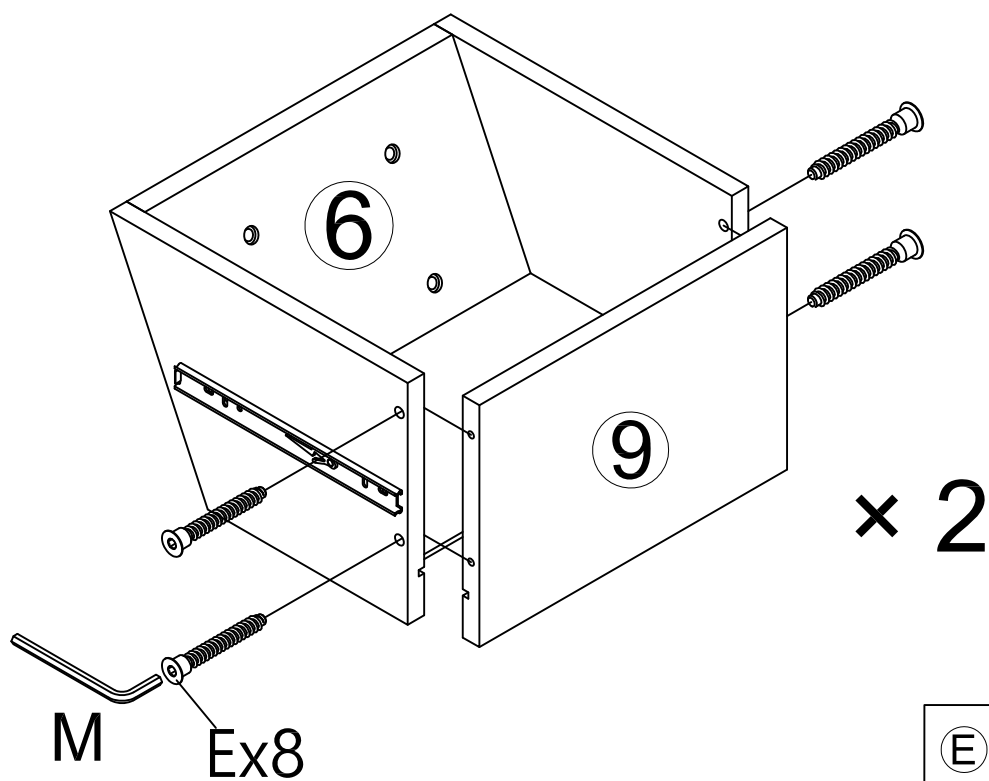


(E) x8PCS



(M)



 12

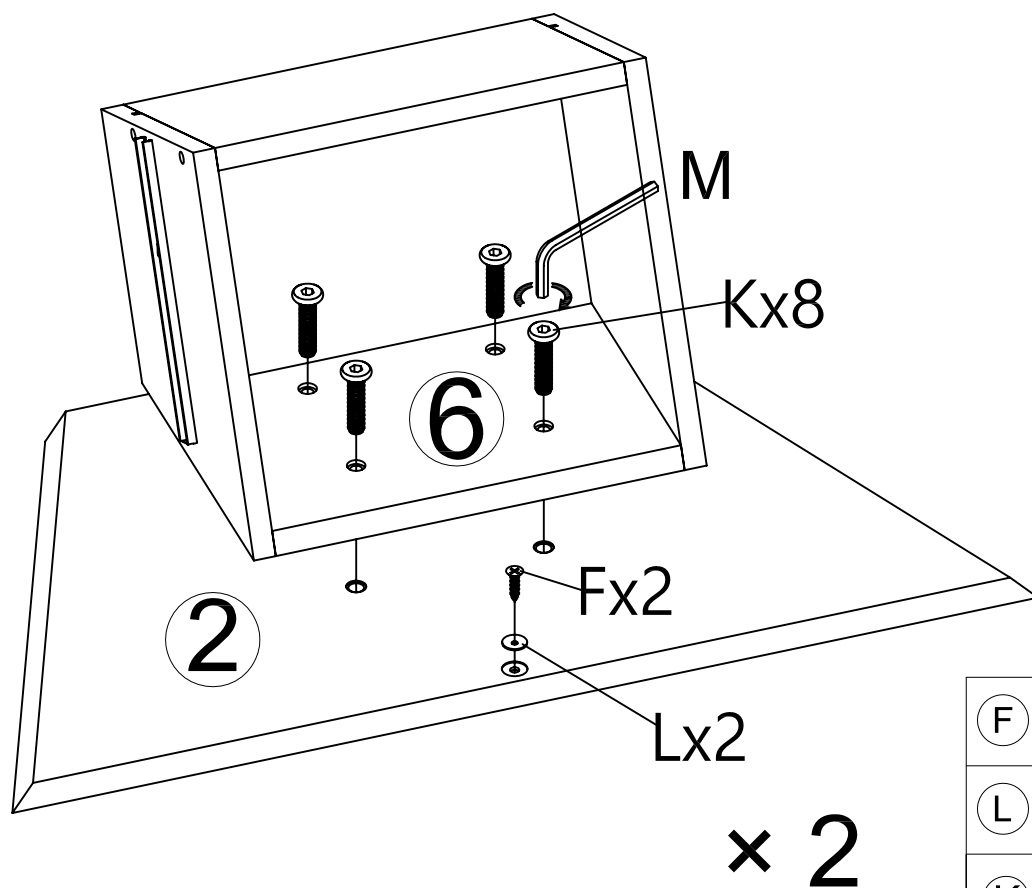

(F) x2PCS



(L) x2PCS



 
(K) x8PCS



(M)



13

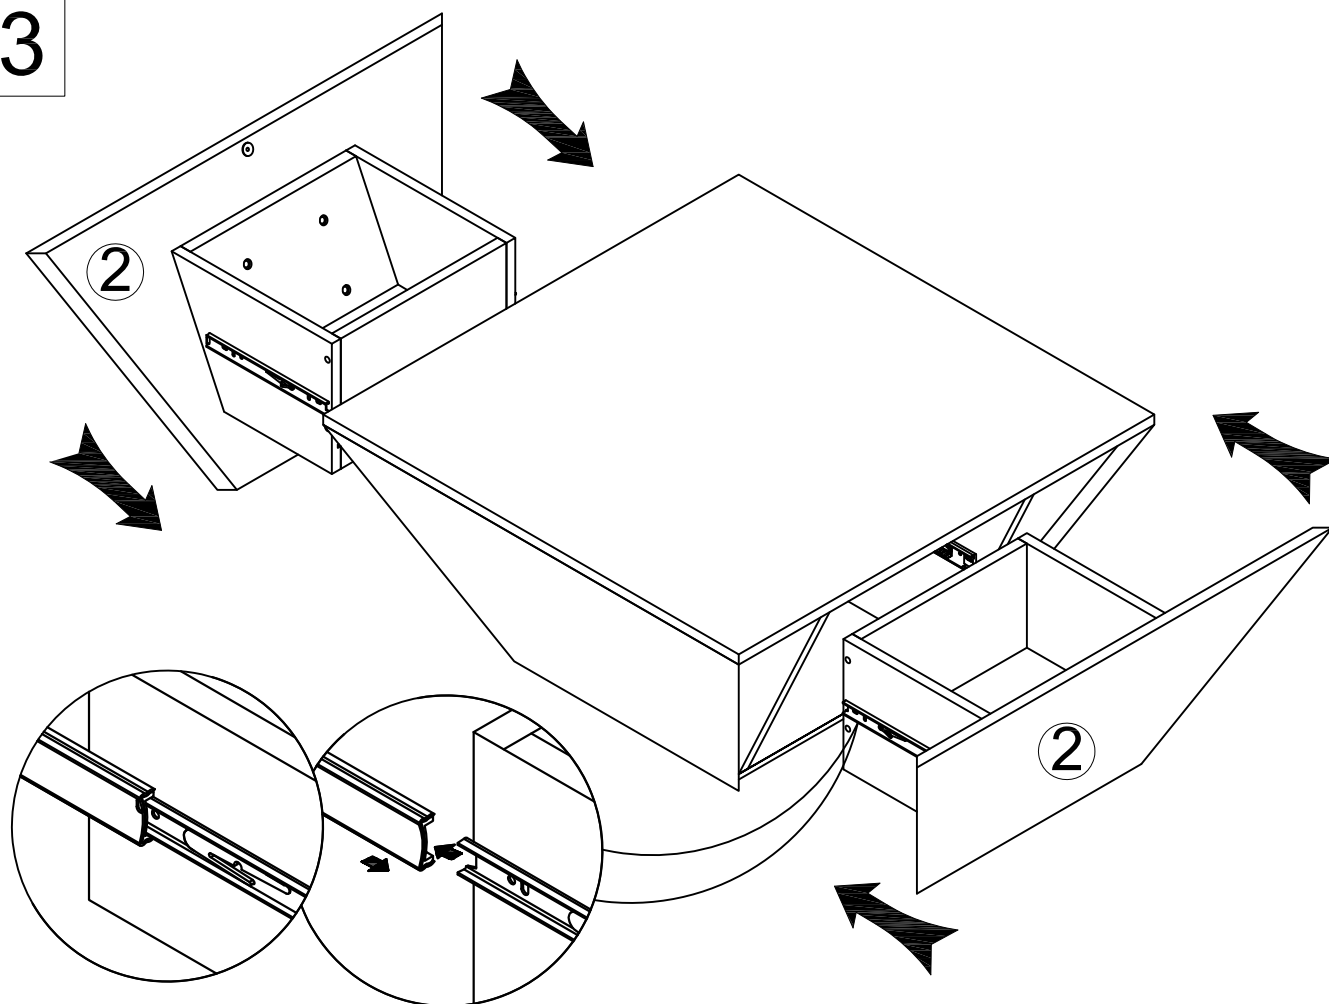

14

