 
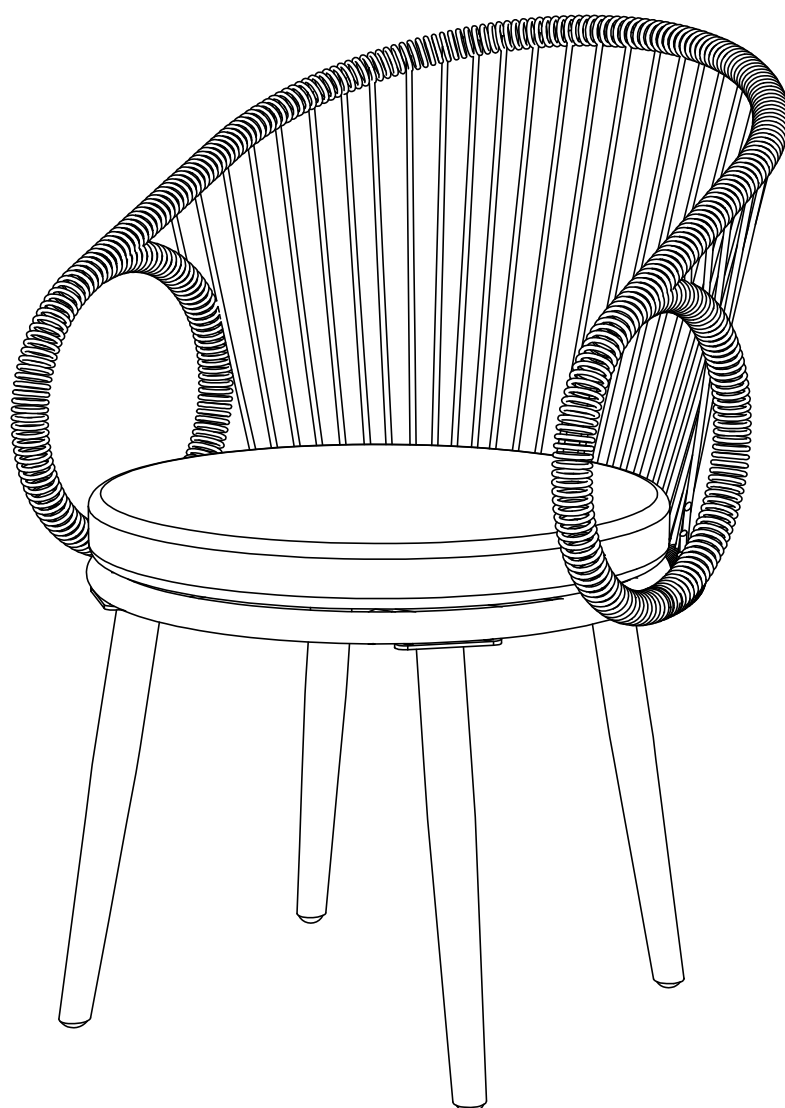 
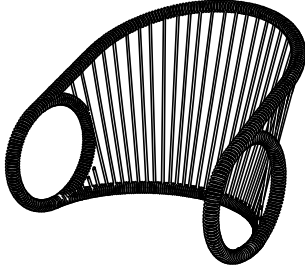 
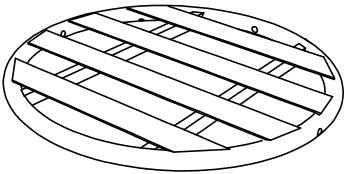 
 


ASSEMBLY INSTRUCTION




Patio Dining Chair 25029DC

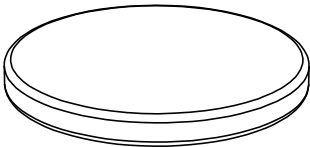


RARTS LIST

LABEL		DESCRIPTION	QTY
A		Backrest	2
B		Seat Frame	2
C		Front Leg	4
D		Back Leg	4
E		Seat Cushion	2

   HARDWARE LIST

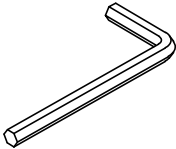LABEL		DESCRIPTION	QTY
1	 M6x15	Bolts & Washers	24
2	 M6x35	Bolts & Washers	6
3	 M6	Allen Wrench	1

 1

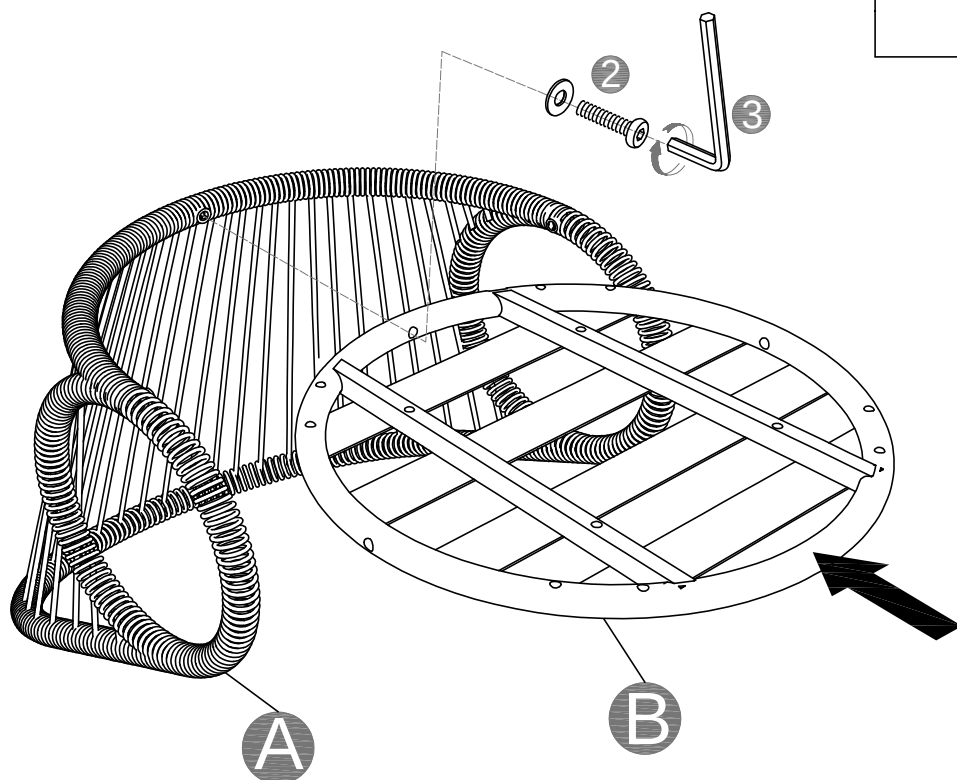

2 x1

 
M6x35




3



M6

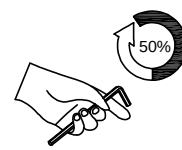

2

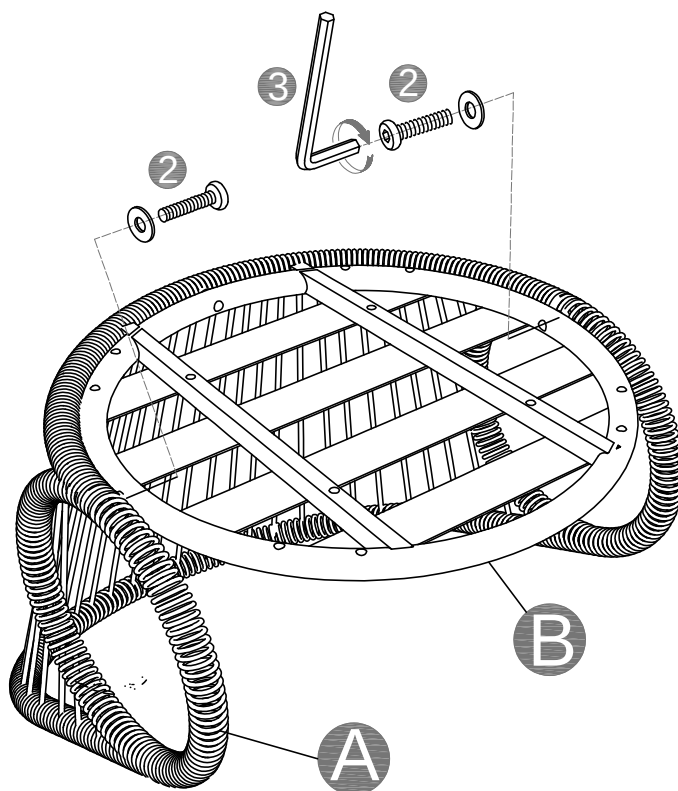 

2 x2

 
M6x35





3



M6

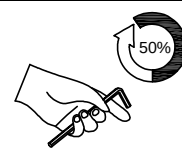


3

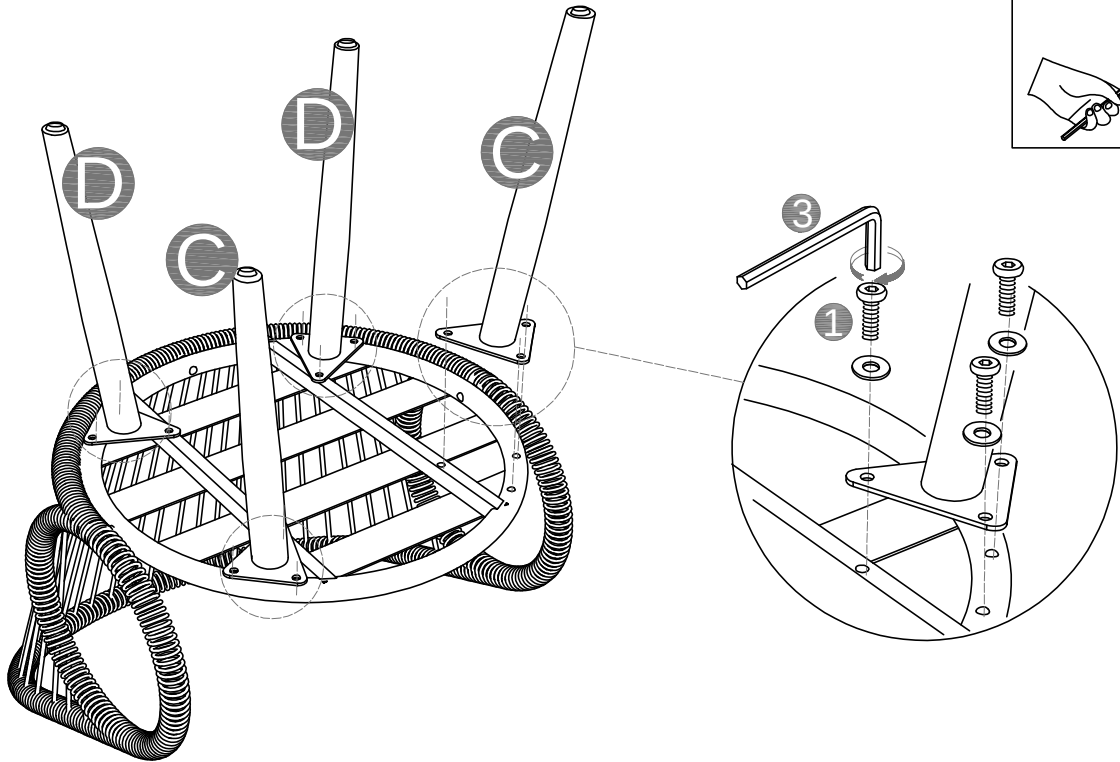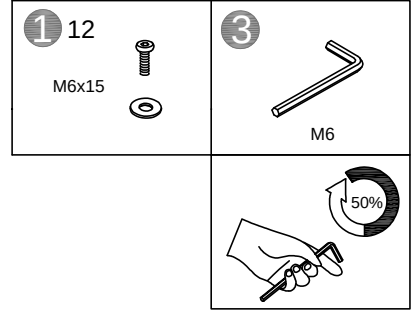  


4

 
Tighten the screws to 100% tightness

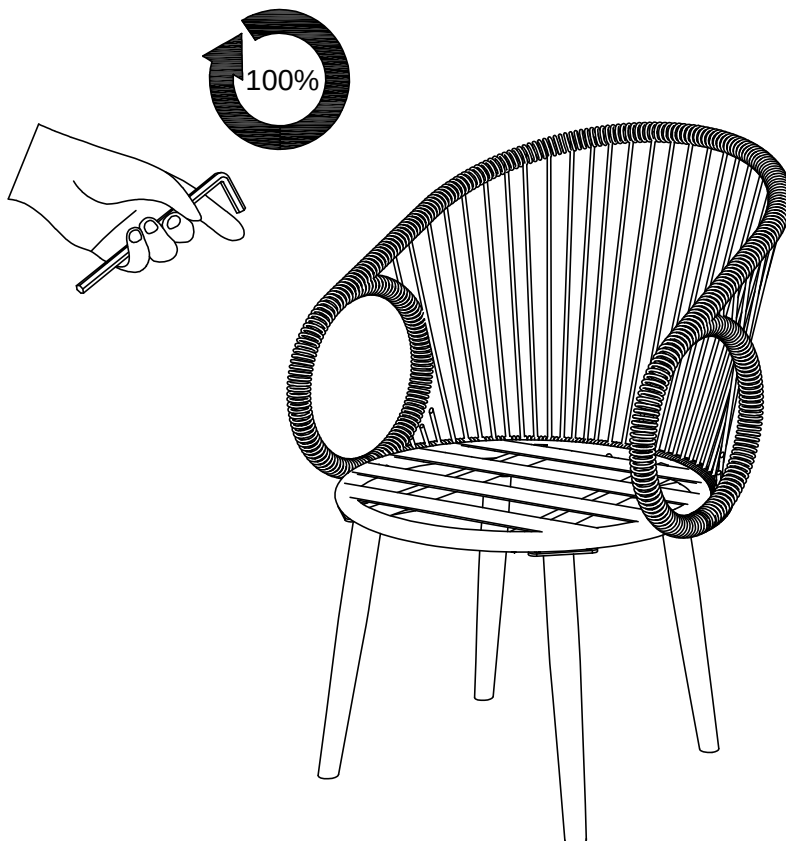

5

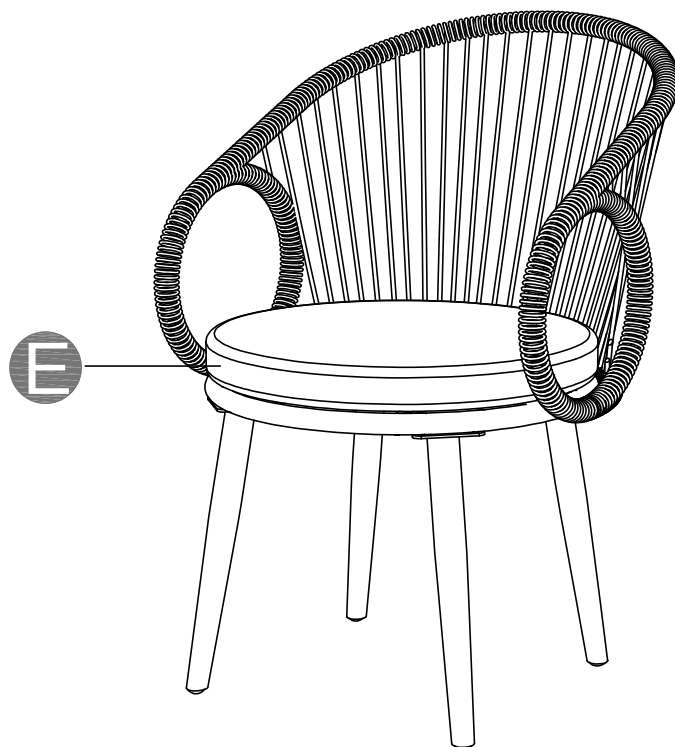 

6

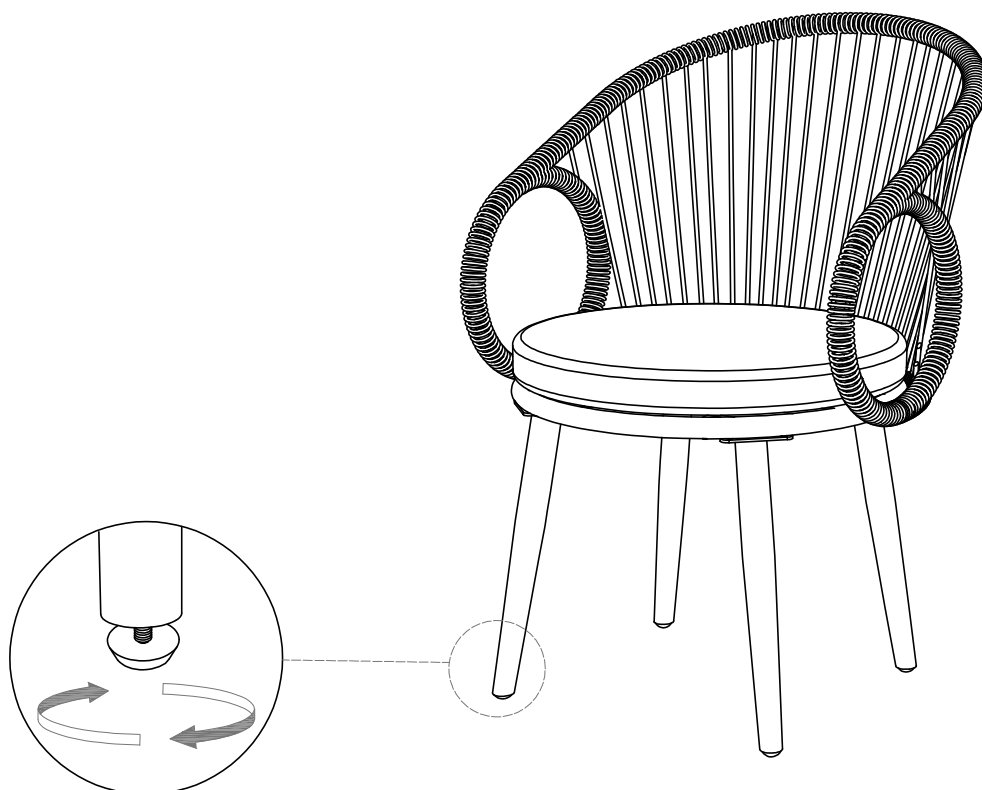 

Note: Each leg has an adjustable footleveler to help level your chair.