

4CH AHD CCTV Kit

User Manual



1. Noted

Thanks for use our factory products, this user manual is use for AHD kit.


2. AHD spare parts

NO.	Spare parts Name	Qty	unit	remark
1	mouse	1	PCS	
2	Power supplier	3	PCS	
3	AHD Camera	4	PCS	
4	Screws bag	1	PCS	
5	DVR	1	PCS	
6	Bracket	4	PCS	
7	BNC	4	PCS	
8	Power supplier branch cable	2	PCS	

3. How to operating DVR


3.1 the button function

Front

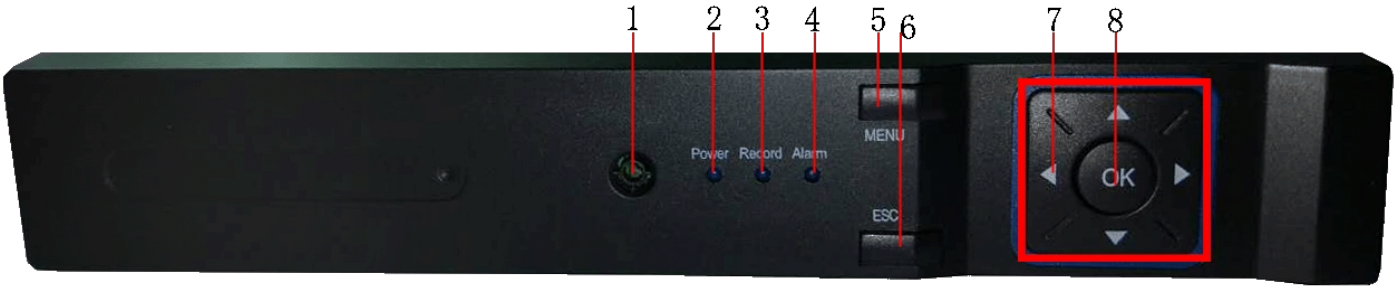


1	Remote receiver	2	Power light	3	Record button
4	Alarm light	5	Main menu button	6	ECS button
7	Direction button	8	Confirm button		

Back

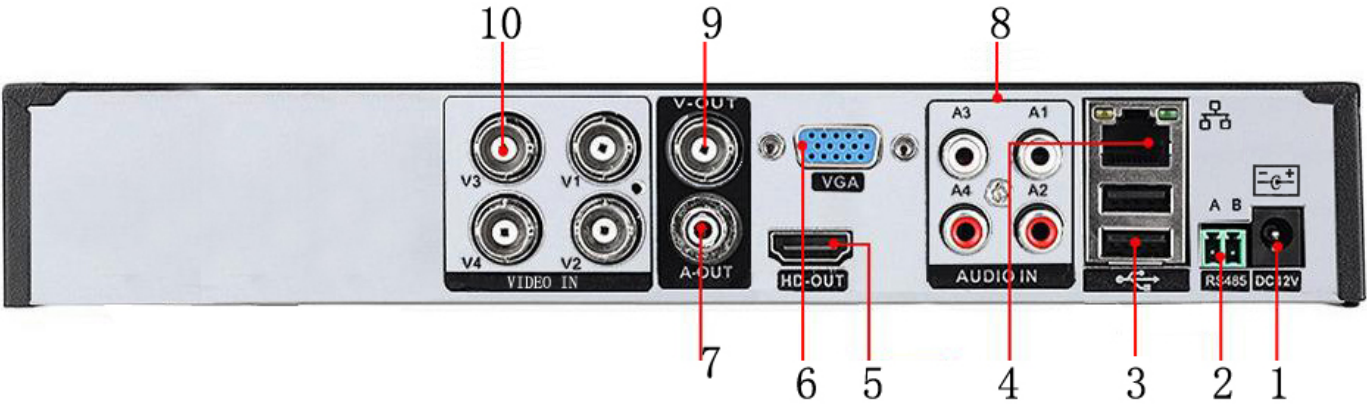


1	Power input slot	2	RS485 slot	3	USB slot
4	WAN slot	5	HDMI slot	6	VGA slot
7	Audio out	8	Audio in	9	V-out
10	AHD camera connecting slot				

Connecting

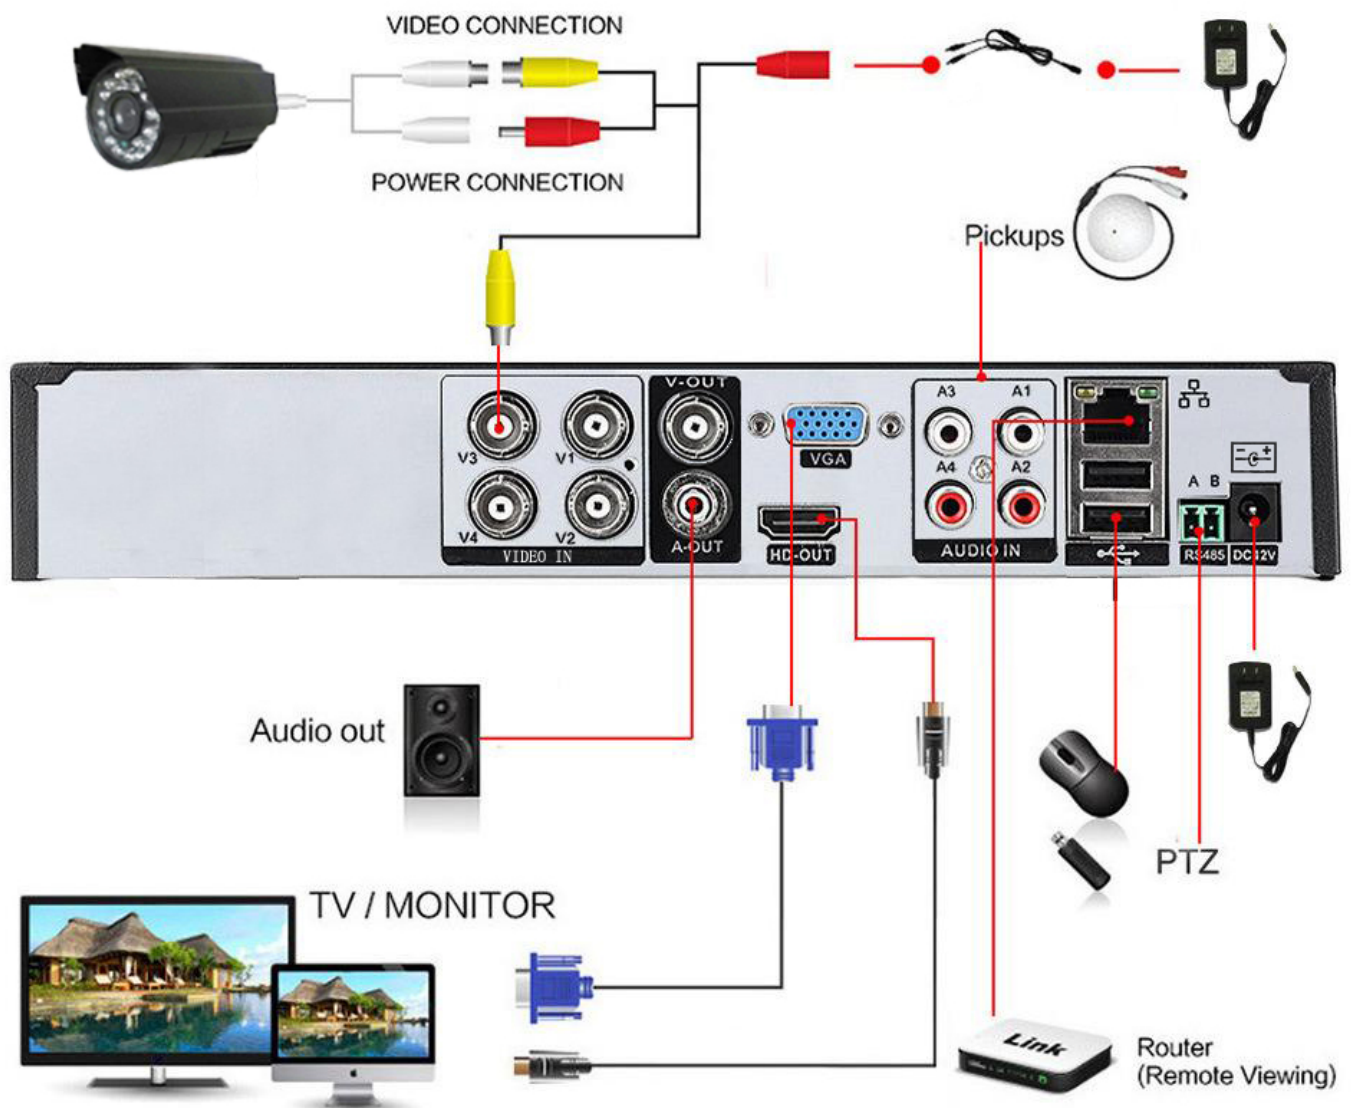

3.2 How to install the HDD (install HDD and change the HDD, do not connect the power)

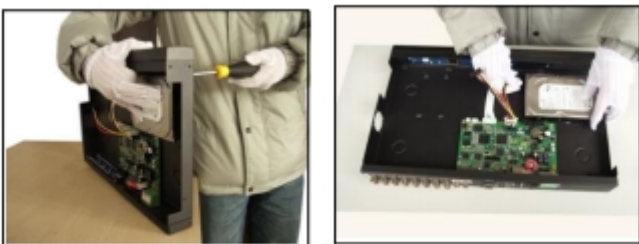

Install the HDD by screws and connect the HDD cable and power cable.

3.3 Turn on/ turn off

Turn on: Connect the power, and the DVR power light is on

Turn off: turn on the DVR need use the software: enter the “ main menu
- -Logout---shutdown”

attention: if the power is sudden stopped(not by normal turn off process), the
DVR will keep the former working situation after re-turn on .

3.4 Login

Before operating, need login, the DVR have “admin” and “default” 2 users,
and the DVR System default do not have password(you can set the password as
you prefer)



Password protecting: if Continuous error 3 password, will get the alarm, if continuous
error 5 times, account lockout(system restart, half an hour later, system Unlock
automatically)

3.5 Network settings

“main menu---system ---network”, system default IP address: 192.168.1.10;
System default subnet Mask: 255.255.255.0; System default Gateway: 192.168.1.1;