

 
WALKER EDISON

®

60" & 70" TV stand

SKU# WEVIV21603AW1 / WEVIV21603DB1

SKU# WEVIV21703AW1 / WEVIV21703DB1

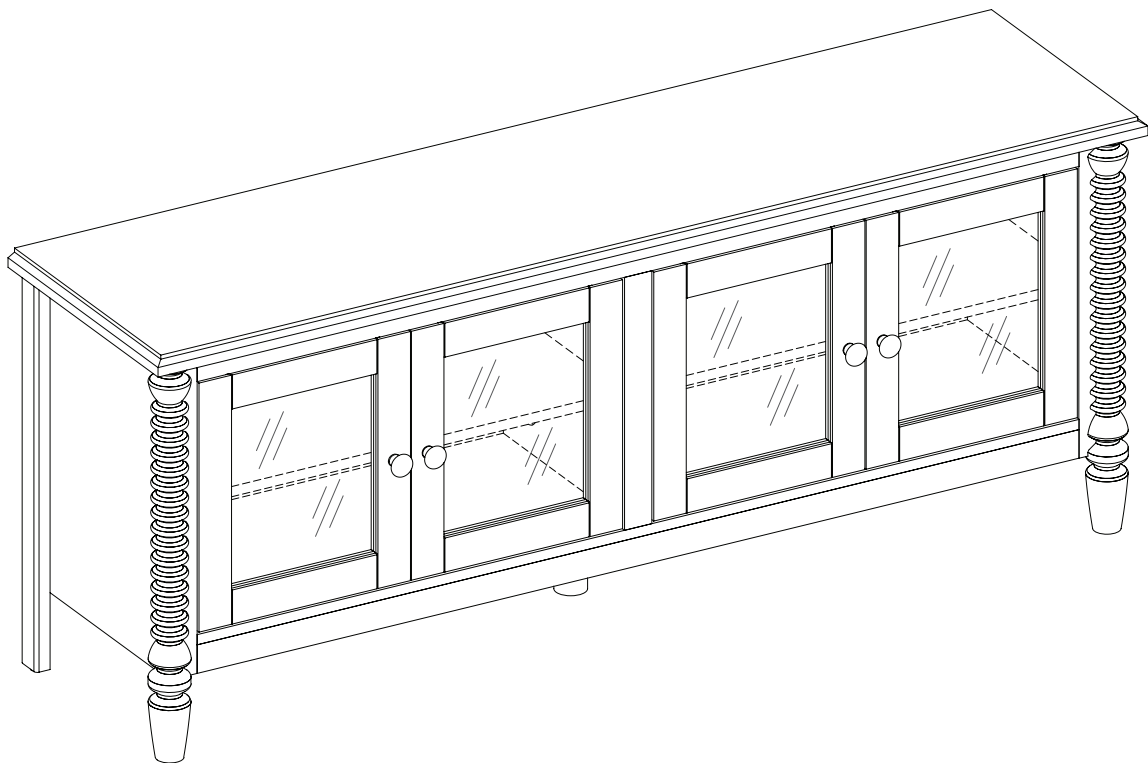

WALKER EDISON



 
For Residential Use Only

Please visit our website for the most current instructions, assembly tips, report damage, or request parts. www.walkeredison.com

WE Time to get started


Set up a clean and soft workplace to get started and avoid damage during the assembly. It also helps to double-check you've got all the pieces and parts before diving in to assembly.

Estimated time for assembly

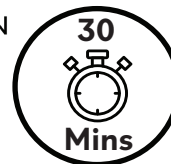

People recommended for assembly

 Make it a team effort! Grab a friend for quicker, easier assembly.

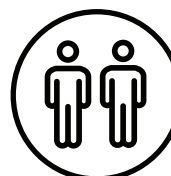

2 People Build

Use power tools with caution


You can cause cracking or damage to the material and easily strip the hardware. If you choose to use a power tool, your product will no longer be covered under Walker Edison's warranty.




Scan to get assembly tips and help!

WE Parts List

Part Number	Description	Quantity
A	Bottom Panel	1
B	Left Panel	1
C	Right Panel	1
D	Center Foot	1
E	Partition	1
F	Back Panel	1
G	Top Panel	1
H	Top Front Rail	1
I	Top Back Rail	1
J	Adjustable Shelf	2
K	Door	4

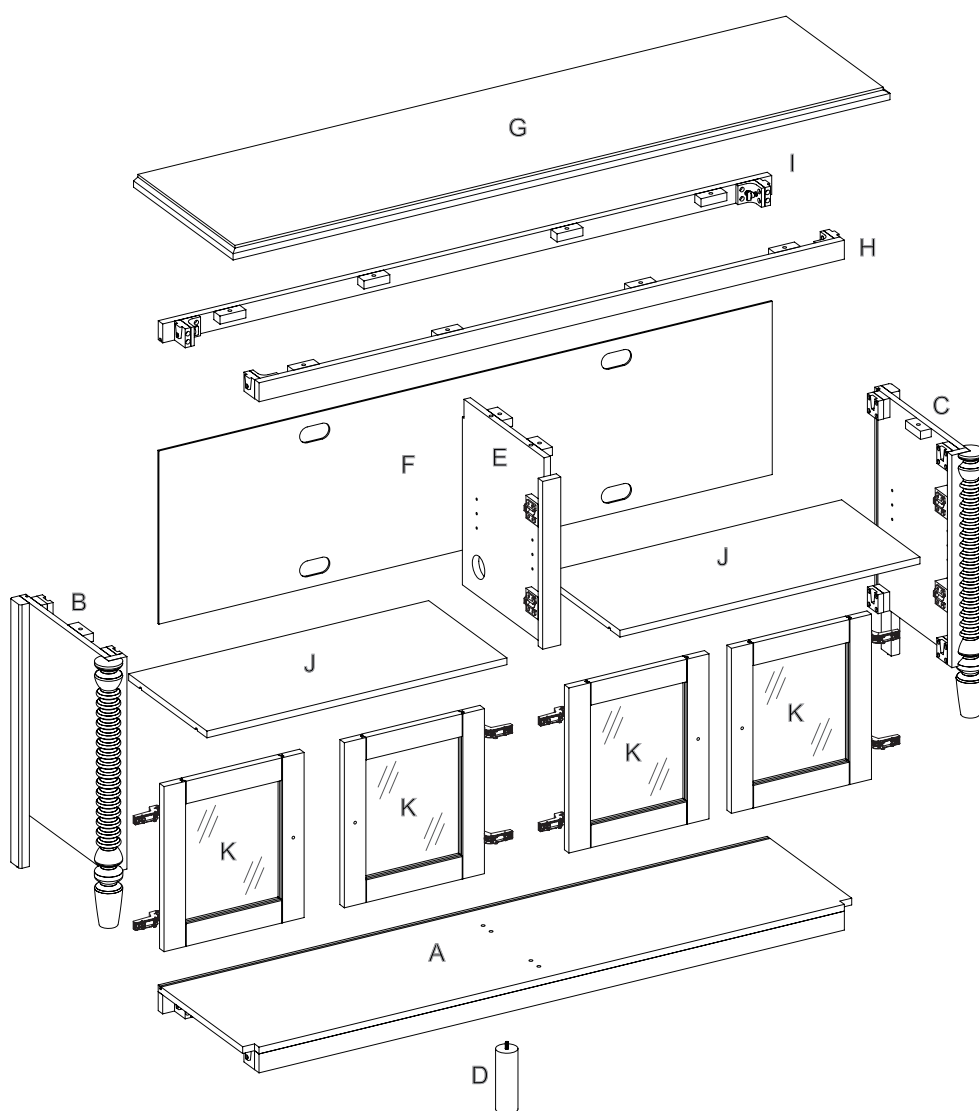 


WE Hardware List

 	Part	Size	Name	Quantity	Part code
AA		Ø8X30MM	Wood Dowels	4	PH-DWLNTL001
BB		Ø6.3X28MM	Thumb Screws	22	PC-BLTPWD6L28
CC		Ø7X16MM	Shelf Pin	8	PH-WEVIV21603-CC
DD		Ø28X24MM	Knob	4	PC-KNBGLD001
EE			Bolt	4	PC-BOTPWD4L22
FF			Tipping Restraint Hardware	1	PH-FTRHH510

*The hardware quantities listed above are required for proper assembly.
Extra hardware pieces may be included.*

 
WE Installed Replacements Parts

Part	Size	Name	Quantity	Part code
CG		Threaded Insert	16	PH-THRZNC001
HH		Floor glide	4	PH-GLDBRW001
II		Leveler	1	PH-LVRBLK001
JJ		Easy Assembly Hardware	8	PC-EZBRW001
KK		Euro Hinge	8	PH-HNG35CP01

Introducing Walker Edison EZ Assembly™ Hardware

At Walker Edison, we understand that furniture assembly can be a daunting task, especially when you're excited to get your new furniture set up and in use.

 That's why we're introducing our innovative Walker Edison EZ Assembly™ hardware system. Our goal is to make the assembly process as smooth and straightforward as possible, so you can spend less time building and more time enjoying your new furniture.

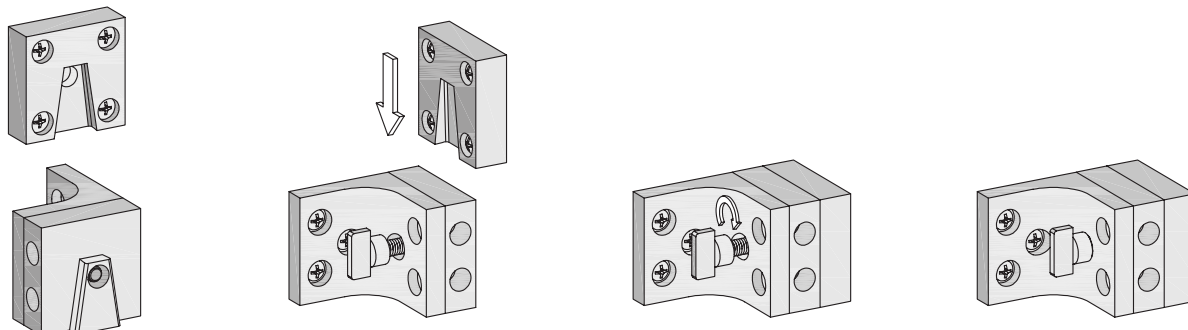


What Makes Walker Edison EZ Assembly™ Special?

- **Simplified Process:** Our hardware is designed to streamline the assembly process. With the Walker Edison EZ Assembly™ system, pieces connect easily and securely with minimal effort. No more fumbling with complex tools or trying to decipher confusing instructions—just quick, straightforward connections.
- **No Tools Required:** The Walker Edison EZ Assembly™ system is designed to be intuitive and user-friendly requiring no tools for assembly, so you can assemble with confidence, knowing it will be stable and secure.
- **Durable and Reliable:** Our Walker Edison EZ Assembly™ hardware isn't just easy to use—it's built to last. The components are crafted from high-quality materials to ensure that your furniture remains sturdy and reliable for years to come.

We're excited to introduce you to a new era of furniture assembly.

With Walker Edison EZ Assembly™, you can look forward to a hassle-free experience and a beautiful, durable product that's ready to enjoy in no time.

 How to Get Started

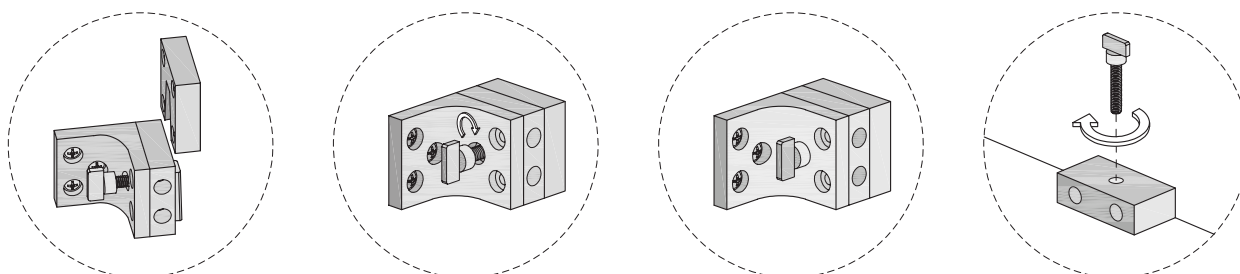


1. Get your panels ready, following the Assembly Instructions.
2. Match up the triangular male and female pieces—think of it as a little puzzle!
3. Let gravity lend a hand as you slide the hardware together at each aligned hardware piece.
4. Give the thumbscrew a twist in the center to lock everything in place.

Step 1

ATTENTION: To reduce the risk of damage to your furniture, please lay down a blanket, cloth, or cardboard on the floor prior to assembly.

 Let's get started! Grab the bottom panel (A) and slide it in between the left panel (B) and right panel (C), make sure everything lines up, secure it in place with the thumb screws (BB) - easy, right?

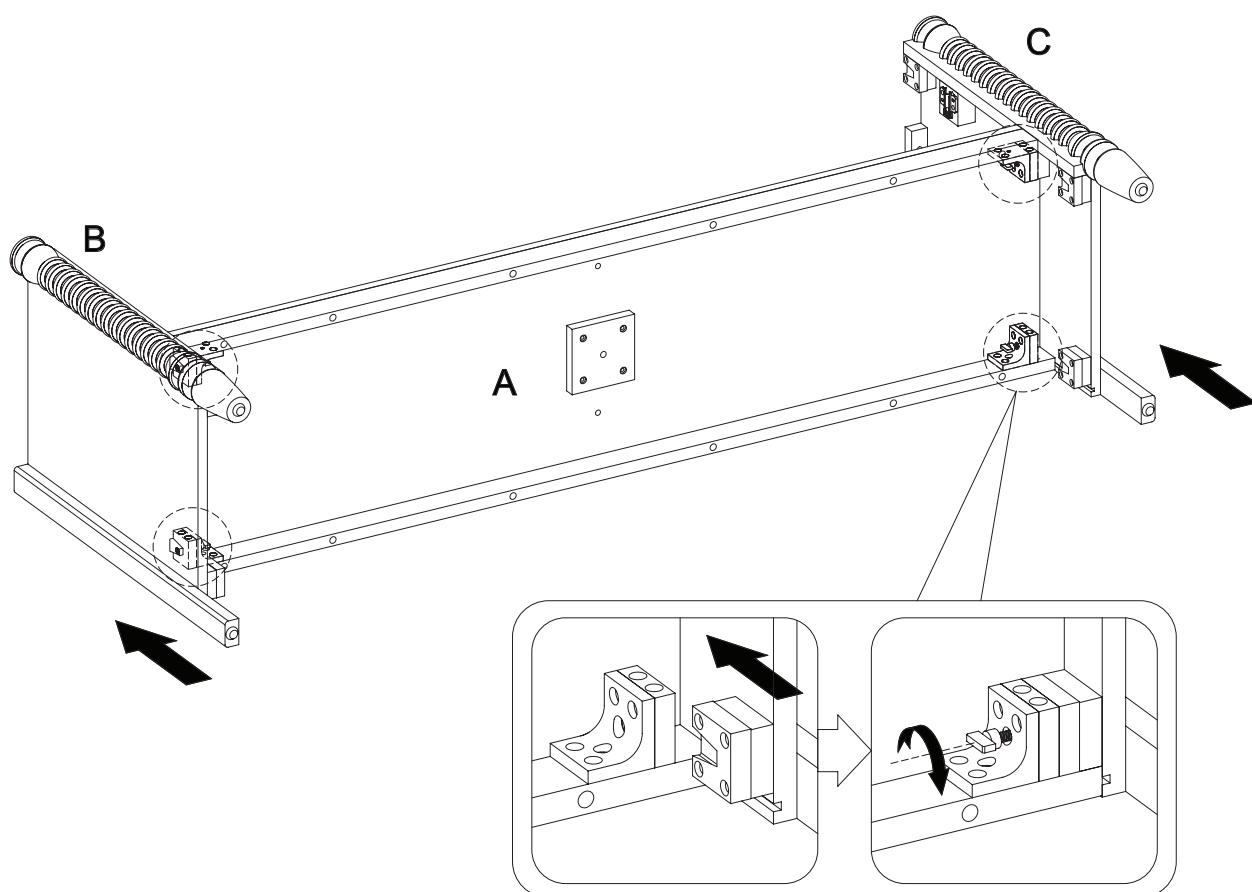


BB



[x4]


Step 2

 Insert the center foot (D) into the pre-drilled holes in the bottom panel (A) and rotate clockwise until the foot is securely fixed to the bottom panel (A).

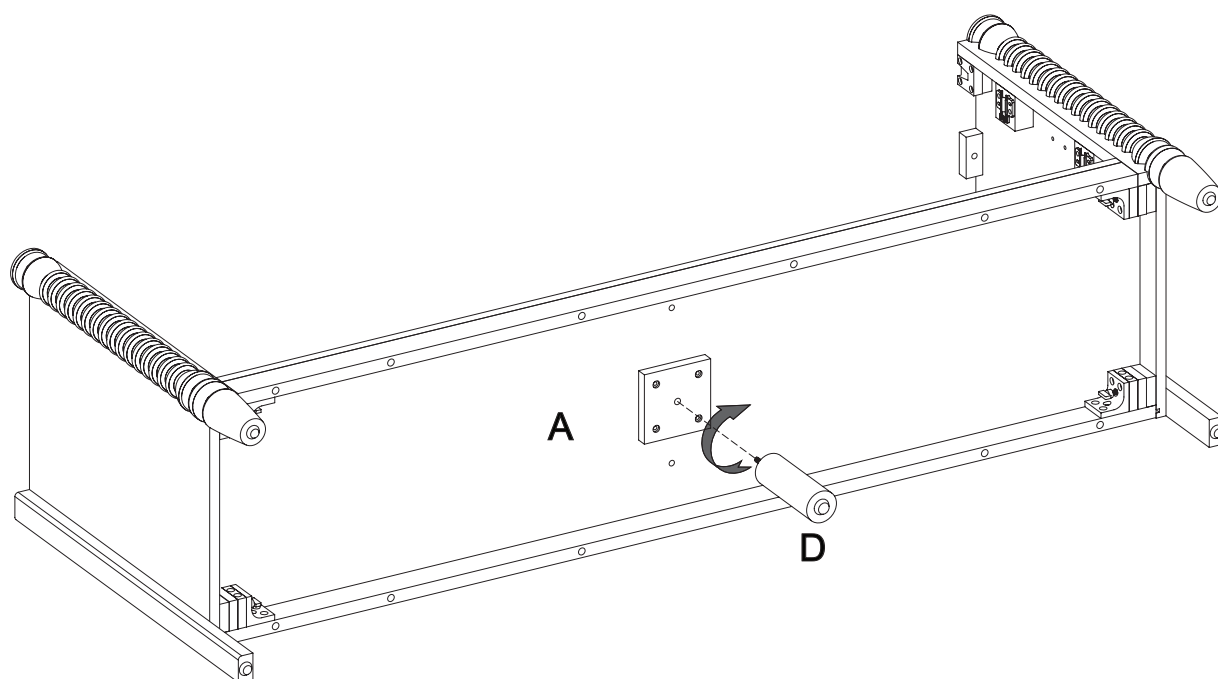

Step 3

 Insert the wood dowels (AA) to the pre-drilled holes in the partition (E).

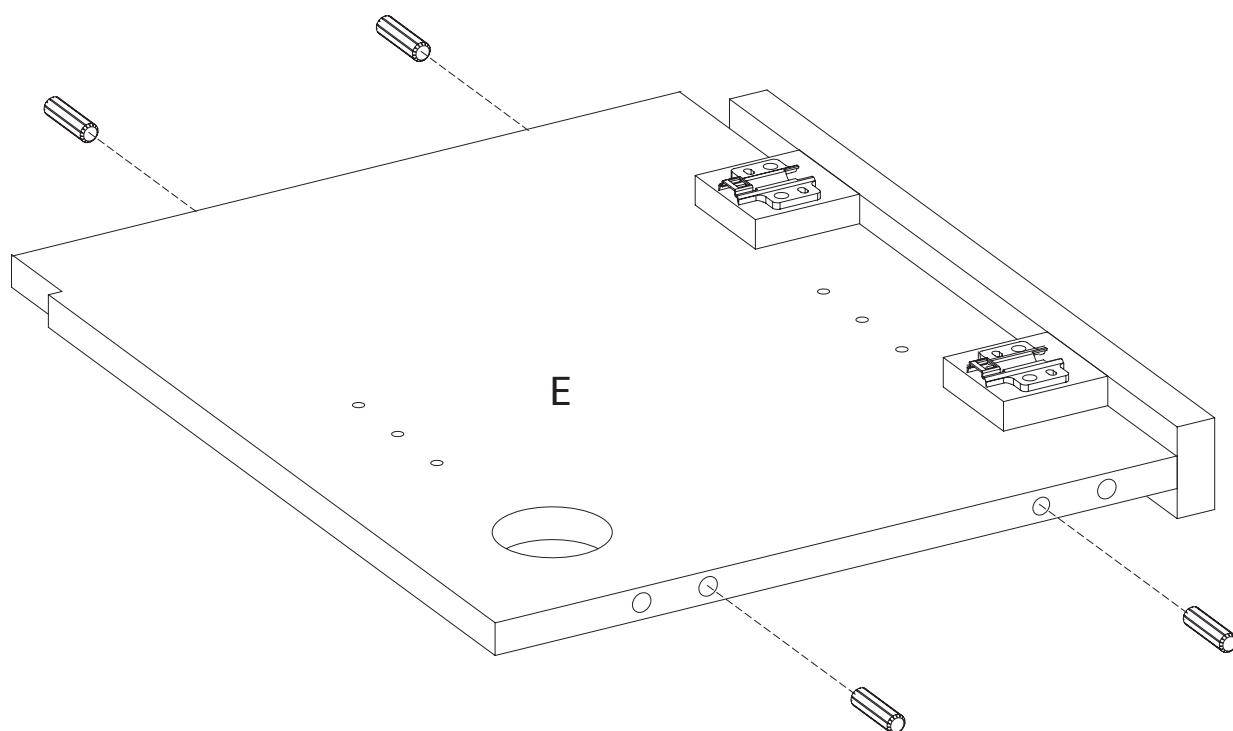


AA




[x4]

Step 4

 Secure the partition (E) to the bottom panel (A) using the thumb screws (BB).

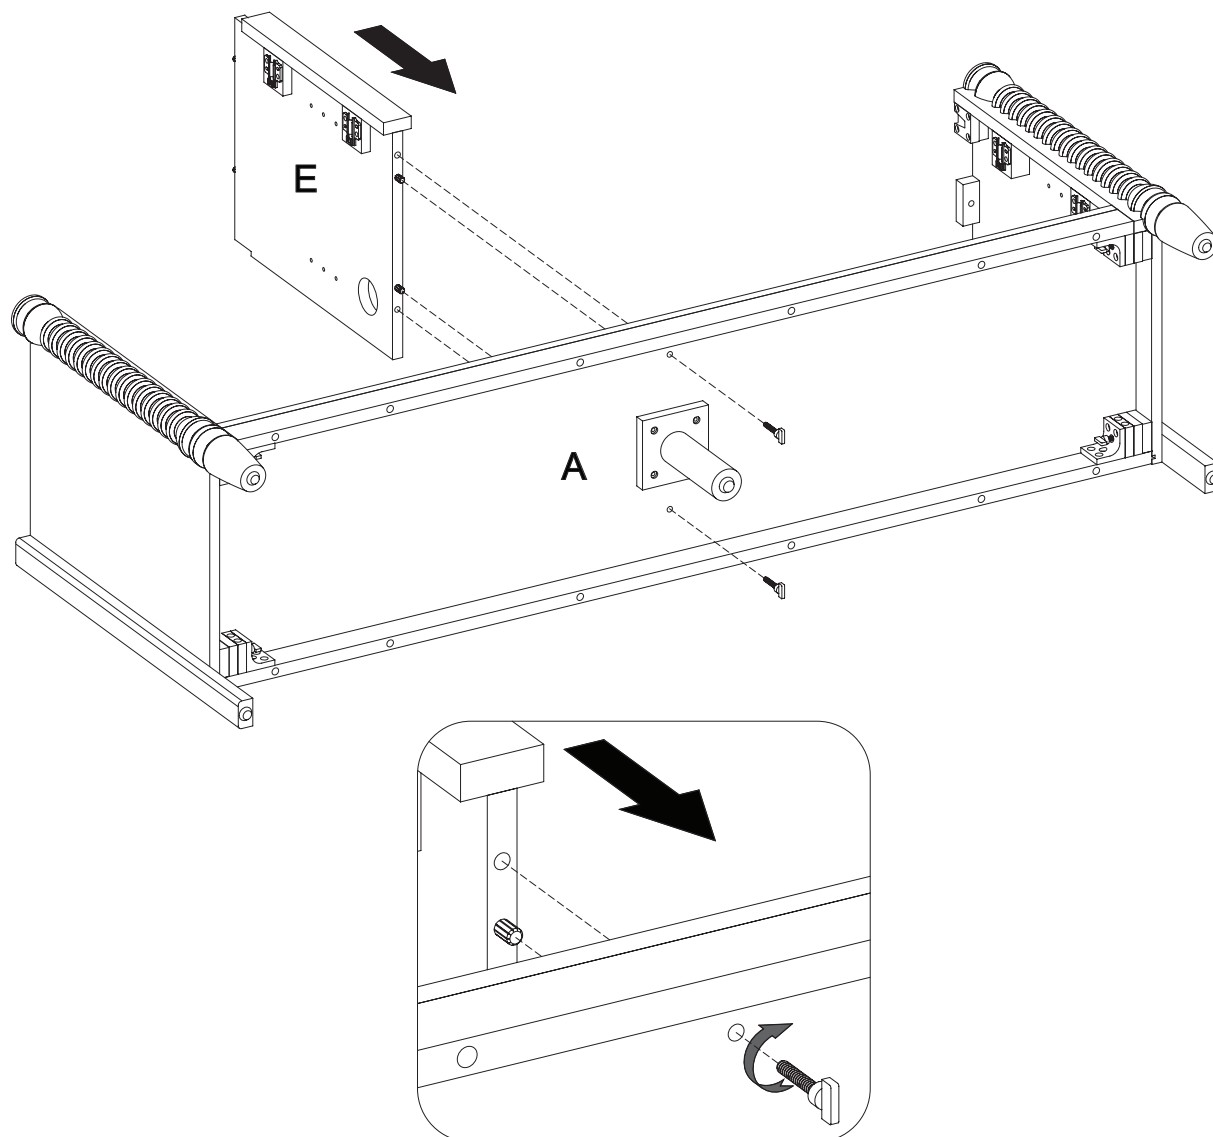


BB

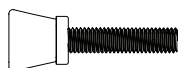 

[x2]


Step 5

 Take the back panel (F) and slide it into the hardware in the left panel (B) and the right panel (C). Lock it into place and secure it with thumb screws (AA).

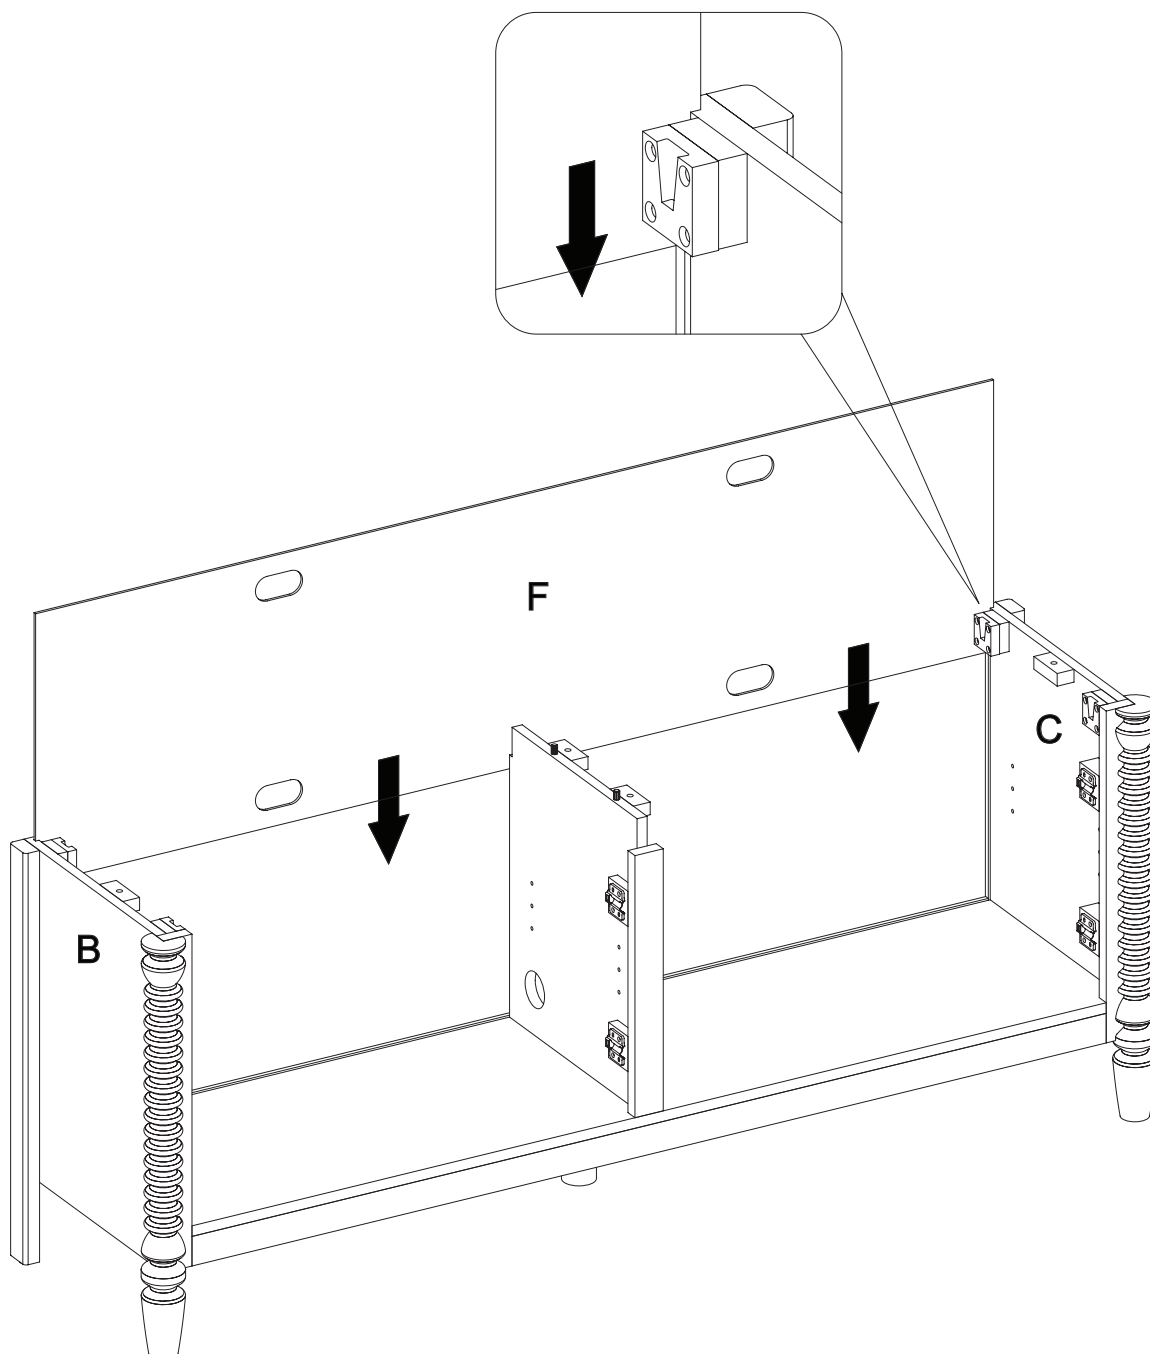


Step 6

 Attach the top front rail (H) and the top back rail (I) to the main assembly, then use the thumb screws (AA) to tighten it.

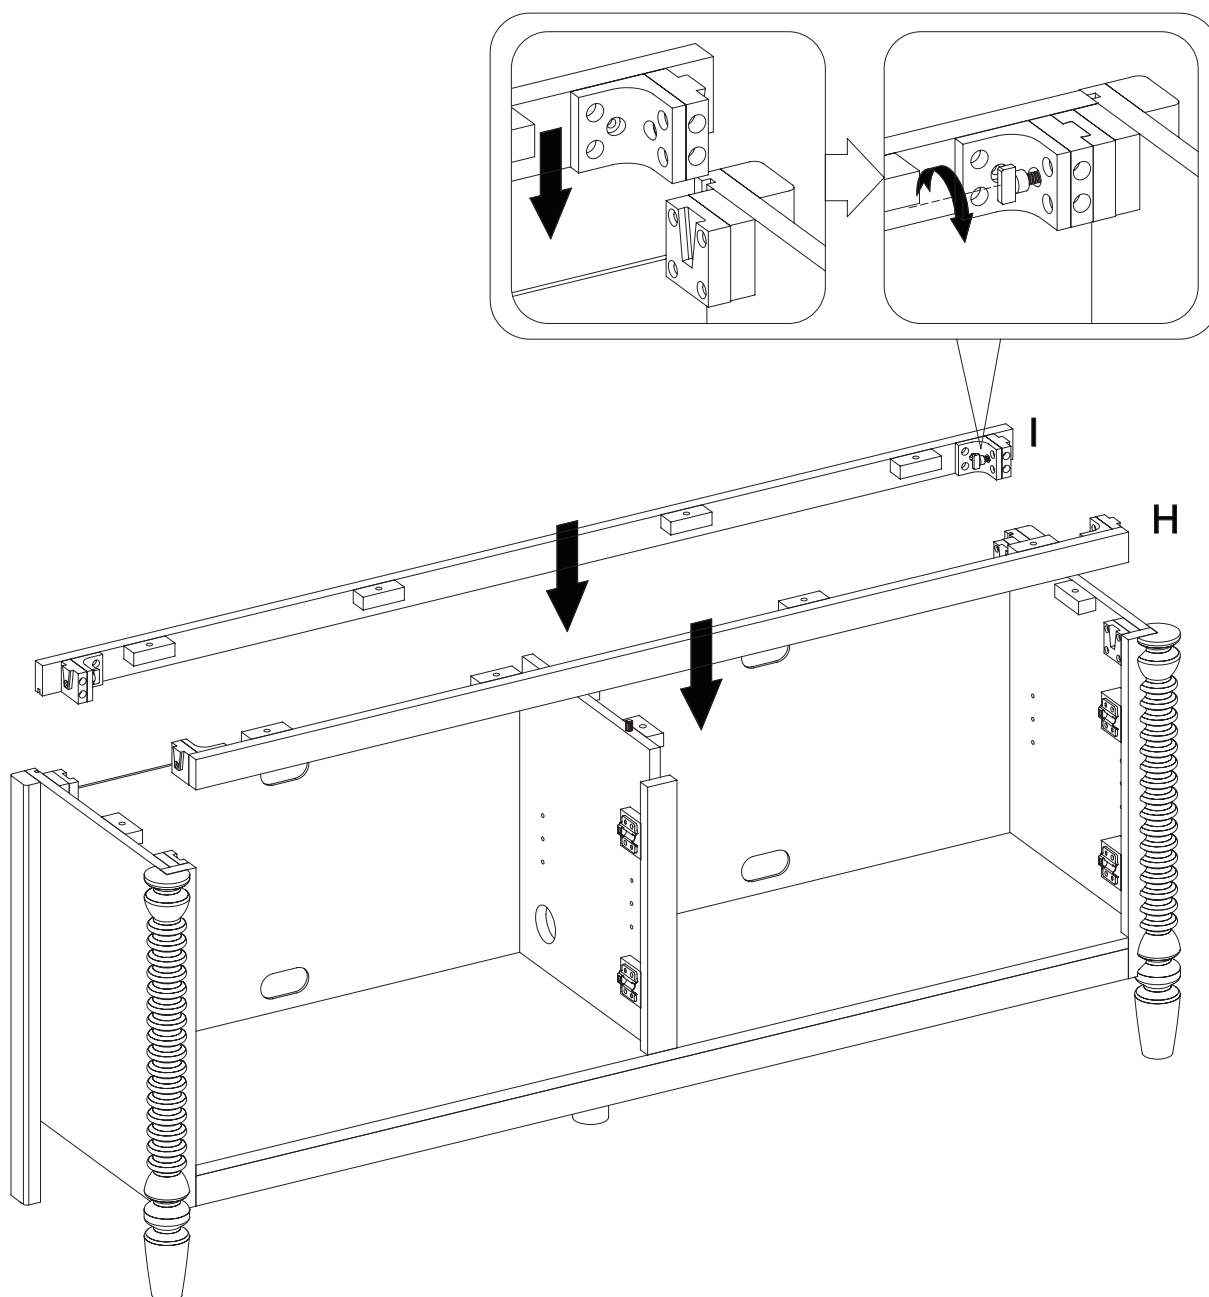


BB

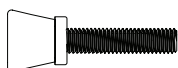 

[x4]

Step 7

 Choose the shelf height as needed to insert the shelf pin (CC). then ,put the adjustable shelf (J) on the shelf pin from the top.

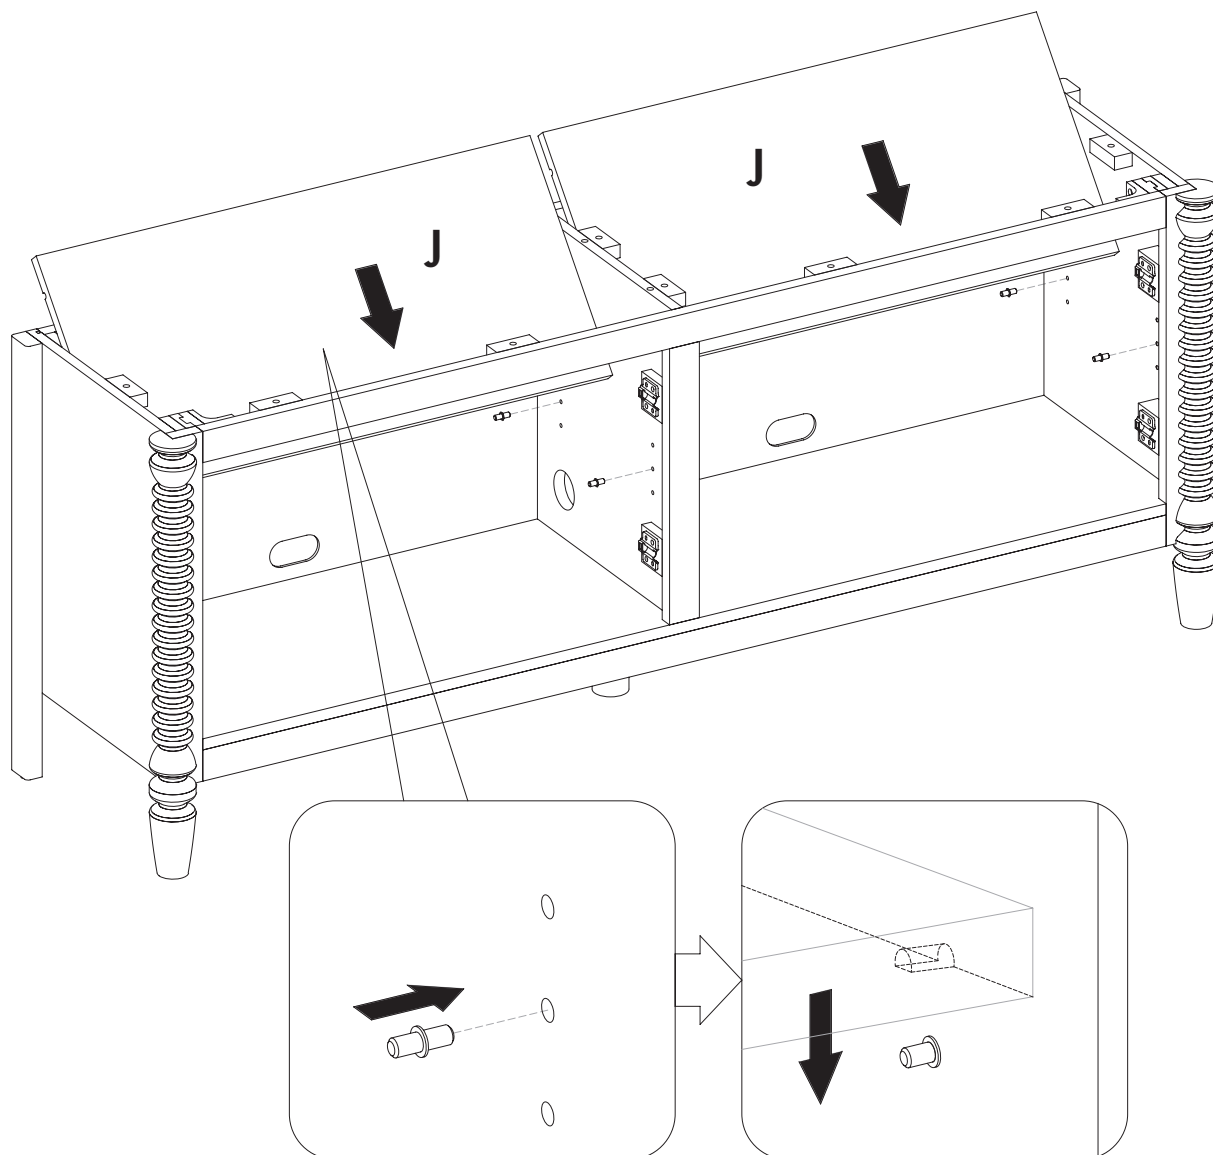


CC




[x8]

Step 8

  
Align the holes to the wood dowels, and use the thumb screws (BB) to secure the top panel (G) to the main assembly.

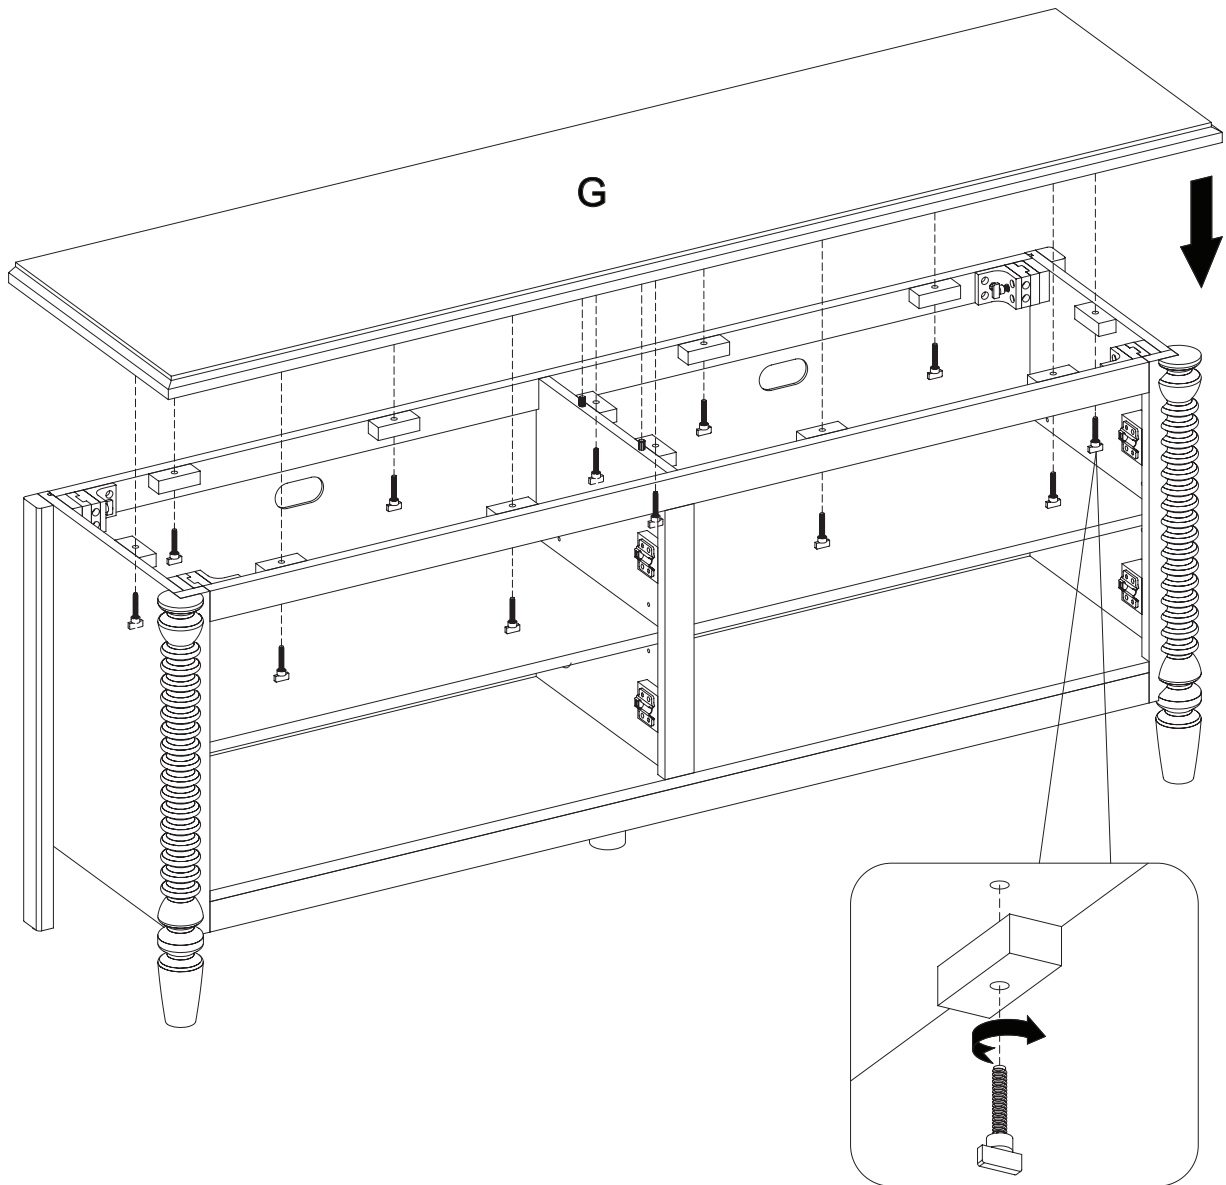

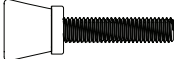BB  [x12]

Step 9

 Let's attach the handles. Align the knob (DD) to the pre-drilled holes on the outside of the door (K). Insert the bolts (EE) on the other side to secure it in place.

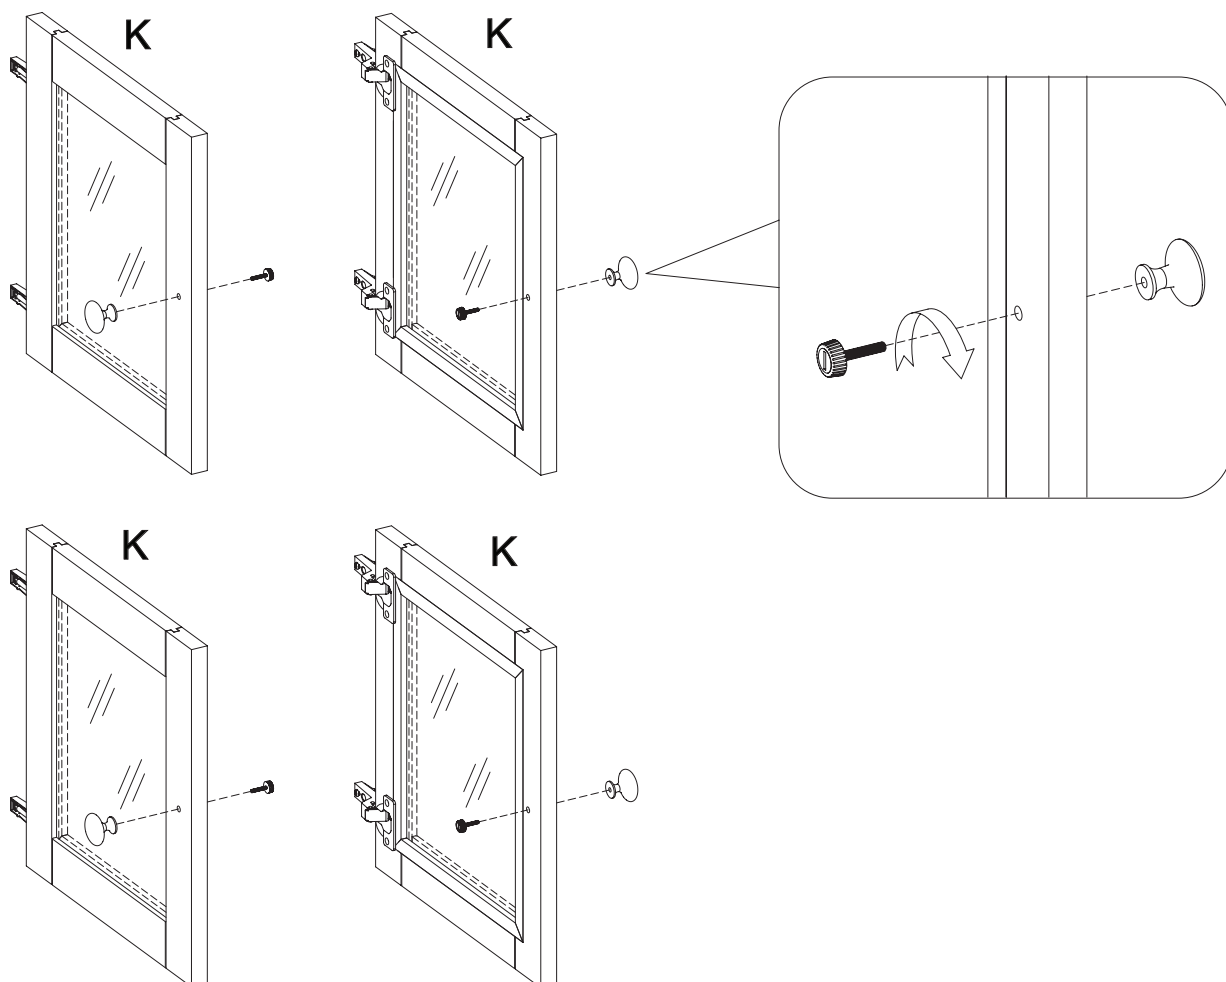

DD



[x4]

 
 
EE




[x4]

Step 10

Screw the assembled door (K) into the pre-drilled holes in the assembled unit using the pre-attached screws as shown.

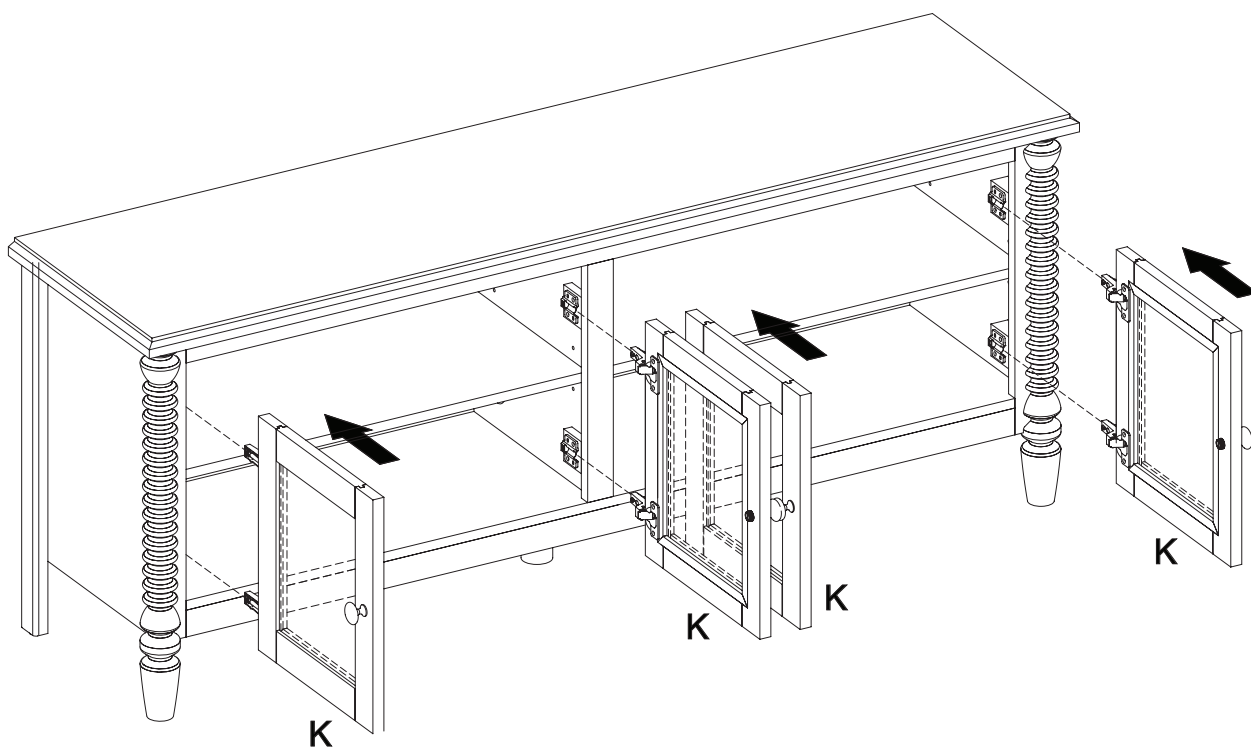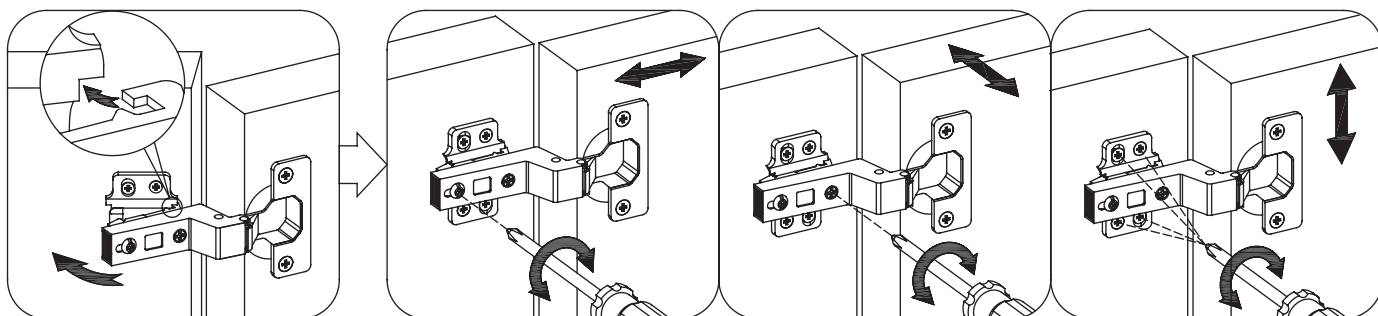


 Note: If you find the doors need to be adjusted slightly, turn the appropriate screw as illustrated.

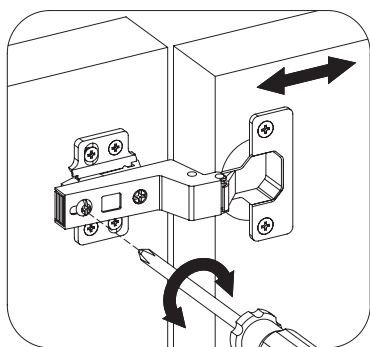


TO ADJUST DOOR FORWARD OR BACKWARD

 Loosen the screw and slide the hinge into position, then retighten.

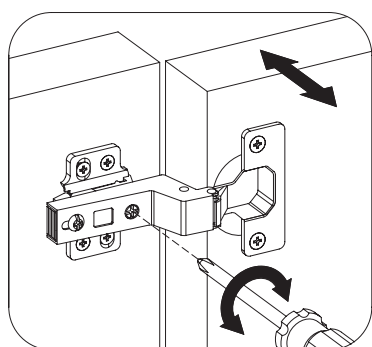

TO ADJUST DOOR RIGHT OR LEFT

 
Loosen the screw to move the door away from the hinge. Tighten to move the door toward the hinge.
Afloje el tornillo para alejar la puerta de la bisagra.
Apriete para mover la puerta hacia la bisagra.

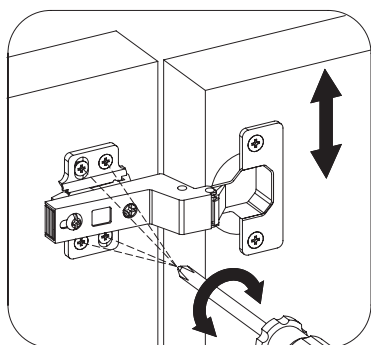

TO ADJUST DOOR UP OR DOWN

Adjust the four screws at the top and bottom of the hinge. Each screw should be loosened or tightened in small increments.

 
Step 11

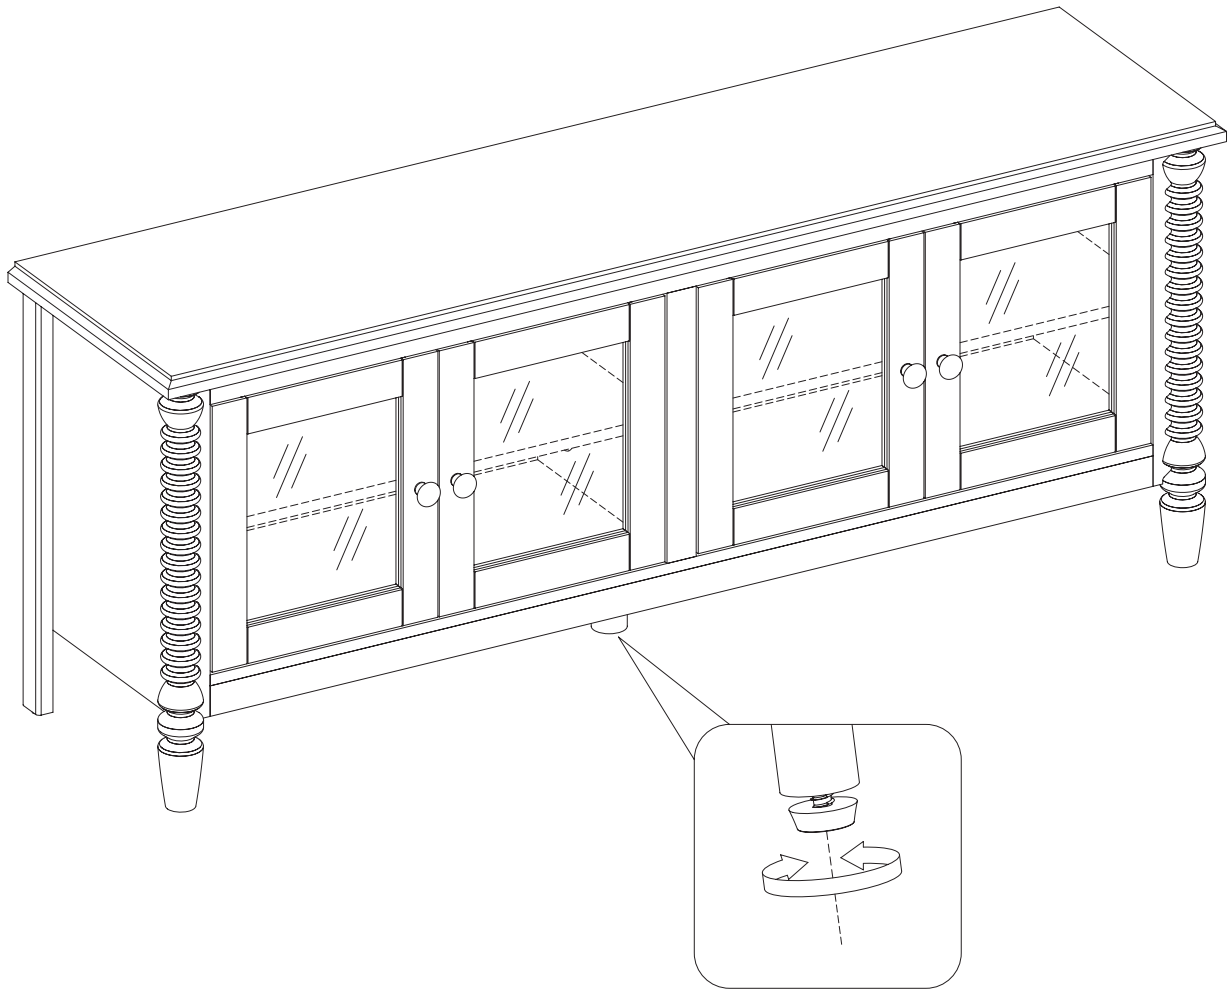

Note: It is very important that your unit is properly leveled. After moving your unit to its final location, you may need to adjust the floor levelers.

Step 12

 Attach the tip-restraint hardware (FF) to the back before securing it to the wall, as shown below.

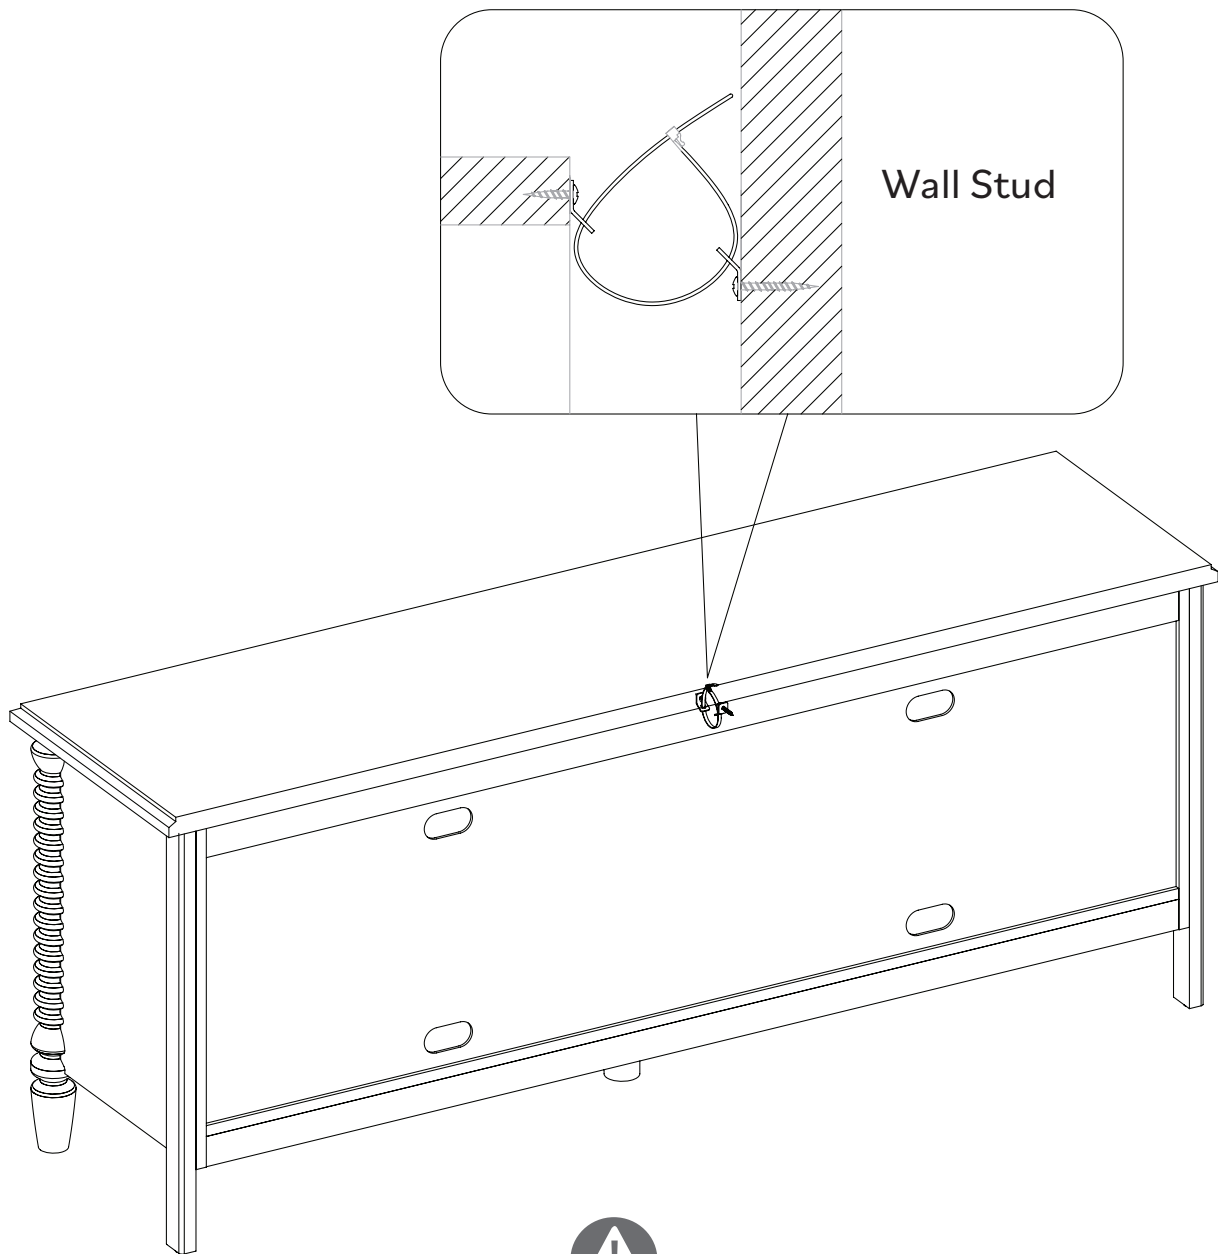


Warning: You must install the tip restraint hardware to help prevent any accidents or damage to the unit. We strongly recommend attaching the tip restraint hardware to a wall stud and your unit. For all other wall types, please visit your local hardware store to obtain the proper hardware.

FF



[x1]

 Final Assembly

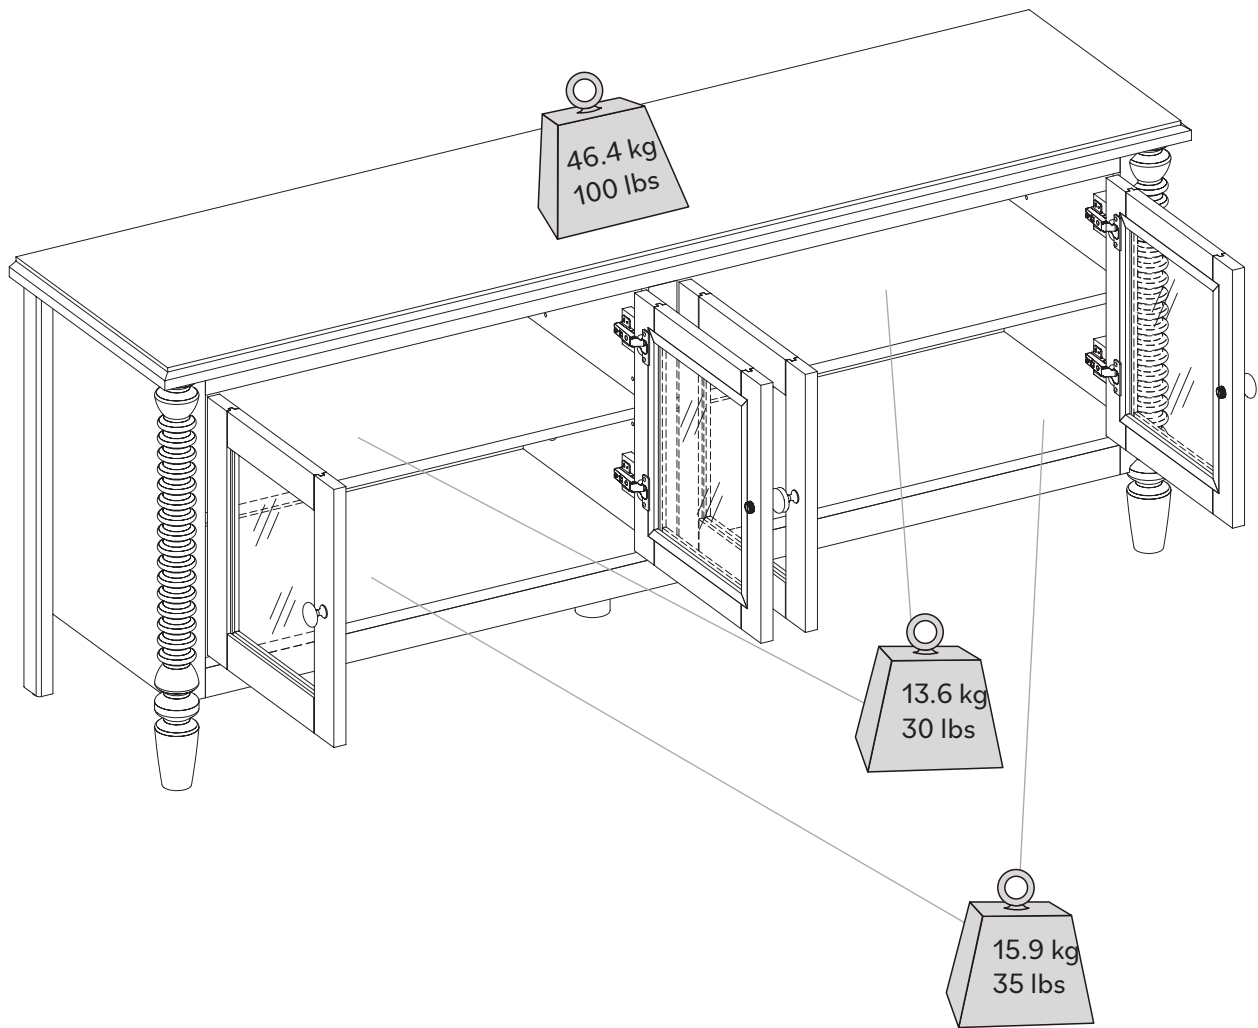

Congratulations on your new piece of furniture!

We would love to hear about it and see it.
Please leave us a review or post a picture with
#mywalkeredisonhome

Assembling furniture can be tricky sometimes.

Our customer service team, located in Utah, is here for product information, help assembling a product, or for any other customer support issue.

Call us at **801-433-3008**

Email us at service@walkeredison.com

Visit our Customer Service website at
walkeredison.com/pages/customer-service

We are available to help Monday -Thursday 8am-5pm, Friday 8am-3pm MST

For details on Assembly Videos, Assembly Instructions, Replacement Parts, and Customer service.

SCAN HERE

