 


142 mm

PROTABLE CARPET CLEANER USER'S MANUAL

C5

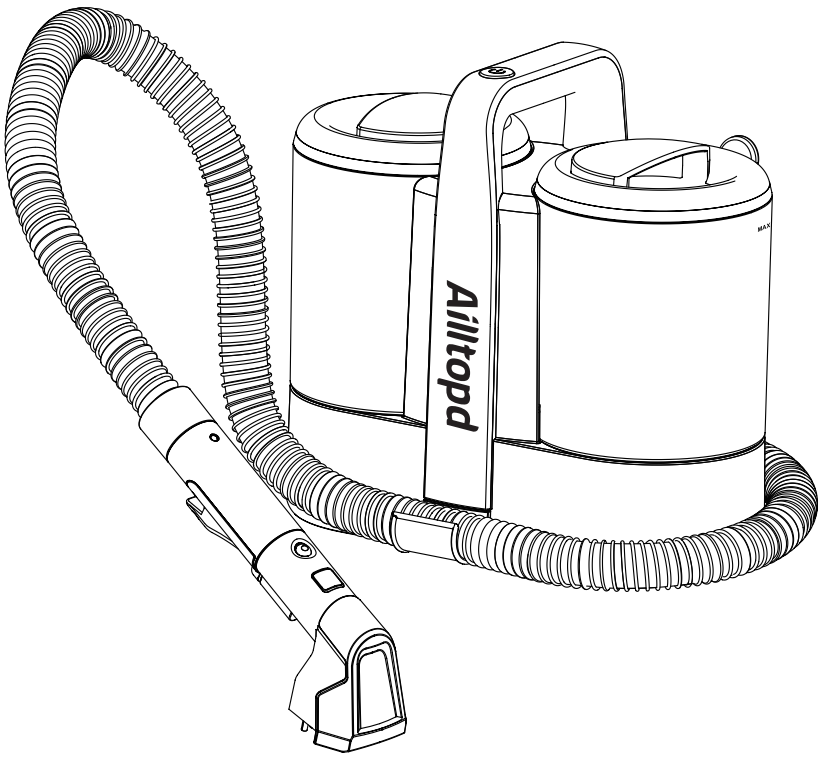

Read the instruction manual before using the machine. Save it well.
Email: Ailltopd-aftersale@outlook.com
Our Portable Carpet Cleaner have a one-year warranty.
If you have any questions, pls contact us.

WARNING

Notice before use

- Use water under 40°C in order to remove dirt from the unit .
- Do not use it to clean arts and crafts, fibers and items not suitable for cleaning by water, and surfaces easy to be hurt (like floor, table and so on).
- Do not slant it with water in the tank to avoid wetting floor.
- Stop the machine and empty the dirty water tank if it reaches the full line.
- Make sure the detergent used is not bad for your washed items.
- The machine may stop when cleaning long hair carpet due to blocked air outlet Stop the machine if big quantity of foam or dirty water comes out and empty the dirty water tank before use it again.
- Do not use foam detergent.
- Please make sure the users need assistant (including children) are under supervision when they use the machine.
- Do not use liquid like pesticides, hair dyes and lubricant .
- Do not use to pick up any flammable or combustible objects or cigarettes.
- Do not use to pick up any oil or hot air, or dry dust .
- Do not use it if the hose is broken, avoid bending, stampede and pulling violently of the hose.
- Do not block the air outlet to avoid influence on the heat dissipation.
- Stop use it in case of any unusual noise and smell.
- Do not disassemble, repair and change the machine's structure by yourself.
- Do not use it under the scene of heavy wind or rain.
- Do not immerse in water or liquid to avoid fire or electric shock hazard.
- Do not use to pick up any dust with infectious danger.
- Do not use without dirty water tank in position.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- This appliance may be normal used under 60Hz the frequency need not to be adjusted.

Correct Disposal of this product

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

PRECAUTIONS TO SOME FAILURES

- This machine is mainly for wet using, do not use to pick up large quantity of dust.
- Dry the dirty water tank, clean water tank and inside of the hose if the temperature is extremely low to avoid freezing.
- Take out foreign matters from the hose when blocked before use it again.

- 1 -

USE THE POWER CORD AND PLUG PROPERLY

- Clean the plug from time to time.
- Plug in well when use it.
- Unplug the machine if the machine will not be used for a long time.
- Unplug the machine before maintenance, checking and moving.
- Do not plug or unplug the machine with wet hands.
- Keep the plug away from kids.
- Do not damage the power cord. Do not pull the plug violently when move the machine.
- Do not use the machine in case of damaged power cord or plug.
- Do not use overloaded socket.
- Do not use in case of any failures, cut the power and unplug the machine.

BELOW MATTERS ARE NOT ALLOWED TO BE PICKED UP

 
 
- Dry dust
- Big quantity of powder
- Big quantity of sand and stones
- Big quantity of rubbish
- Metal matters like needles, pins
- Big polybag and stockings
- Things easy to be dumped inside

CAUTION

- Do not use it other than cleaning.
- This machine is for household use only.
- Do not close to fire or heating equipment.
- Stop working if the water-spray mouth is blocked.
- Stop working if any foreign matters are taken in.
- Empty the tanks if anything in block before use again.
- Do not slant or ride on the machine.
- Do not use it in the scope touchable for kids.
- Not for outdoor use.
- Do not continue to use when the suction hole is blocked.

- 2 -

KNOW-HOW OF THE MACHINE

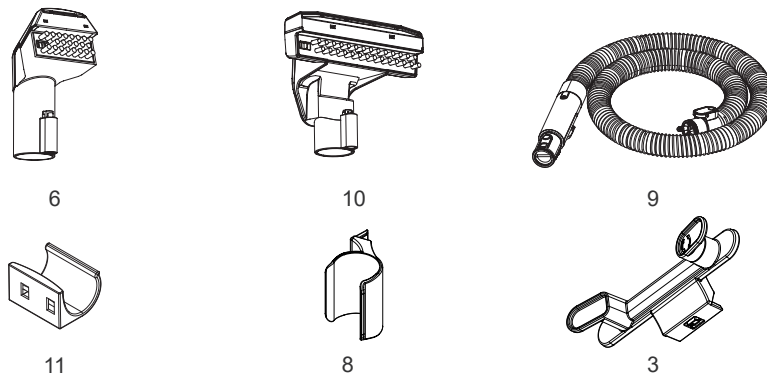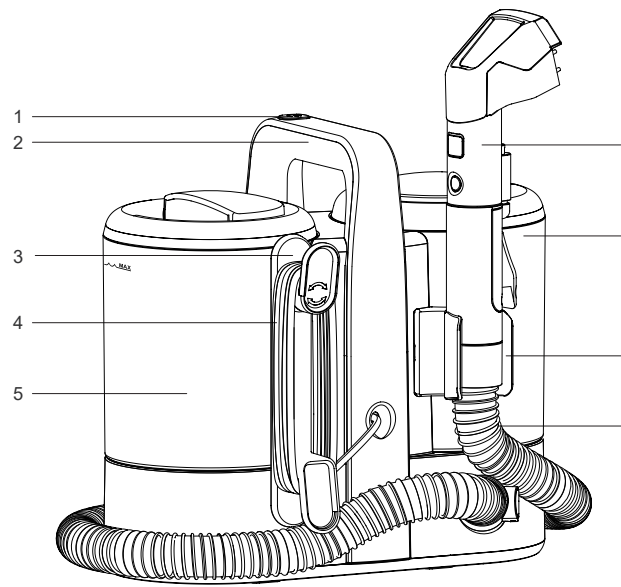


COMPONENTS LIST :


- 1. Switch
- 2. Handle
- 3. Power cord hook
- 4. Power cord
- 5. Clean water tank
- 6. Small brush
- 7. Dirty water tank
- 8. Hook for brush
- 9. Hose
- 10. Big brush
- 11. Hose hook

- 3 -

 
PREPARATIONS BEFORE USE

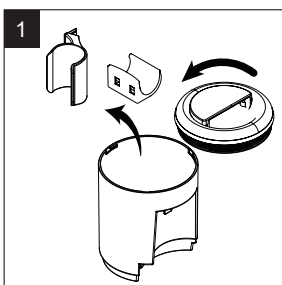

 
Open the clean water tank by turning the cover in anticlockwise direction and take.

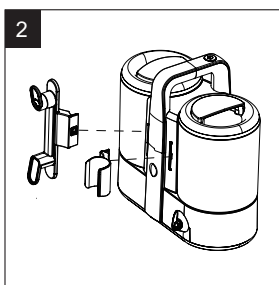

 
Insert the handle and cable hook into the machine.

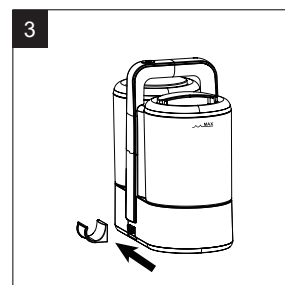

 
Put the hose hook in the correct position to push it from right to left, and it is fixed well when you hear a lock tone.

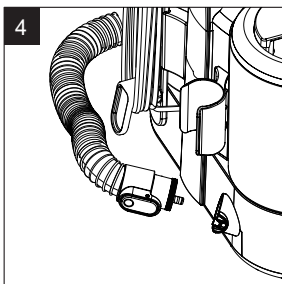

 
Insert the house into the machine and make sure the lock tap is well fixed.

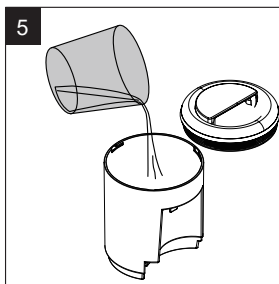

 
Put suitable amount of water into the clean water tank. **WARNING: Donot exceed the max water level line.**

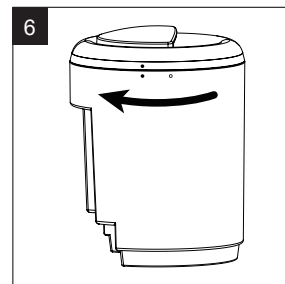

 Align the solid circle of the tank cover with the hollow circle of the tank, with a clockwise rotation to close the cover until you hear a lock tone and insert it into the machine.

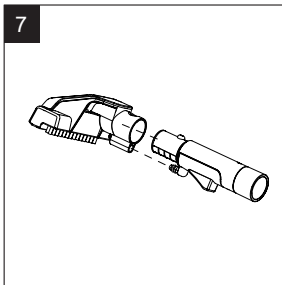


Assemble the brush as you may want.

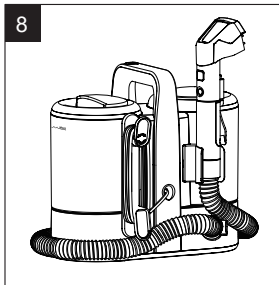 


Wrap the hose around the base and insert the hook.

- 4 -

 
HOW TO USE

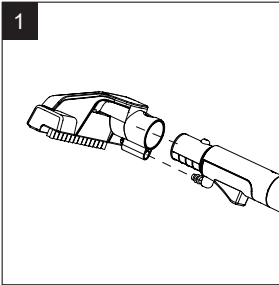

 
Select the desired wash tool suitable for the flooring/surface and attach this to the hose handle.

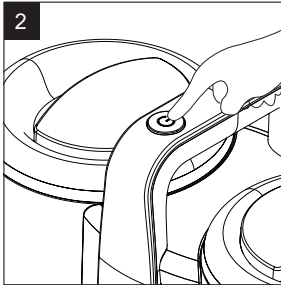

 
Plug the power cord and press ON/OFF button.

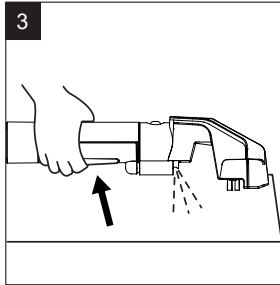

 
Press the water-spray button to spray water.

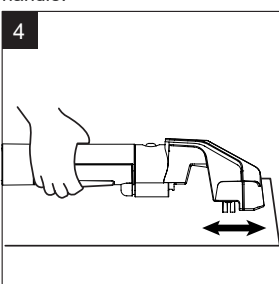

 
Brush the unit back and forth to clean stains.

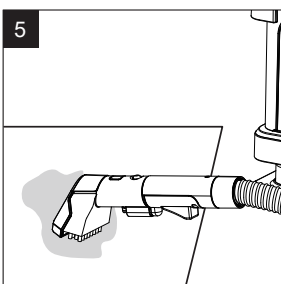

 For spills always pick up the excess liquid before using water or solution.

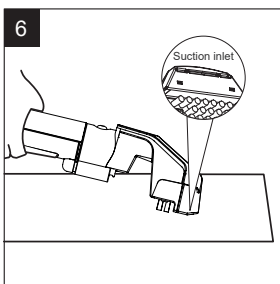


 Press the brush in the stains position to suck all dirty water.

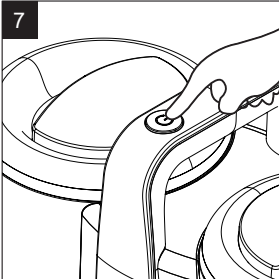


Power it off after cleaning. Wrap the hose around the base and lock in the hook.

 Notice: clean the dirty water tank after every use to avoid unpleasant smell

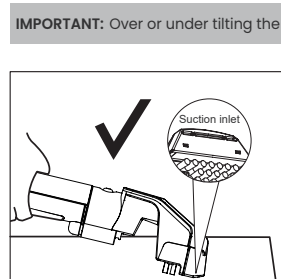

 
IMPORTANT: Over or under tilting the hand tool may result in poor water pick up.

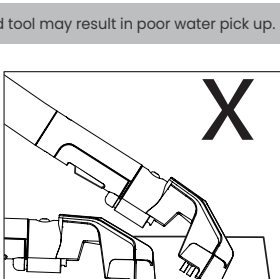


- 5 -

HOW TO CLEAN STUBBORN STAINS

 Use fabric detergent to clean stubborn stains. Make the water and detergent with a certain proportion to fill the tank to the full line mark, and then install the clean water tank to the machine

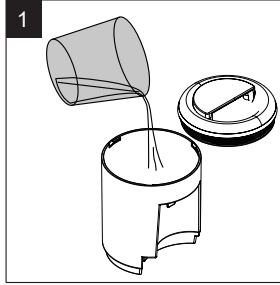

 Open the water-in sealing pad, fill the clean water tank.

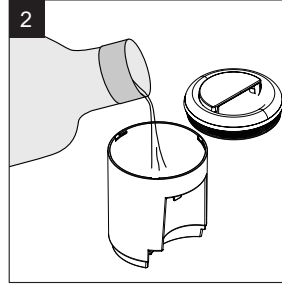

Put detergent into the tank.

- 6 -

CLEANING CARE AND MAINTENANCE

 
To prolong the life of your spot & stain cleaner and prevent blockages or problems occurring follow this guide.

Always carry out cleaning when the product has been switched off for a short period of time.


CAUTION! never clean the cleaner or any parts of it whilst the plug is switched on at the mains.

This appliance can be cleaned by wiping a damp soft cloth to keep the outside free of dirt including dust. Use a dry cloth to clean the power cord.


To avoid unpleasant damp smells clean both tanks and ensure they are fully air dried before storing and after every use.

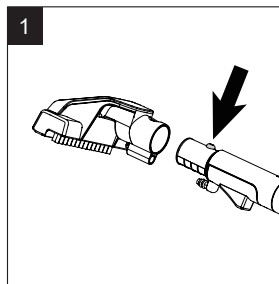

 
Press the wash tool release button and pull to remove the tool from the hose.

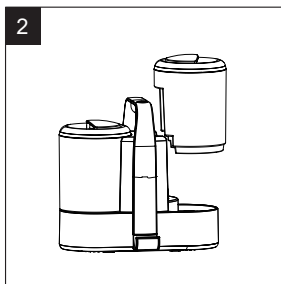

 
Remove the clean water tank from the main cleaner.

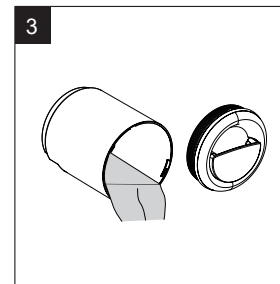


Pour water out of the tank.

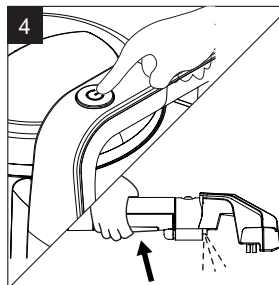 

 Re-install the empty clean water tank and over on, press the water-spray button to remove any excess water from the tank.

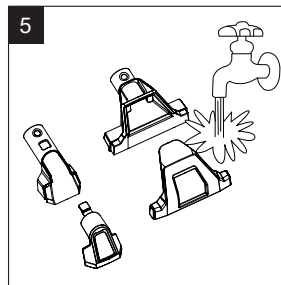


 Remove the wash tool brush cover to clean by rinsing under the tap. To replace, place cover into position on the wash tool until it clicks into place.

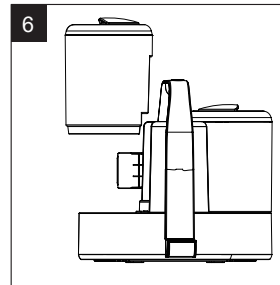


Remove the dirty water tank from the main cleaner.

 
- 7 -

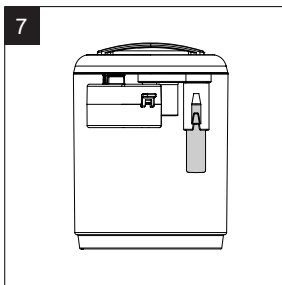

 
Empty the dirty water tank after every use or when the water level reaches the max fill line. The float inside will prevent suction if the tank is full.

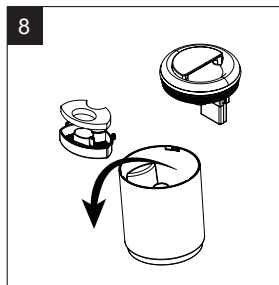

 
Open the dirty water tank and take out the cover and filter.

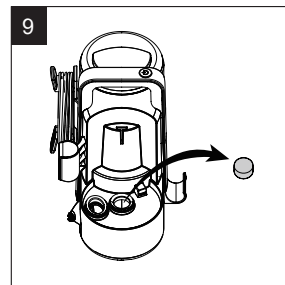

 Remove small foam filter to clean by rinsing under the tap. Ensure this is fully dry before replacing and using in the appliance. TIP! Place on or near a radiator to dry.

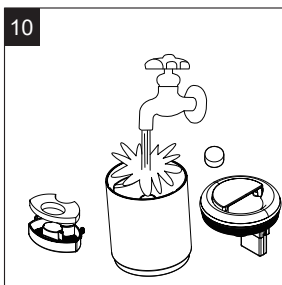

 Clean all parts with warm water only. Do not use washing up liquids or other chemicals.

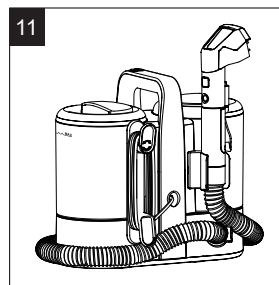

Reinstall the dirty water tank into place on the cleaner.

- 8 -

QUESTIONS

Please read below table carefully before contacting the maintenance agency to avoid any unnecessary losses.

Fault	Possible Reasons	Measures
No working after turning on	• The plug is not well plugged • The cord is damaged	Turn if off, plug in well, or consult the service agent via hotline
No water comes out or little water comes out after pressing the water-spray button	• Spray water mouth is blocked • The handle or the pump has been damaged	Take out the brush, wash the spray water mouth or consult the service agent via hotline.
No suction or weak suction power	• The machine is not on • The dirty water tank is full • The hose is not in good status • The wind-in sponge is blocked	Turn on the power. Clean the dirty water tank to use it again. Check the hose to make sure it is in well status. Clean or change the sponge.

SPECIFICATIONS

Name	Portable carpet cleaner
Item number	C5
Voltage/Frequency	120V ~ 60Hz
Rated power(Current)	500W
Max vacuuty	≥11 kPa
Capacity of clean water tank/ Dirty water tank	1500ML/700ML
IP rating	IPX4

- 9 -



Email:Ailltopd-aftersale@outlook.com

Adress:Block A,Galaxy WORLD Building,Bantian Street, Longgang District,Shenzhen



MADE IN CHINA

- 10 -