






							/
22		23	24		26		27
			25	250*80 1PS			
	110*80 2PS	406*106 1PS		250*80 1PS		354*80 1PS	578*293 2PS
28		29	30		31		32
<							
	578*202.5 2PS	288*549 2PS		364*244 1PS		581*281 1PS	581*281 1PS
33							
	501*181 2PS						

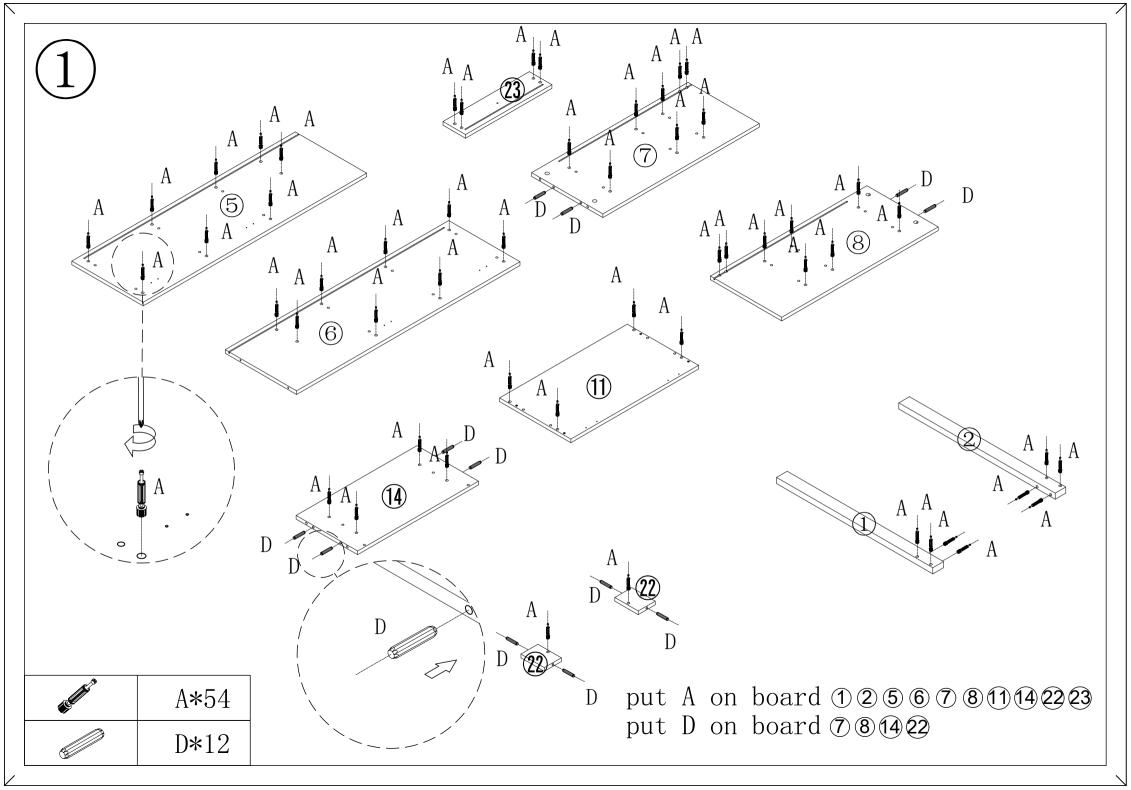

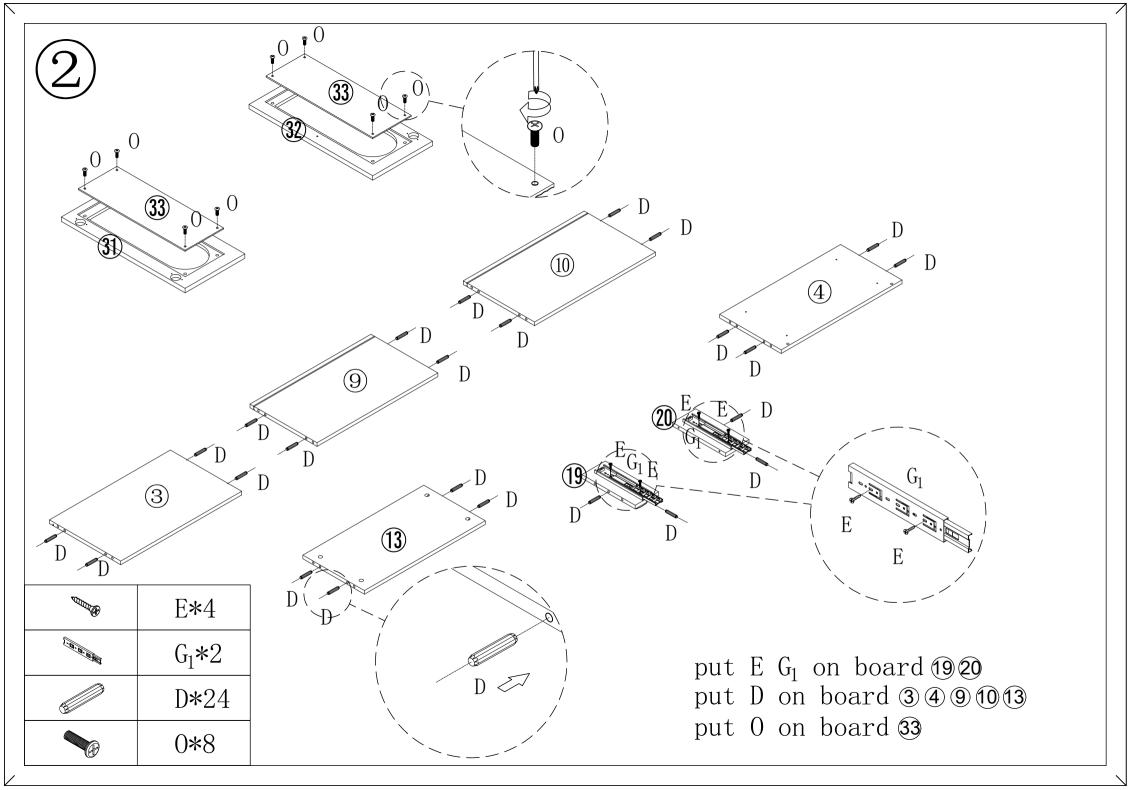

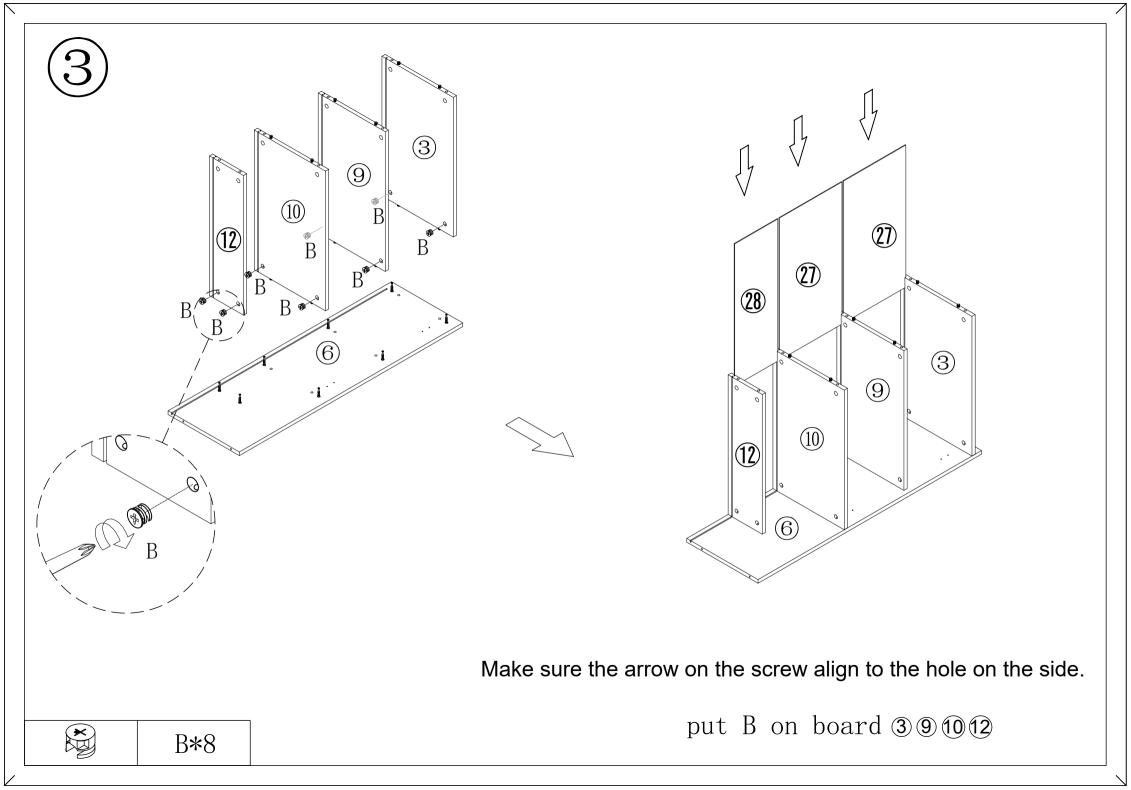


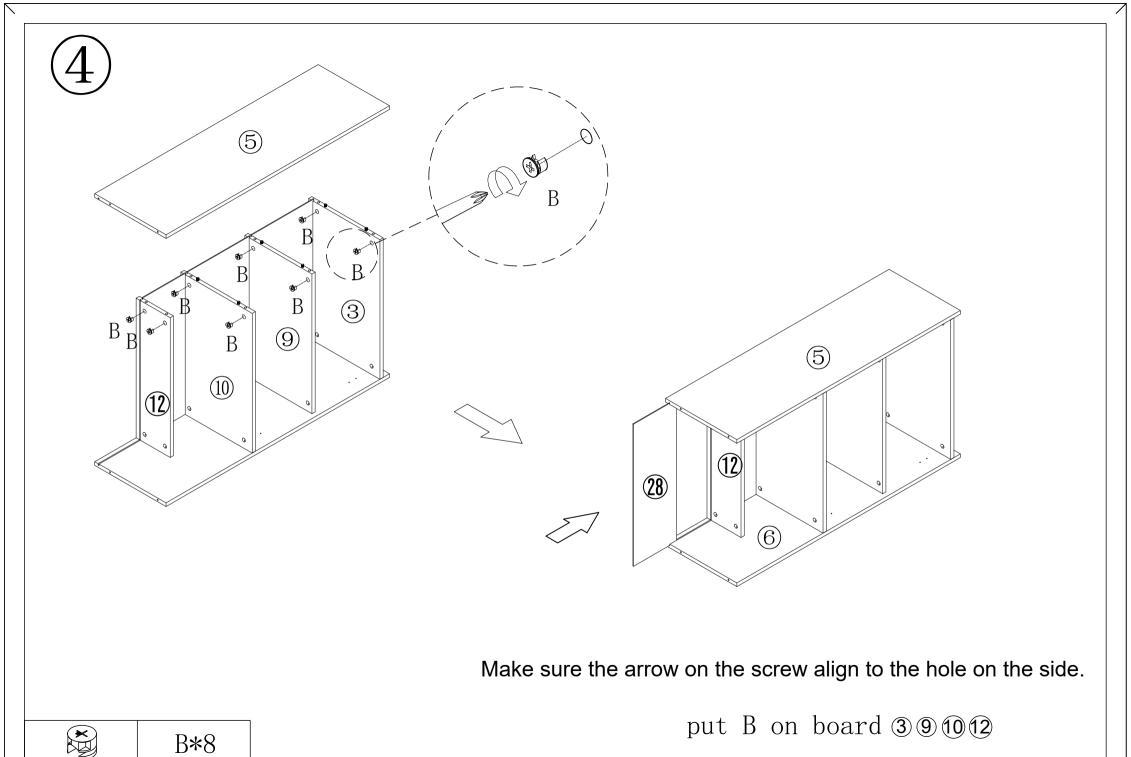

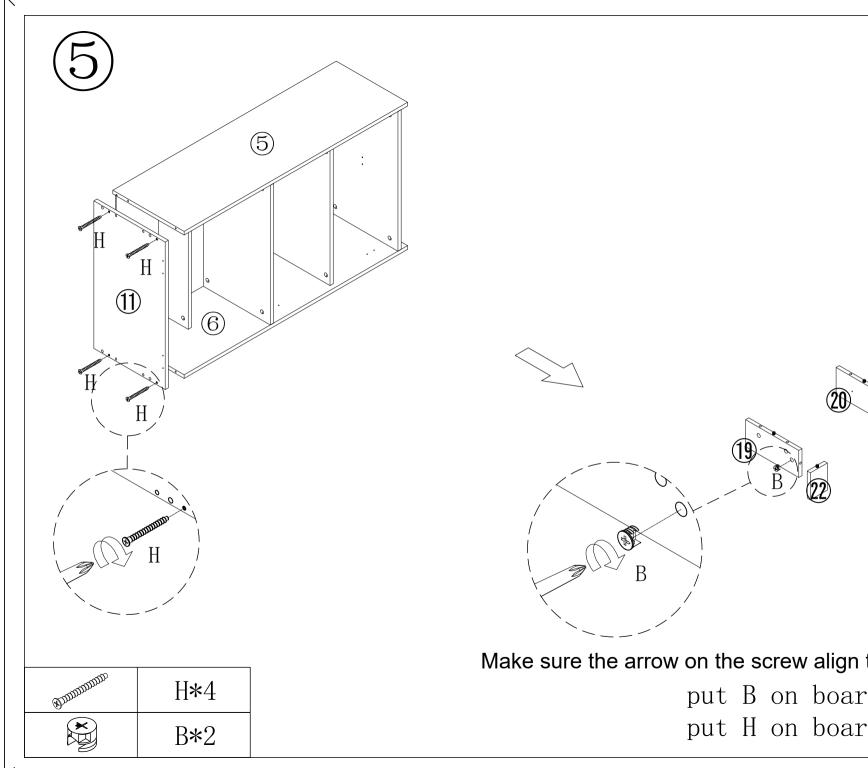


Make sure the arrow on the screw align to the hole on the side.


put B on board 1920 put H on board 🕦

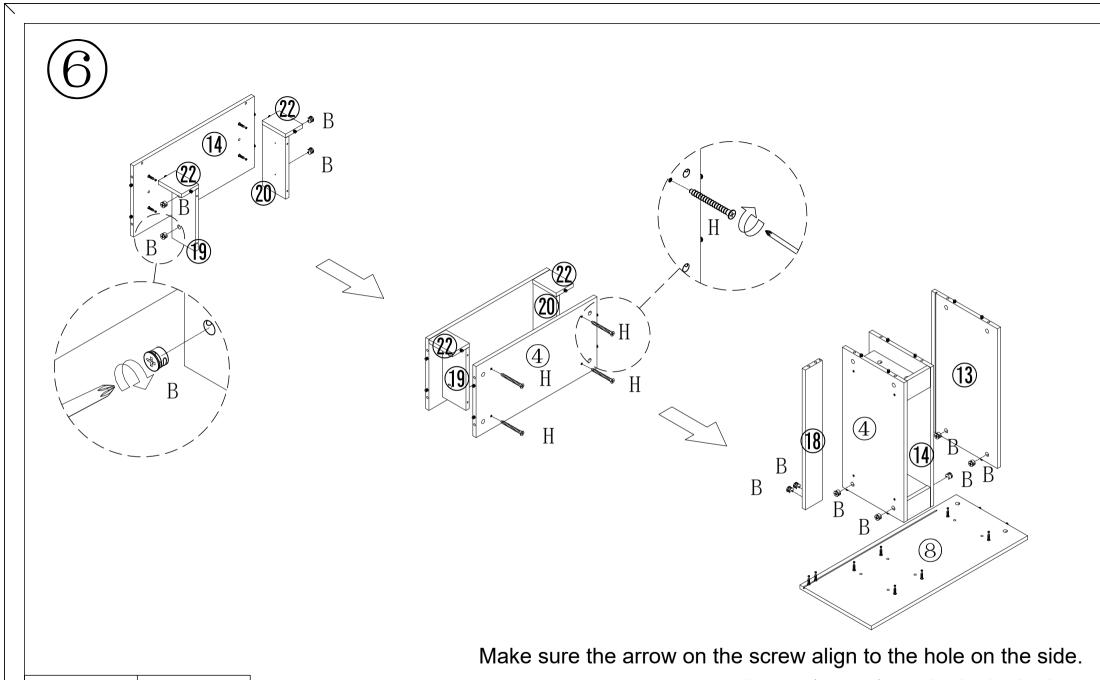



 H*4
 put B on board 4 13 14 18 19 20


 B*12
 put H on board 4

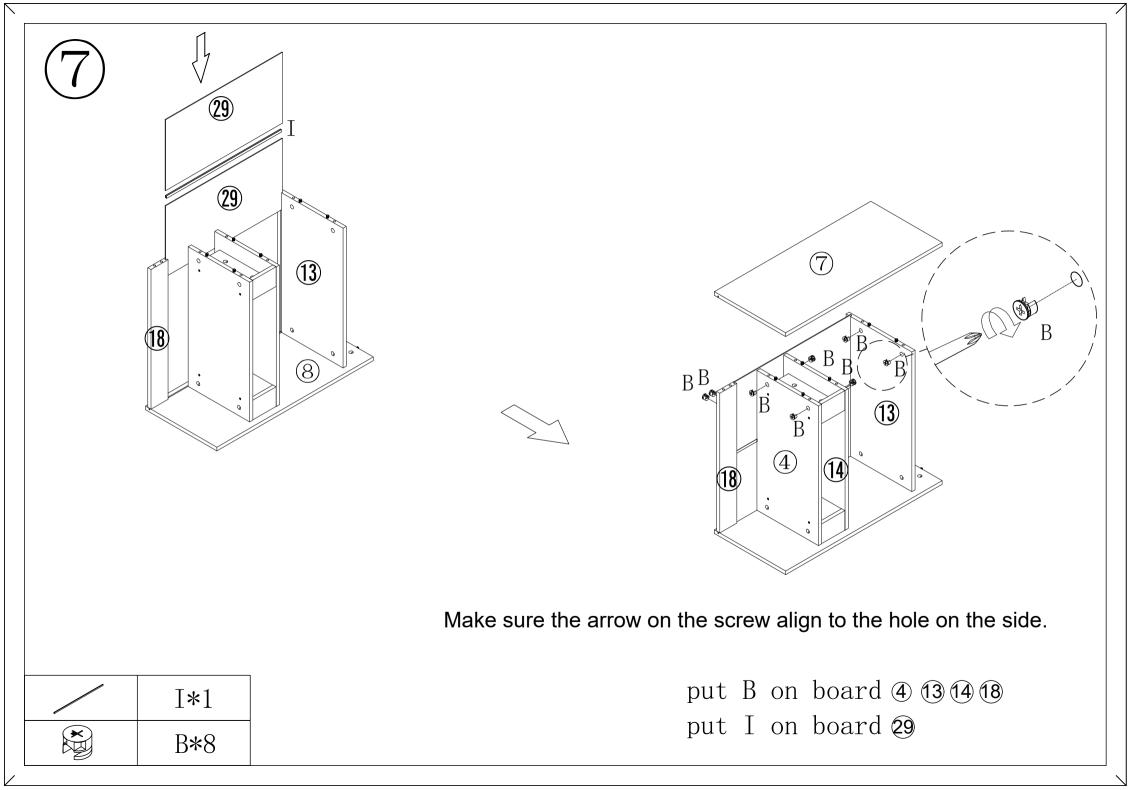


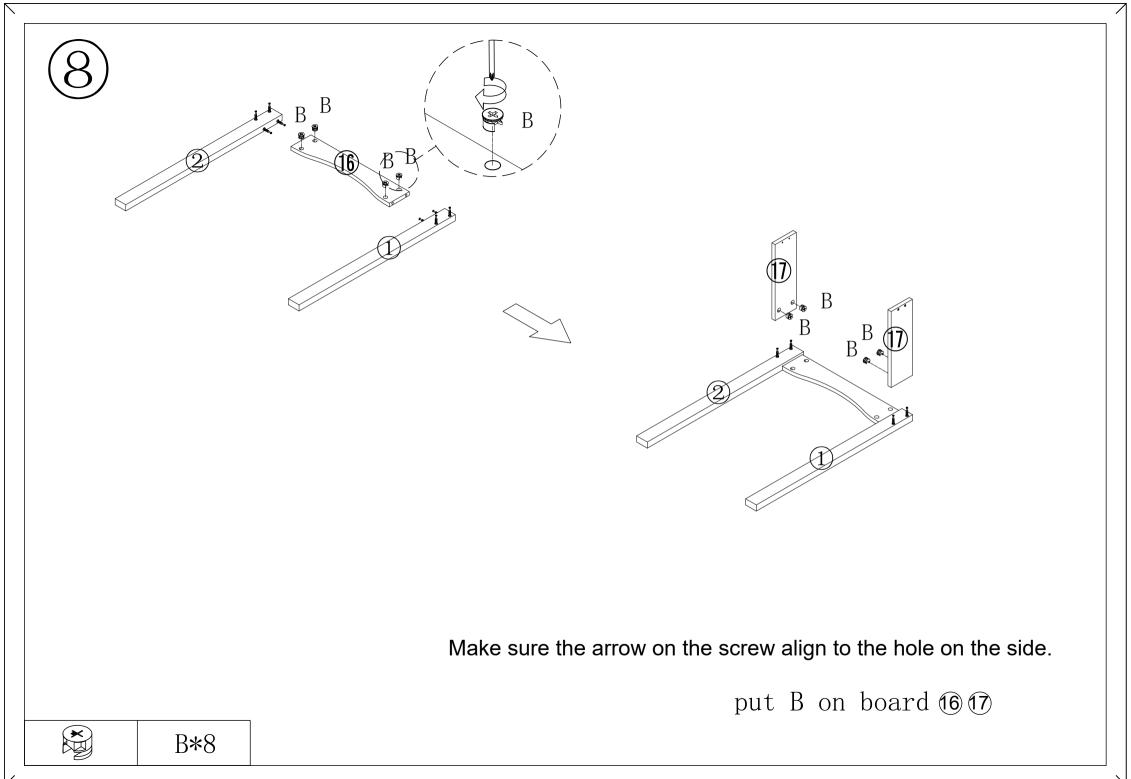


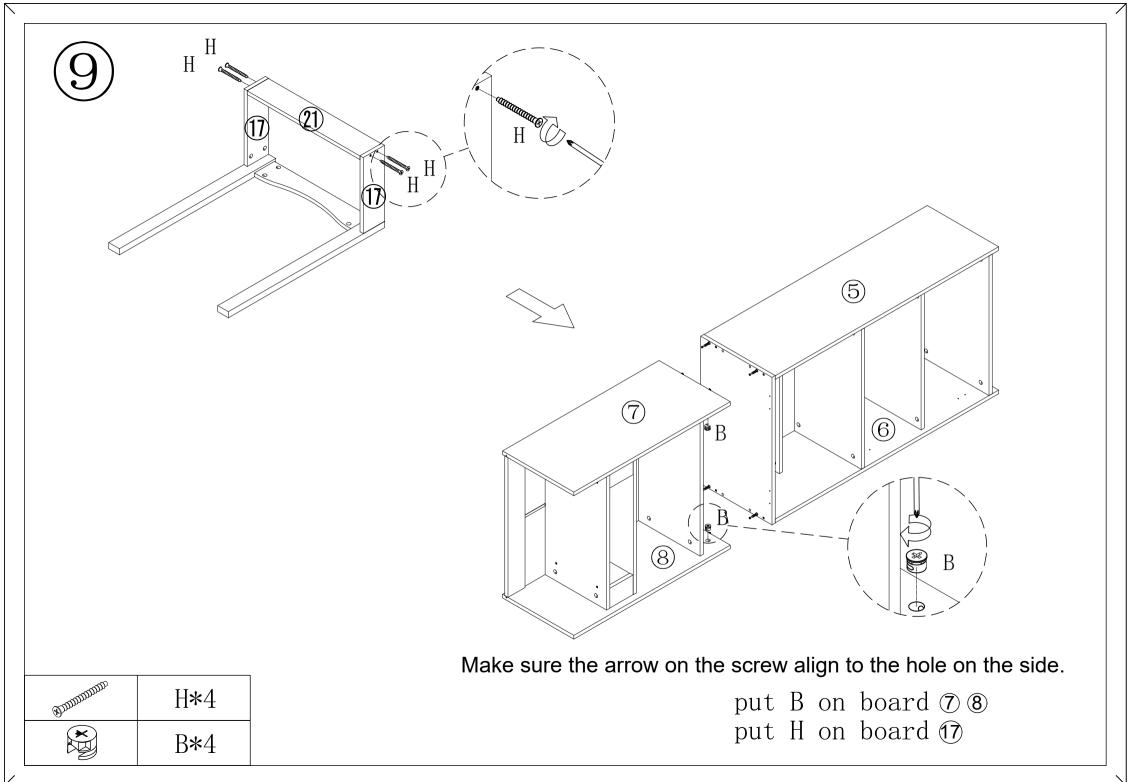


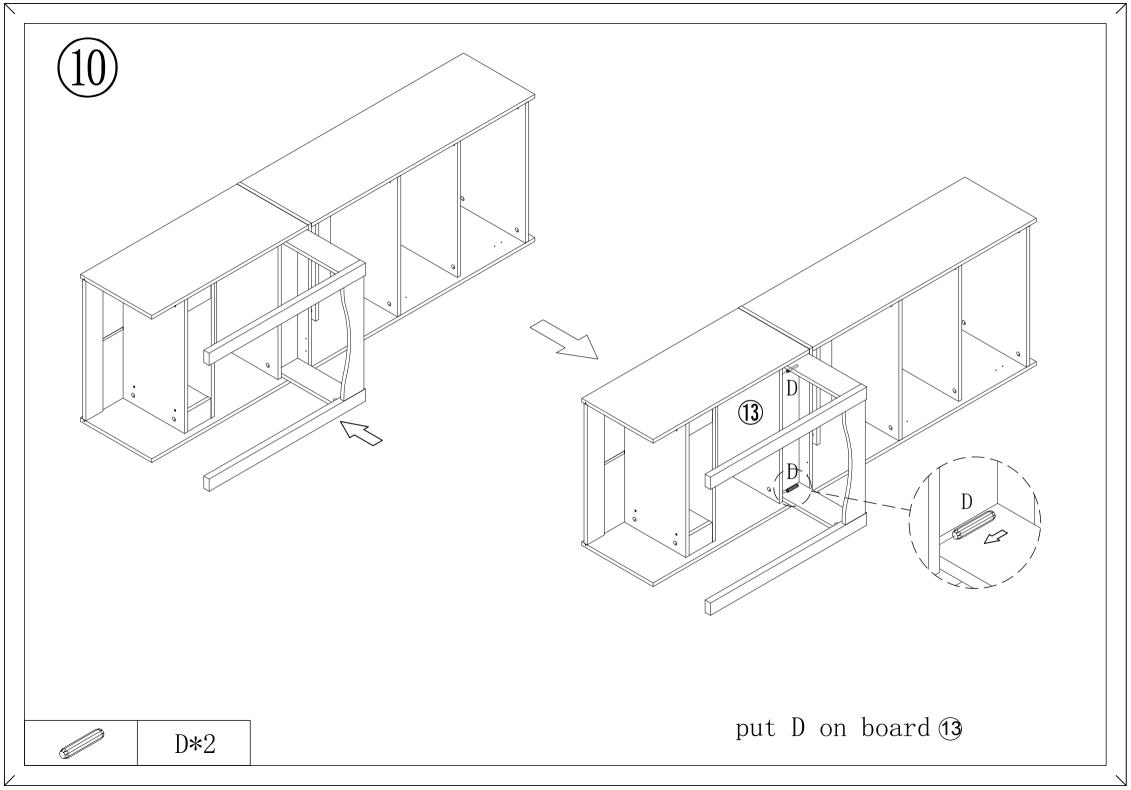


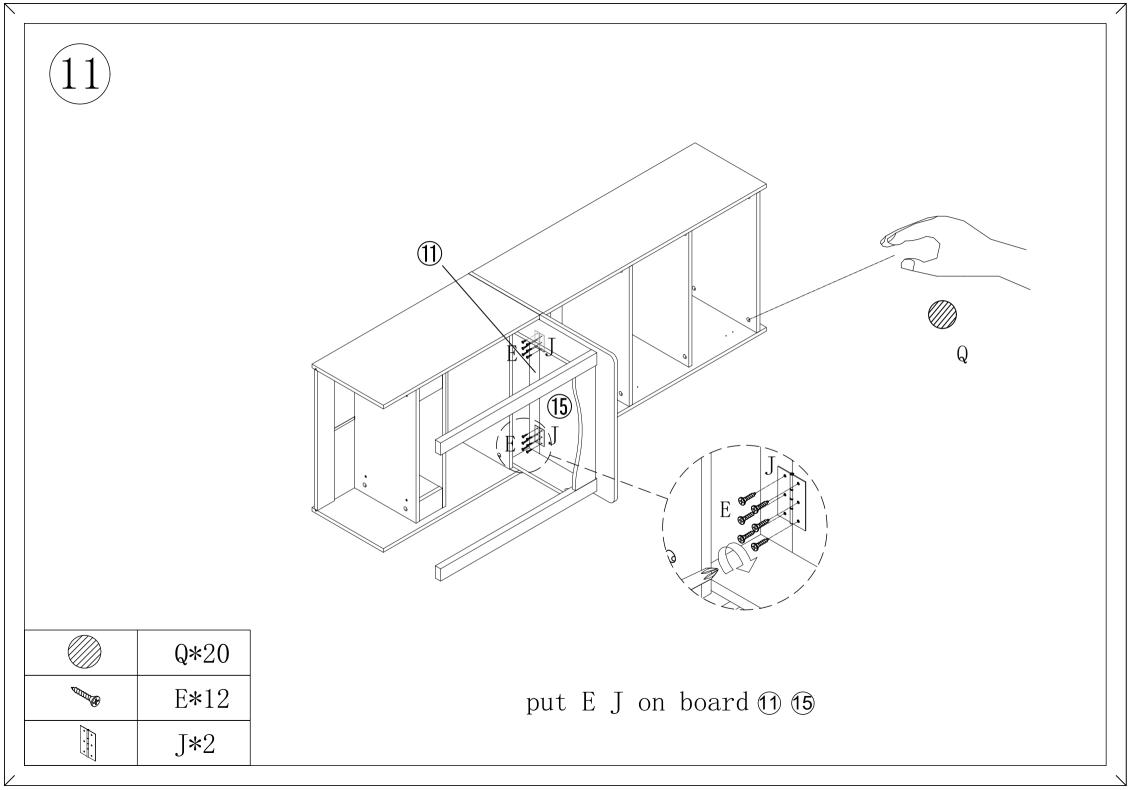

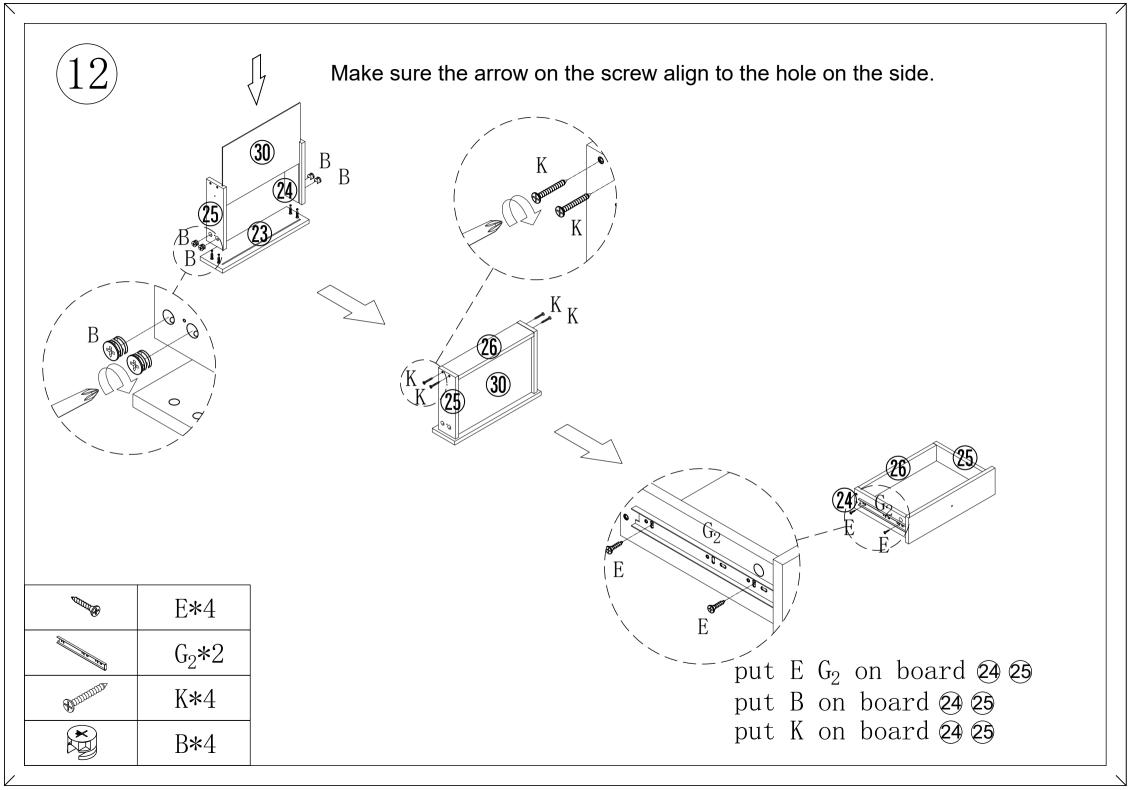


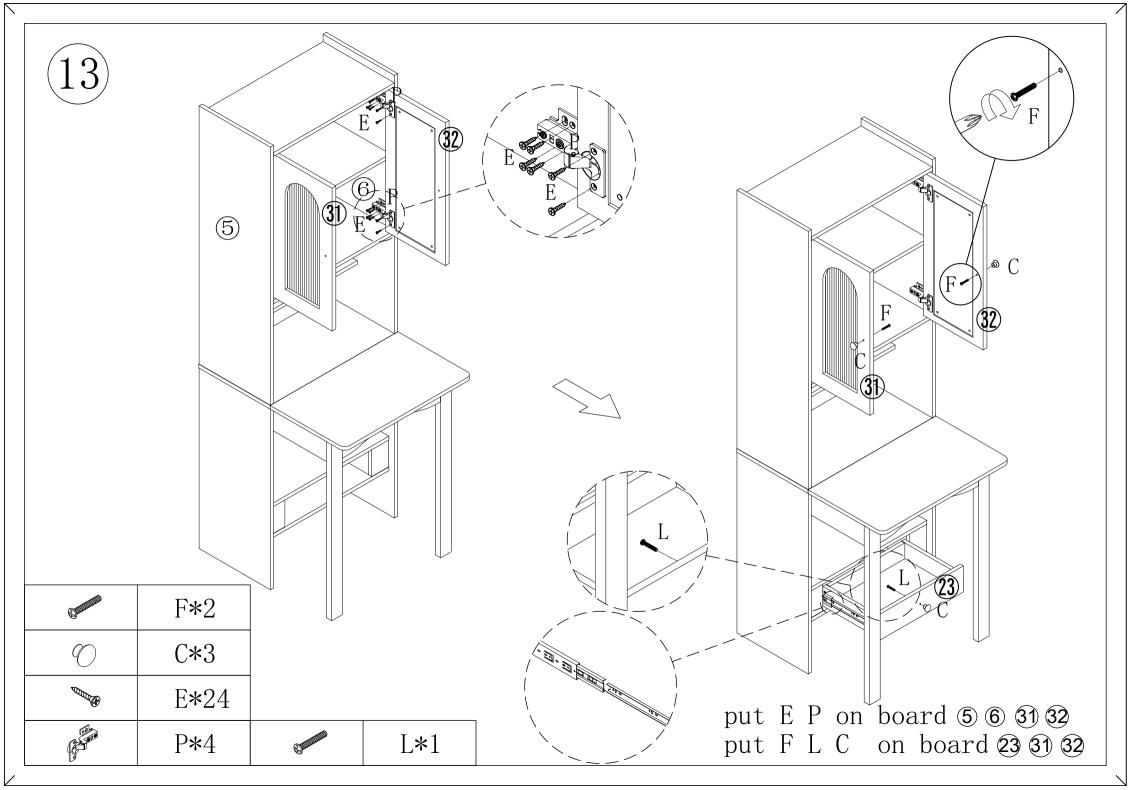

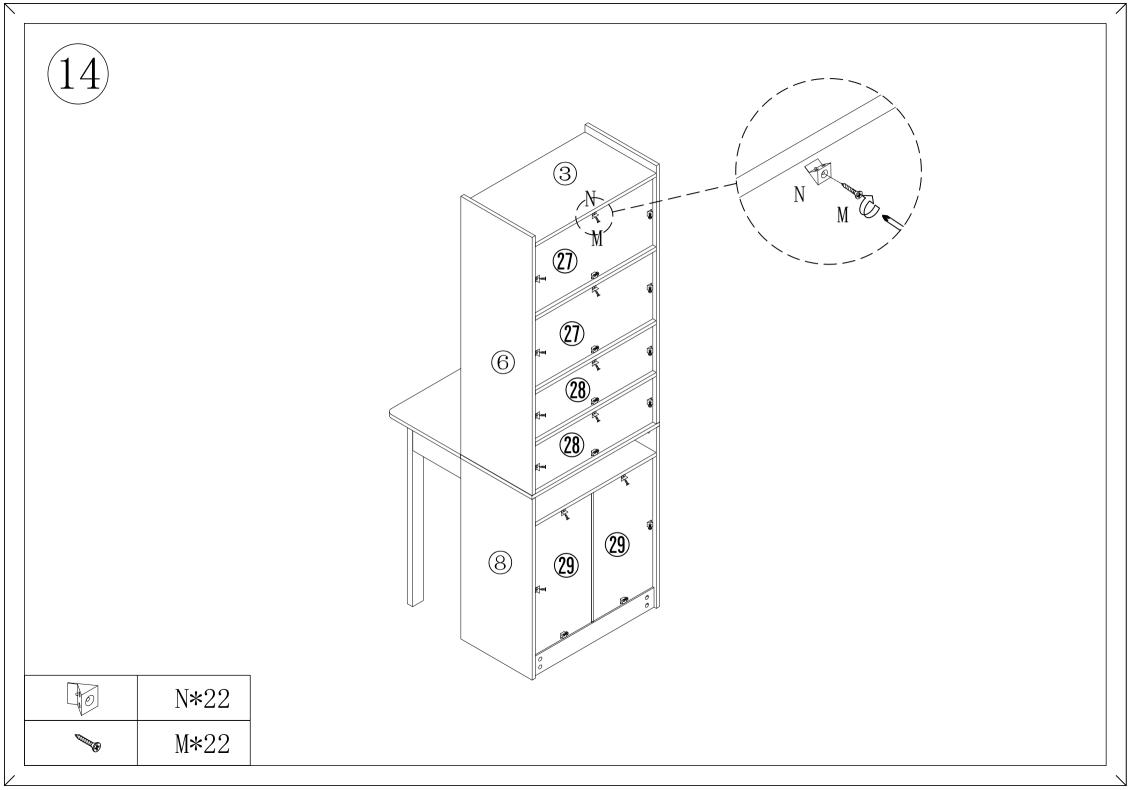


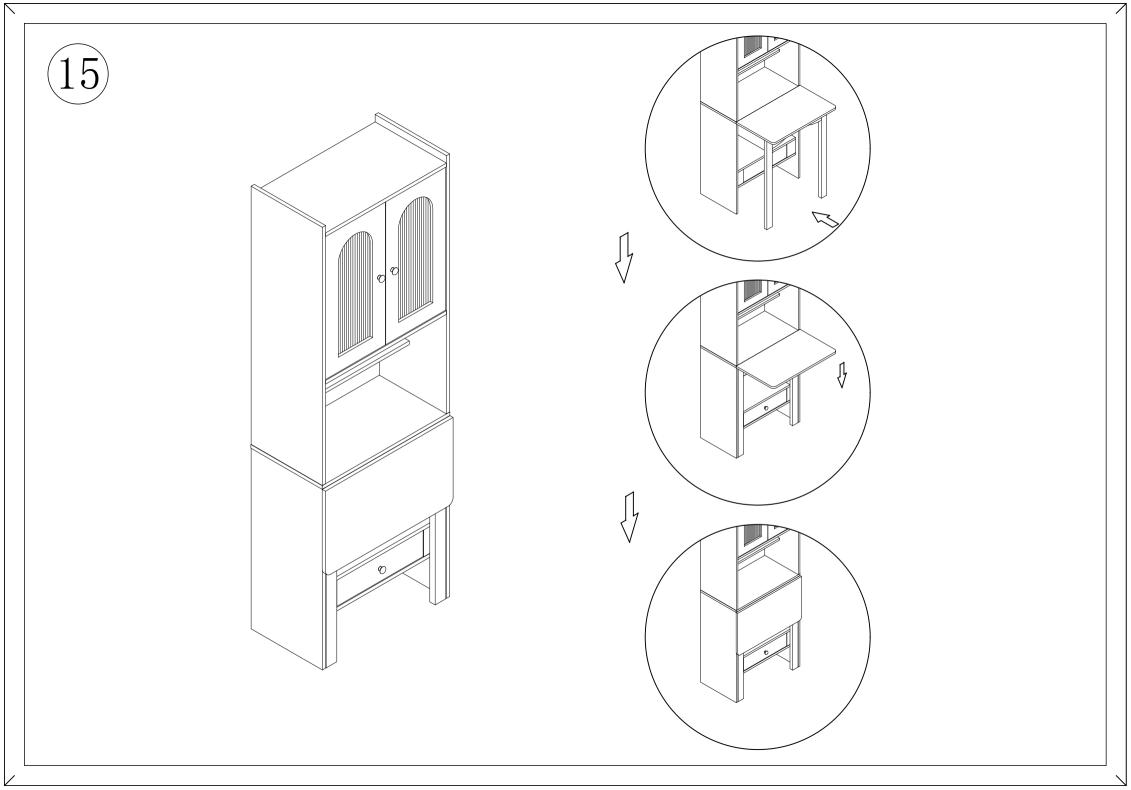



(16)

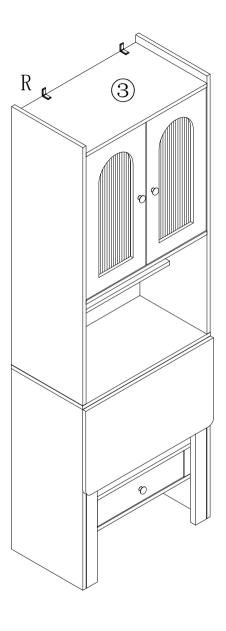



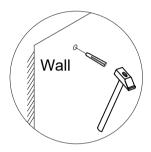

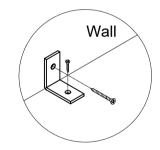

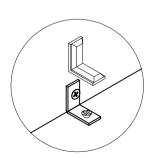



Children have died from furniture tipover. Fixed wall device have been included with this product; you must install the fixed wall device according to these instructions in order to minimize the risk of furniture. If you have any questions about this product or the Fixed wall device, please contact us immediately.

Never allow children to climb or hang on furniture, including drawers or cabiner doors.

In addition to installing the restrains, to help prevent tip-over.

- 1. Never put a TV or other heavy objects on top of this product.
- 2. Do not stand on the product.

