 


Refrigerator/Freezer
7.5cu.ft
Model: bcd-212

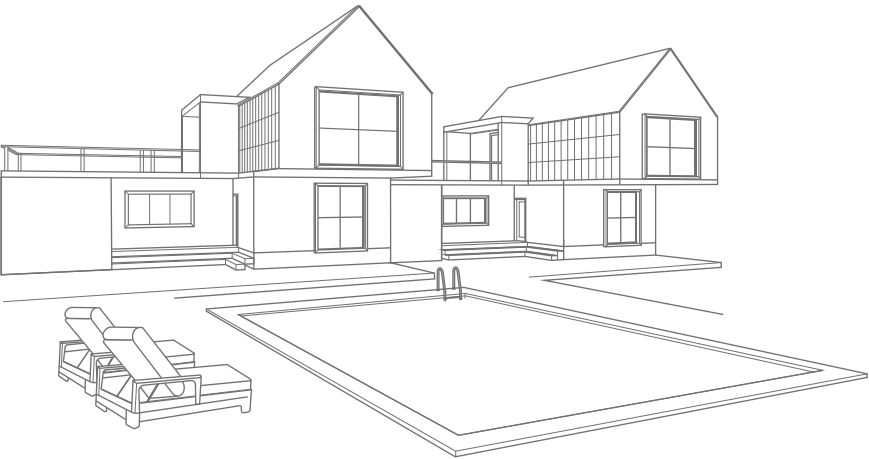

SAFETY INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS	3
PARTS	4
INSTALLATION INSTRUCTIONS	5-6
OPERATING INSTRUCTIONS	7-9
• BEFORE USING YOUR REFRIGERATOR • INSTALLING YOUR REFRIGERATOR ELECTRICAL CONNECTION. • DOOR ALIGNMENT TEMPERATURE CONTROL ICE TRAY • THE FREEZER COMPARTMENT WHEN TO DEFROST • HOW TO DEFROST • HOW TO CHANGE THE INTERIOR LIGHT MAINTENANCE • CLEANING YOUR REFRIGERATOR / VACATION TIME • MOVING YOUR REFRIGERATOR / ENERGY SAVING TIPS • TROUBLESHOOTING GUIDE	
SPECIFICATIONS	10
WARRANTY	11
PAGE EN FRANÇAIS	13-21

IMPORTANT SAFETY INSTRUCTIONS

⚠ TO REDUCE THE RISK OF FIRE, ELECTRICAL SHOCK, OR INJURY WHEN USING YOUR REFRIGERATOR, FOLLOW THESE BASIC PRECAUTIONS:

Read all instructions before using the refrigerator.

DANGER or WARNING:

Never clean refrigerator parts with flammable fluids. The fumes can create a fire hazard or explosion. Do not store or use gasoline or any other flammable vapors and liquids in the vicinity of this or any other refrigerator. The fumes can create a fire hazard or an explosion.

- **Save these instructions** -

 
⚠ Warning: To reduce the risk of fire, electrical shock, or injury follow these basic precautions when using your refrigerator.

1. Use this refrigerator only for its intended purpose as described in this manual
2. This refrigerator must be properly installed in accordance with the installation instructions before it is used. See grounding instructions in the installation section.
3. Never unplug your refrigerator by pulling on the power cord. Always grasp the plug firmly and pull straight out from the outlet.

IMPORTANT SAFETY INSTRUCTIONS

4. Repair or replace immediately, all electric service cords that have become frayed or otherwise damaged. Do not use a cord that shows cracks or abrasion damage along its length, the plug or the connector end.
5. Unplug your refrigerator before cleaning or before making any repairs.
NOTE: If for any reason this product requires service, we strongly recommend that a certified technician performs the service.
6. Do not use any electrical device or any sharp instrument in defrosting your refrigerator.
7. If your old refrigerator is not being used, we recommend that you remove the doors and leave the shelves in place. This will reduce the possibility of danger to children.
8. After your refrigerator is in operation, do not touch the cold surfaces in the freezer compartment, particularly when hands are damp or wet. Skin may adhere to these extremely cold surfaces.
9. Do not refreeze foods that have been thawed completely.
10. This refrigerator should not be recessed or built-in in an enclosed cabinet. It is designed for freestanding installation only.
11. Do not operate your refrigerator in the presence of explosive fumes
12. Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
13. Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
14. Never allow children to play with, operate, or crawl inside the refrigerator. Before you throw away your old refrigerator or freezer:
 - Take off the doors.
 - Leave the shelves in place so that children may not easily climb inside.
15. The appliance has to be unplugged before carrying out user maintenance on the appliance.
16. This appliance can be used by children age 8 years and above and persons with reduced physical sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children should not play with the appliance. Cleaning and maintenance should not be made by children without supervision.
17. If any component part is damaged, it must be replaced by the manufacturer or qualified persons in order to avoid a hazard.
18. Please dispose the refrigerator according to local government regulations as the unit contains flammable gas and refrigerant. All refrigeration products contain refrigerants, which under the guidelines of federal, provincial or municipal law, must be removed before disposal. It is the owners responsibility to comply with regulations when disposing of this product.
19. This appliance is intended to be used in household and similar environments.
20. Do not store or use gasoline or any inflammable liquors and liquids inside or in the vicinity of refrigerator.
21. Do not use an extension cord with this appliance. If the power cord is too short, have a qualified electrician install an outlet near the appliance. Use of an extension can negatively affect the unit's performance.

PARTS

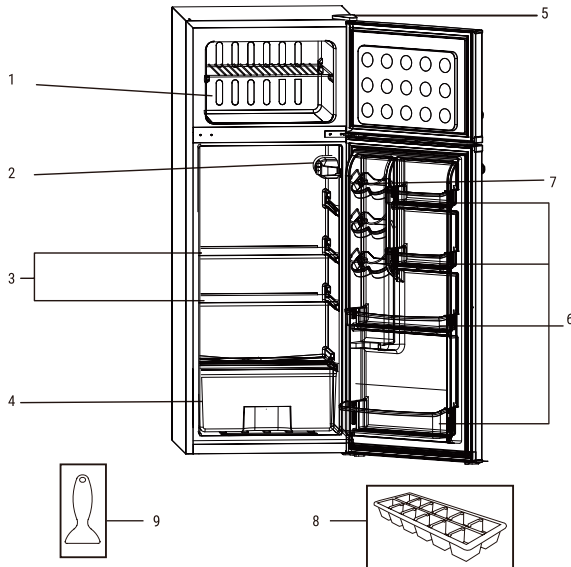

1. Freezer Compartment
2. Temperature Control (with integrated Interior light assembly)
3. Shelves
4. Fruit and Vegetable Crisper
5. Top
6. Door Shelves
7. Can holders
8. Ice Cube Tray
9. Ice Scraper

WARNING: Never touch the interior of the Freezer Chamber or frozen foods in the compartment with wet hands as this could result in frost bite.

INSTALLATION INSTRUCTIONS

BEFORE USING YOUR REFRIGERATOR

- Remove the exterior and interior packing.
- Before connecting the refrigerator to the power source, let the unit stand upright for approximately 4 hours. This will reduce the possibility of a malfunction in the cooling system from possible improper handling during transportation.
- Clean the interior surface with lukewarm water using a soft cloth. (Refer to Cleaning Instruction Section)

INSTALLING YOUR REFRIGERATOR

- This appliance is designed to be free standing only, and should not be recessed or built-in.
- Place your refrigerator on a floor that is strong enough to support the refrigerator when it is fully loaded.
- Allow 5" (13cm) of space between each side of the refrigerator. This allows for proper air ventilation. Adjust the feet to keep the refrigerator level.
- Locate the refrigerator away from direct sunlight and sources of heat (stove, heater, radiator, etc.). Direct sunlight may affect the acrylic coating and heat sources may increase electrical consumption. Ambient temperature below 10°C (50°F) or above 29°C (85°F) will hinder the performance of this appliance.
- This unit is not designed for use in a garage or any other outside installation.
- Avoid locating the refrigerator in damp areas.
- Plug the refrigerator into a dedicated, properly installed-grounded wall outlet. Do not under any circumstances cut or remove the third (ground) prong from the power cord. Any questions concerning power and/or grounding should be directed toward a certified electrician or an authorized service center. This unit is not designed to be installed in an RV or used with an inverter.
- After plugging the appliance into a wall outlet, turn the unit on and allow the unit to cool down for 2~3 hours under before placing food in the refrigerator or freezer compartment.

WARNING: Improper use of the grounded plug can result in the risk of electrical shock. If the power cord is damaged, have it replaced by a certified electrician.

- This refrigerator should be properly grounded for your safety. The power cord of this refrigerator is equipped with a three-prong plug which matches with standard three prong wall outlets to minimize the possibility of electrical shock.
- Do not, under any circumstances, cut or remove the third ground prong from the power cord supplied.
- This refrigerator requires a standard 115 Volt A.C. ~/60Hz electrical outlet with three-prong ground.
- This refrigerator is not designed to be used with an inverter.
- The cord should be secured behind the refrigerator and not left exposed or dangling to prevent accidental injury.
- Never unplug the refrigerator by pulling the power cord. Always grip the plug firmly and pull straight out from the receptacle.
- Do not use an extension cord with this appliance. If the power cord is too short, have a qualified electrician or service technician install an outlet near the appliance. Use of an extension cord can negatively affect the performance of the unit.

 
DOOR ALIGNMENT

Reversing Freezer Door: (see fig. #1)

1. Remove the top hinge cover.
2. Loosen the top hinge screws (Phillips screwdriver required)
3. Adjust the door or put a spacer in between and then tighten the screws.
4. Replace the top hinge cover.

Reversing the Door (See Fig. #4)

1. Remove the top hinge cover. (See Fig. #1)
2. Using a Phillips screwdriver, loosen and remove the screws holding the top hinge in place.
3. Remove top hinge and carefully lift off the freezer door.
4. Remove the screw hole plugs from the opposite side and insert the plugs in the screw hole openings of the just removed screws.
5. Open refrigerator door and unscrew 2 screws from the center hinge bracket while holding the open door in place. (See Fig. #2)
6. Remove bracket and lift off refrigerator door
7. While doors are removed unscrew the door stoppers and reinsert on opposite side of door. (See Fig. #3)
8. Remove the screw hole plugs from the opposite side and insert the plugs in the screw hole openings of the just removed screws.
9. Remove any loose items in the refrigerator and carefully tilt refrigerator and lean against wall. Remove both leveling legs and place in a secure area.
10. Loosen the screws holding the lower hinge bracket to the refrigerator door and remove screws and bracket. Remove leveling leg.
11. Remove screws from the other side and insert in the previously removed screw holes. Remove leveling leg.
12. Remove door pin by turning counter-clockwise and reinsert to the underside of the bracket and tighten.
13. Align bracket and insert (2) remaining screws into the holes provided. Tighten all the way. Replace leveling legs and place refrigerator in upright position.
14. Replace washers and cap over pin. Align hole in the refrigerator door with the door pin and gently push down until firm.
15. Insert pin from center hinge bracket into refrigerator door hole and align center hinge bracket holes to the screw holes in the cabinet.
16. Insert 2 screws and tighten.
17. Place washers on the center hinge bracket pin and align the freezer door holes and insert into pin.
18. Replace screws on the top hinge cover, align door and tighten screws.
19. Replace top hinge cover.

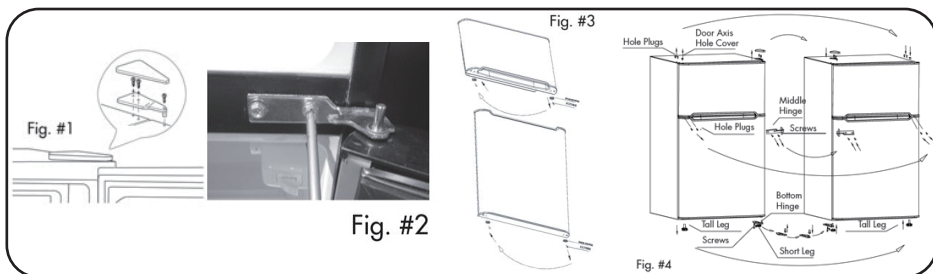

OPERATING INSTRUCTIONS

TEMPERATURE CONTROL

Your refrigerator has a thermostat for regulating the temperature. The temperature control is located on the top center of the refrigerator compartment.

The first time you turn the unit on, adjust the temperature control knob to "7" and run the refrigerator for at least 2 hours before placing food inside. This will help ensure the inside cabinet is thoroughly chilled.

The range of the refrigerator temperature control is from position "1" to "7", with "7" being the coldest setting. Adjust the temperature control to the setting that best suits your needs.

Note: The setting of "4" should be appropriate for most home or office use.

Note: Turning the temperature control knob to "O" position stops the cooling cycle but it does not shut off the power to the unit.

Note: If the unit is unplugged or loses power, you must wait 3 to 5 minutes before restarting the unit. If you attempt to restart before this time delay, the refrigerator will not start.

Note: Large amounts of food will lower the cooling efficiency of the appliance. Do not place item on the air outlet. Always leave space for airflow.

If you choose to change the thermostat setting, adjust the thermostat control by one increment at a time. Allow several hours for temperature to stabilize between adjustments.

ICE TRAY

Recommended temperature control setting for ice making is "7".

Fill the ice cube tray at 2/3 capacity using cold water and place the tray on the bottom of the chiller compartment to freeze properly.

To remove the ice cubes from the tray, place over an ice bucket and twist slightly.

Re-set the temperature control to setting "4".



THE FREEZER COMPARTMENT

This compartment is designed for the long-term storage of frozen food.

The storage life of frozen foods varies, and the recommended storage time of frozen food should not be exceeded.

Place frozen food into the freezer as quickly as possible after purchase. If there are instructions on the packet, carefully follow these instructions regarding storage times.

WHEN TO DEFROST

In order to prevent damage to the interior liner of the unit from excessive frost build-up, please manually defrost the unit every 3 months or when ice / frost is approximately 1/4" thick inside the freezer compartment.

HOW TO DEFROST

Defrost the freezer compartment when the ice / frost are approximately $\frac{1}{4}$ " thick or about every 3 months, whichever comes first. Set the thermostat dial to "0" to defrost. Remove all contents from the freezer compartment. Leave the freezer door open to allow any accumulated ice/ frost to melt. Remove large pieces of ice as needed. Do not use hot water or other electric heating devices to melt the accumulated ice. After defrosting, remove accumulated ice/ water and wipe the freezer compartment dry with a soft cloth. In the event that the ice is not visibly present in the freezer compartment, please allow the evaporator located behind the freezer wall to completely defrost for approximately 2 hours before restarting the unit. Restart the unit per starting instructions.

HOW TO CHANGE THE INTERIOR LIGHT

NOTE: All parts removed must be saved to do the reinstallation of the light bulb. Before removing the light bulb, unplug the appliance from the power supply. Failure to do so could result in electrical shock or personal injury.

1. Remove the lamp cover
2. Unscrew the old bulb and install the new bulb
3. Re-install the lamp cove

MAINTENANCE

CLEANING YOUR REFRIGERATOR

- Upon installation of your new appliance, it is recommended that it be cleaned thoroughly. Turn off the refrigerator first and then unplug the unit from the wall outlet.
- Remove all food content.
- Wash the inside with a damp warm cloth soaked in lukewarm water and baking soda solution. The solution should be about 2 tablespoons of baking soda to about 1 litre of water.
- Be sure to keep the door gasket (seal) clean to keep the unit running efficiently.
- The outside of the refrigerator should be cleaned with mild detergent and warm water.
- Dry the interior and exterior with a soft cloth.

VACATION

- Turn off the refrigerator first and then unplug the unit from the wall outlet. Remove all the food.
- Clean the refrigerator.
- Leave the door open slightly to avoid possible formation of condensation, mold, or odor.
- Use extreme caution in the case of children. The unit should not be accessible to children playing.
- Short vacations: Leave the refrigerator operating during vacations of less than three weeks.
- Long vacations: If the appliance will not be used for several months, remove all food and unplug the power cord. Clean and dry the interior thoroughly. To prevent odor and mold growth, leave the door open slightly: blocking it open if necessary or have the door removed.

MOVING YOUR REFRIGERATOR

- Turn off the refrigerator first and then unplug the unit from the wall outlet. Remove all the food.
- Securely tape down all loose items inside your refrigerator. Tape the door shut.
- Be sure the refrigerator stays in the upright position during transportation.

ENERGY SAVING TIPS

- The refrigerator should be located in the coolest area of the room, away from heat producing appliances or heating ducts, and out of the direct sunlight.
- Let hot foods cool to room temperature before placing it in the refrigerator. Overloading the refrigerator forces the compressor to run longer. Foods that freeze too slowly may lose taste or spoil.
- Be sure to wrap foods properly, and wipe containers dry before placing them in the refrigerator. This cuts down on frost build-up inside the refrigerator.
- Organize and label food to reduce door openings and extended searches. Remove as many items as needed at one time, and close the door as soon as possible.

TROUBLESHOOTING GUIDE

You can solve many common refrigerator problems easily, saving you the cost of a possible service call. Try the suggestions below to see if you can solve the problem before calling Royal Sovereign customer service.

PROBLEM	POSSIBLE CAUSE
Refrigerator does not operate.	Not plugged in. The circuit breaker tripped or a blown fuse.
Compressor turns on and off frequently.	The room temperature is hotter than normal. A large amount of food has been added to the refrigerator. The door is opened too often. The door is not closed completely. The temperature control is not set correctly. The door gasket does not seal properly. The refrigerator does not have the correct clearances. The refrigerator has recently been disconnected for a period of time. 4 hours are required for the refrigerator to cool down completely.
Temperature inside the refrigerator is too warm.	Temperature control is set too warm. Turn the control to a cooler setting and allow several hours for the temperature to stabilize. Door is kept open too long or is opened too frequently. Warm air enters the refrigerator every time the door is opened. Open the door less often. The door is not closed completely. The door gasket does not seal properly. A large amount of warm or hot food might have been stored recently. Wait until the refrigerator has had a chance to reach its selected temperature. The refrigerator has recently been disconnected for a period of time. Four hours are required for the refrigerator to cool down completely.
Temperature inside the refrigerator is too cold.	Temperature control is set too cold. Turn the control to a warmer setting and allow several hours for the temperature to stabilize.
Temperature of external refrigerator surface is warm.	The exterior refrigerator walls can be as much as 30°F warmer than room temperature. This is normal while the compressor works to transfer heat from inside the refrigerator cabinet.
Popping or cracking sound when compressor comes on.	Metal parts undergo expansion and contraction, as in hot water pipes. This is normal. Sound will level off or disappear as refrigerator continues to run.
Bubbling or gurgling sound, like water boiling.	Refrigerant is circulating throughout the system. This is normal.
Vibrations.	Check to assure that the refrigerator is on a level surface. Floor is uneven or weak. Refrigerator rocks on the floor when it is moved slightly. Be sure floor can adequately support refrigerator. Level the refrigerator by putting wood or metal shims under part of the refrigerator. The refrigerator is touching the wall. Level the refrigerator and move it from the wall. See "Installation Instructions"
Moisture forms on inside refrigerator walls.	Weather is hot and humid, which increases internal rate of frost build-up. This is normal. Door is slightly open. Door is kept open too long, or is opened too frequently. Open the door less often. The door is not sealed properly.
Moisture forms on outside of refrigerator.	Door is slightly open, causing cold air from inside the refrigerator to meet warm moist air from outside.
The door will not close properly.	The refrigerator is not on a level surface. The gasket is dirty.

SPECIFICATIONS

Total Capacity	7.5 cu. Ft
Capacity Refrigerator	5.9 cu. Ft
Capacity Freezer	1.6 cu.ft
Adjustable Thermostat	0-10°C
Freezer Thermostat	-22 --14°C
Electrical Rating	115V/60Hz
Refrigerant	R600a
Energy Consumption	386kwh/year
Unit Dimensions	21.25" x 22.25" x 55.5" (w x d x h)
Unit Weight	89.29lbs
Approval	cUL

Limited Liability & Warning

No Unauthorized Modifications/Repairs: Do not modify or attempt to repair this product unless you are an authorized technician. Unauthorized actions may create hazards and void all warranties

Misuse & Non-Compliance: We are not liable for any injury, damage, or loss resulting from:

- (a) misuse, abuse, neglect, or improper installation;
- (b) failure to follow instructions or safety precautions;
- (c) use of unauthorized parts/accessories;
- (d) unauthorized modifications/repairs;
- (e) accidents, natural disasters, or external causes.

If you doubt any step of installation or operation, stop using the product and contact authorized service or the customer support.

LIMITACIÓN DE RESPONSABILIDAD Y ADVERTENCIA

Modificaciones o Reparaciones No Autorizadas: NO modifique ni intente reparar este producto a menos que sea un técnico autorizado. Las acciones no autorizadas pueden generar riesgos y anularán todas las garantías.

Uso Indebido e Incumplimiento: No asumimos responsabilidad alguna por lesiones, daños o pérdidas que resulten de:

- (a) uso indebido, abuso, negligencia o instalación incorrecta;
- (b) incumplimiento de las instrucciones o precauciones de seguridad;
- (c) uso de piezas o accesorios no autorizados;
- (d) modificaciones o reparaciones no autorizadas;
- (e) accidentes, desastres naturales o causas externas.

Si tiene dudas sobre algún paso de la instalación o el funcionamiento, deje de usar el producto y póngase en contacto con el servicio técnico autorizado o con atención al cliente.

