

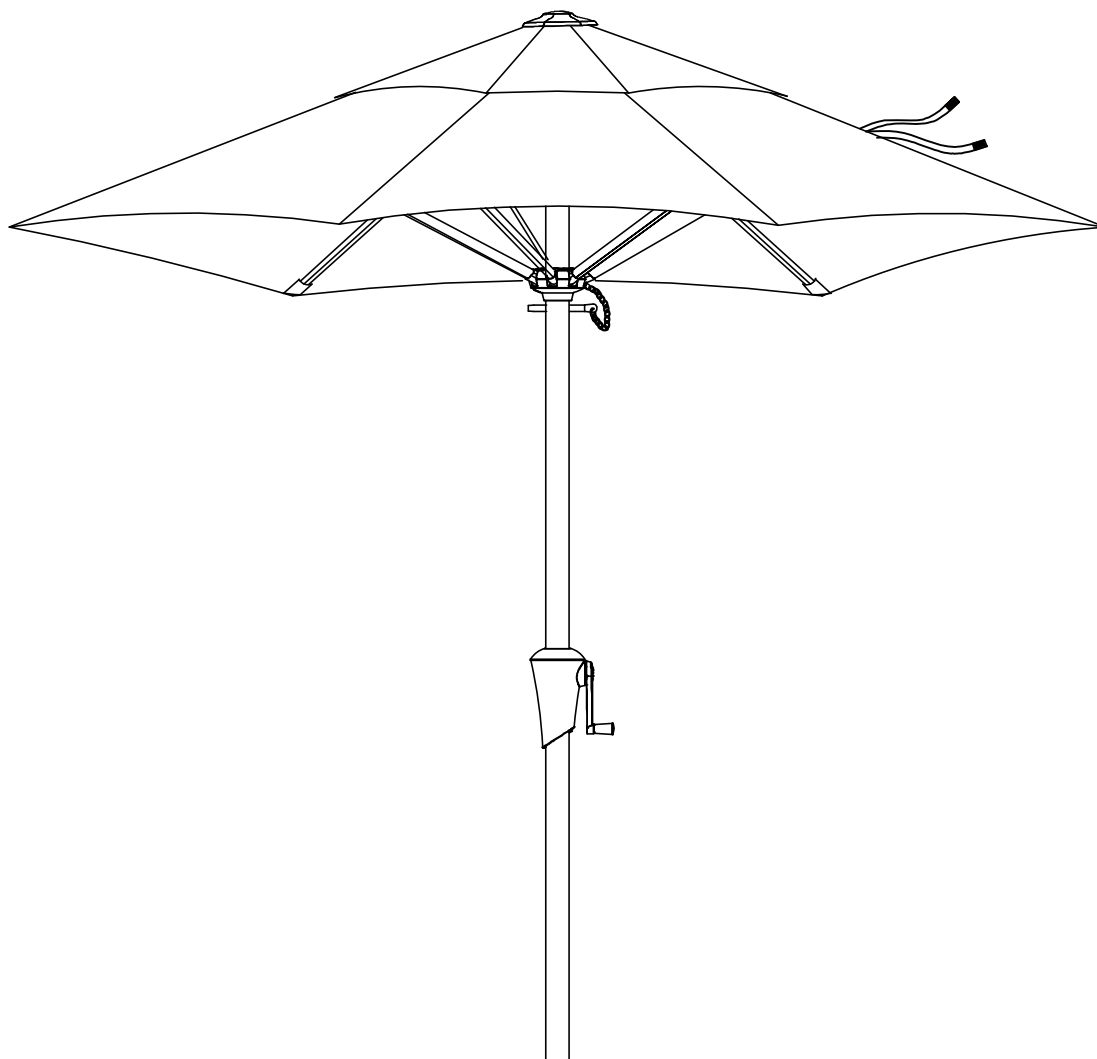
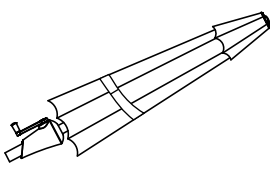


# 11' Patio Umbrella Without Tilt Function

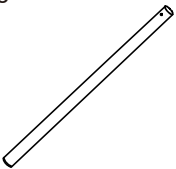

## Parts List:

<p>A. Umbrella</p>  <p>Qty: 1</p>	<p>B. Pole</p>  <p>Qty: 1</p>
--	--

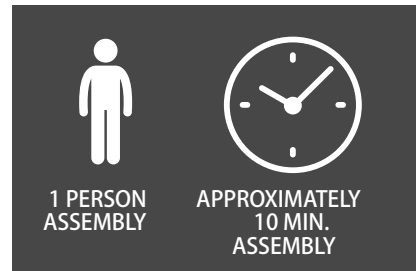

## Note:



- It's advised to dispose the packing material after assembly is completed and all parts are accounted.

## Caution:

- **This umbrella is designed for easy operation, sunshade and decorative purposes only. It is NOT recommended that this umbrella be used during periods of high wind and rain. Always take the umbrella down during high or gusting wind and rain, when not in use and in the off-season. Failure to do so may result in personal injury and/or property damage.**
- **If the crank becomes too hard to crank, check to see if the rope has come off the pulley. If you continue to turn the crank, the rope or crank handle could break.**


## Care for the canopy:

- Simply clean the umbrella canopy with a soft brush and mild detergent.
- Do not machine wash or machine dry.
- Do not iron.
- Air-dry the canopy thoroughly in an open position before storing for extended periods of time.
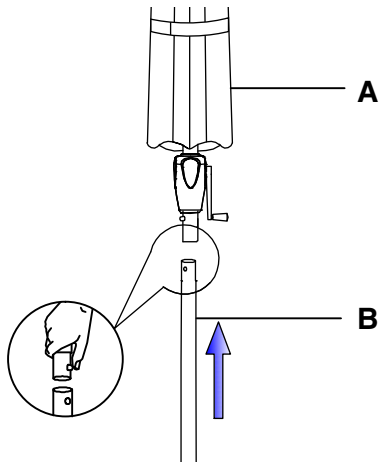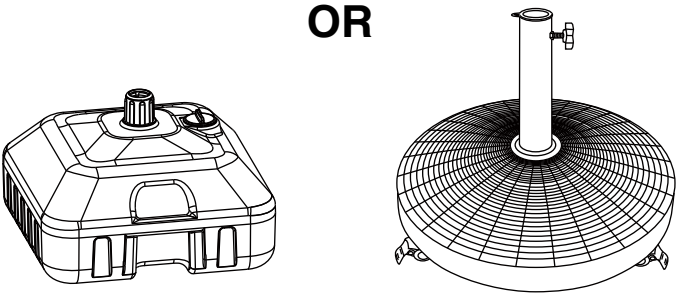
<h3>Step 1</h3> <p>Press the spring-button of the part A while inserting the part B pole until it locks in place (the spring-button should pop into the hole in the pole).</p> 	<h3>Step 2</h3> <p>We recommend that you secure the umbrella to an umbrella base (sold separately).</p> <p><b>OR</b></p> 
--	---

### Step 3

Turn the crank handle in clockwise direction to open the umbrella canopy, opposite direction to close canopy.

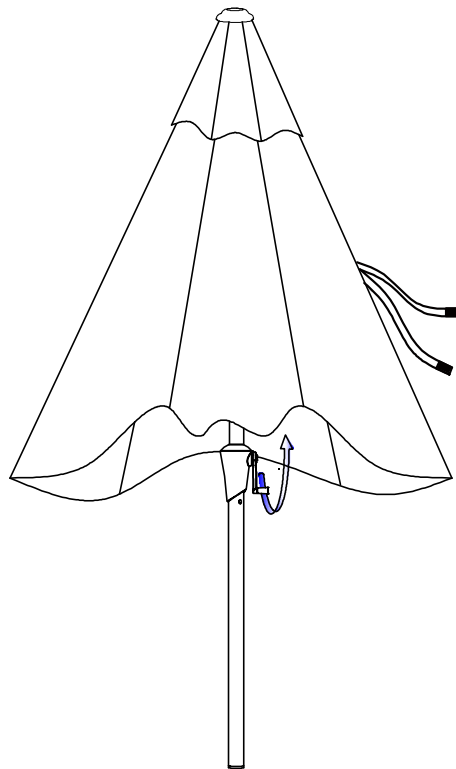

### Step 4

Insert the bolt into the umbrella pole. To close the umbrella it must be in the upright position.

