



DO NOT RETURN

FOR REPLACEMENT PARTS OR OTHER INQUIRIES
PLEASE CONTACT US
PLEASE ENSURE TO HAVE THE MODEL #
FROM THE PACKAGING OR
INSTRUCTION BOOKLET

IMPORTANT: Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

SAFETY INFORMATION

Identify all the parts and hardware. Do not discard of the packaging until you have checked that you have all of the parts and hardware required. Hardware package may have spare parts.

WARNING: This item contains small parts which can be swallowed by children and pets. Keep children and pets away during assembly. To avoid danger of suffocation, always keep plastic bags away from children and pets. We recommend that you assemble this unit on a carpeted floor to avoid scratches. We do not recommend the use of power tools for assembly as this could damage the unit. Only use manual tools.


May require 2 people for ease of assembly.

CARE and MAINTENANCE


To clean, use a soft or slightly damp cloth, then wipe with a clean, dry cloth. Dust with soft dry cloth.


Do not use ammonia-based cleaning products, as they will damage the finish. Do not leave liquids or damp cloths on this furniture.


To avoid dulling of the finish, do not place furniture in direct sunlight. Please inspect and tighten all screws or bolts on a regular basis to ensure proper performance and safety of your item.

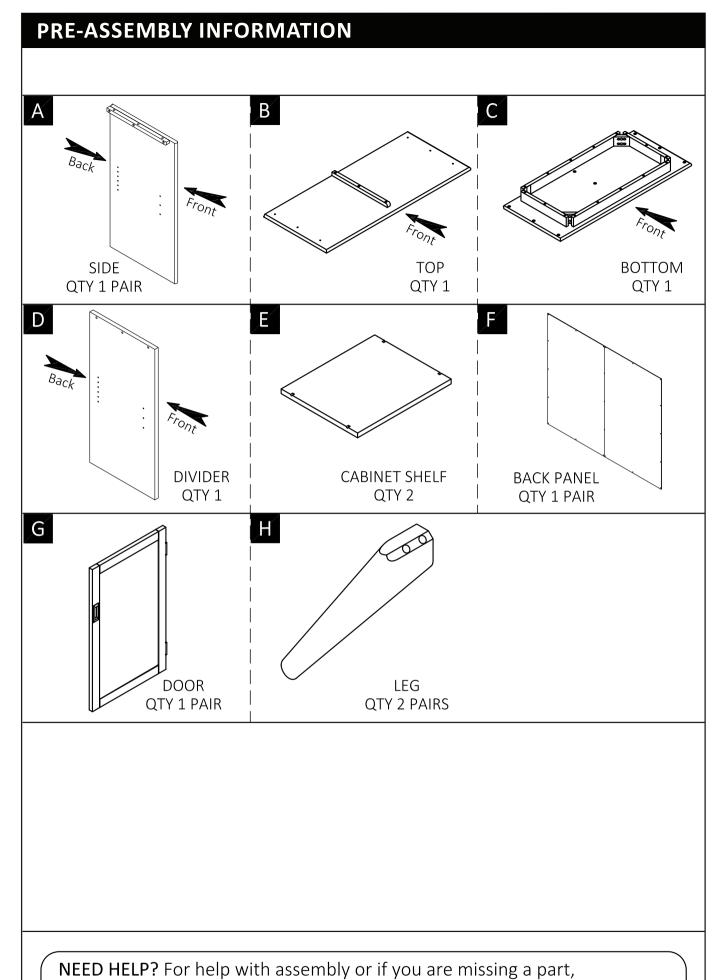


NEED HELP? For help with assembly or if you are missing a part, Please call customer service

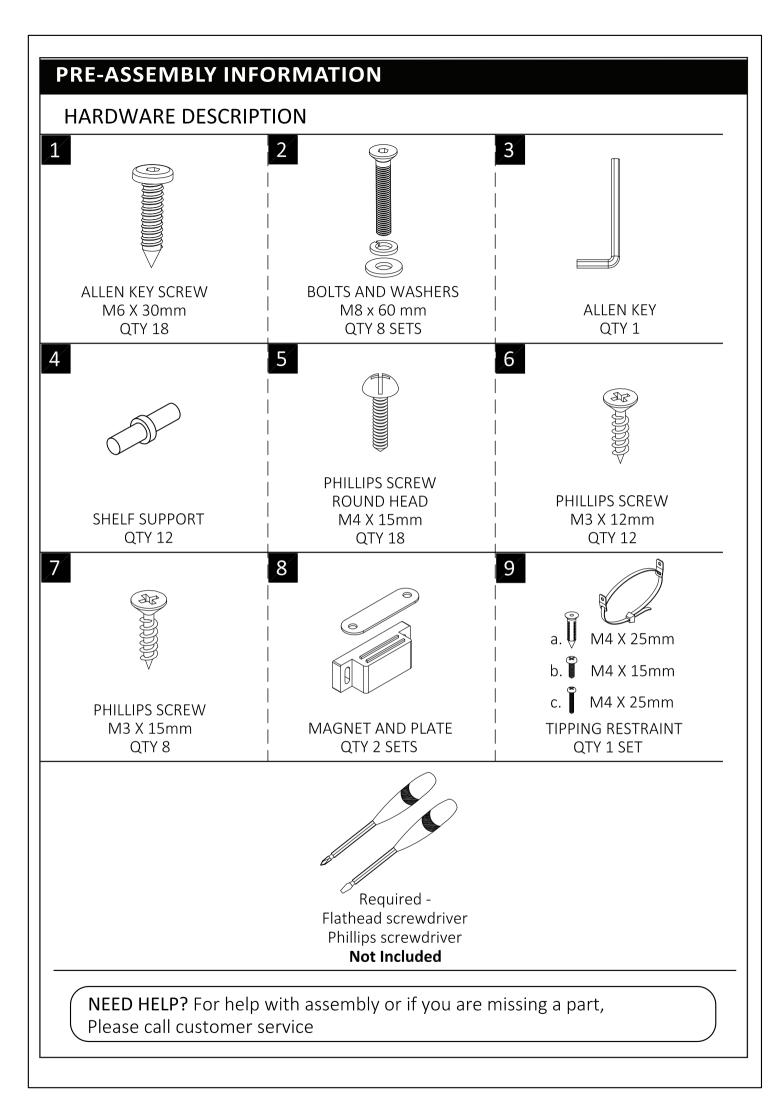

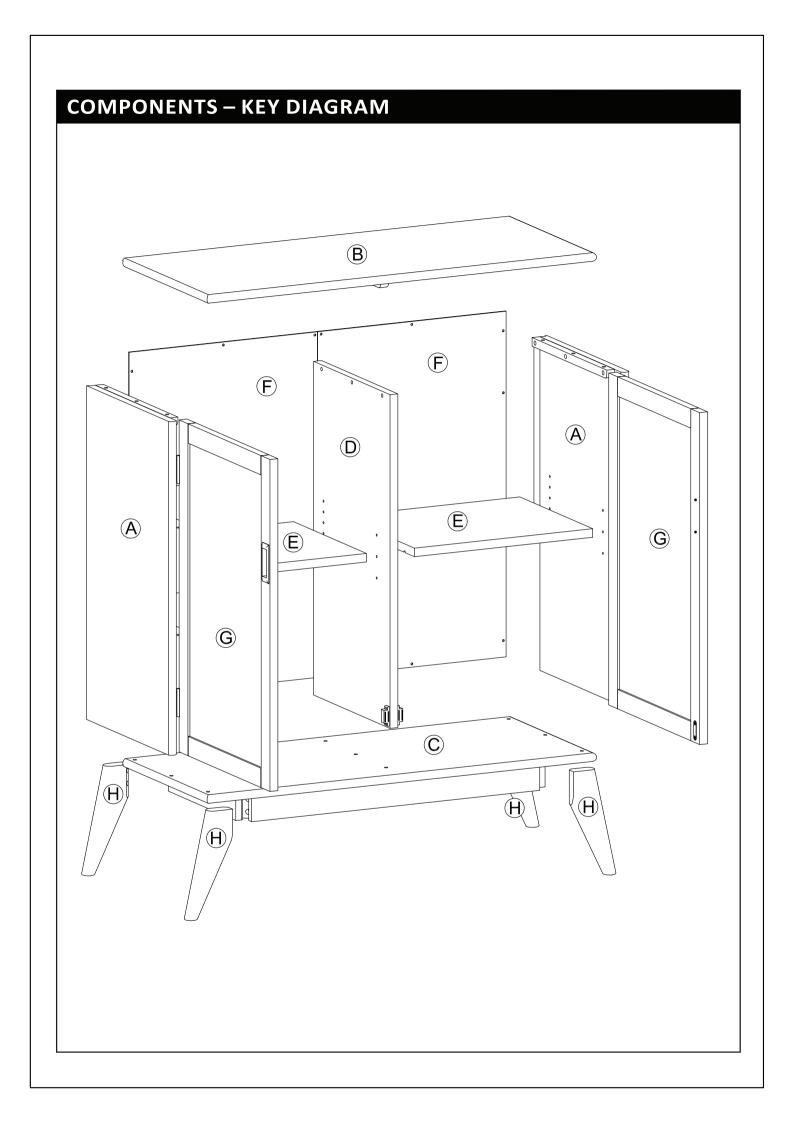


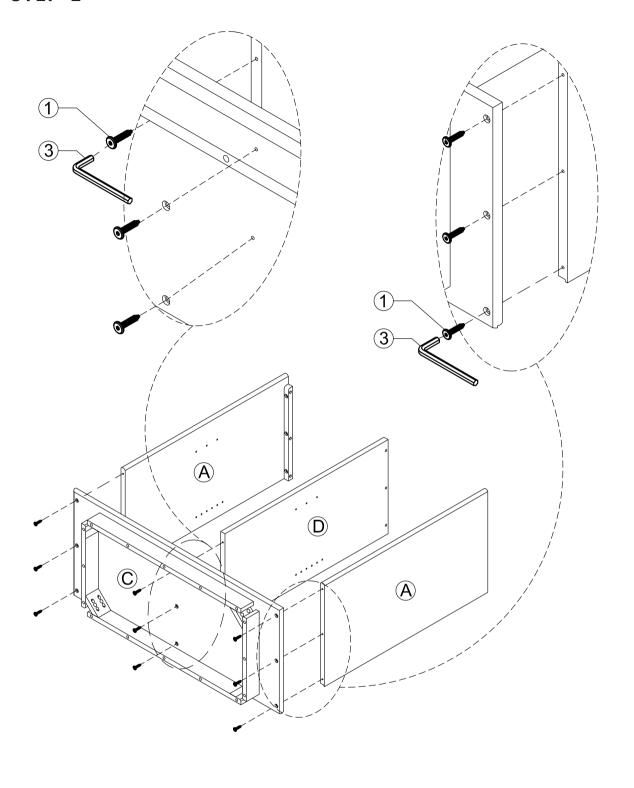

- 1. Attach 2 Sides (A) and Divider (D) to Bottom (C) using 9 Allen Key Screws (1) (3 screws on each Divider and Side).
- 2. Use Allen Key (3) to tighten screws. Do not over-tighten.

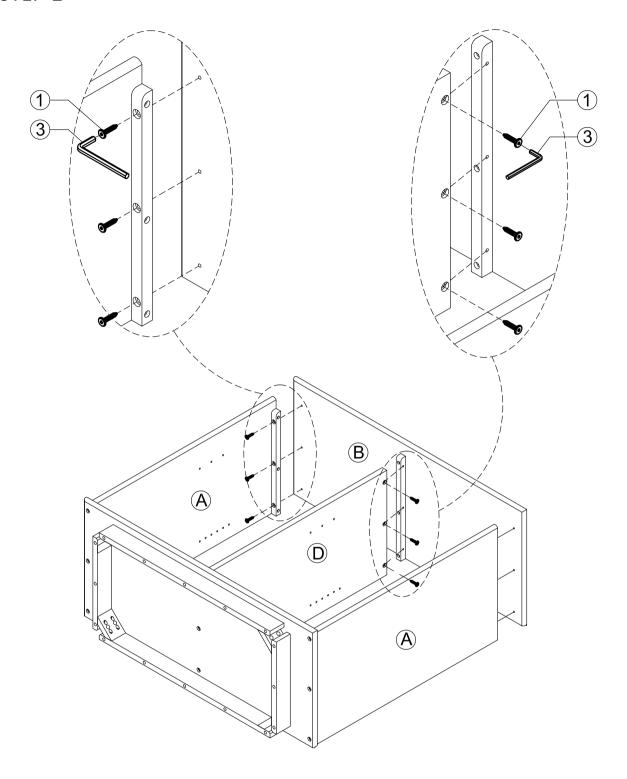

- 1. Attach Top (B) to 2 Sides (A) and Divider (D) using 9 Allen Key Screws (1) (3 screws on each Divider and Side).
- 2. Use Allen Key 3 to tighten screws. Do not over-tighten.

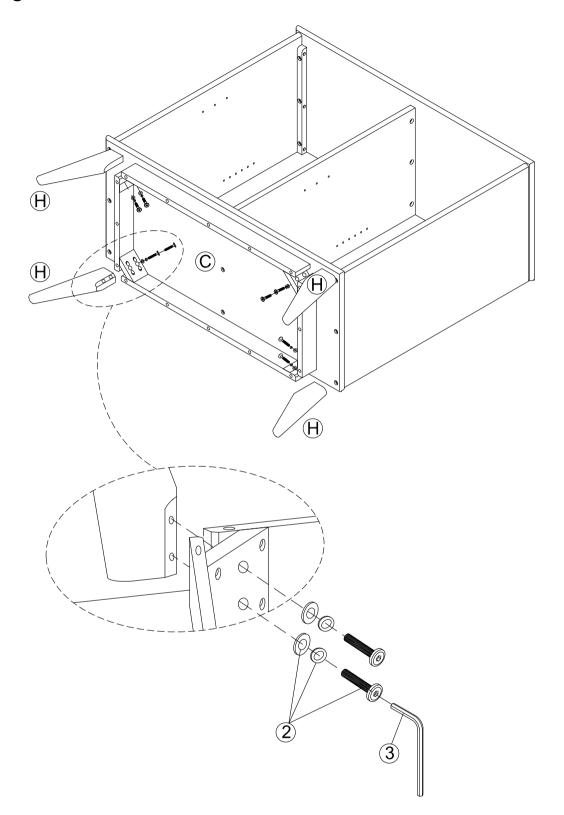

- 1. Attach Leg (H) to Bottom (C) using 8 sets Bolts and Washers (2) (2 sets on each Leg).
 2. Use Allen Key (3) to tighten Bolts. Do not over-tighten.

ASSEMBLY STEP-4 **NOTE:** The screwdriver is not included in the hardware pack. \bigcirc \bigcirc (D): (A)**(G**)

- 1. Attach hinges on Doors (G) to Sides (A) using Phillips Screws (6) into guide holes.
- 2. Attach Magnet Plates (8) to bottom corner of Door (G) using Phillips Screws (7) into guide holes on Doors (G).

(6)


) COMPA

- 3. Attach Magnet (8) using Phillips Screws (7) into guide holes on Dividers (D.
- 4. Use Phillips screwdriver to snugly tighten screw.


STEP-5





NOTE: The screwdriver is not included in the hardware pack.

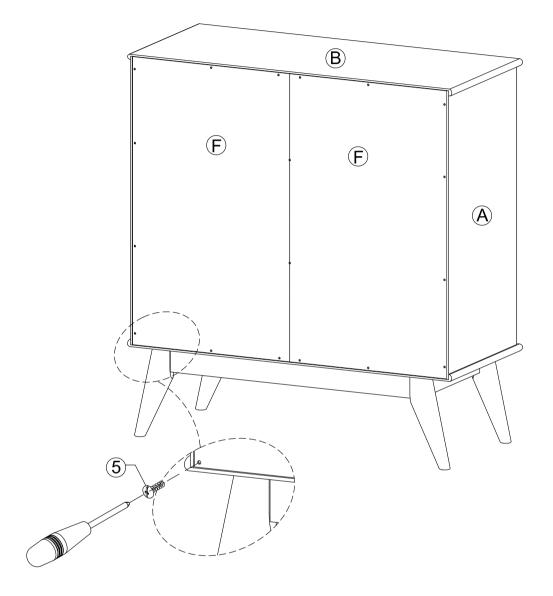

- 1. Attach the Back Panels (F) to back frame of cabinet using Phillips Screws Round Head (5) through pre-drilled holes.
- 2. Use Phillips screwdriver to tighten screws.

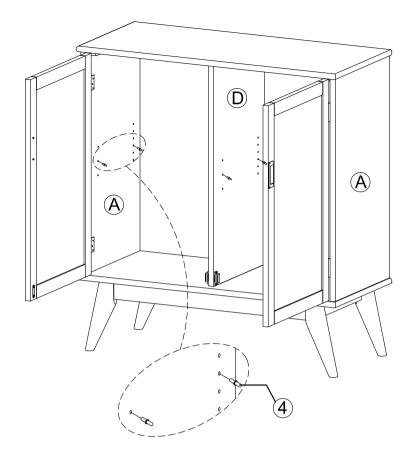


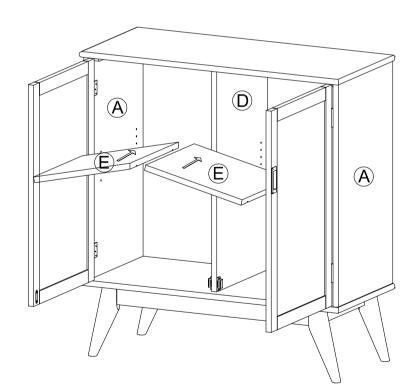

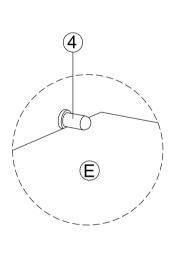

- Use 4 Shelf Supports 4 for each Shelf (E) in desired location.
 2 Shelf Supports (4) may be used on back top of each Shelf (E) as a tipping restraint.

NOTE: Injuries and damage can occur from furniture tip-over. It is important to use the safety bracket included. If the tipping restraint kit is not in the box, please contact our customer service department in order to obtain another kit before using the furniture.

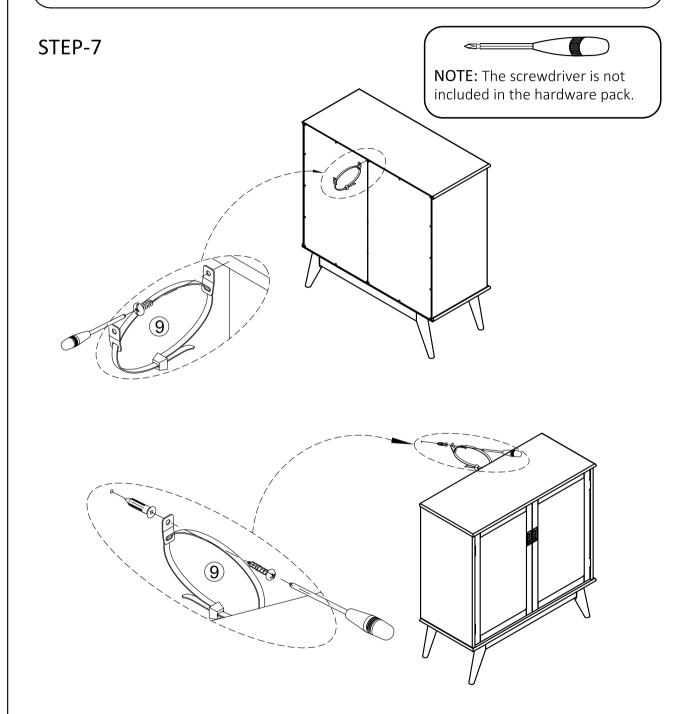

1. To attach Tipping Restraint (9), follow instructions on Tipping Restraint package.

When you determined the location for your unit, install the Furniture Tipping restraint. Carefully follow the instructions contained on the package.

WARRANTY

Thank you for purchasing a product. These products have been made to demanding, high-quality standards and are guaranteed for domestic use against manufacturing faults for a period of 12 months from the date of purchase. This warranty does not affect your statutory rights.

In case of any malfunction of your product (failure, missing parts, etc.) please contact us at our toll free service line or by email

We reserve the right to repair or replace the defective product, at its discretion.

This product is guaranteed for 12 months if used for normal purposes. Any warranty is invalid if the product has been overloaded or subject to neglect, improper use or an attempted repair by other than an authorized agent. Heavy-duty or daily professional/commercial usage are not guaranteed.

Due to continuous product improvement, we reserve the right to change the product specifications without prior notice.