

Get in Touch?

 
✉ support@servicetimely.com

Manufacturer: Shenzhen Guiyang Network Technology Co., Ltd
Address: 1404K3, East Block, Shengtang Commercial Building, Futian District, Shenzhen, China
Made in China Rev_1.3_EN

TV STAND

Model: N1209

ASSEMBLY INSTRUCTIONS

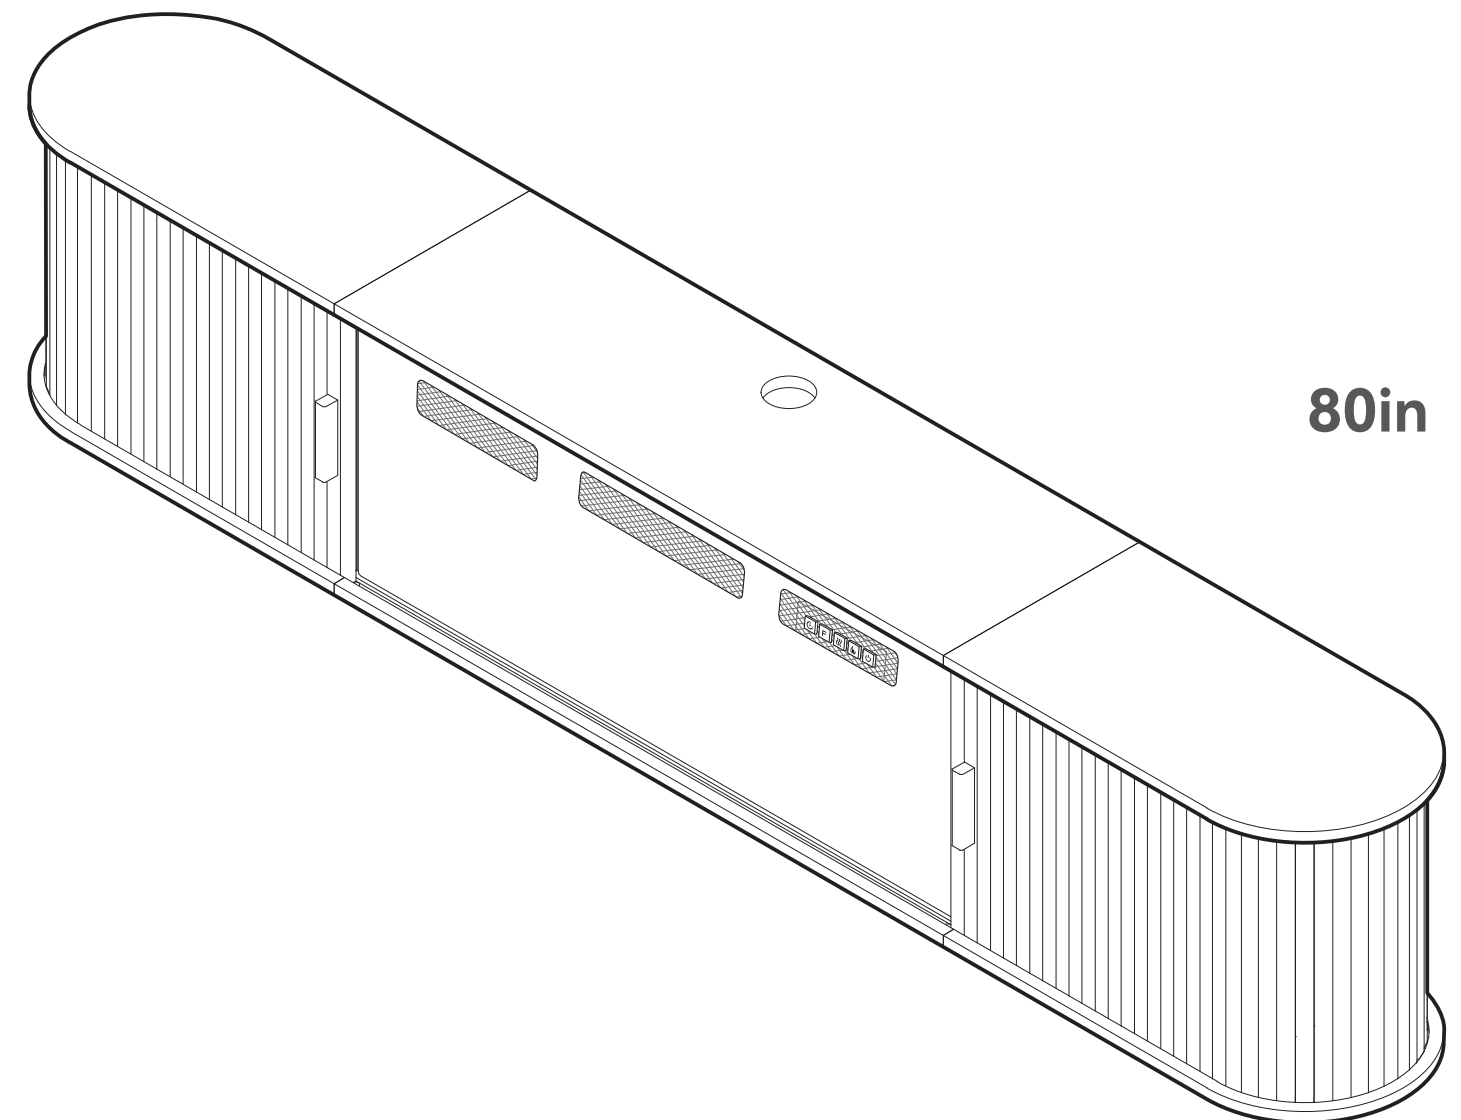

24/7
Service

Any other questions, contact us via **email: support@servicetimely.com** We provide 24/7 online service with dedicated one-on-one expert support for all your inquiries.



⚠ Warning	Flammable, please keep away from open flames!
⚠ Warnung	Entflammbar, bitte von offenen Flammen fernhalten!
⚠ Attention	inflammable, veuillez tenir à l'écart des flammes nues !
⚠ Attenzione	infiammabile, tenere lontano da fiamme libere!
⚠ Advertencia	Inflamable, mantener alejado de fuego!
⚠ Waarschuwing	Ontvlambaar, uit de buurt van open vuur houden!
⚠ Ostrzeżenie	Produkt łatwopalny, trzymać z dala od otwartego ognia!





⚠ WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

  
- ALWAYS install Anti-tip device provided.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawer.

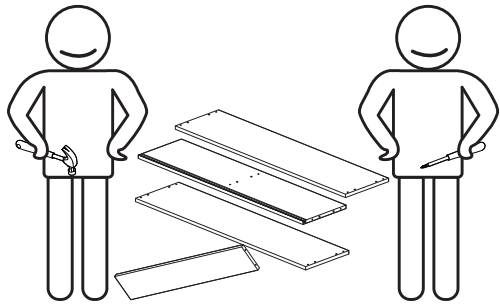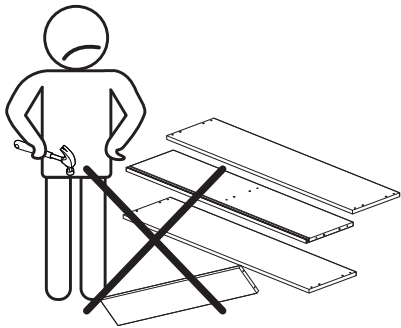

  
We recommend at least 2 people for the assembly.

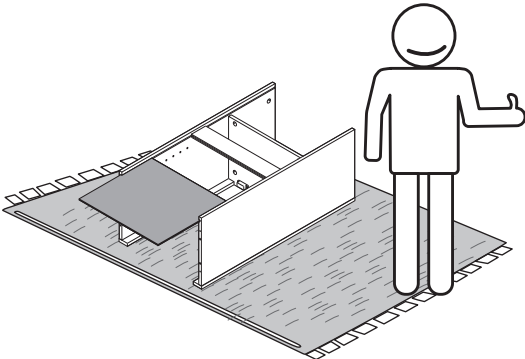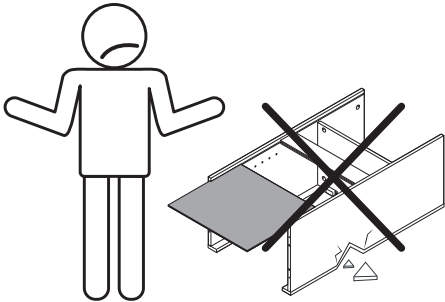

 To prevent any damage during assembly, place a mat under the pieces.

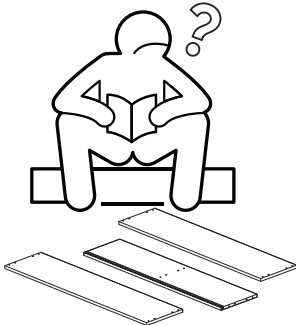

support@servicetimely.com

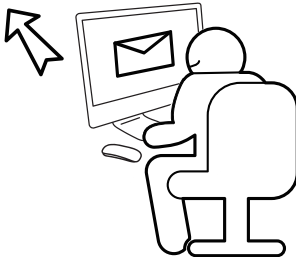 


Any questions concerning assembly, contact us via email: support@servicetimely.com

PARTS DIAGRAM



 
Check if all parts and hardwares are included. Contact us via email: support@servicetimely.com if there is any part missing or damaged.

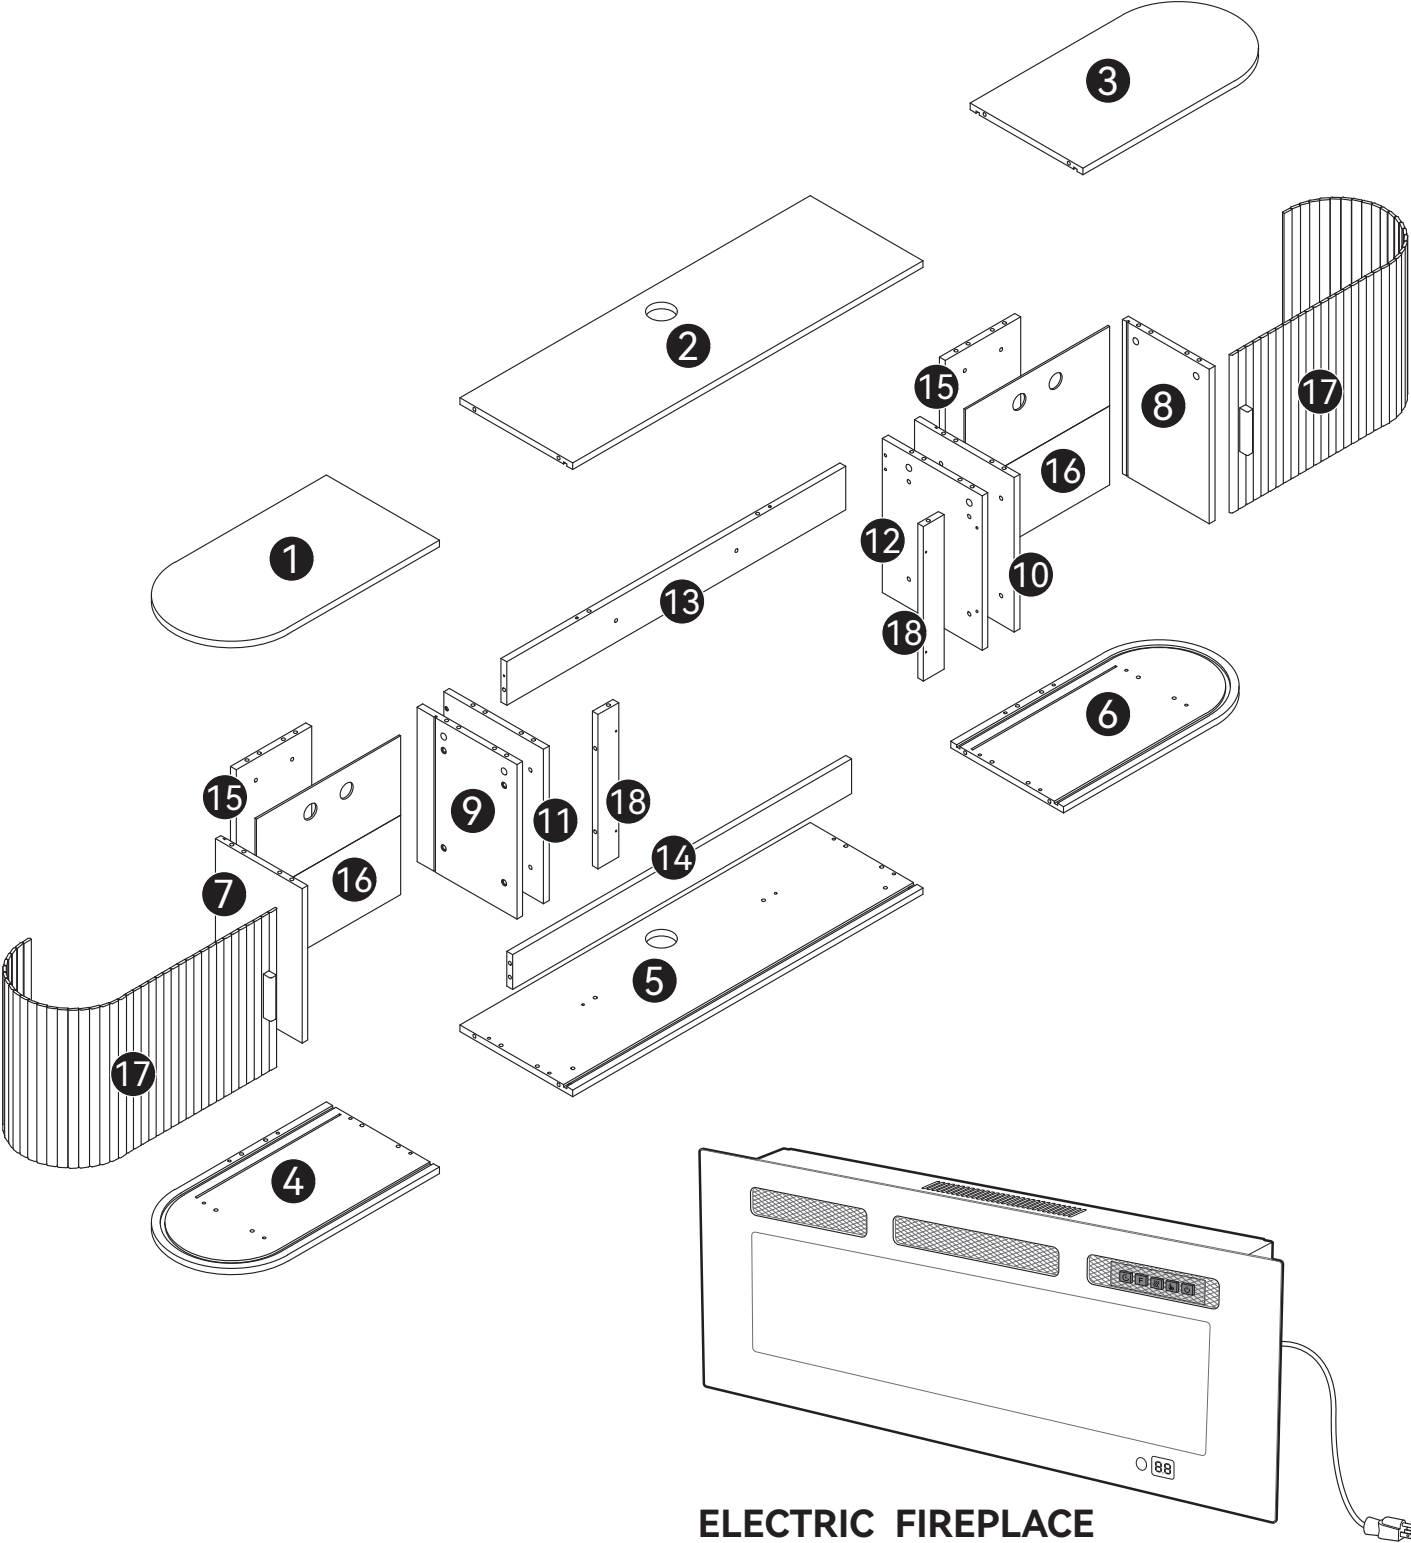






ELECTRIC FIREPLACE

The fireplace is delivered in a separate carton (Carton B).
Wait patiently for two cartons to be arrived before assembling.

 PARTS LIST

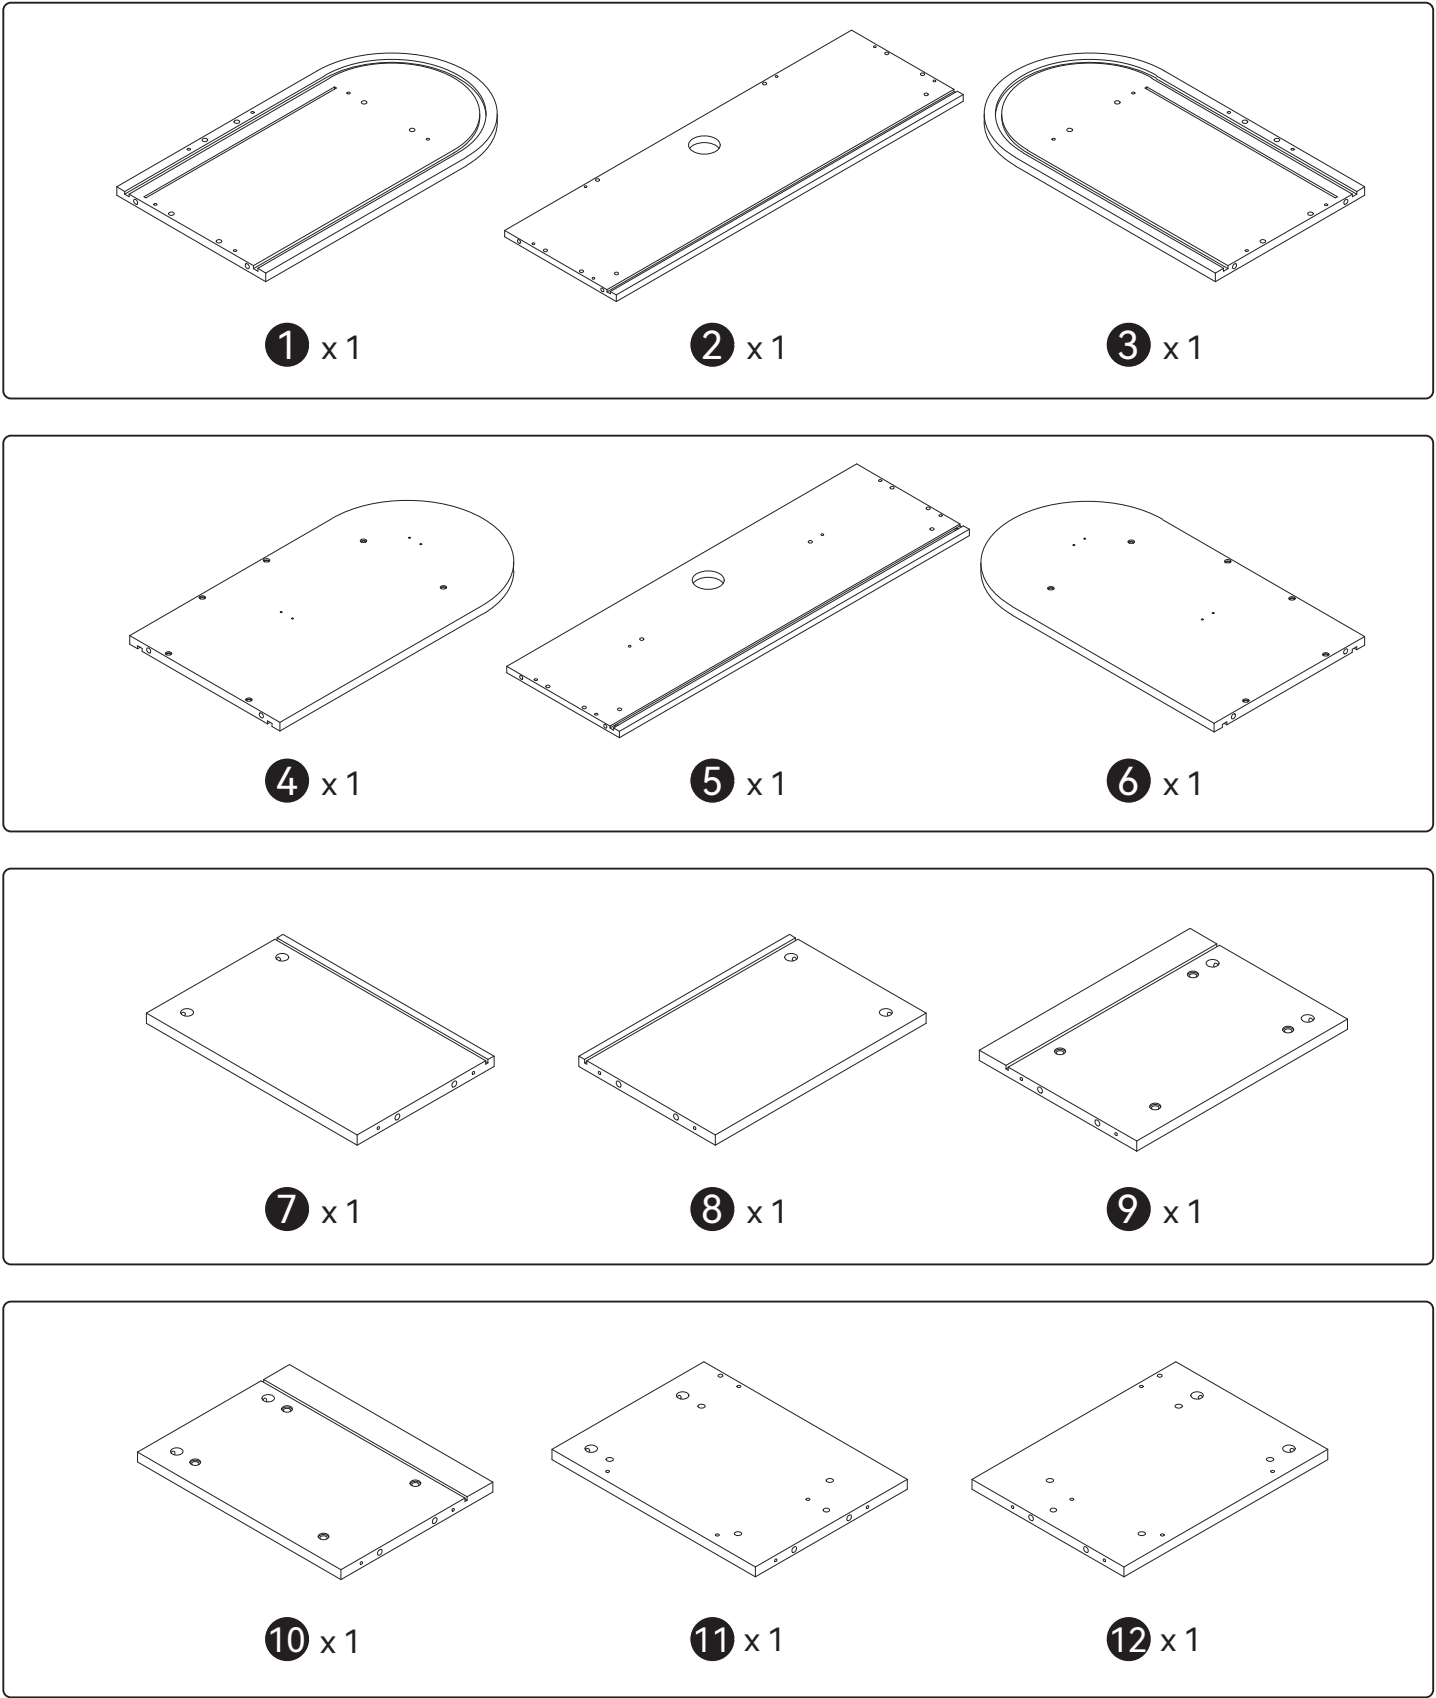

HARDWARES

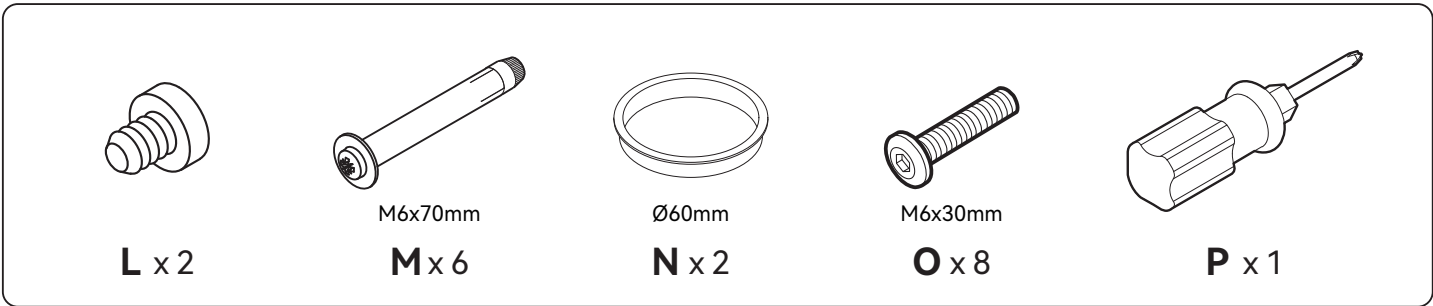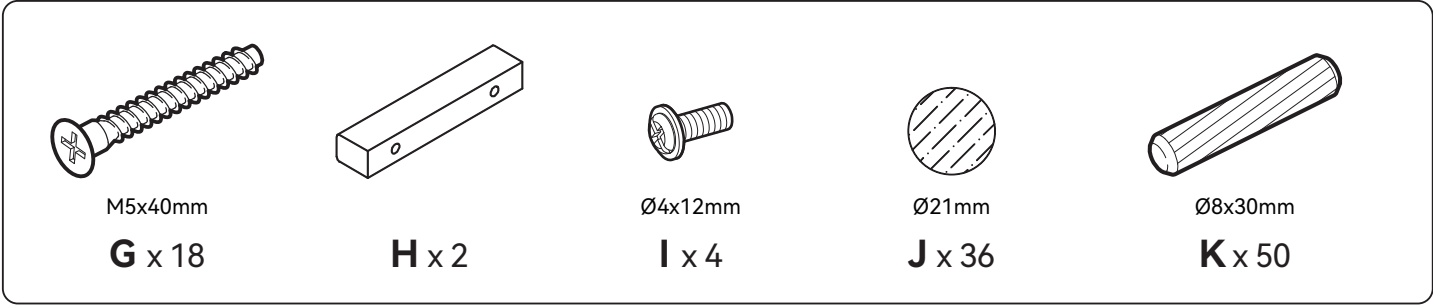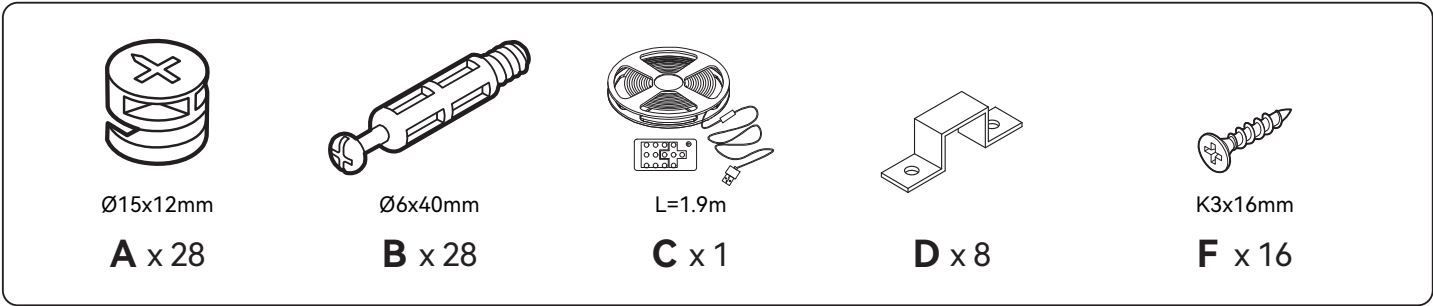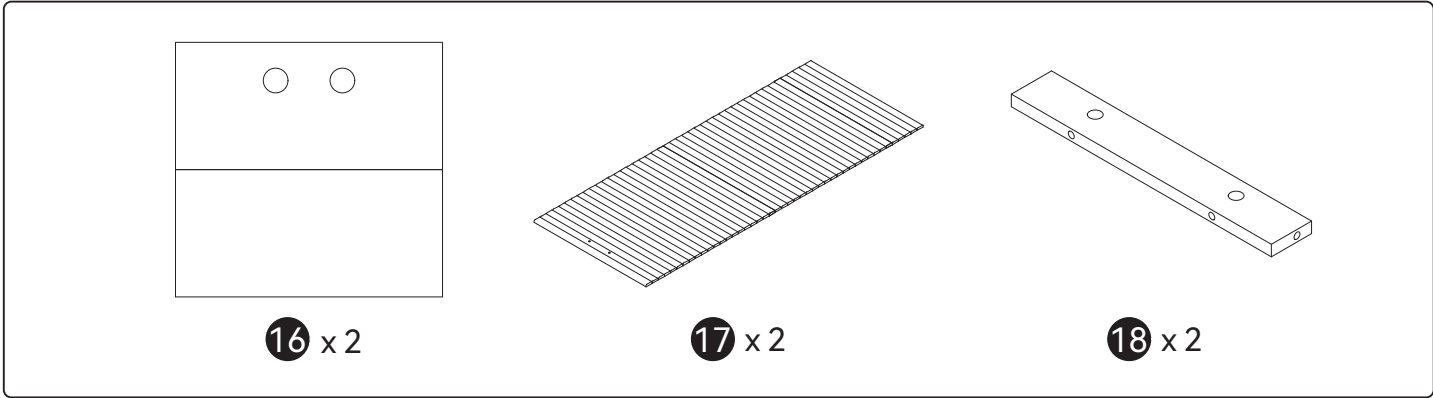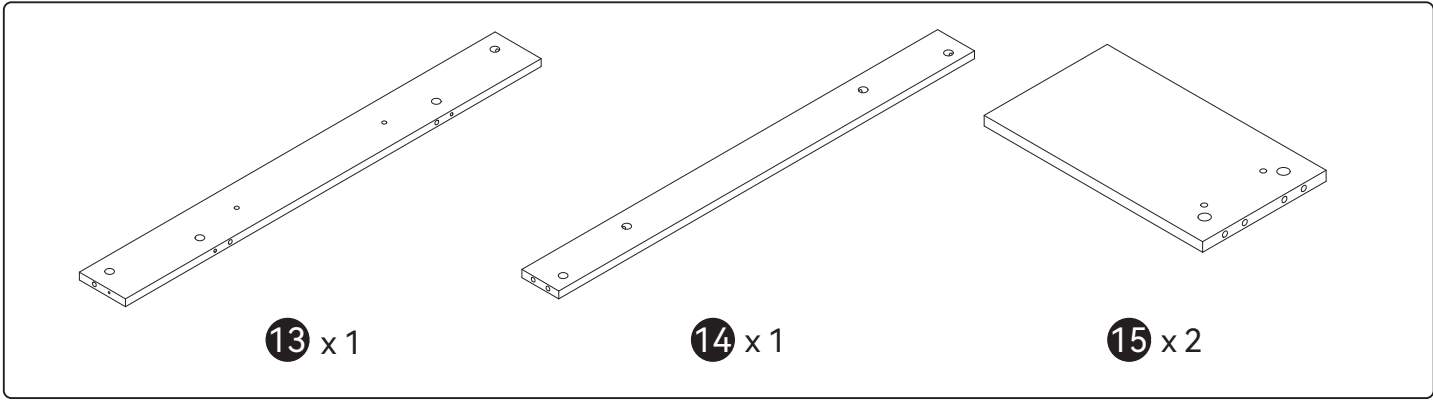     


SPARE PARTS


 The spare parts are the additional parts provided in case of missing or damaged ones. Keep the spare parts and tools for future use.



 
Ø15x12mm
A x 2

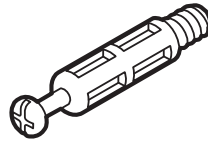

Ø6x40mm
B x 2

 


K3x16mm
F x 2

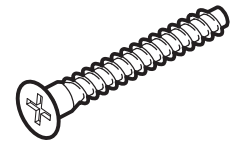 

M5x40mm
G x 1



 Ø21mm
J x 3


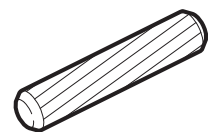


Ø8x30mm
K x 5


CAM LOCK FASTEN SYSTEM

 Insert the cam bolt into the hole, then insert the cam lock and tighten.

  
1

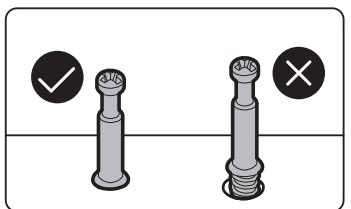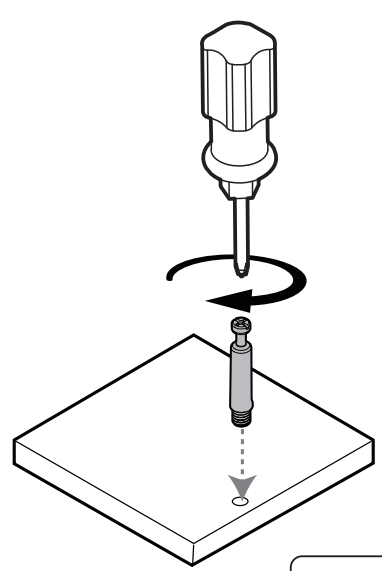

2

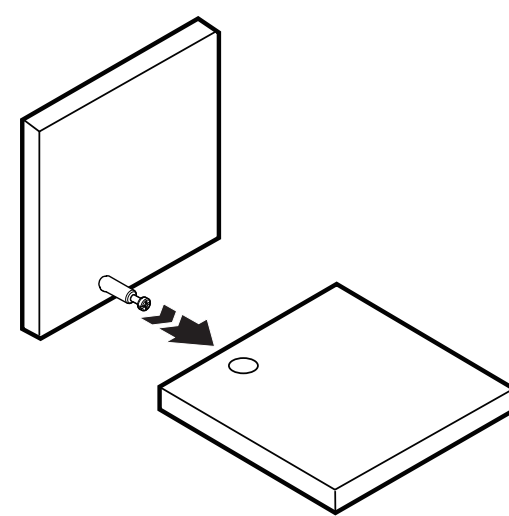 


3

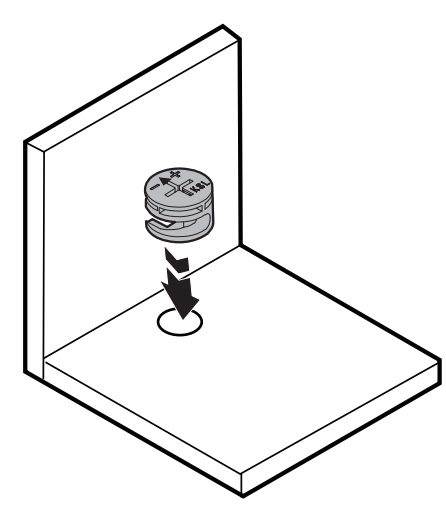 


Point the opening towards the edge of the board.

 4

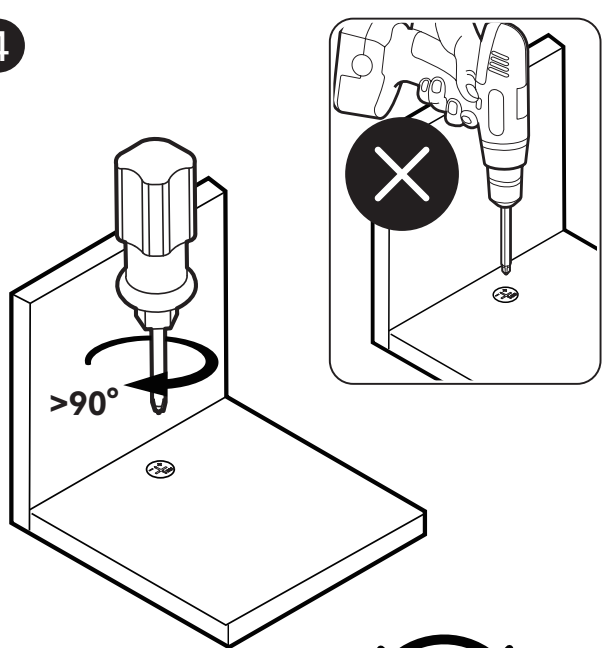


>90°

 UNLOCK LOCK

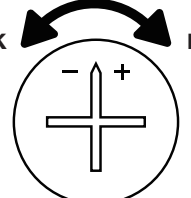



ASSEMBLY

 1



B x8

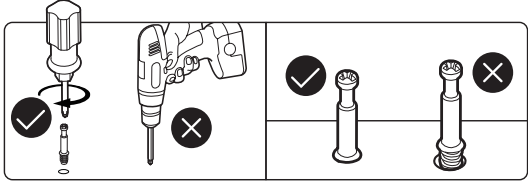 


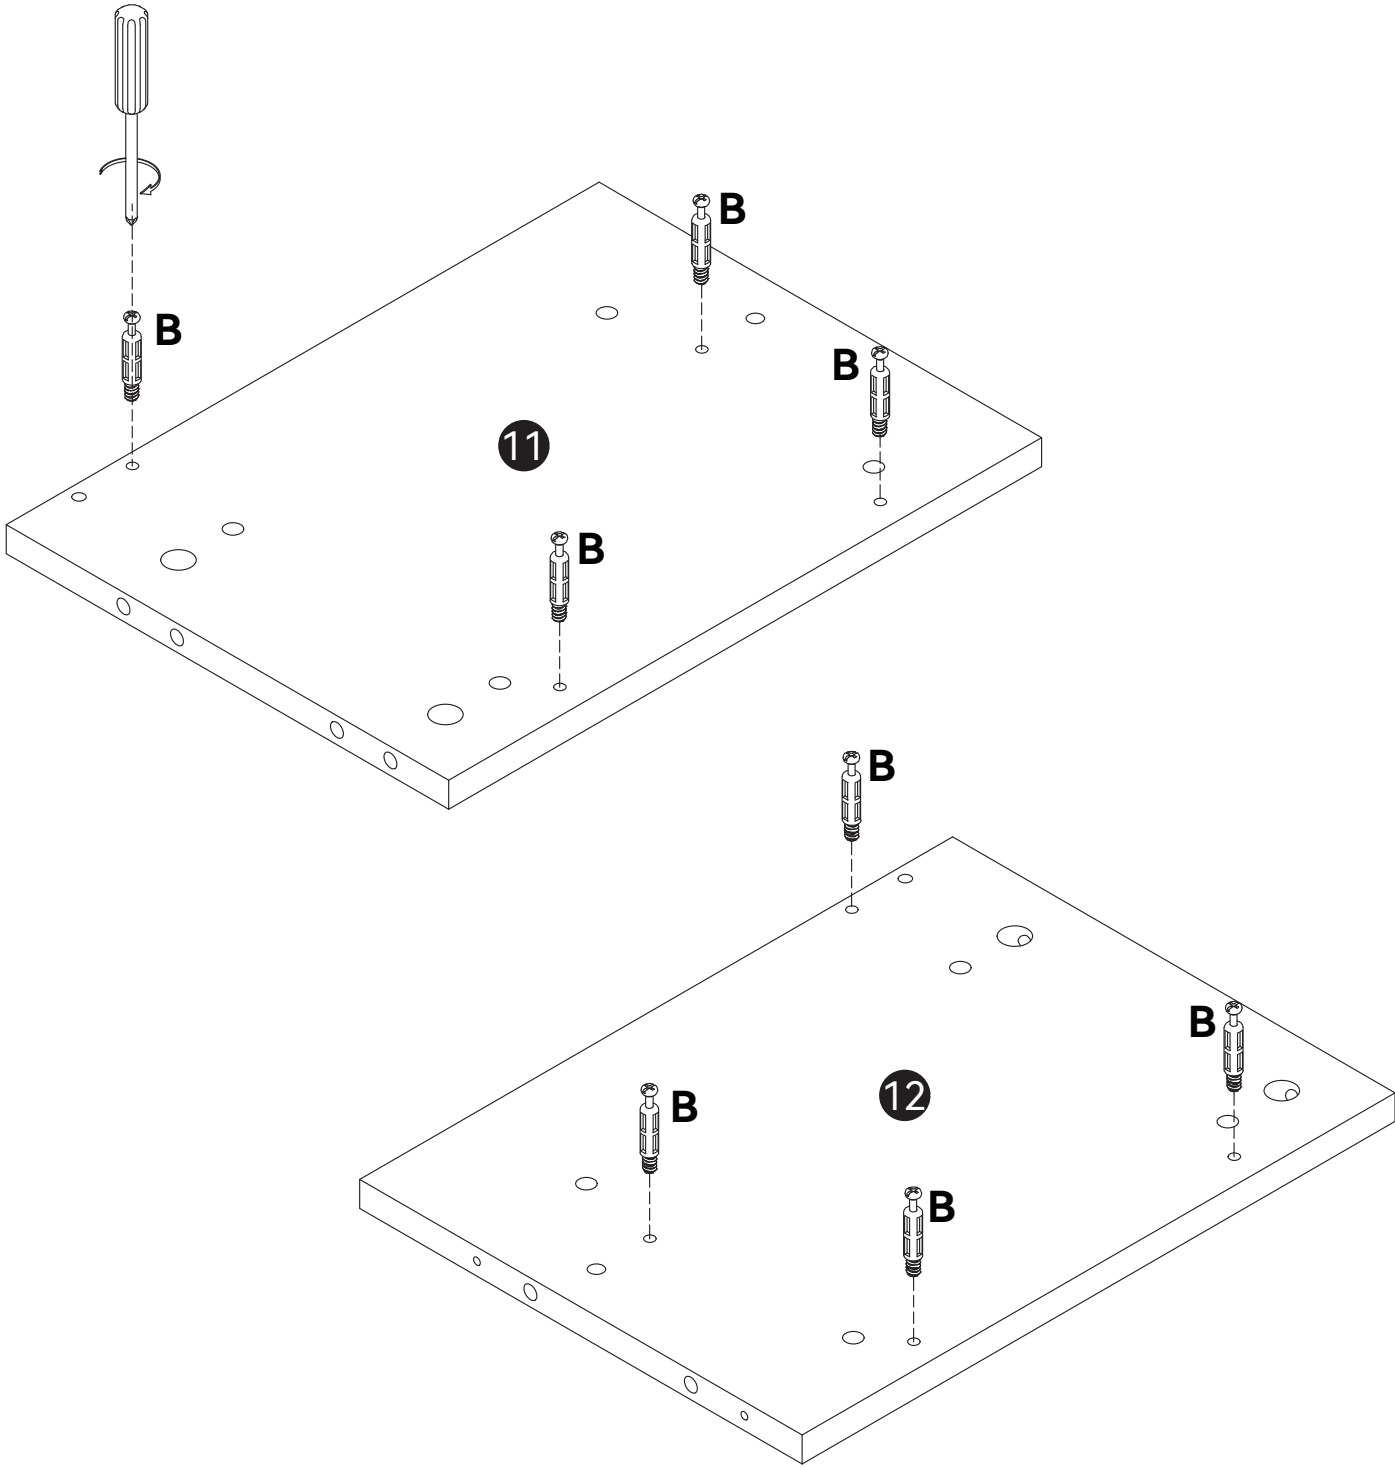 


2






  A x4


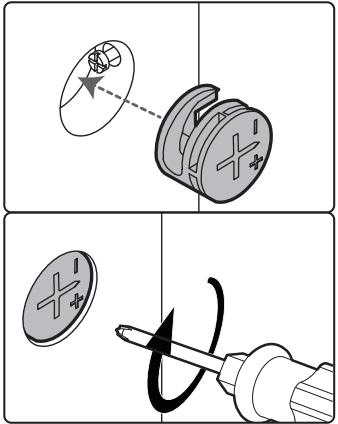


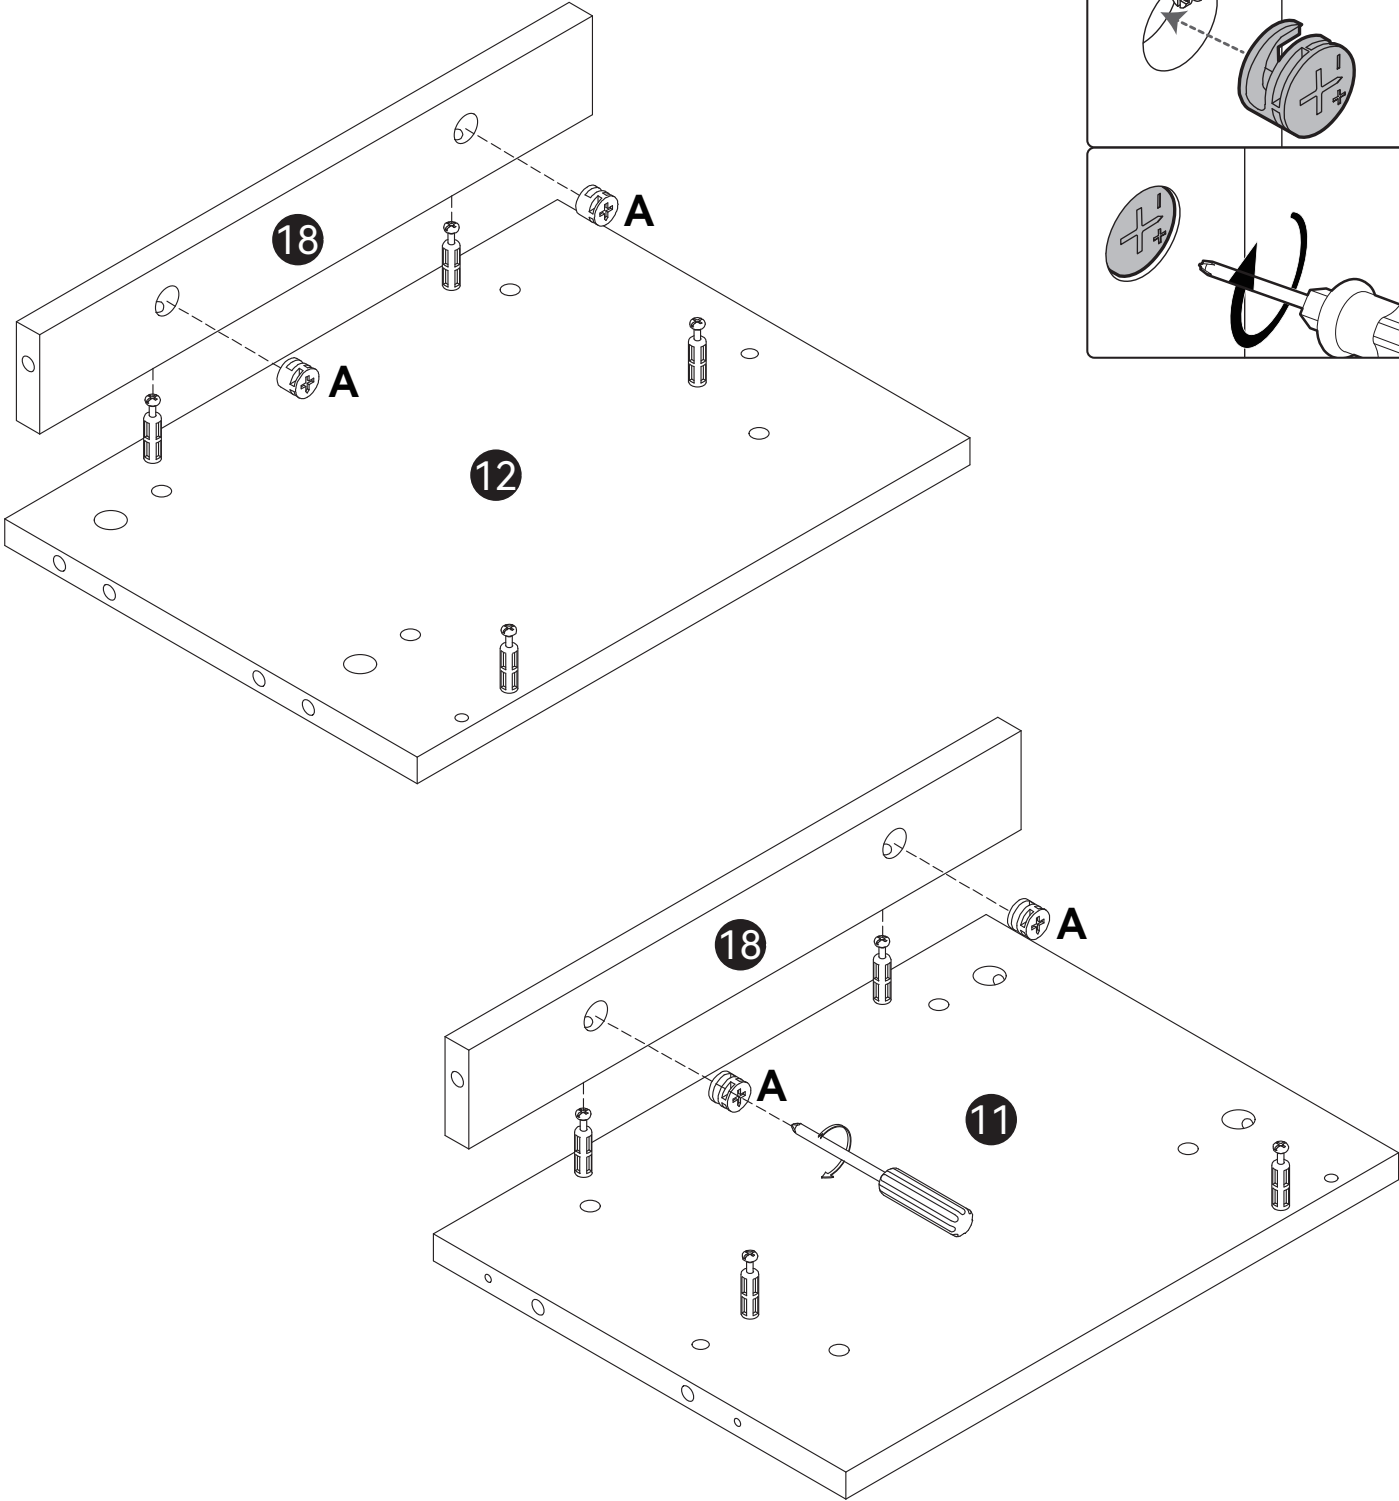





3

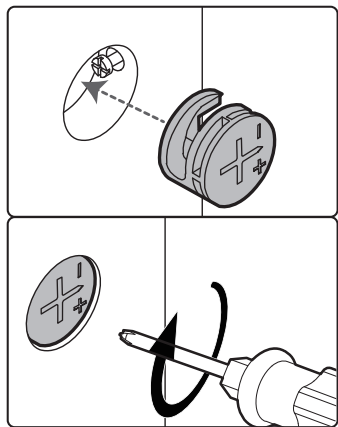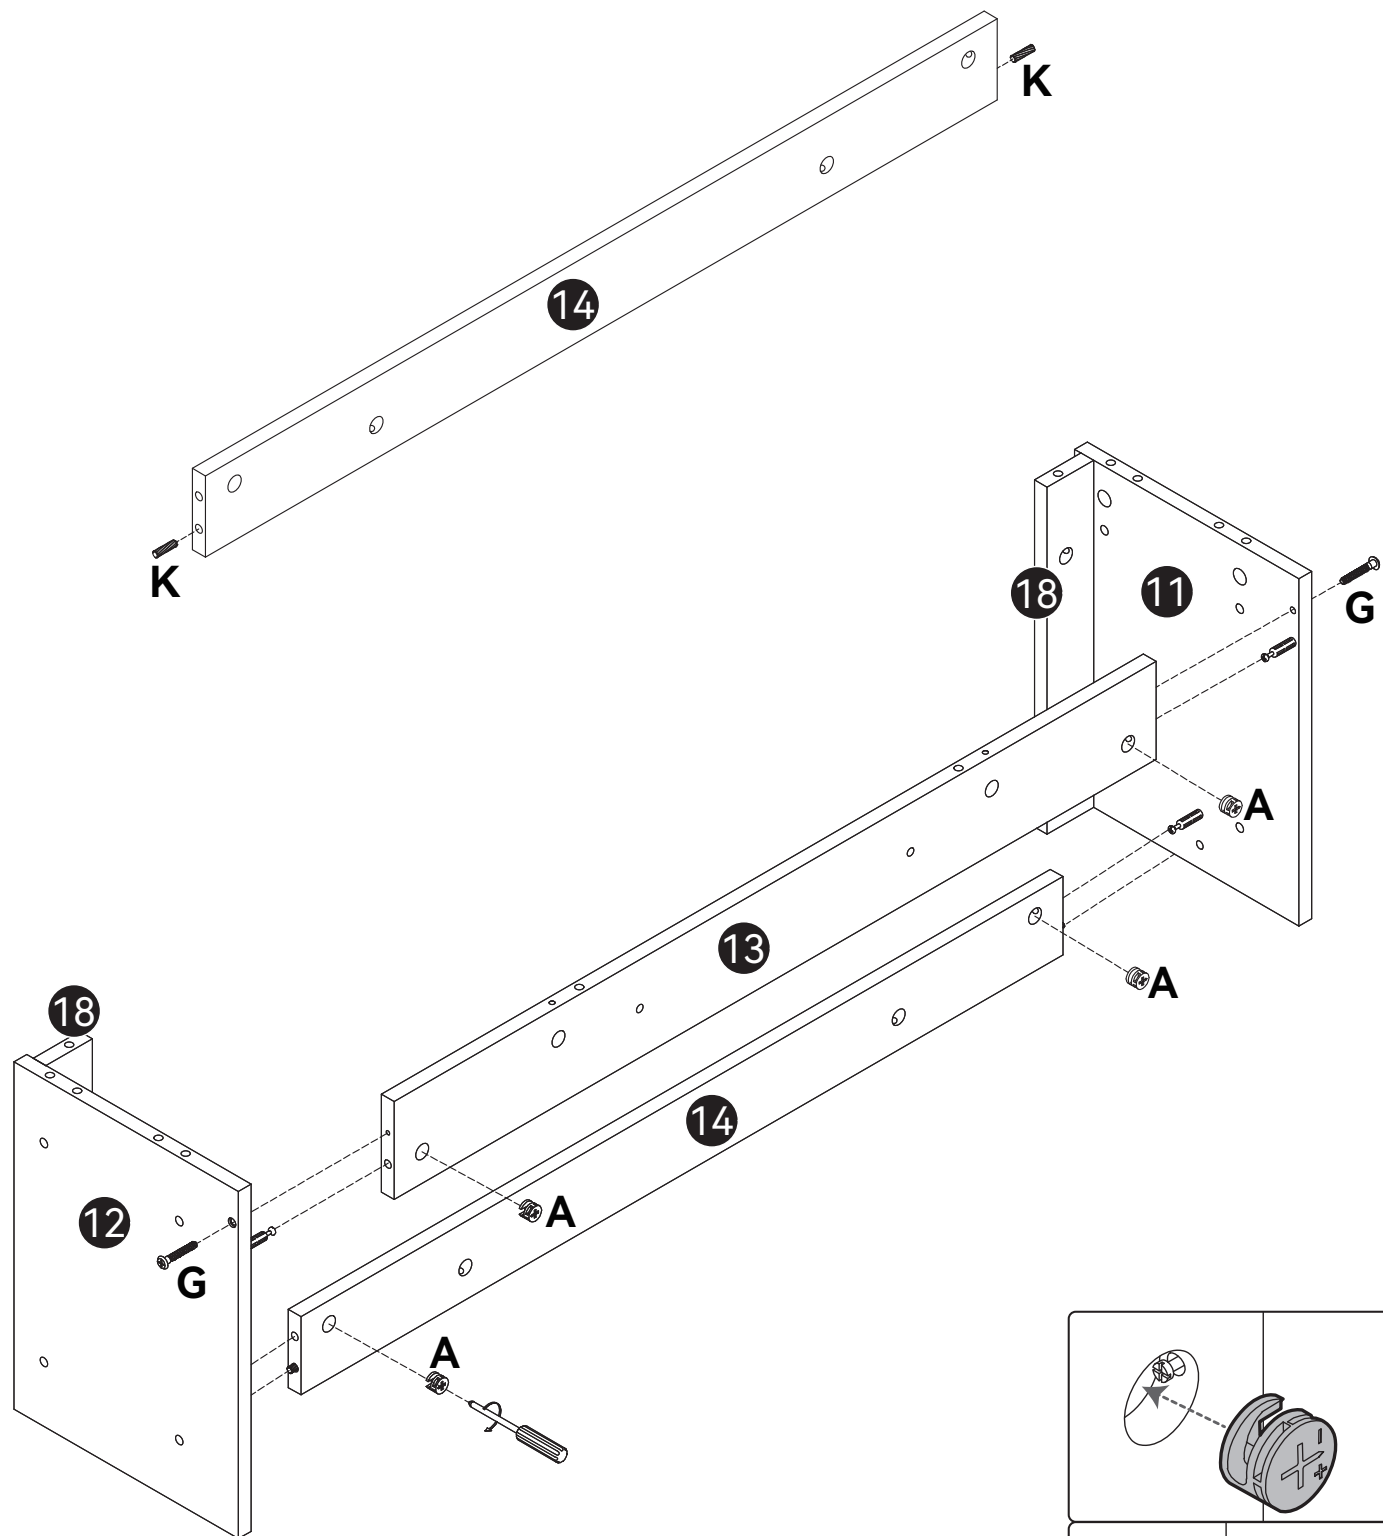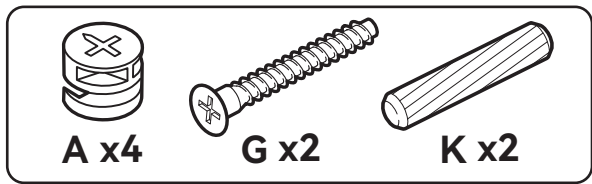   



4

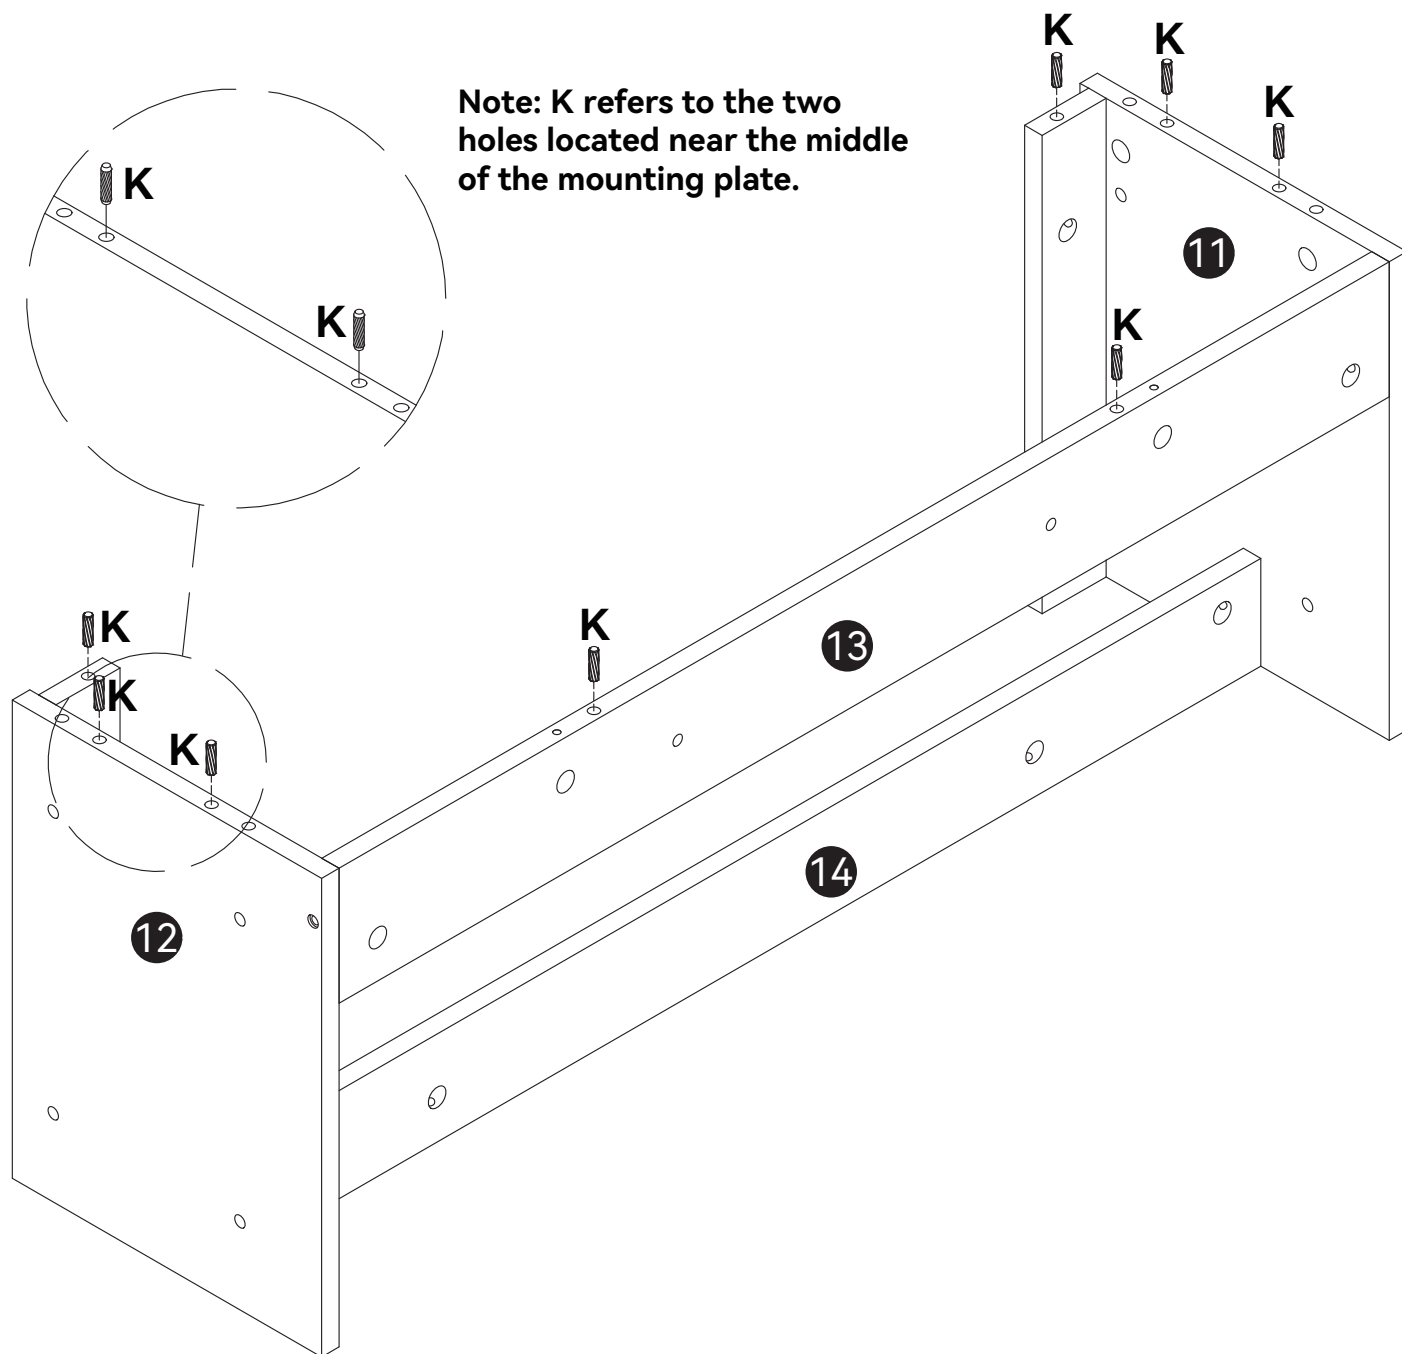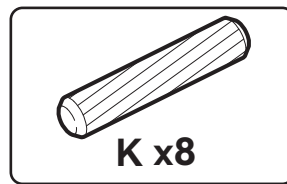  





5

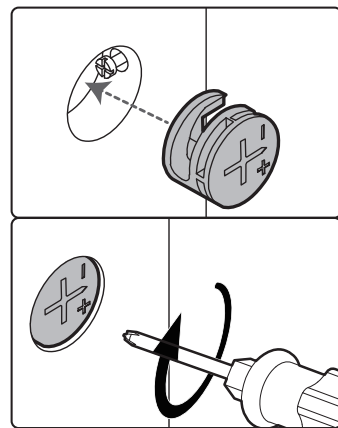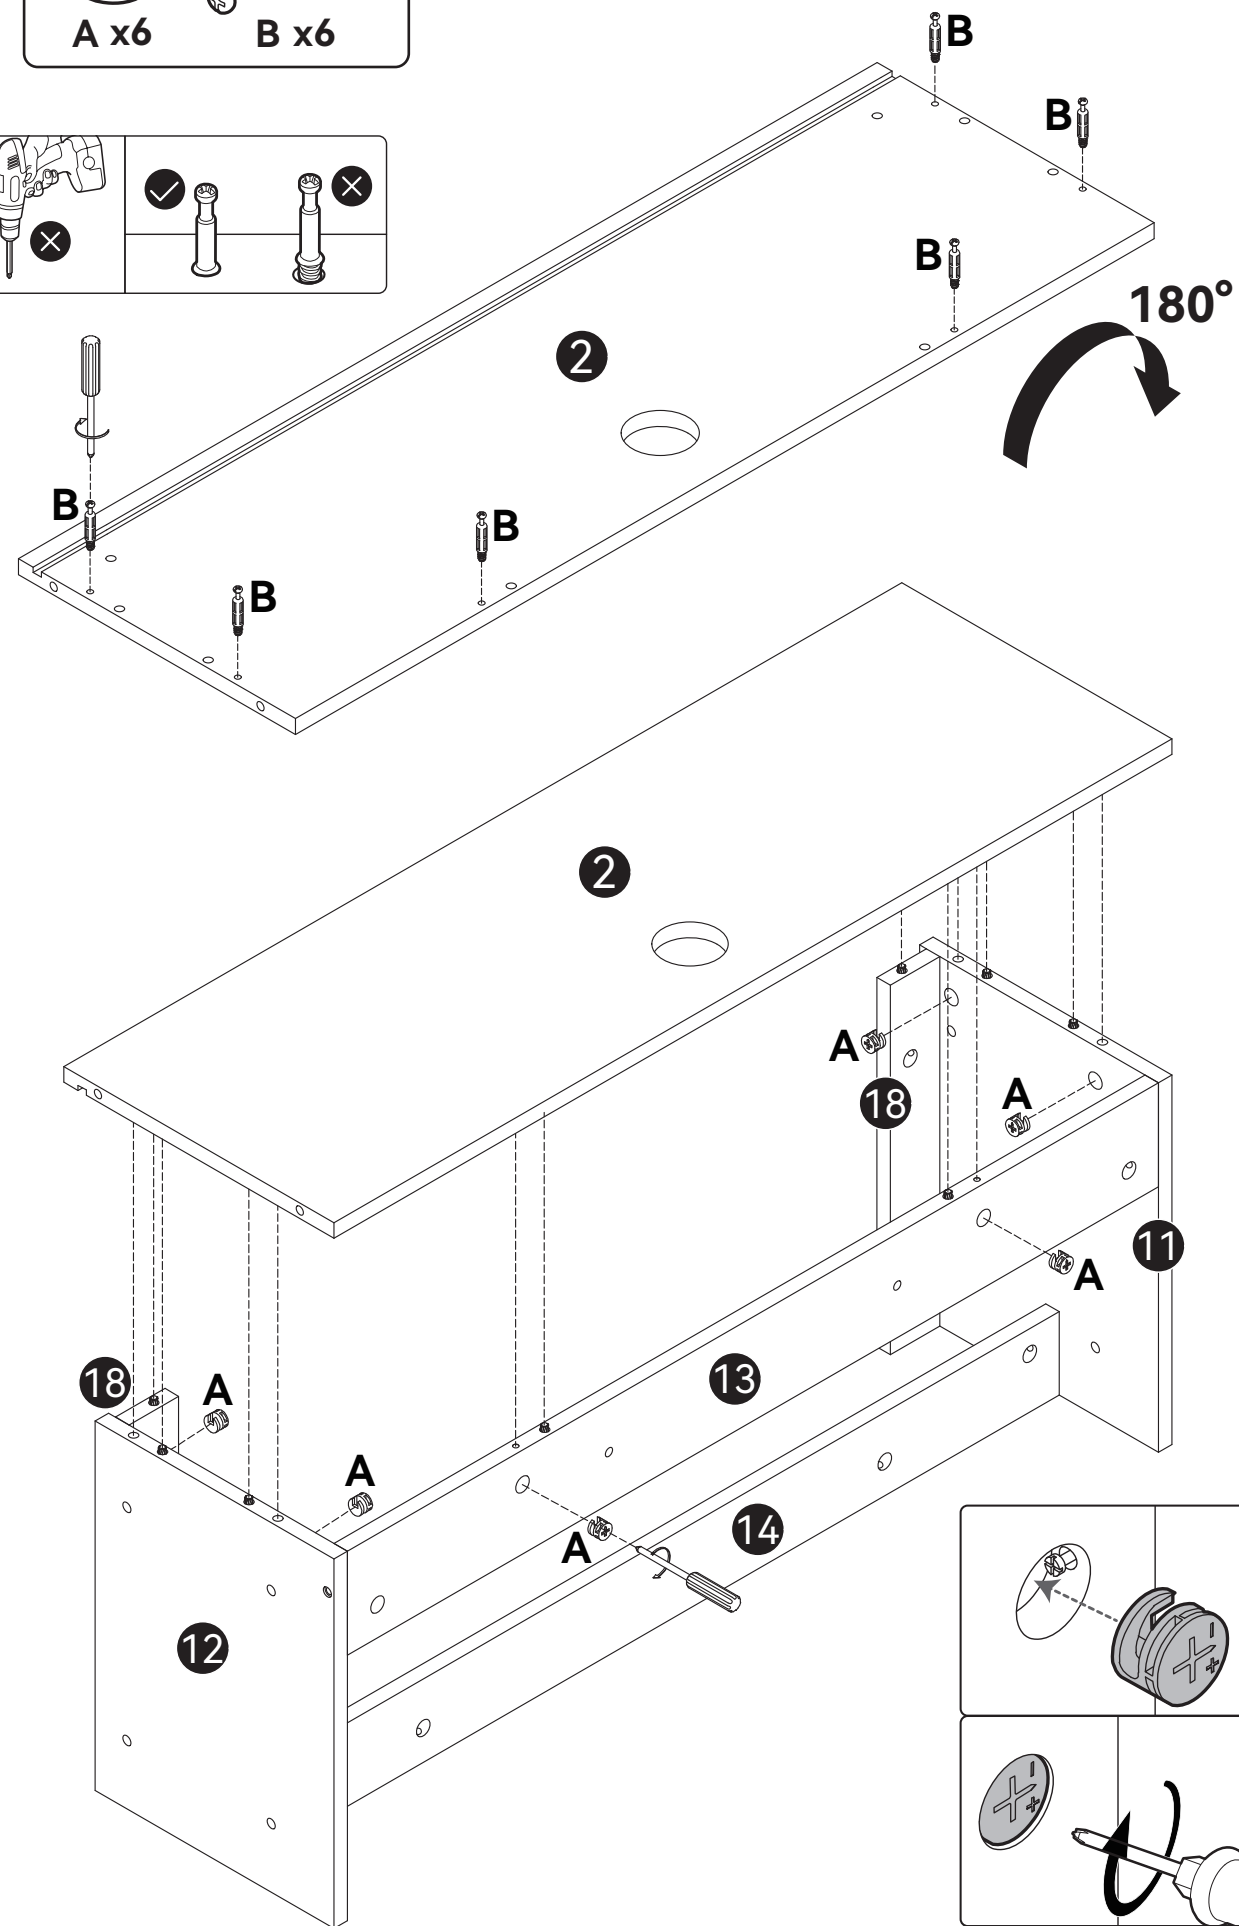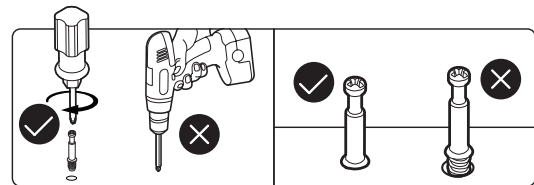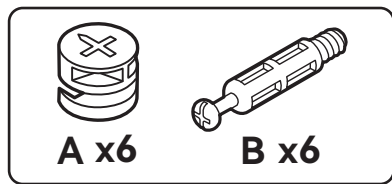    




6

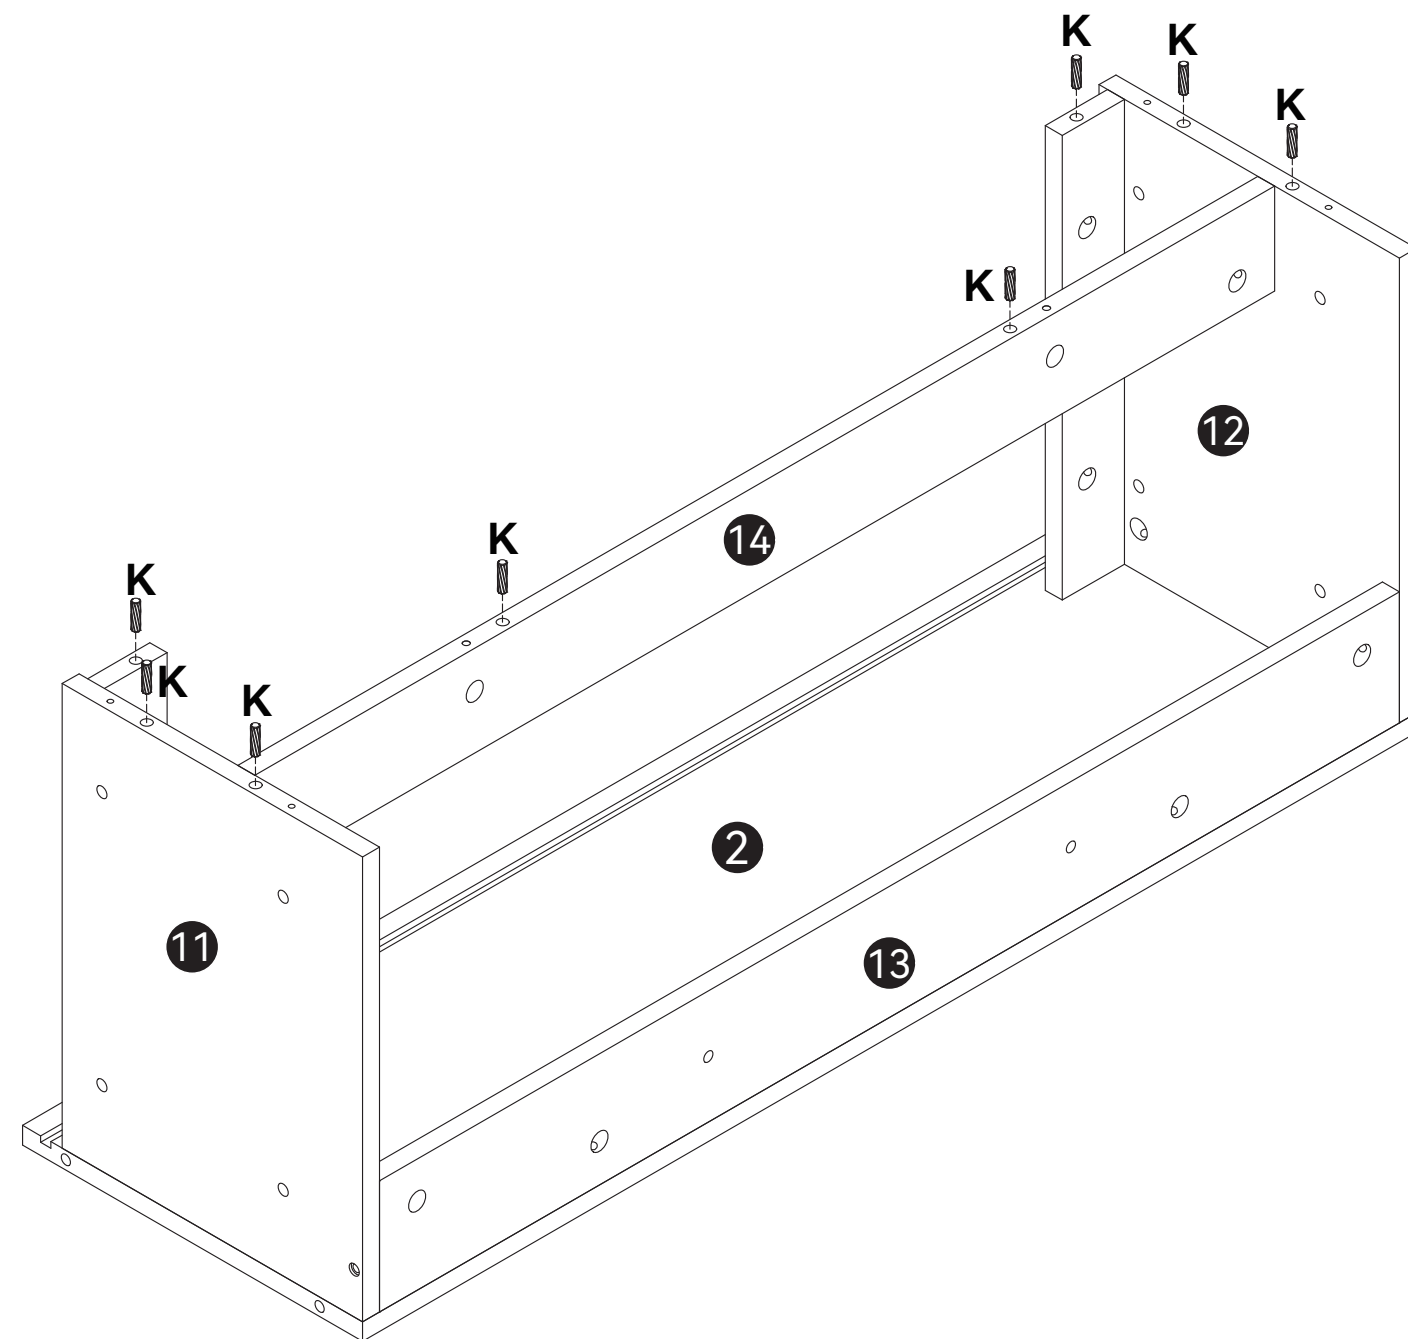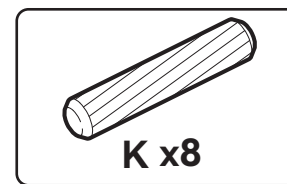  



7

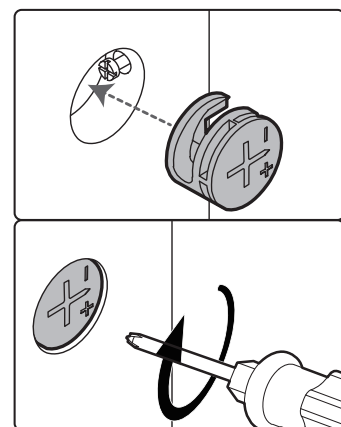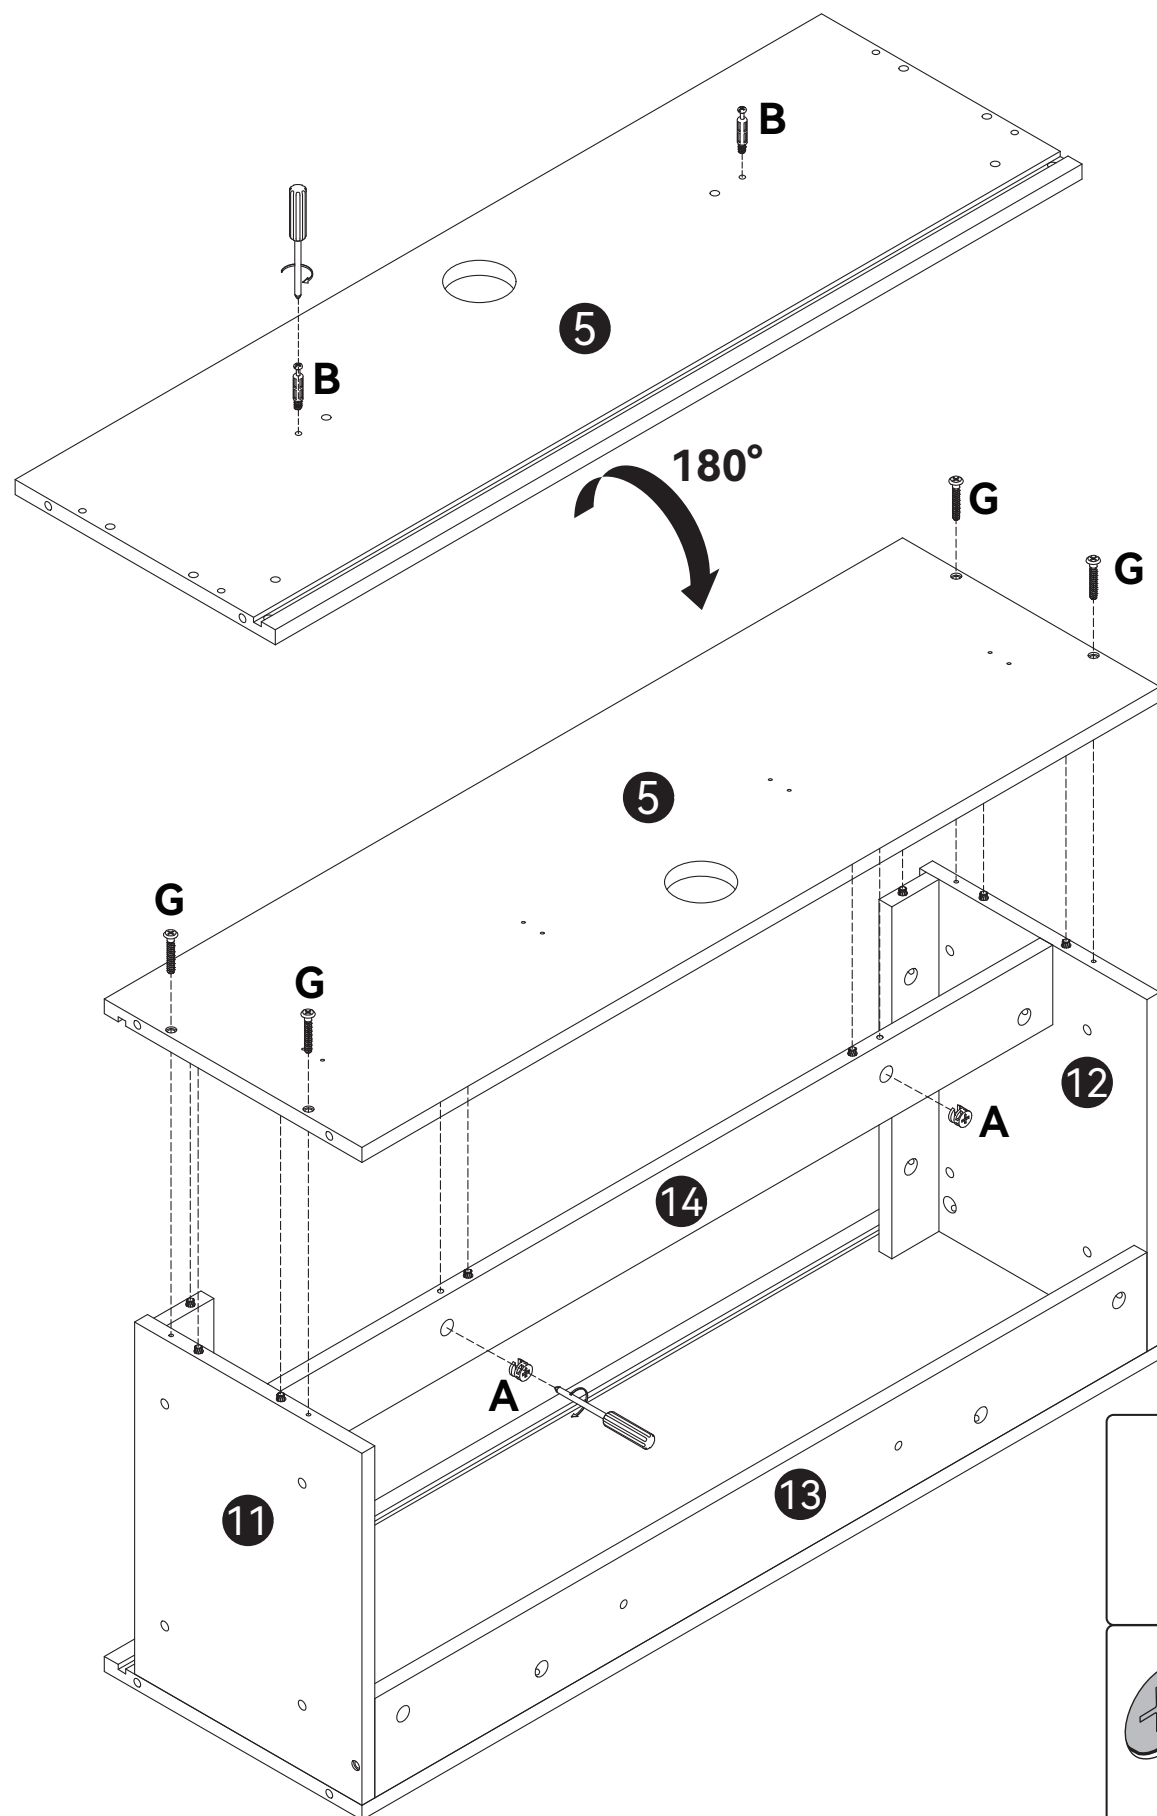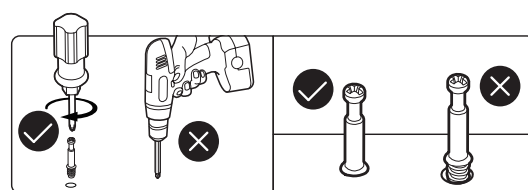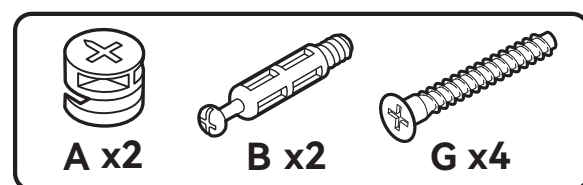    



8

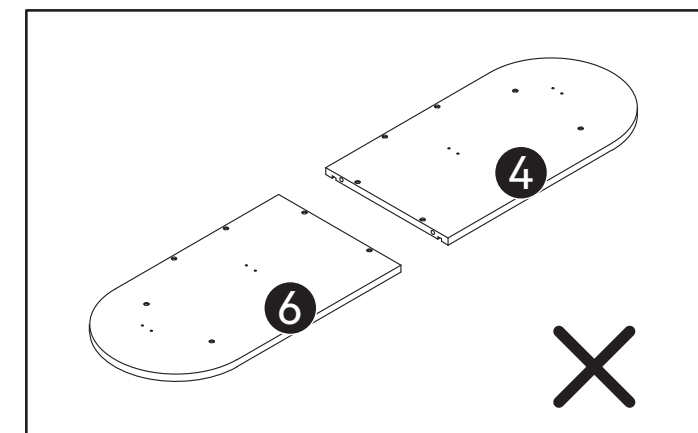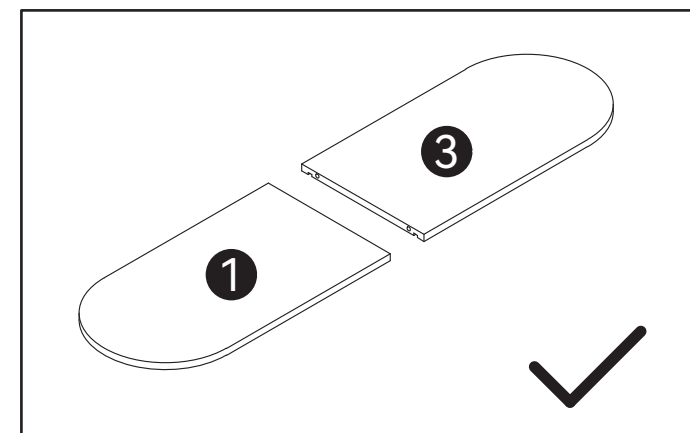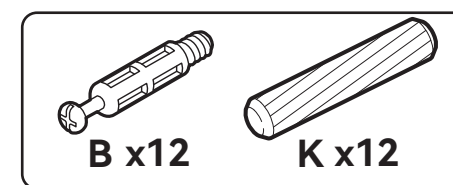   

 
 
Note: In this step, only Parts 1 and 3 are installed (not Parts 4 and 6). Parts 1 and 3 have no pre-drilled holes on their reverse side, whereas Parts 4 and 6 do.

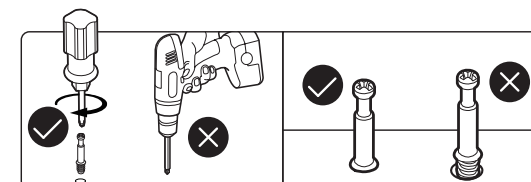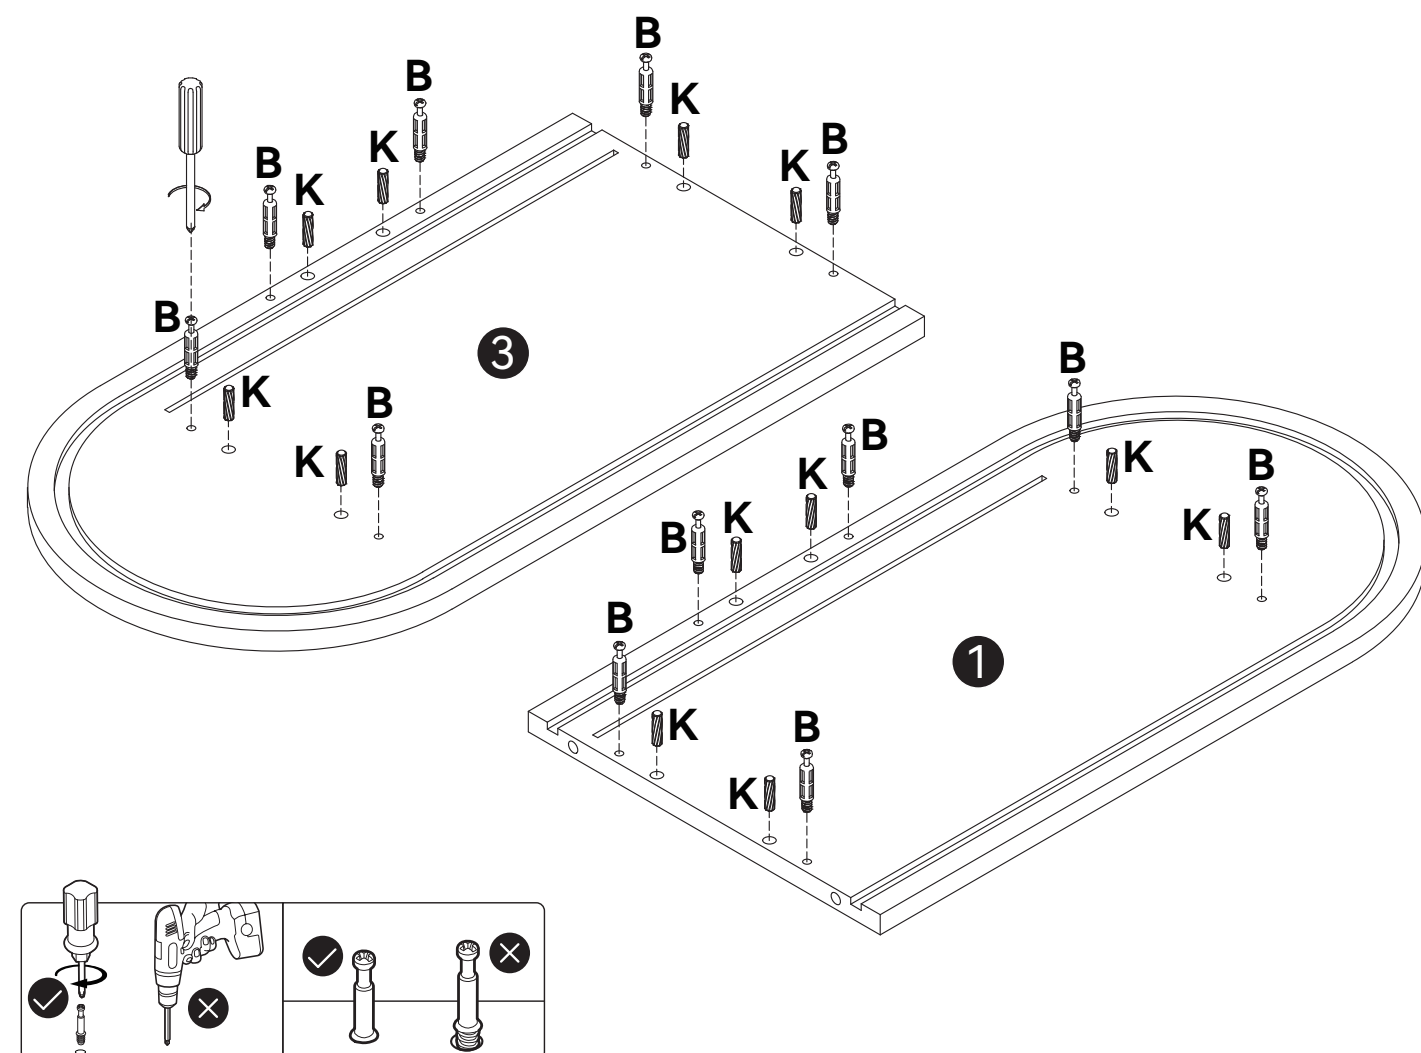

9

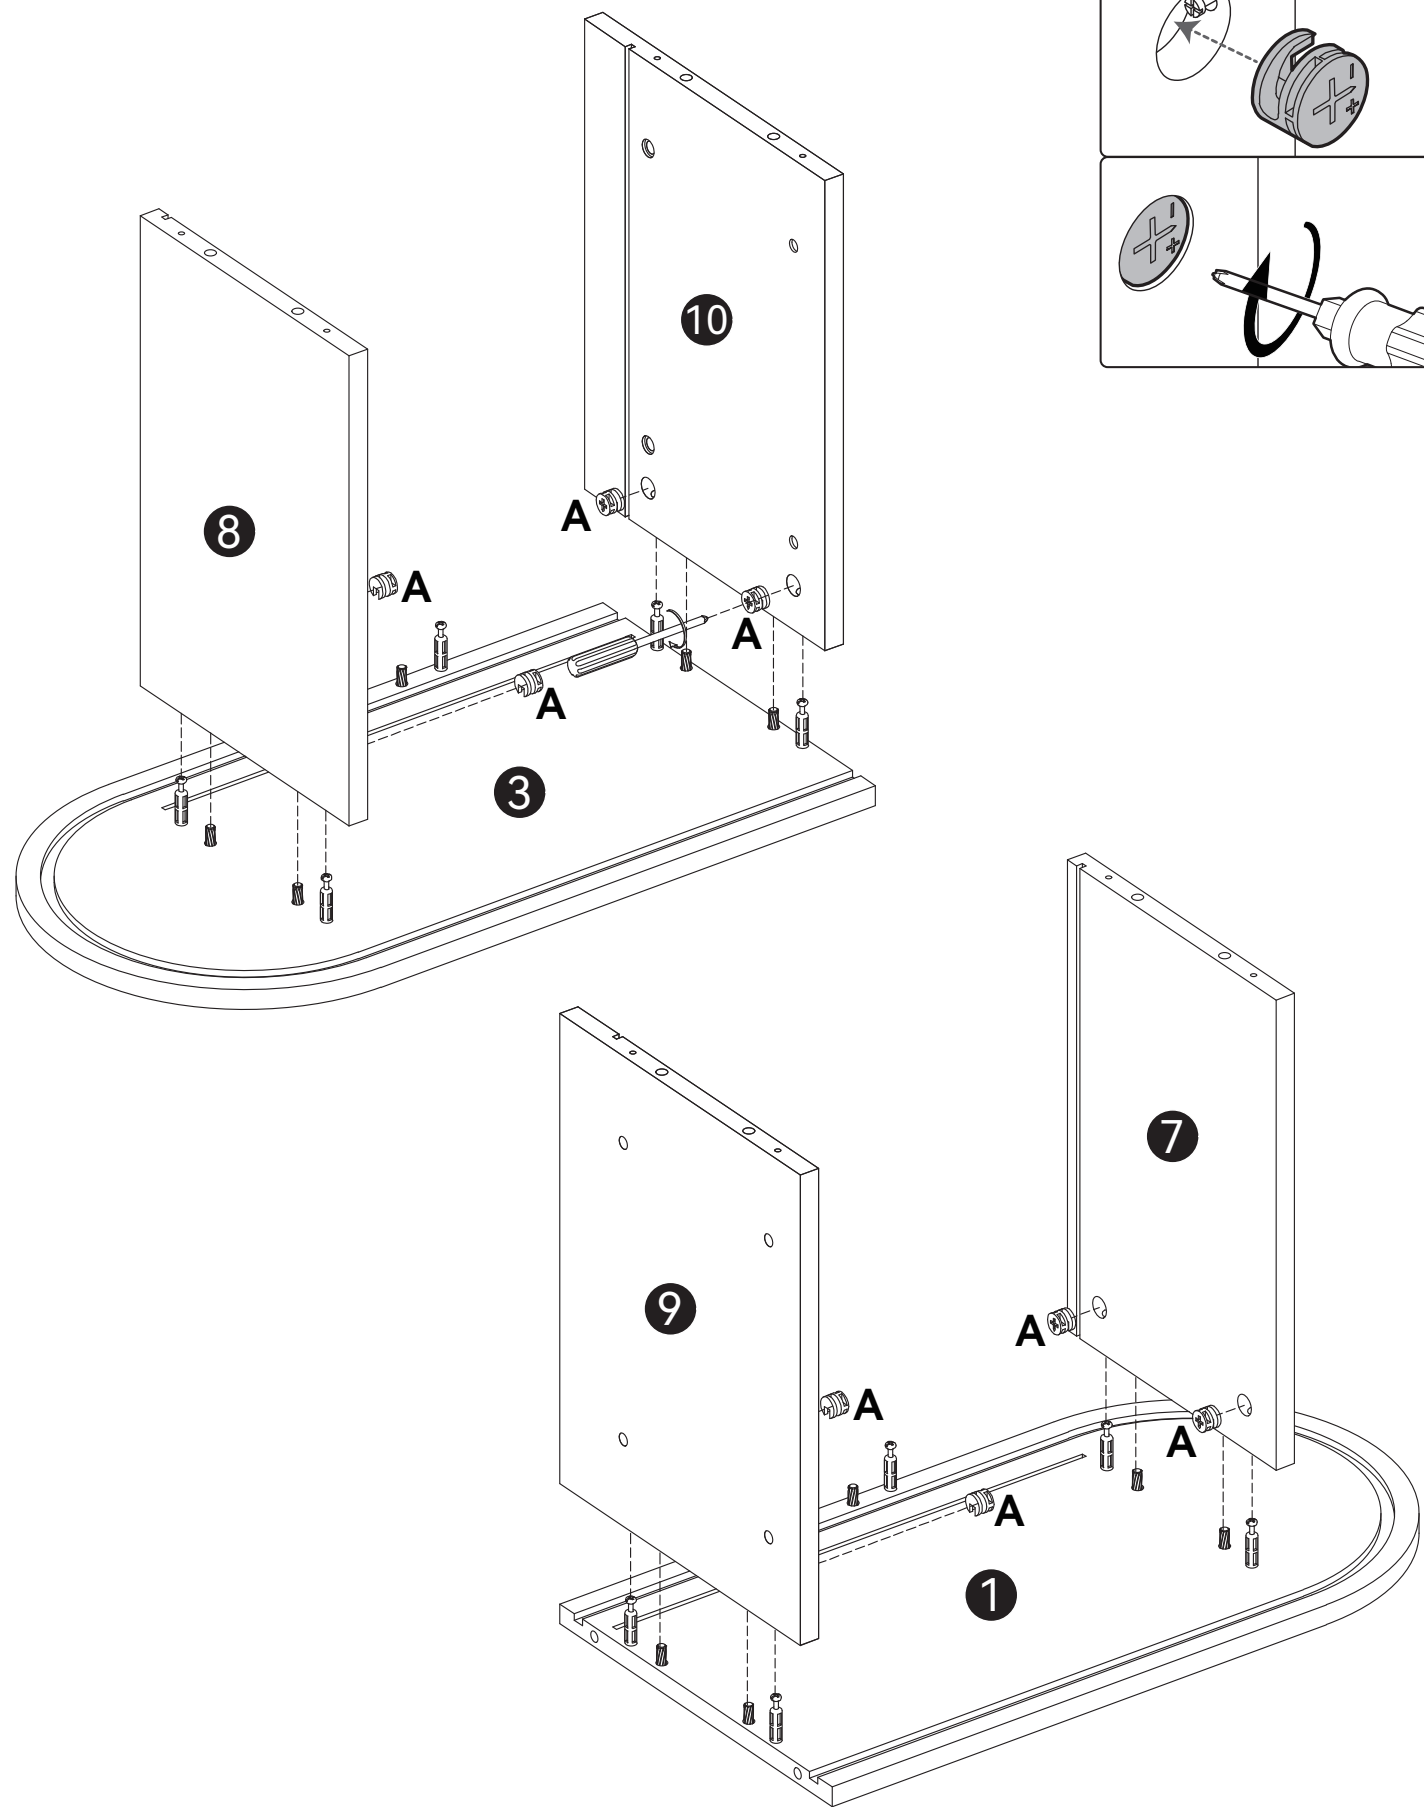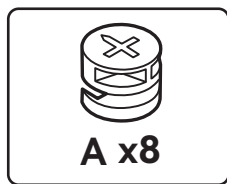  


10

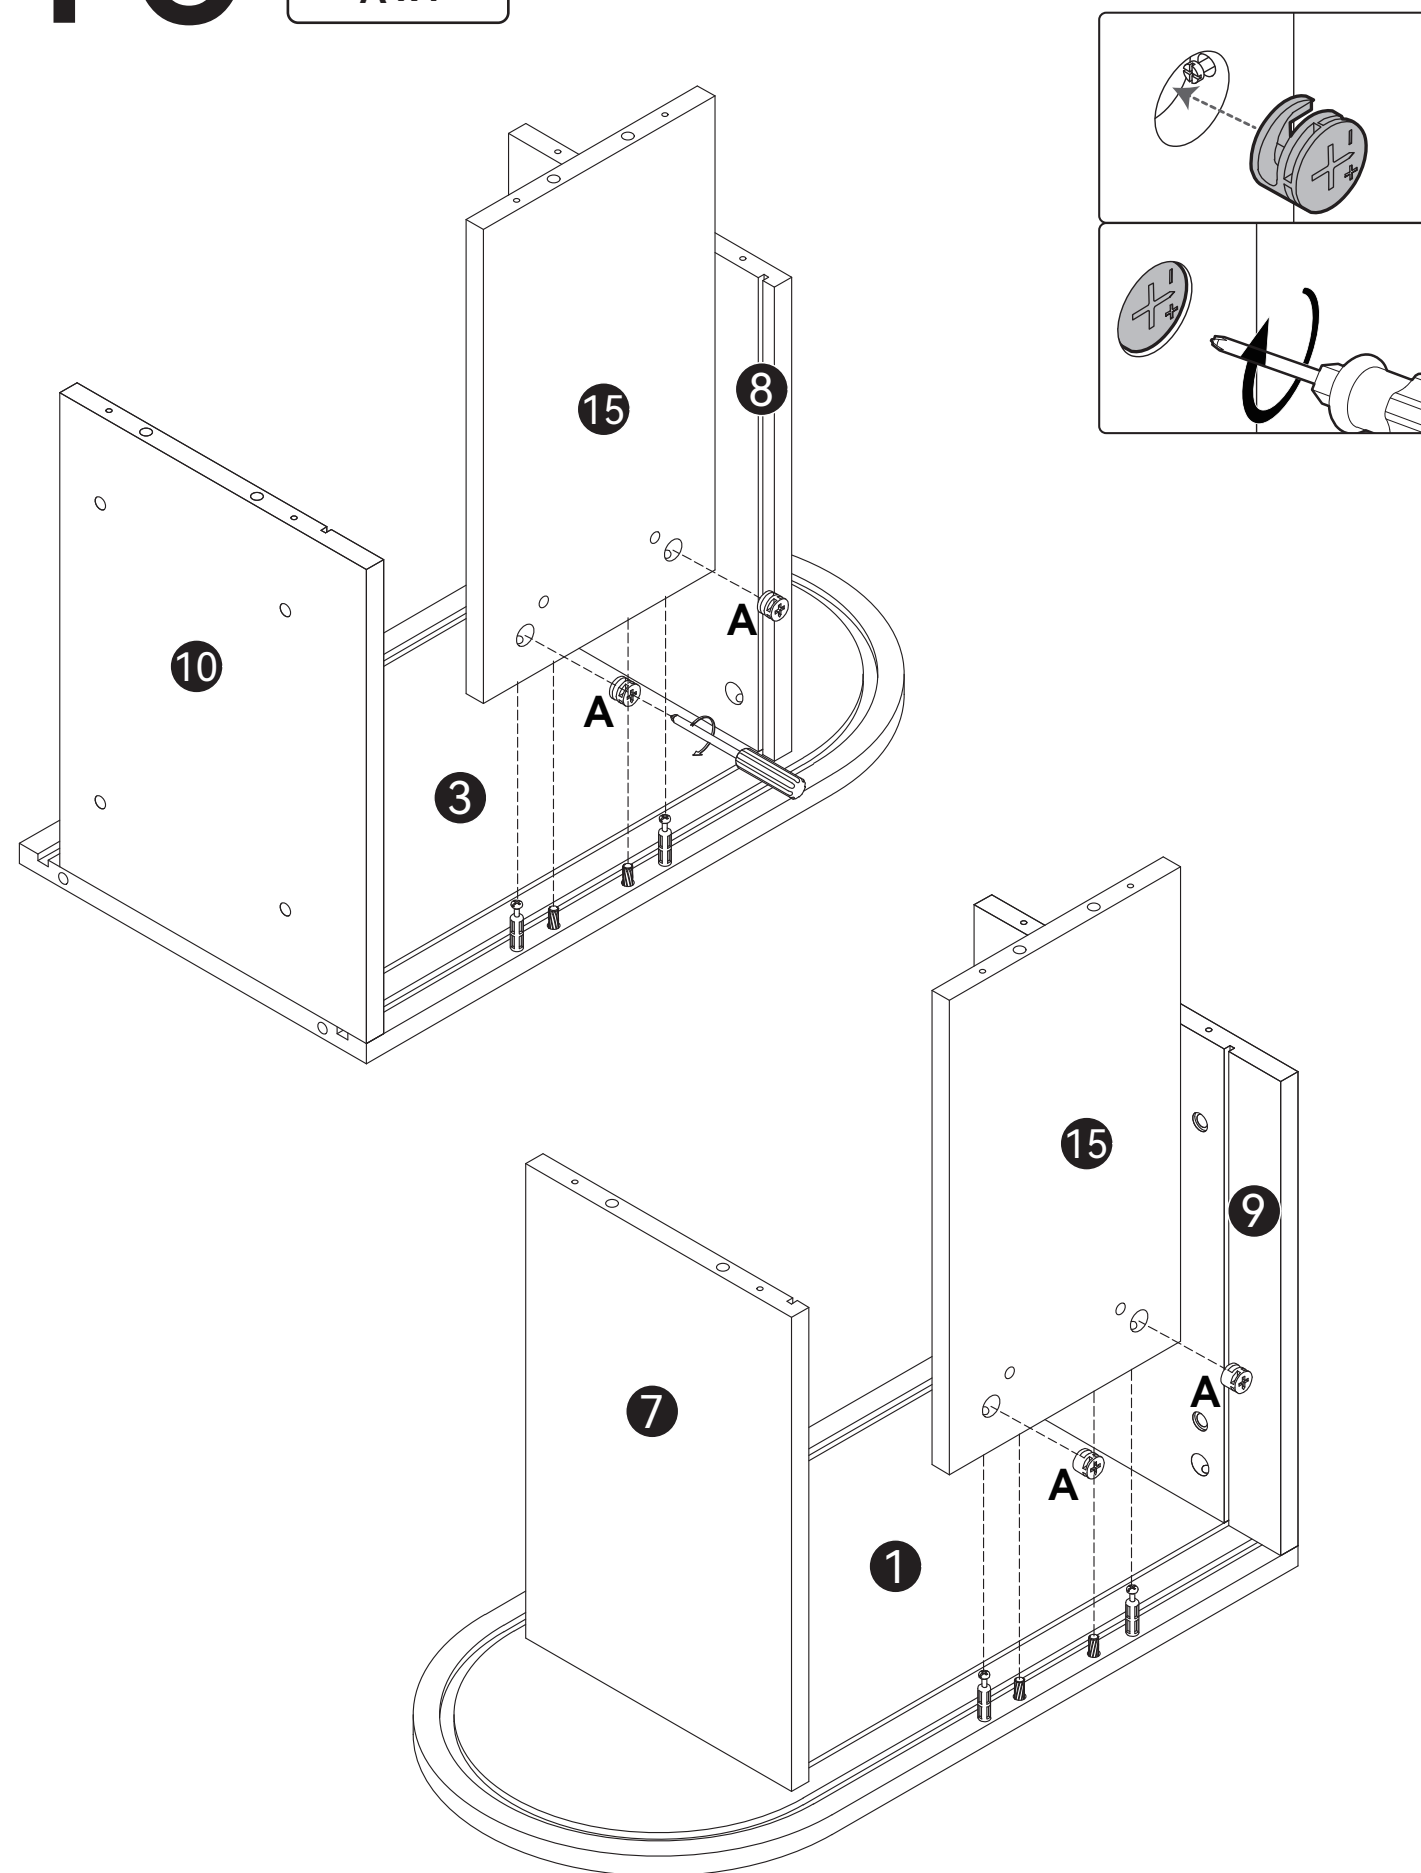 
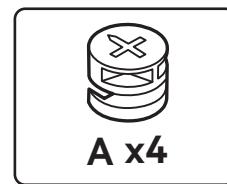 


11


 
Note: Place the side with holes facing down.

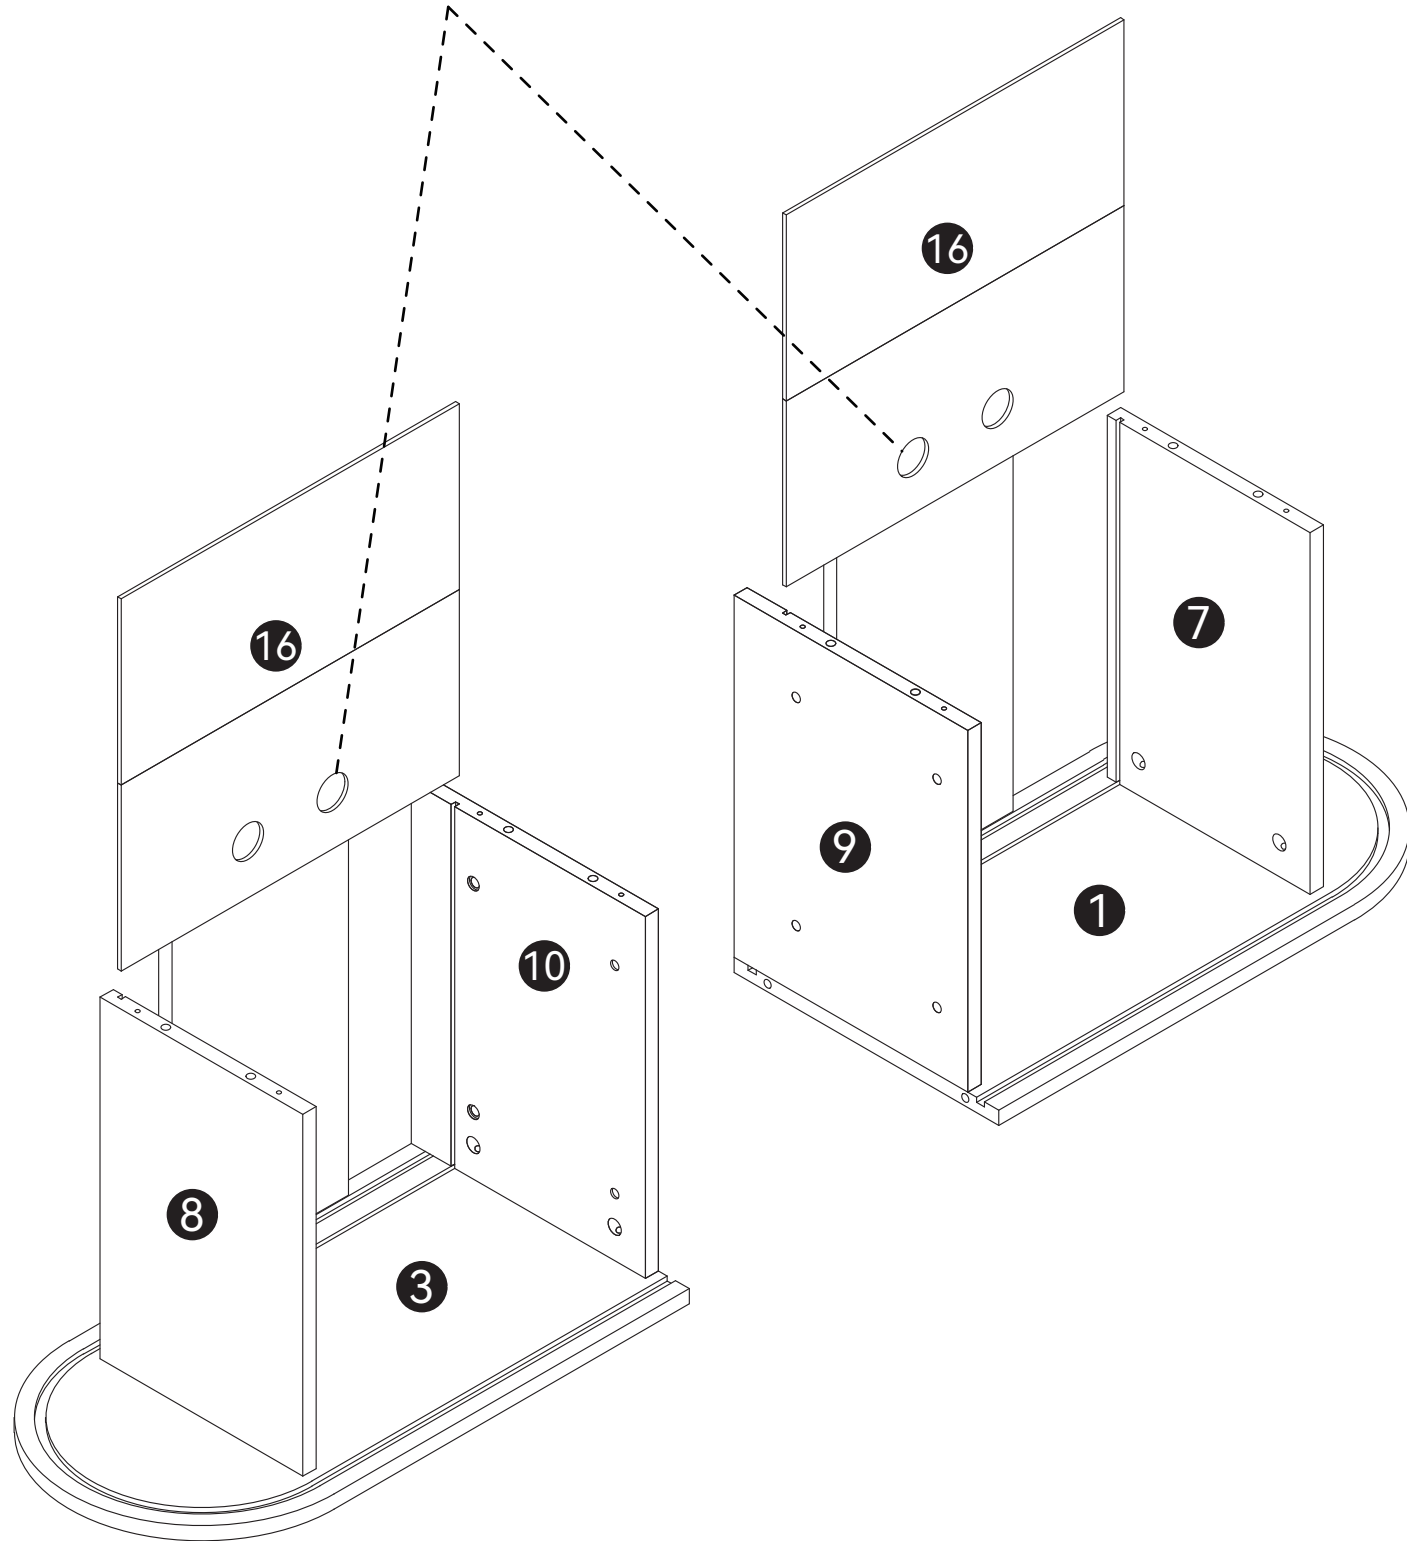



12

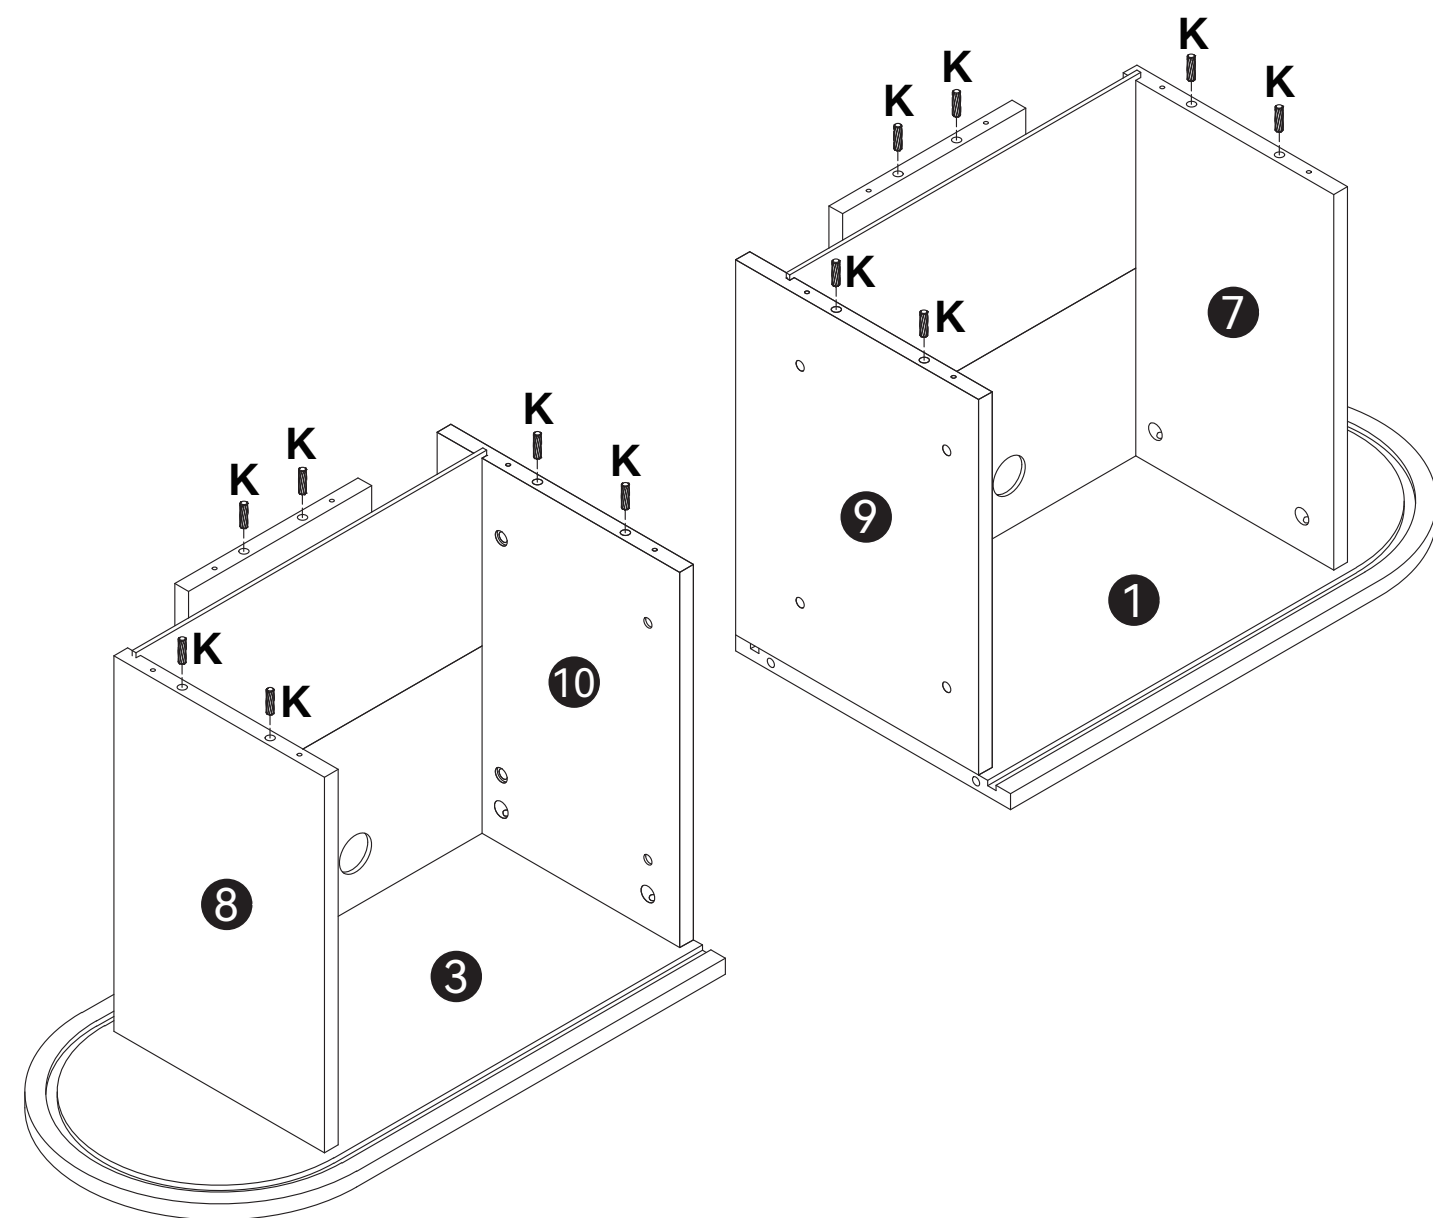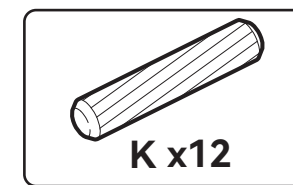  

13

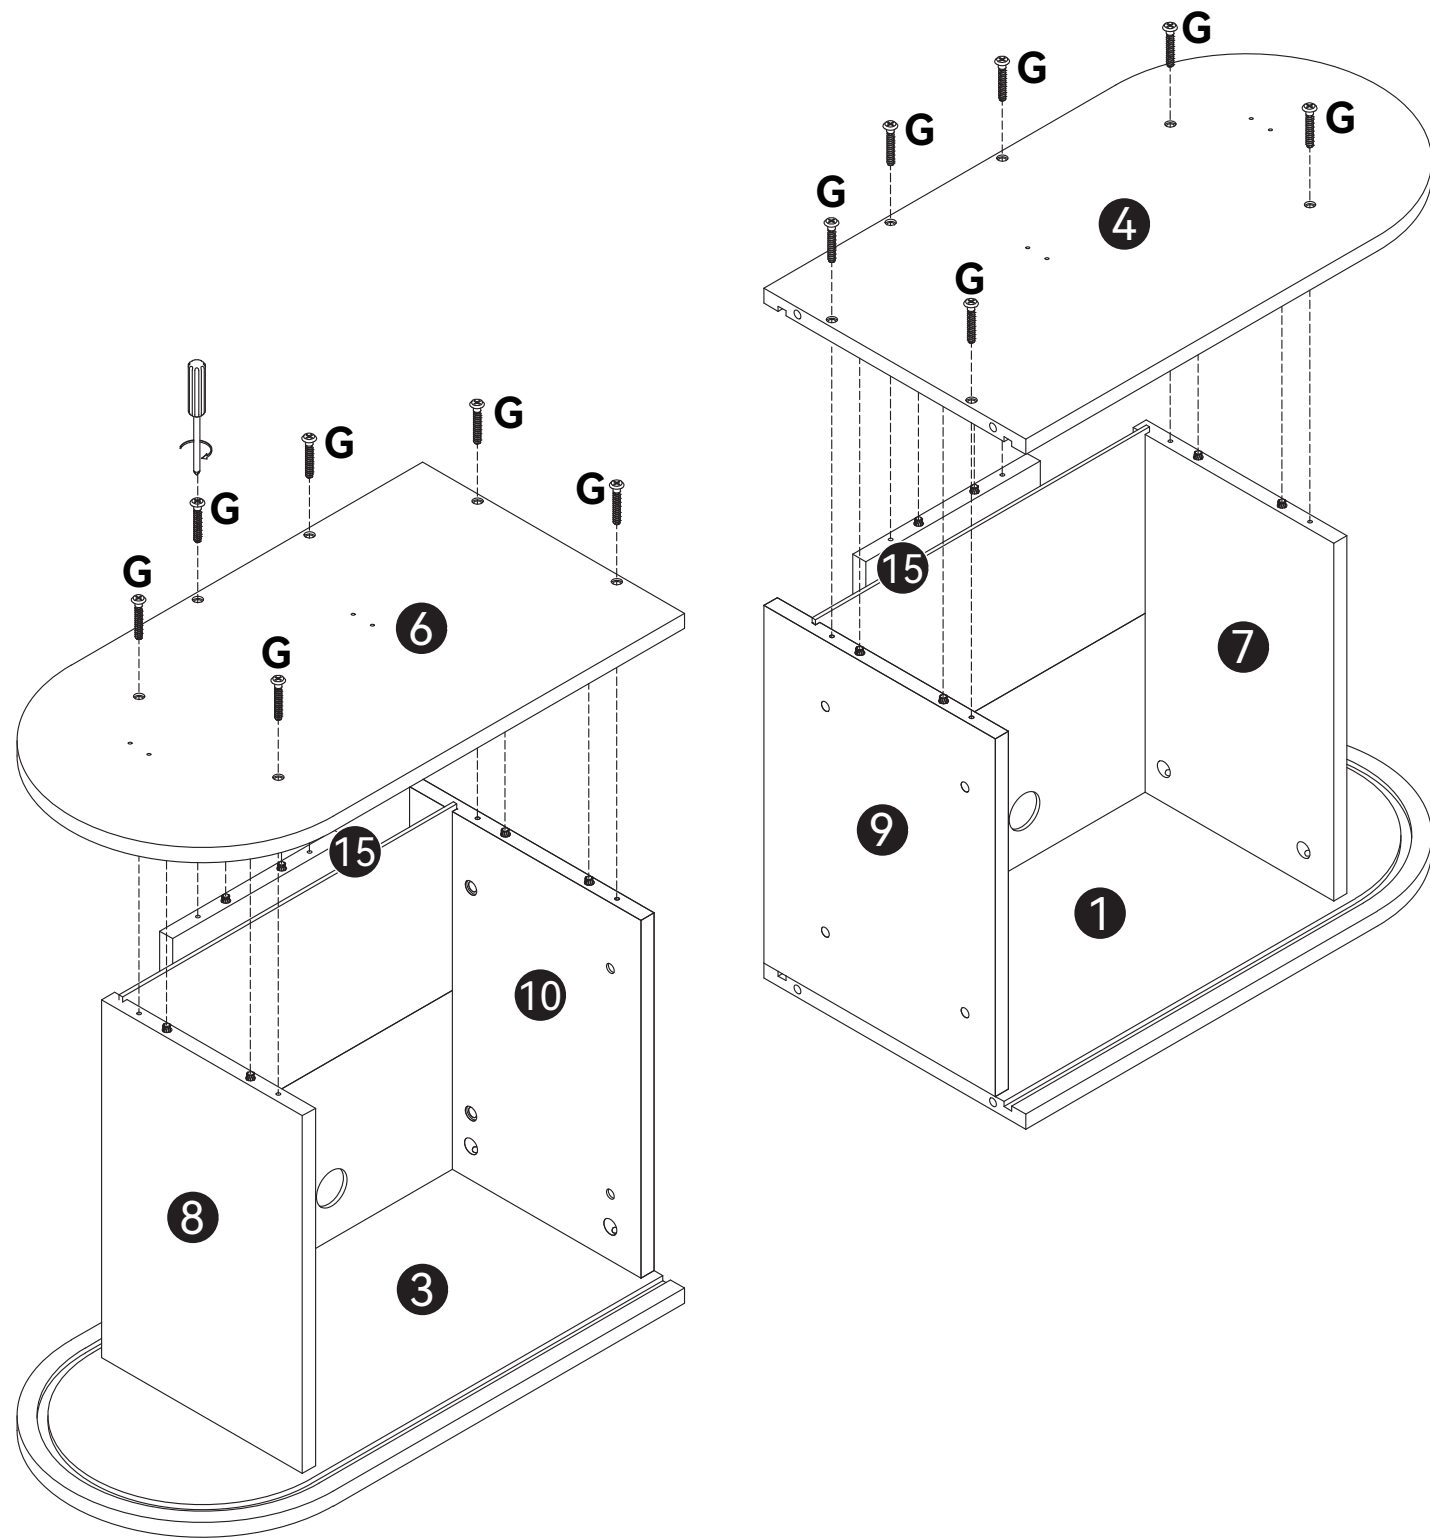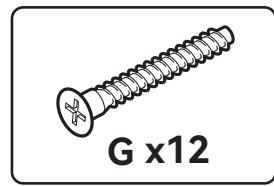  


14

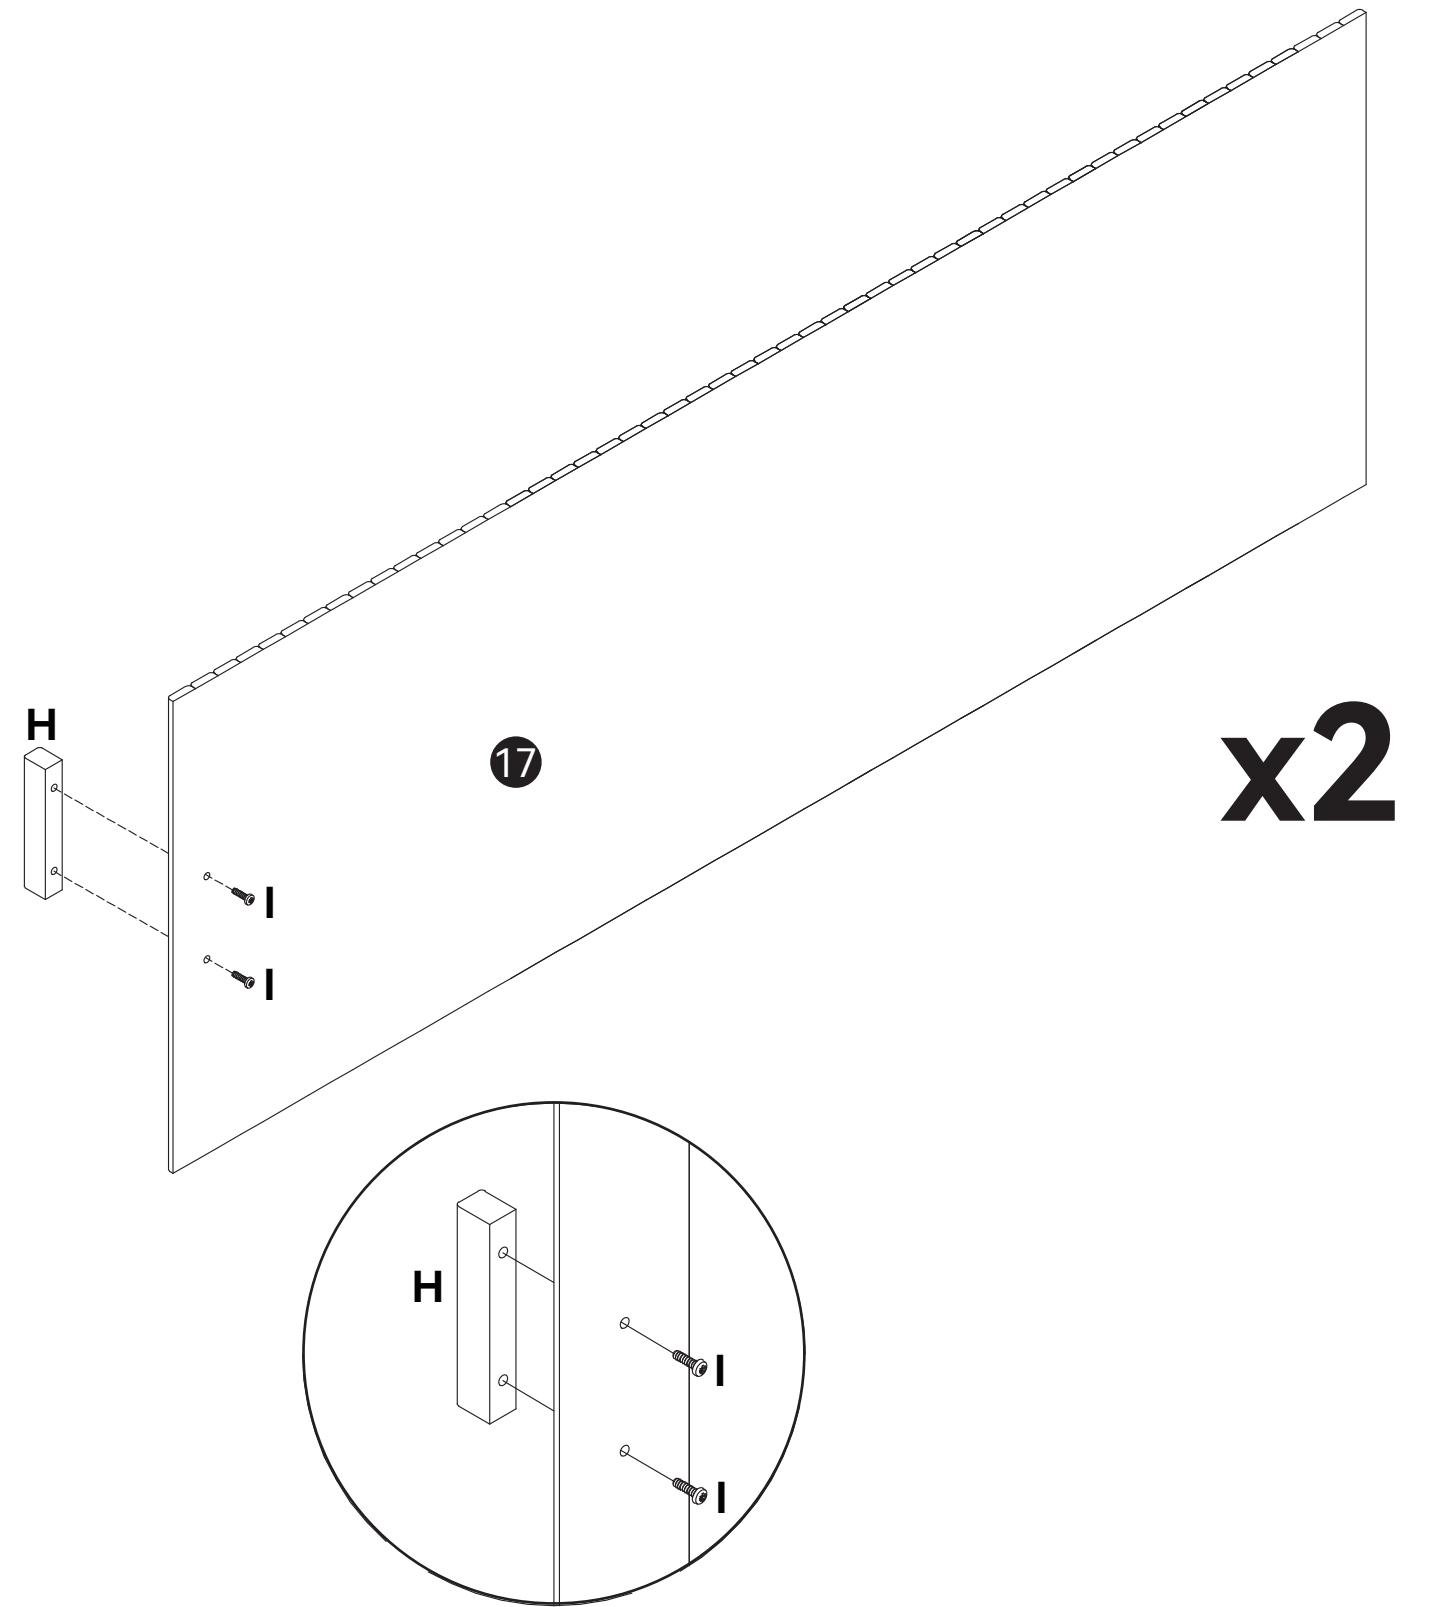 
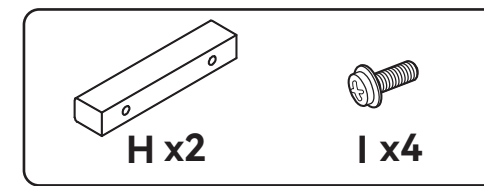 


15


 
Pay attention to the door installation direction:
slide the door from the front of the TV stand
toward the rear along the groove.

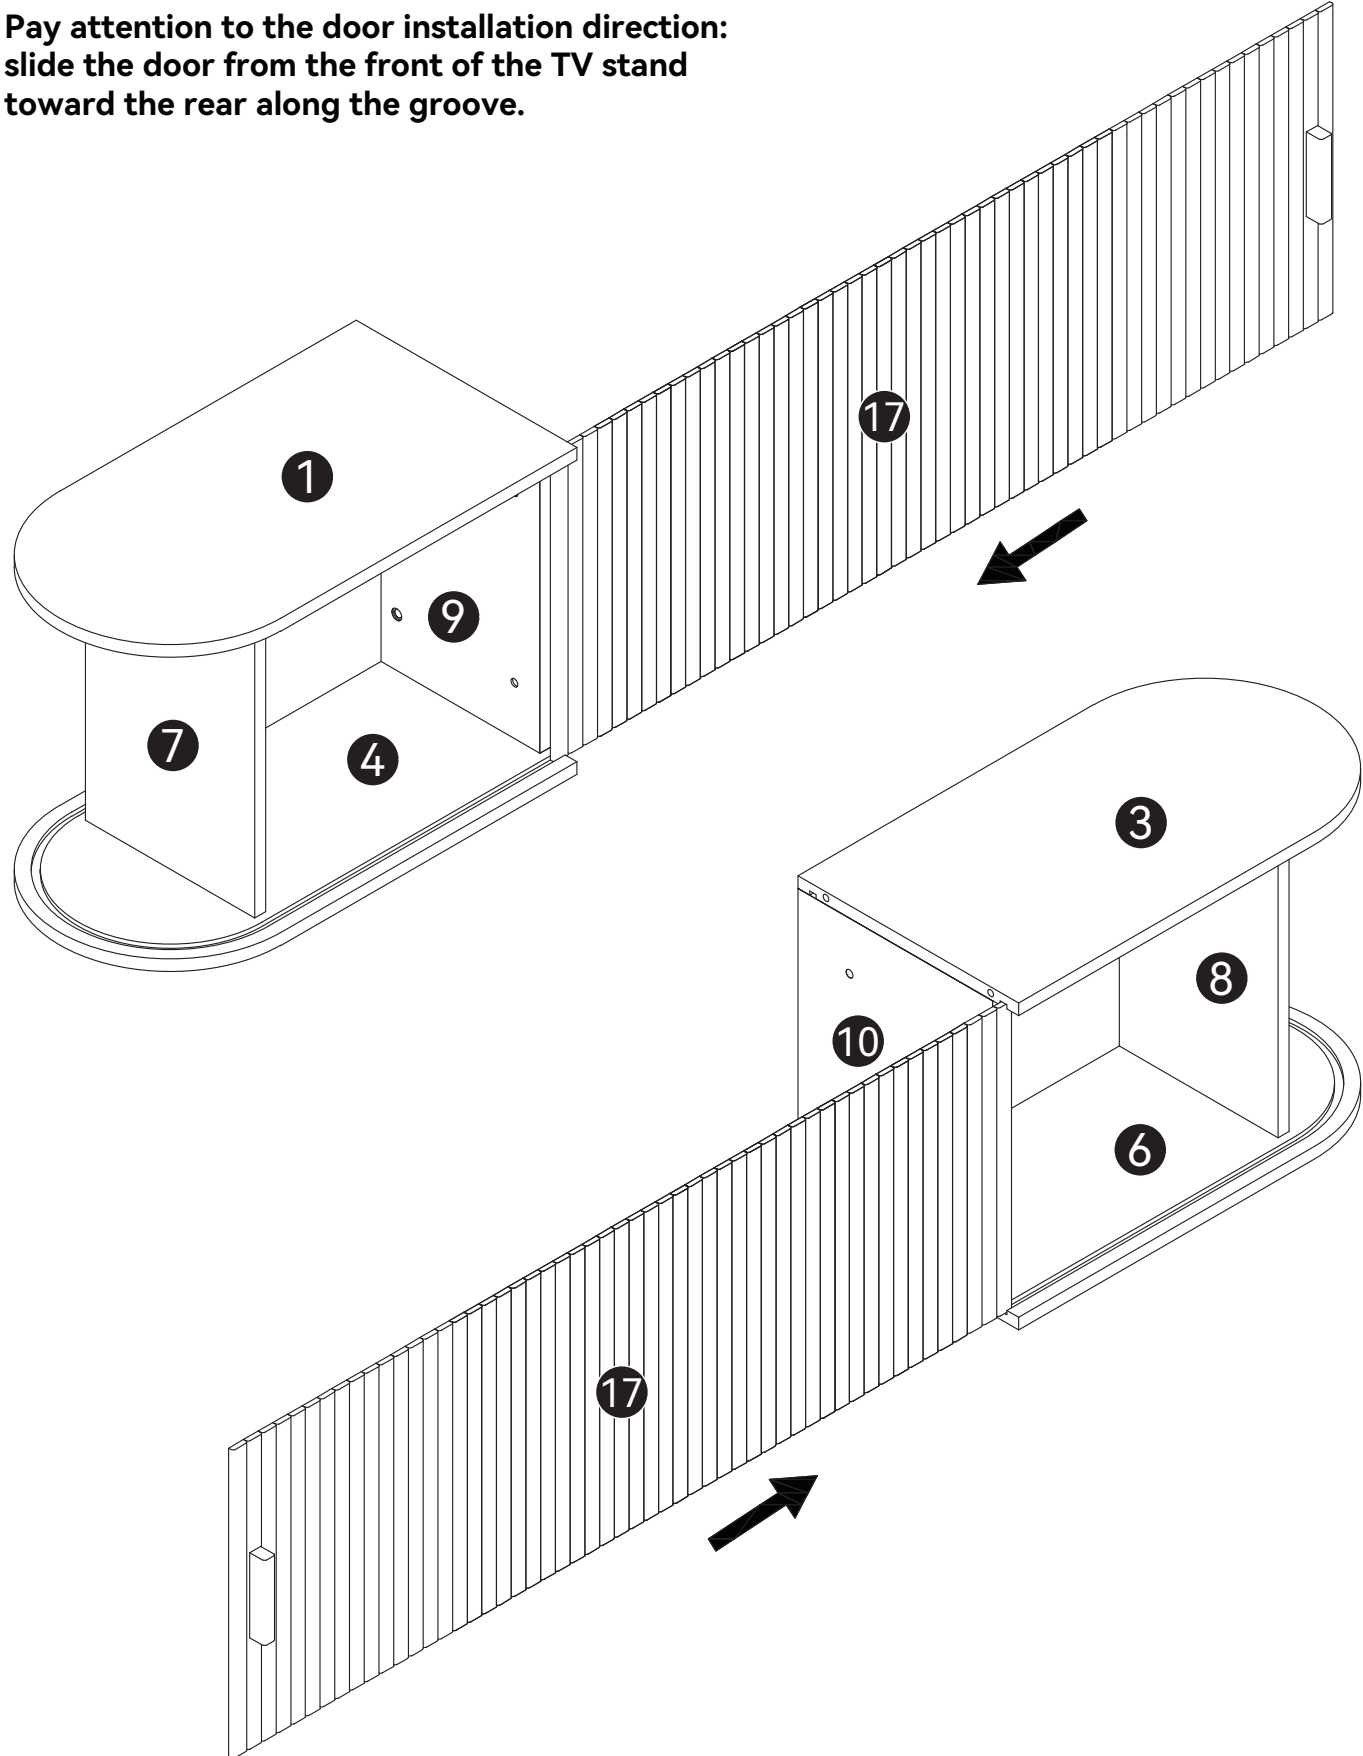



16

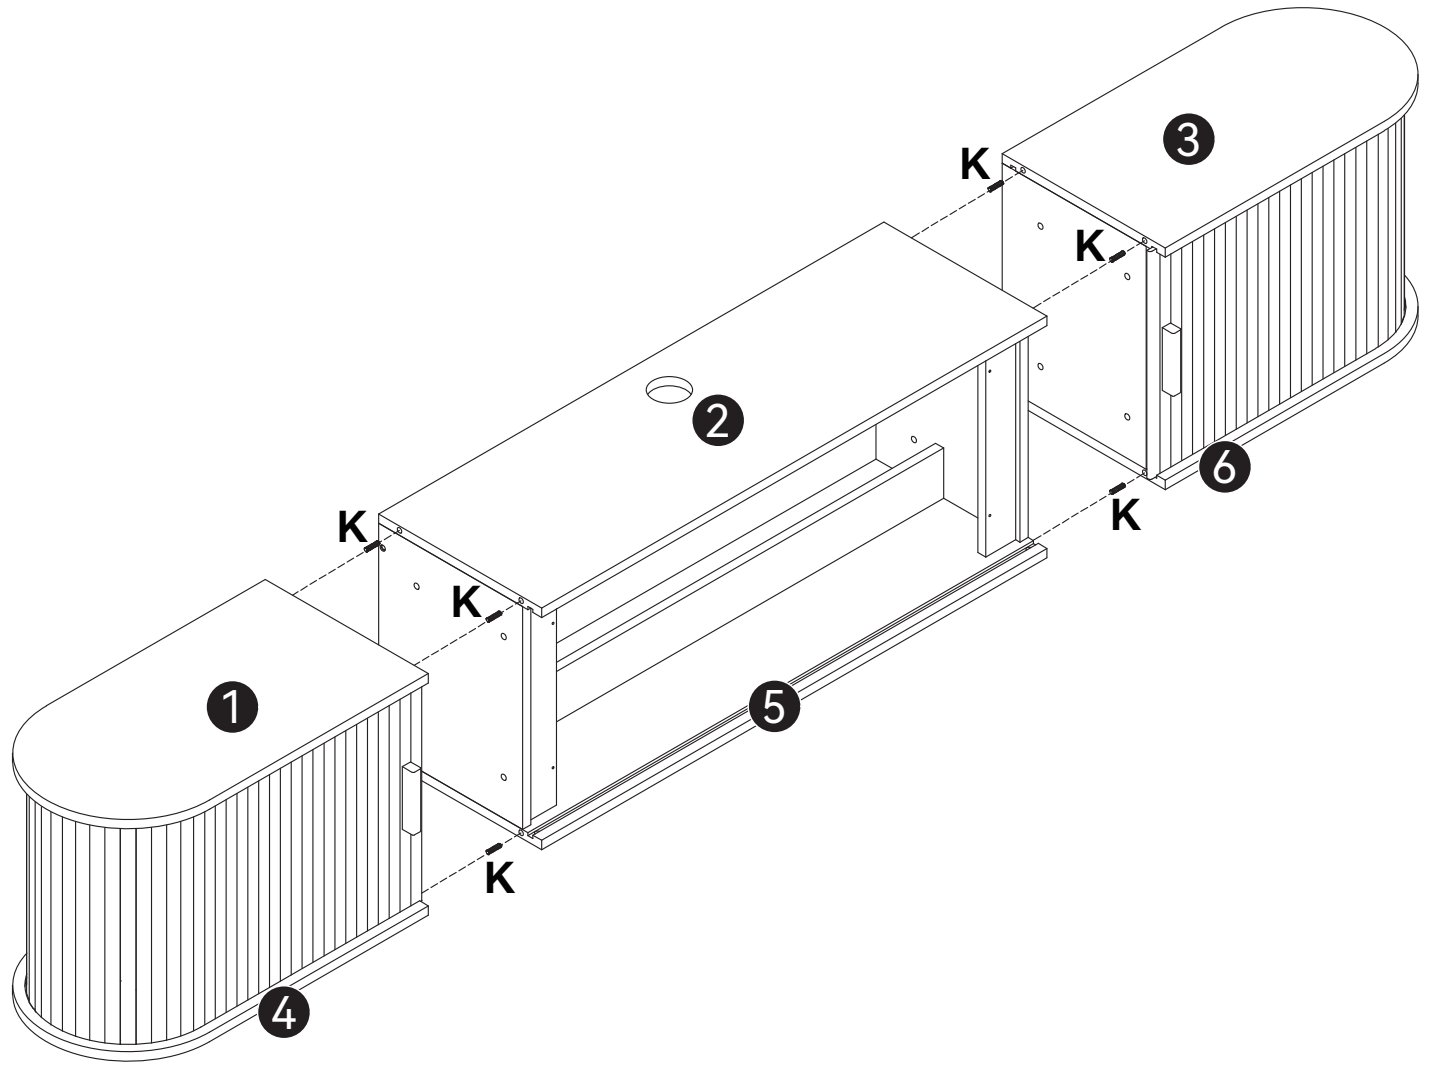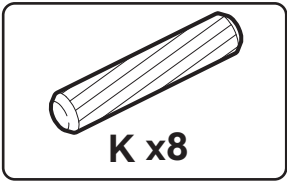  

17

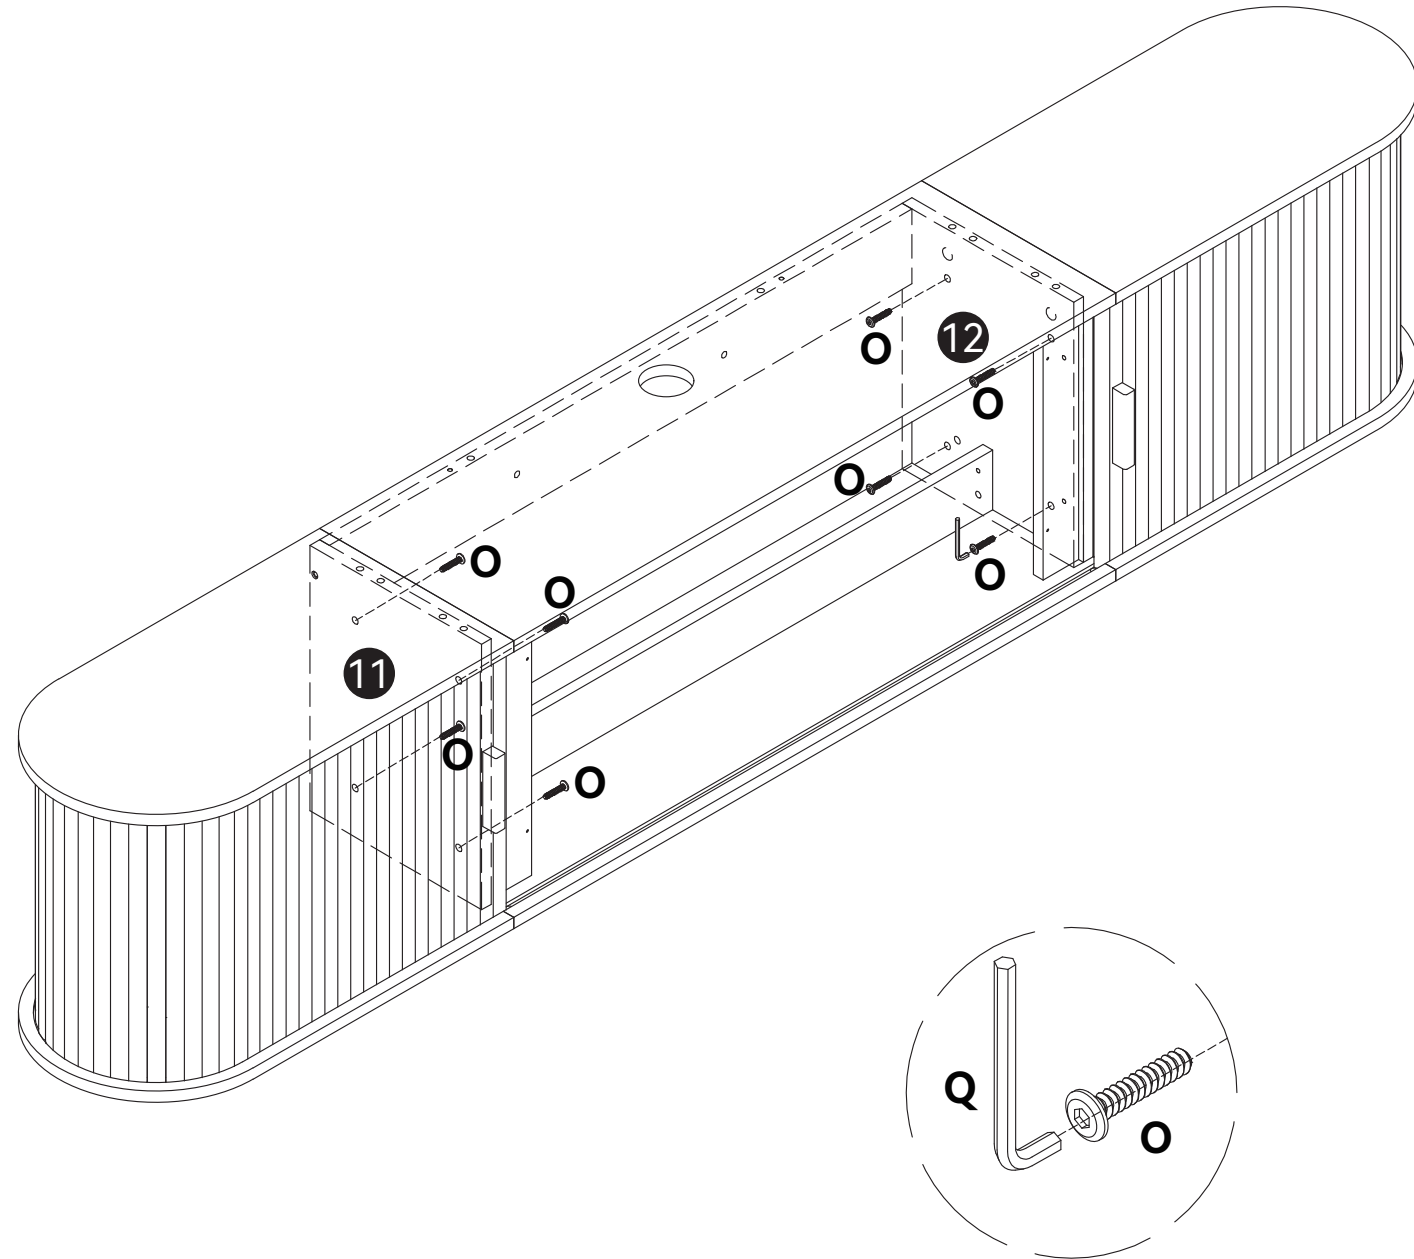 
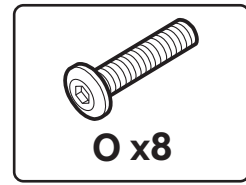 


18

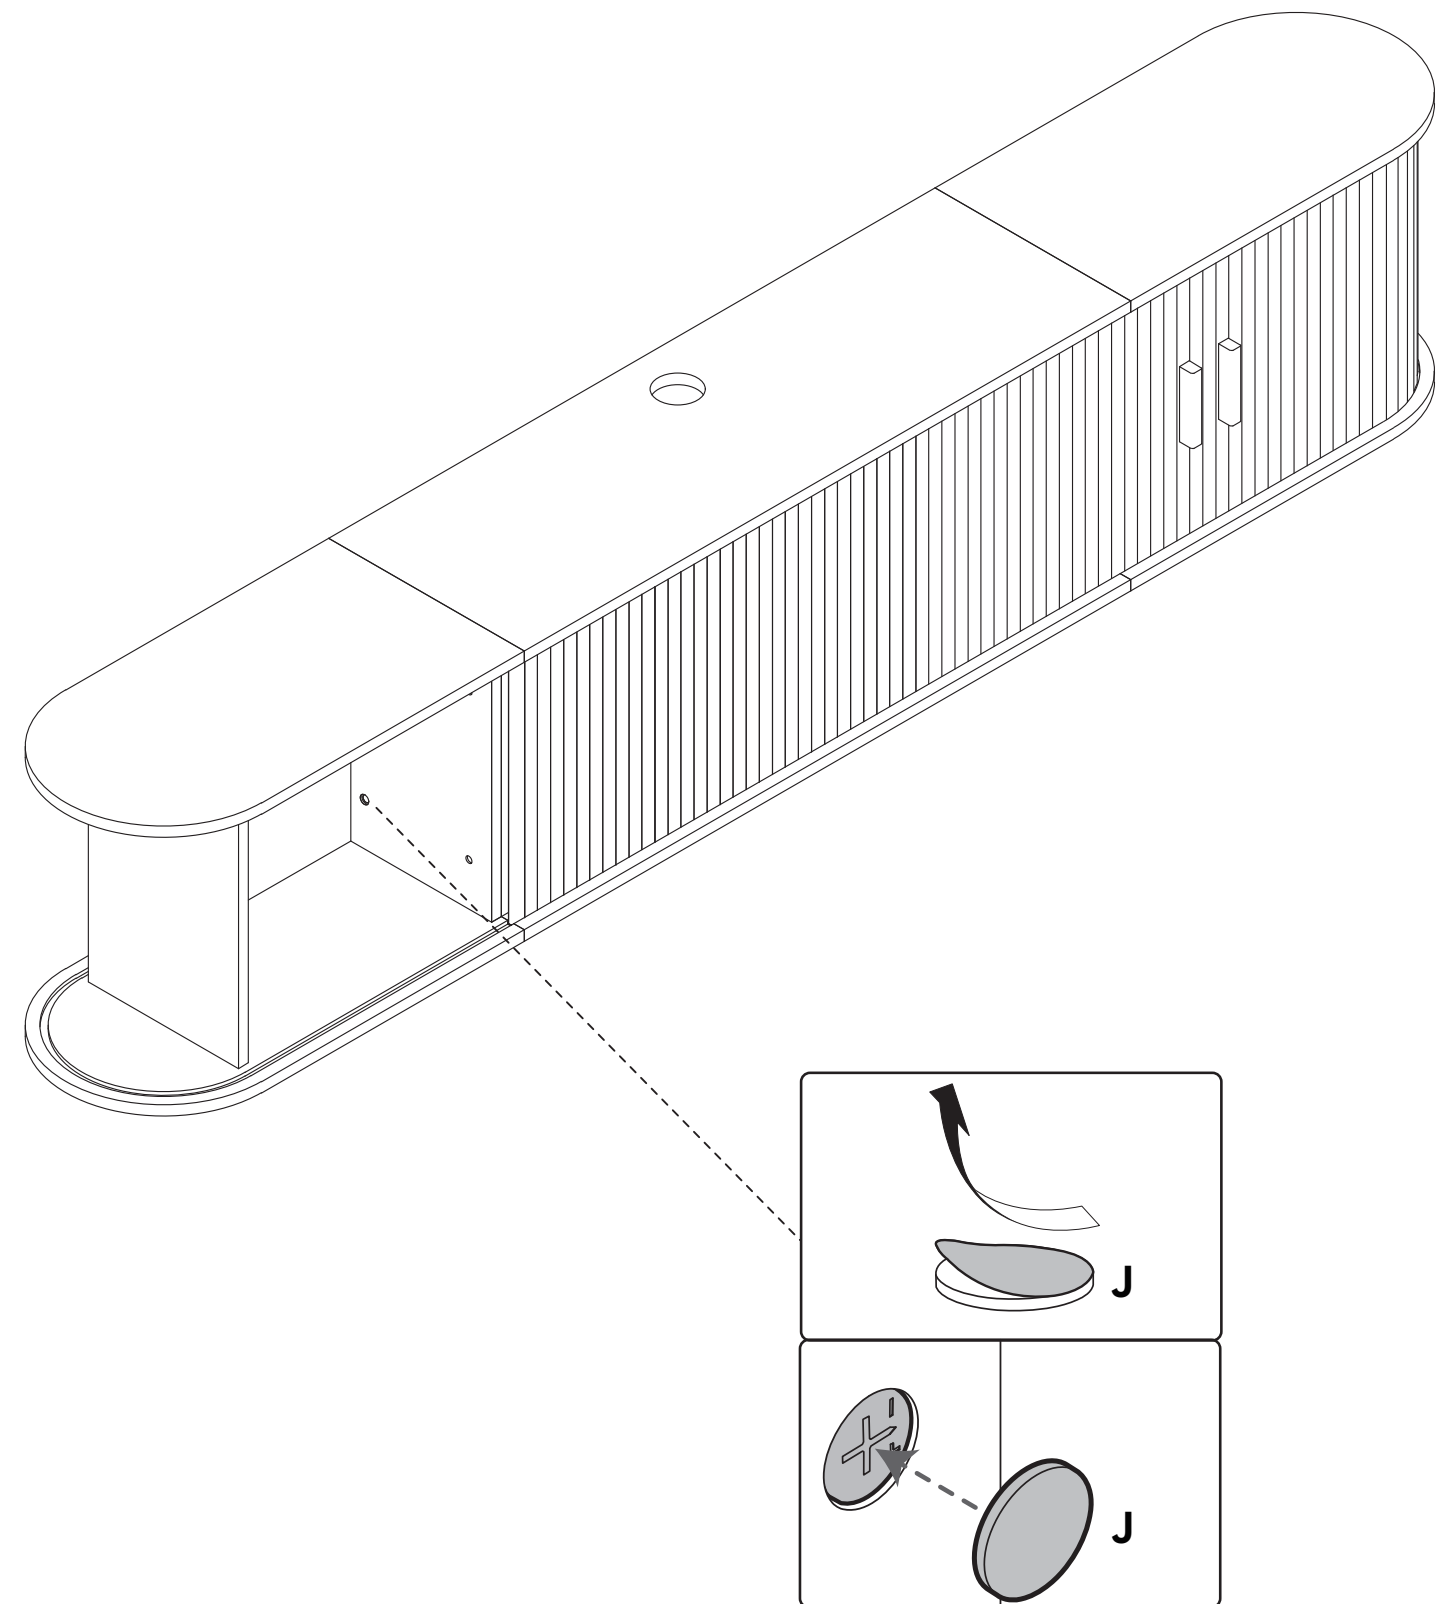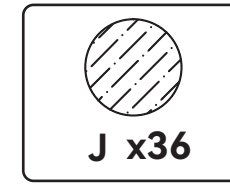  


Cover the exposed holes if desired.

 
 
19

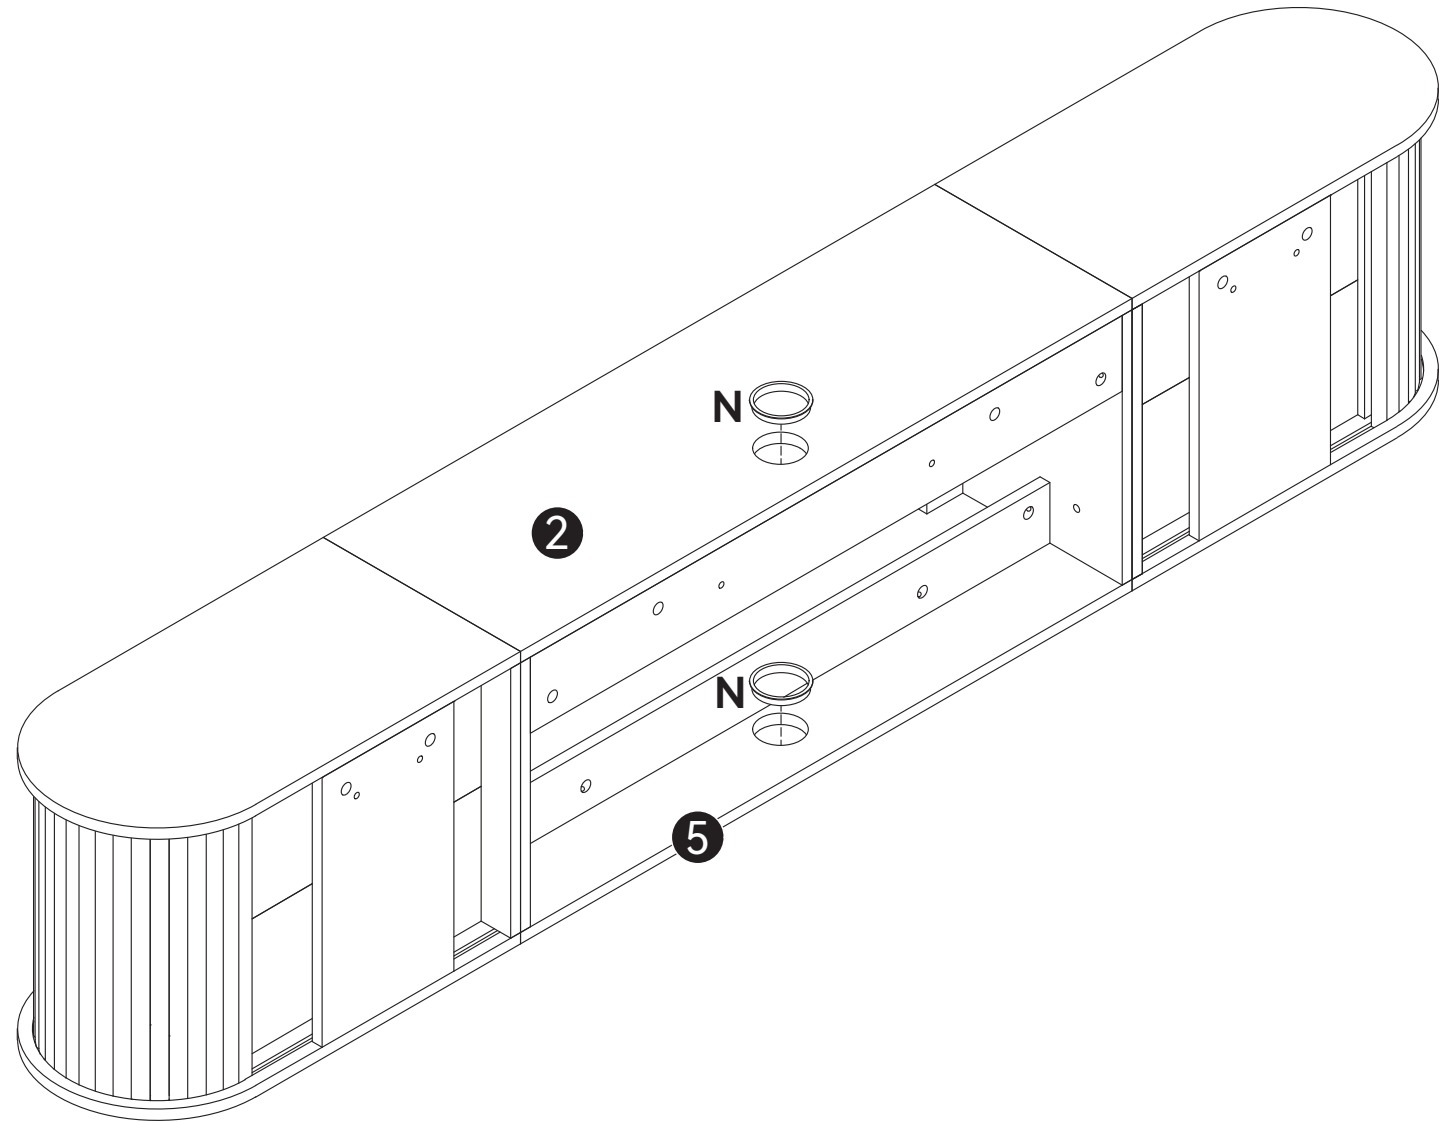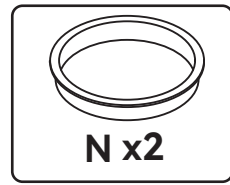

20

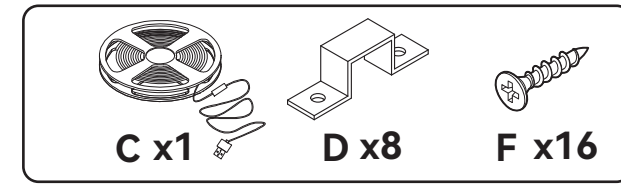 


Flip from step 19, and then install C .

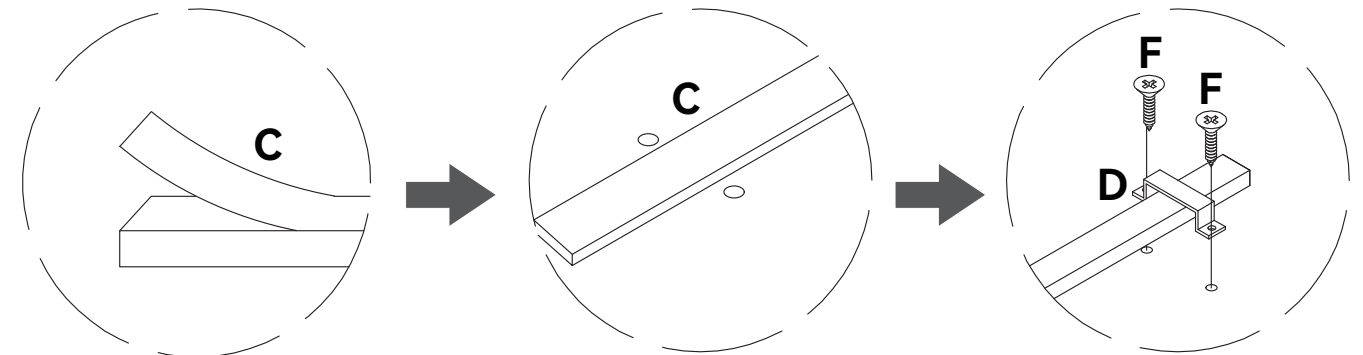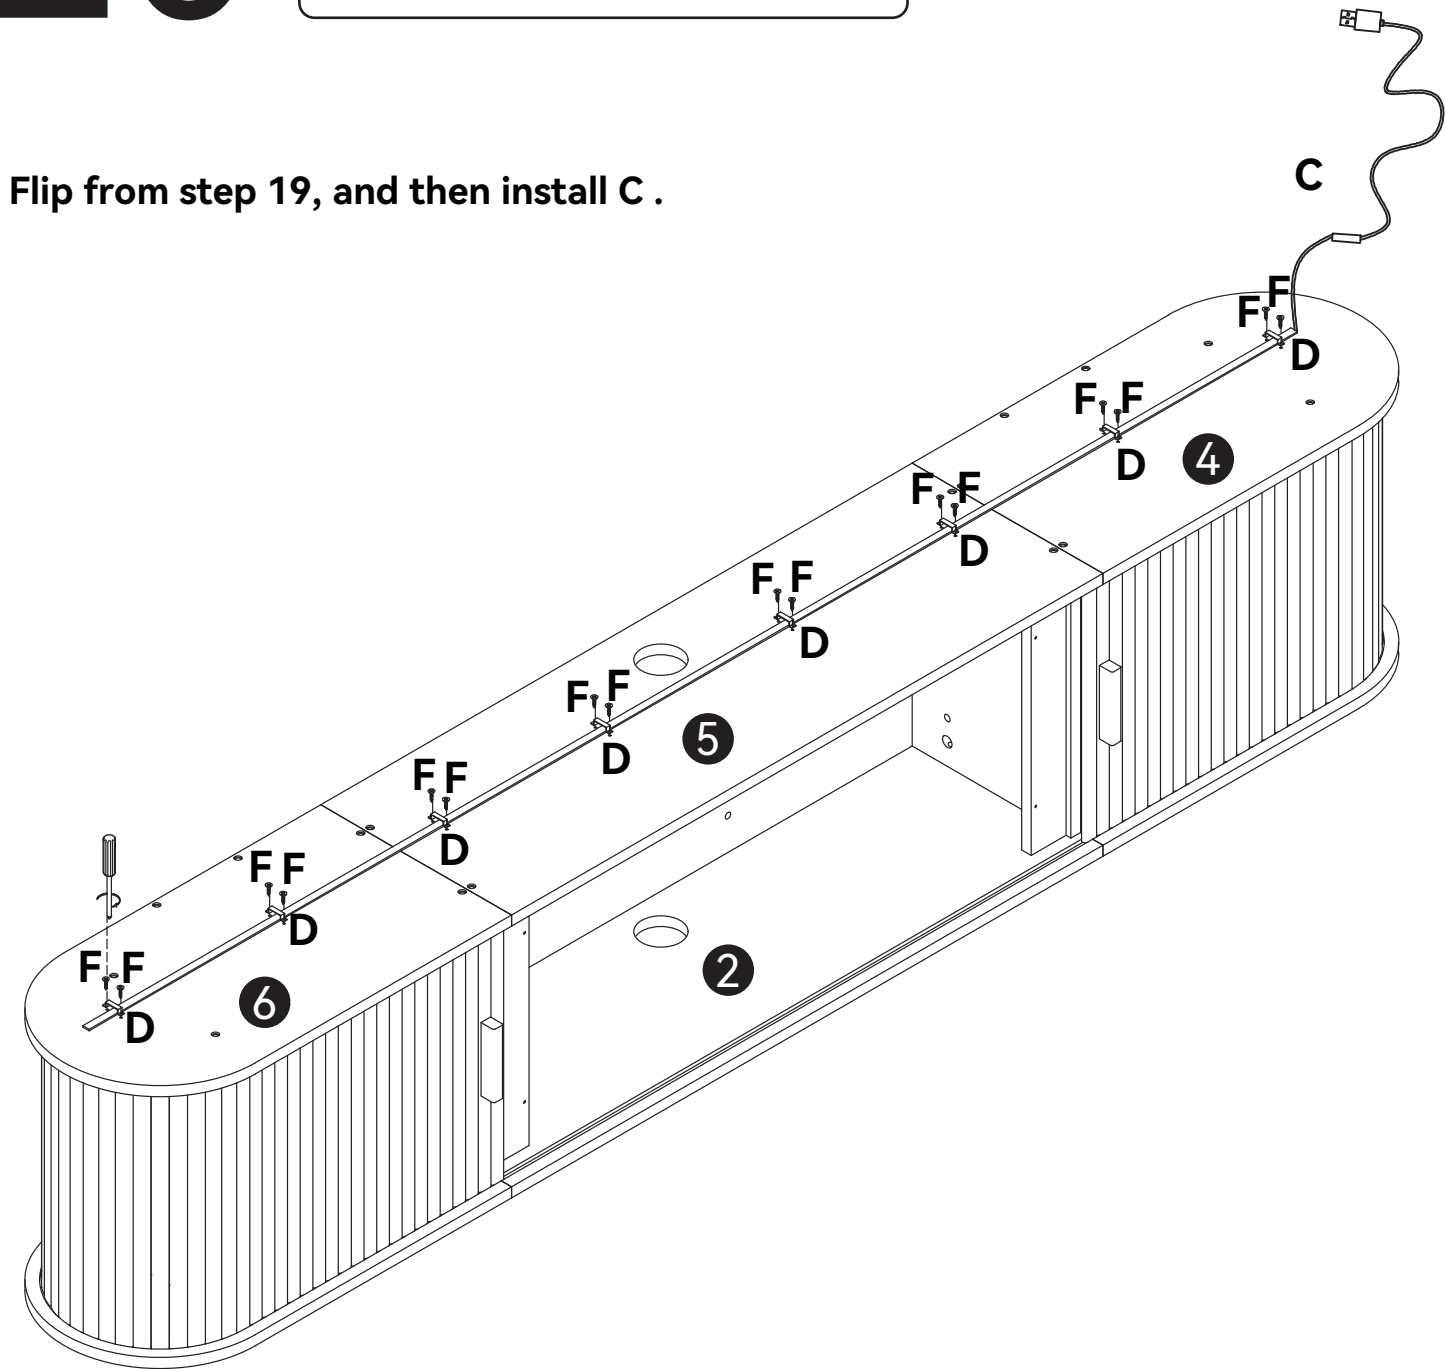  


Peel the double-sided tape from the light strip and stick it onto the board, centered over the small holes.

Clip the light strip with buckle D and tighten the screws.


 
21

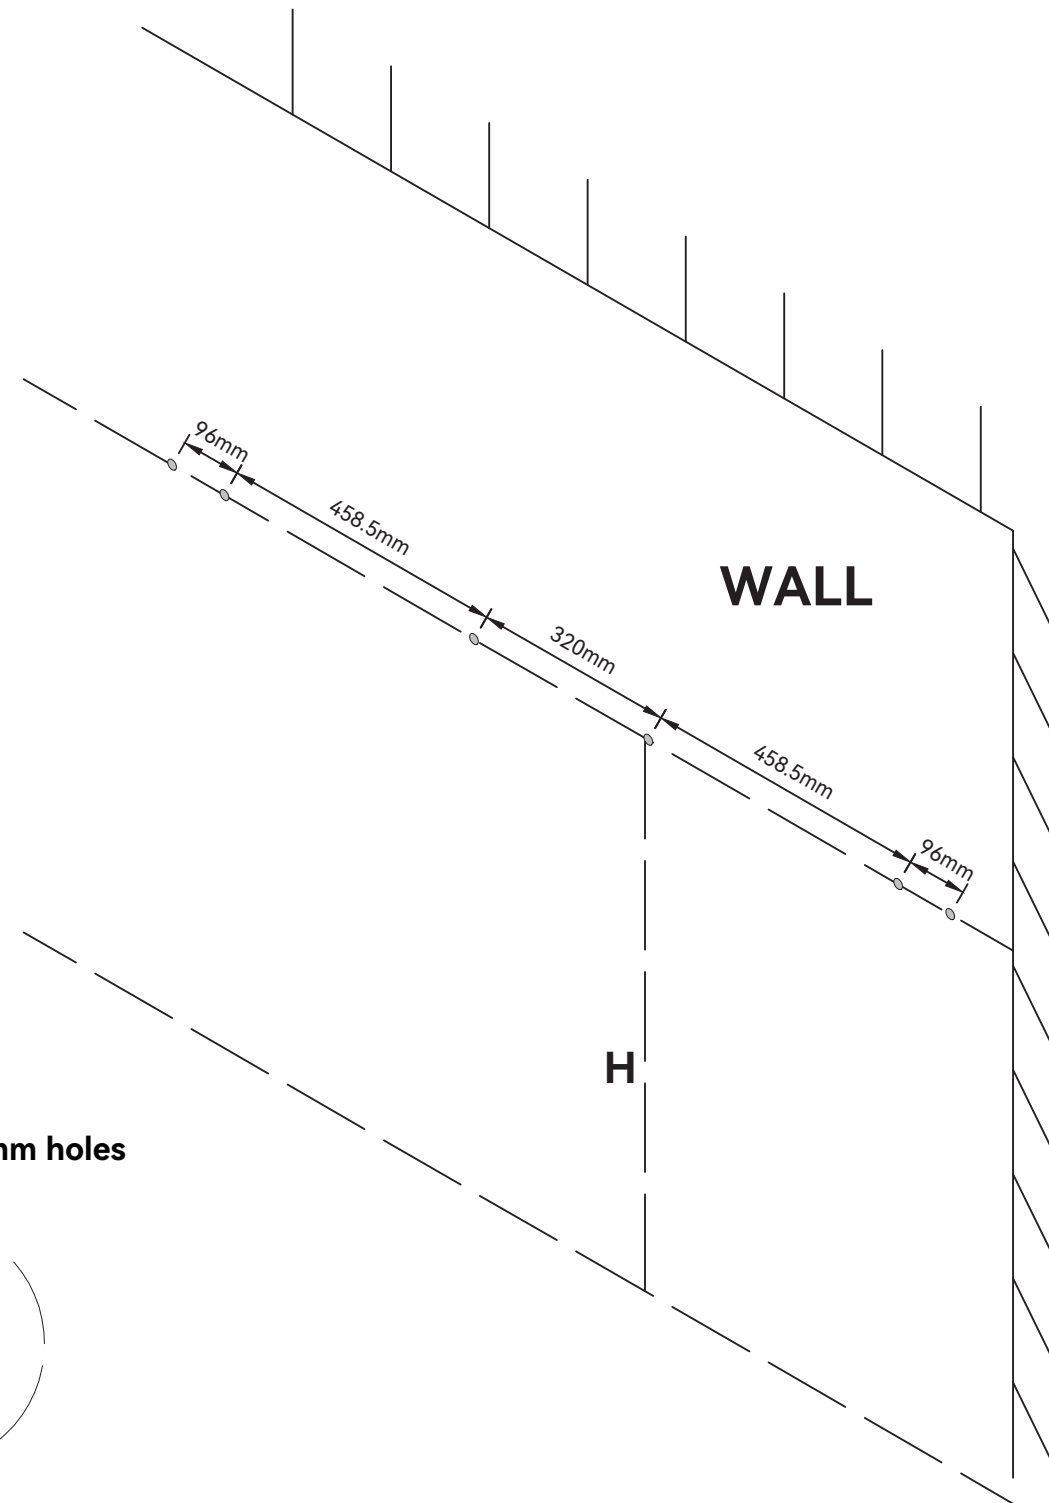

Drill Ø10x60mm holes
on the wall.

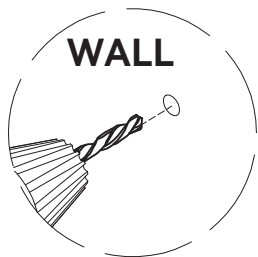 



22

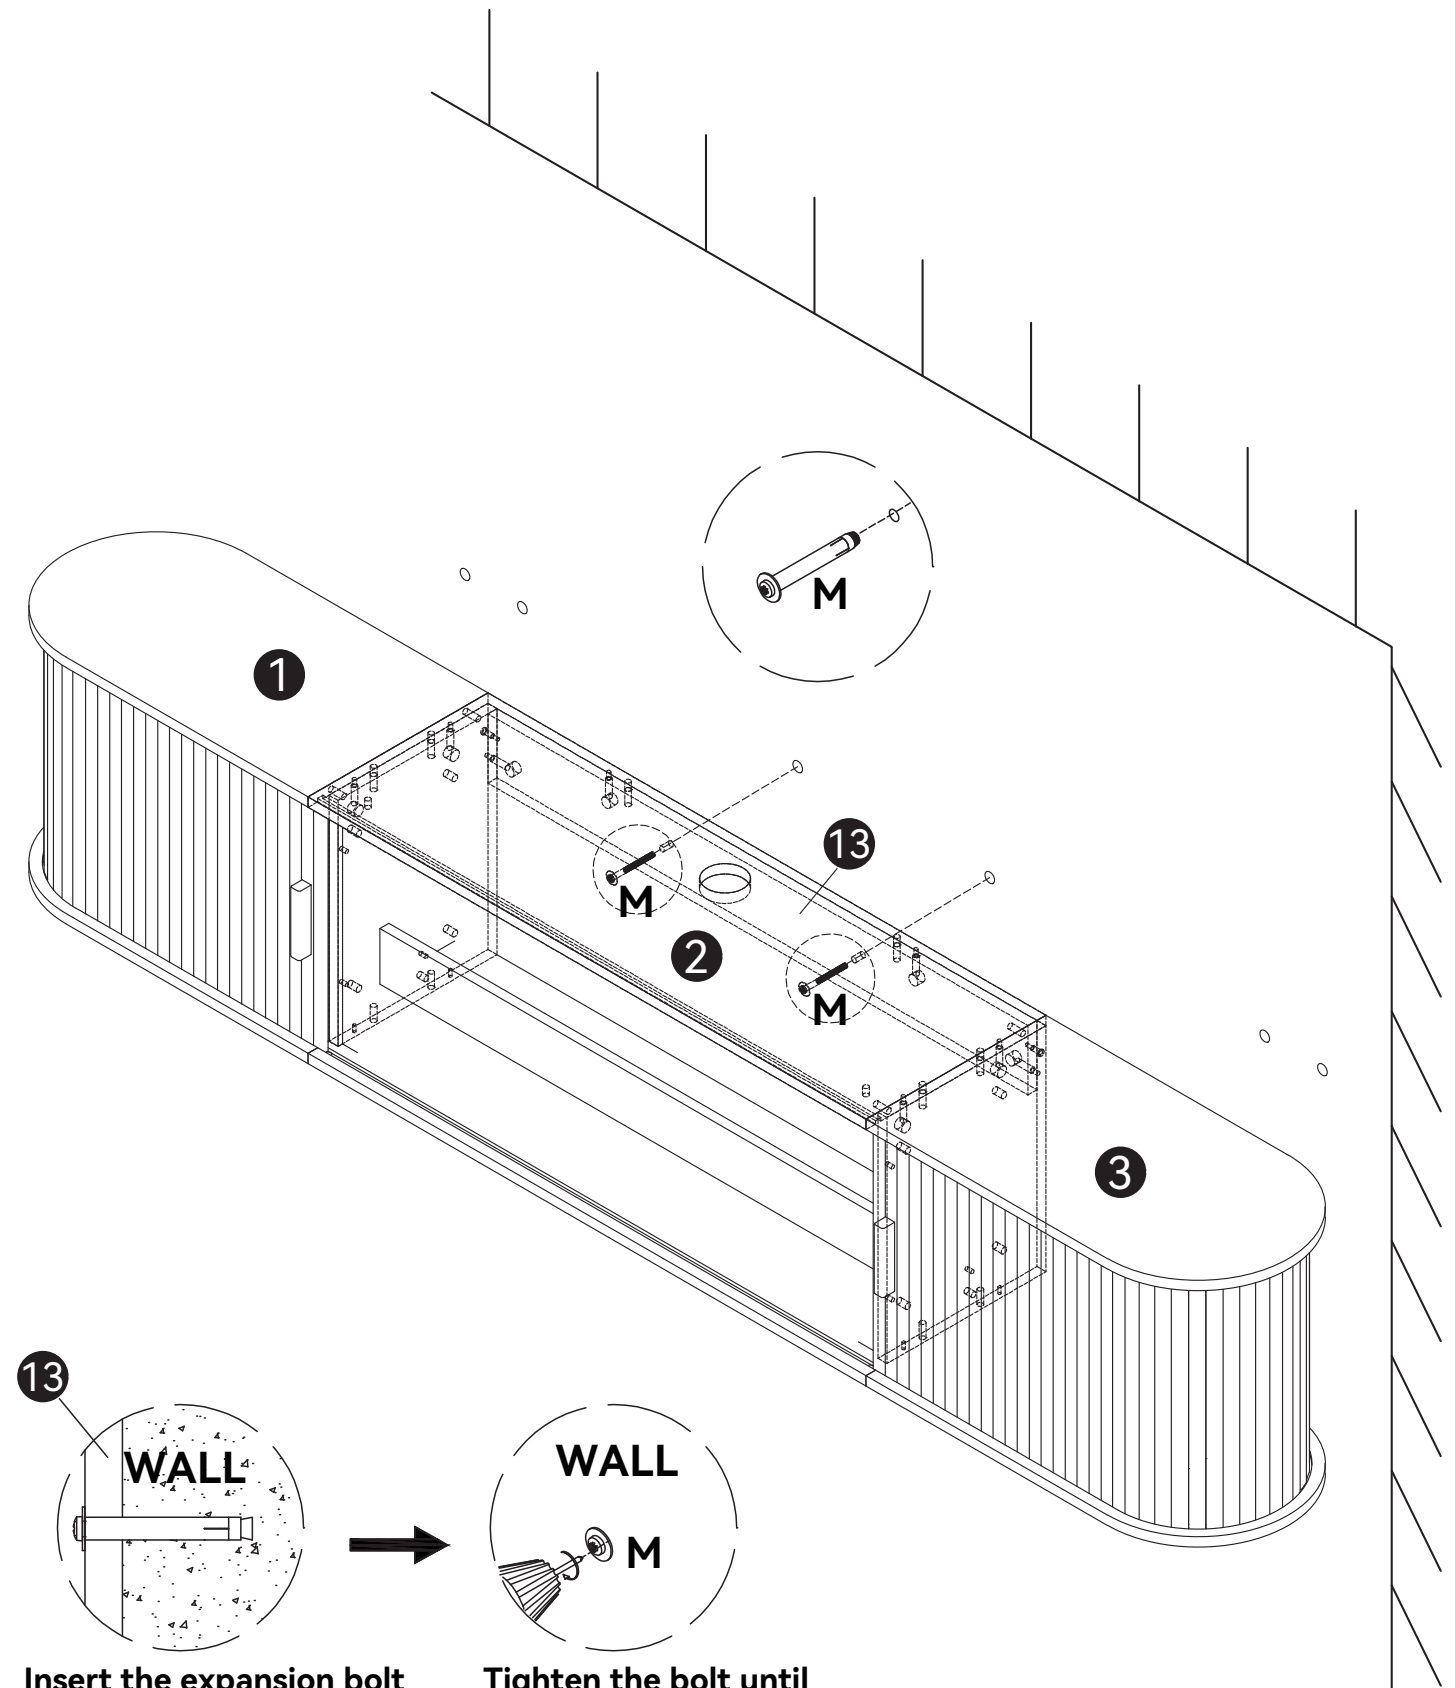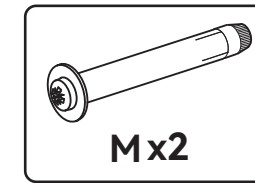  


Insert the expansion bolt
through the hole on the
back of the TV stand,
then tap it into the wall.

Tighten the bolt until
the TV stand is securely
mounted.

  23

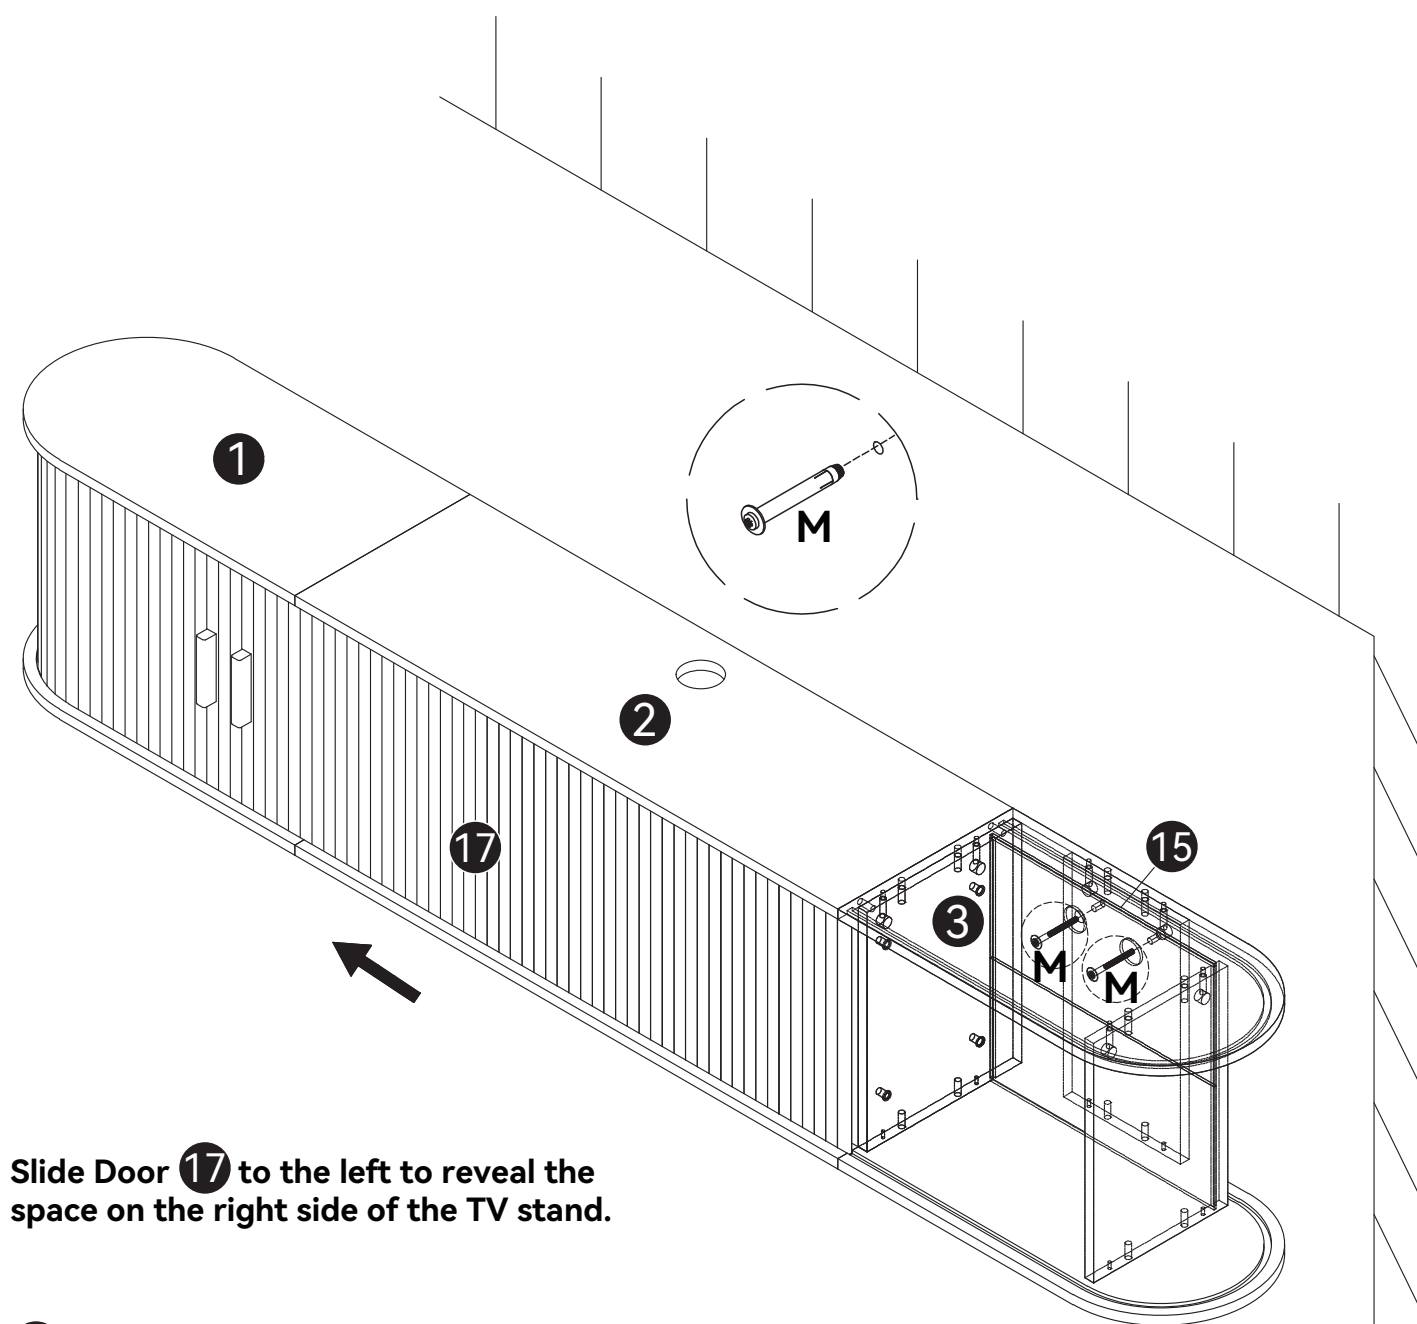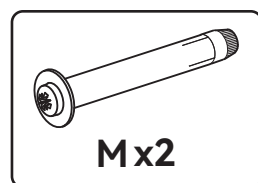


 
Slide Door **17** to the left to reveal the space on the right side of the TV stand.

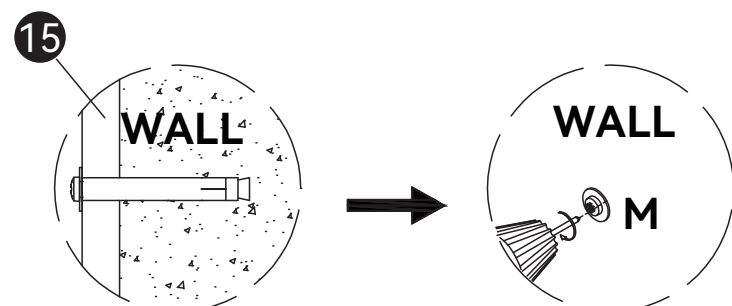


Insert the expansion bolt through the hole on the back of the TV stand, then tap it into the wall.

Tighten the bolt until the TV stand is securely mounted.

  24

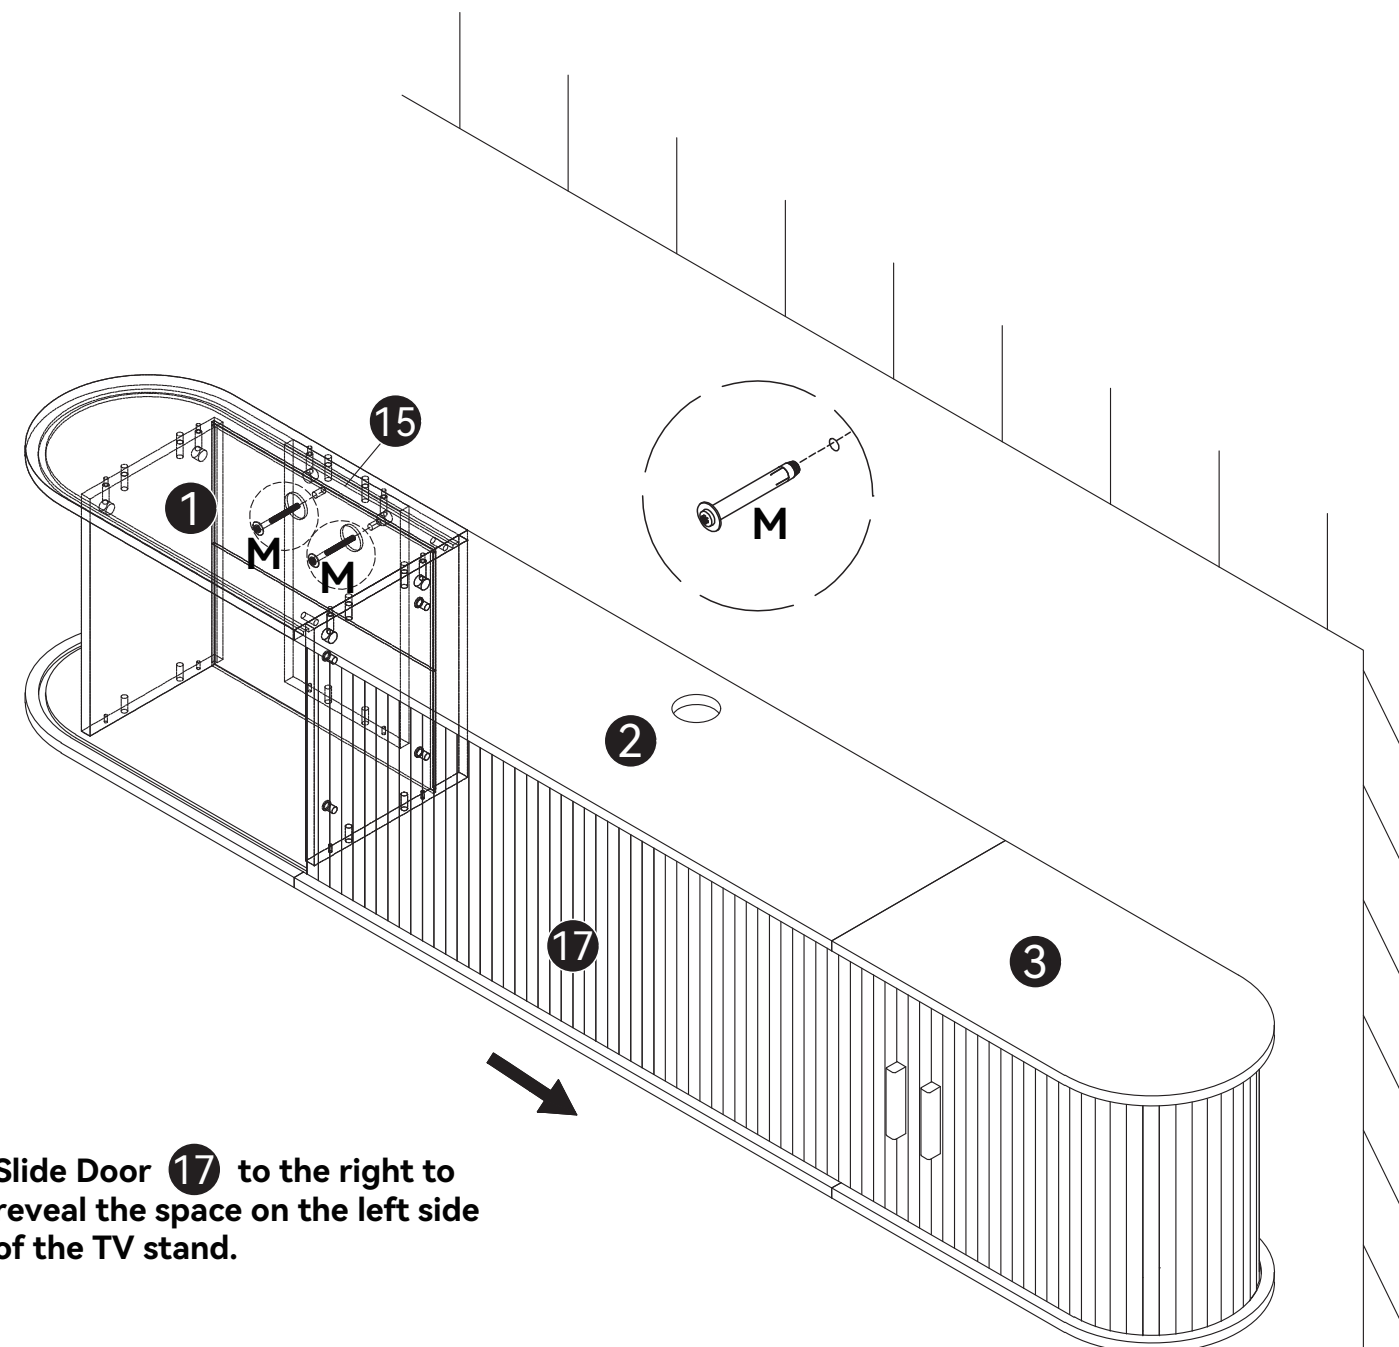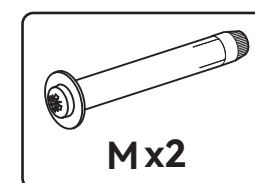

 Slide Door **17** to the right to reveal the space on the left side of the TV stand.

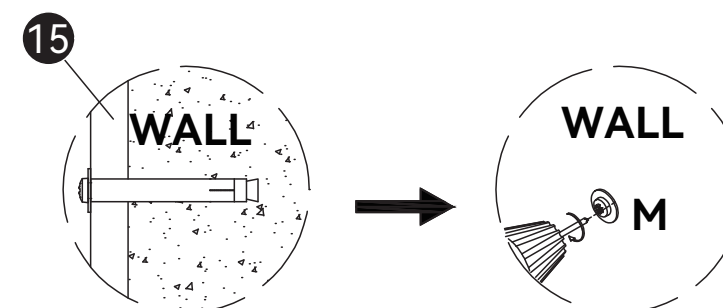


Insert the expansion bolt through the hole on the back of the TV stand, then tap it into the wall.

Tighten the bolt until the TV stand is securely mounted.

25



 IMPORTANT: For proper installation of fireplace, refer to this assembly instructions only. This document is the sole reference for installation and supersedes all others.

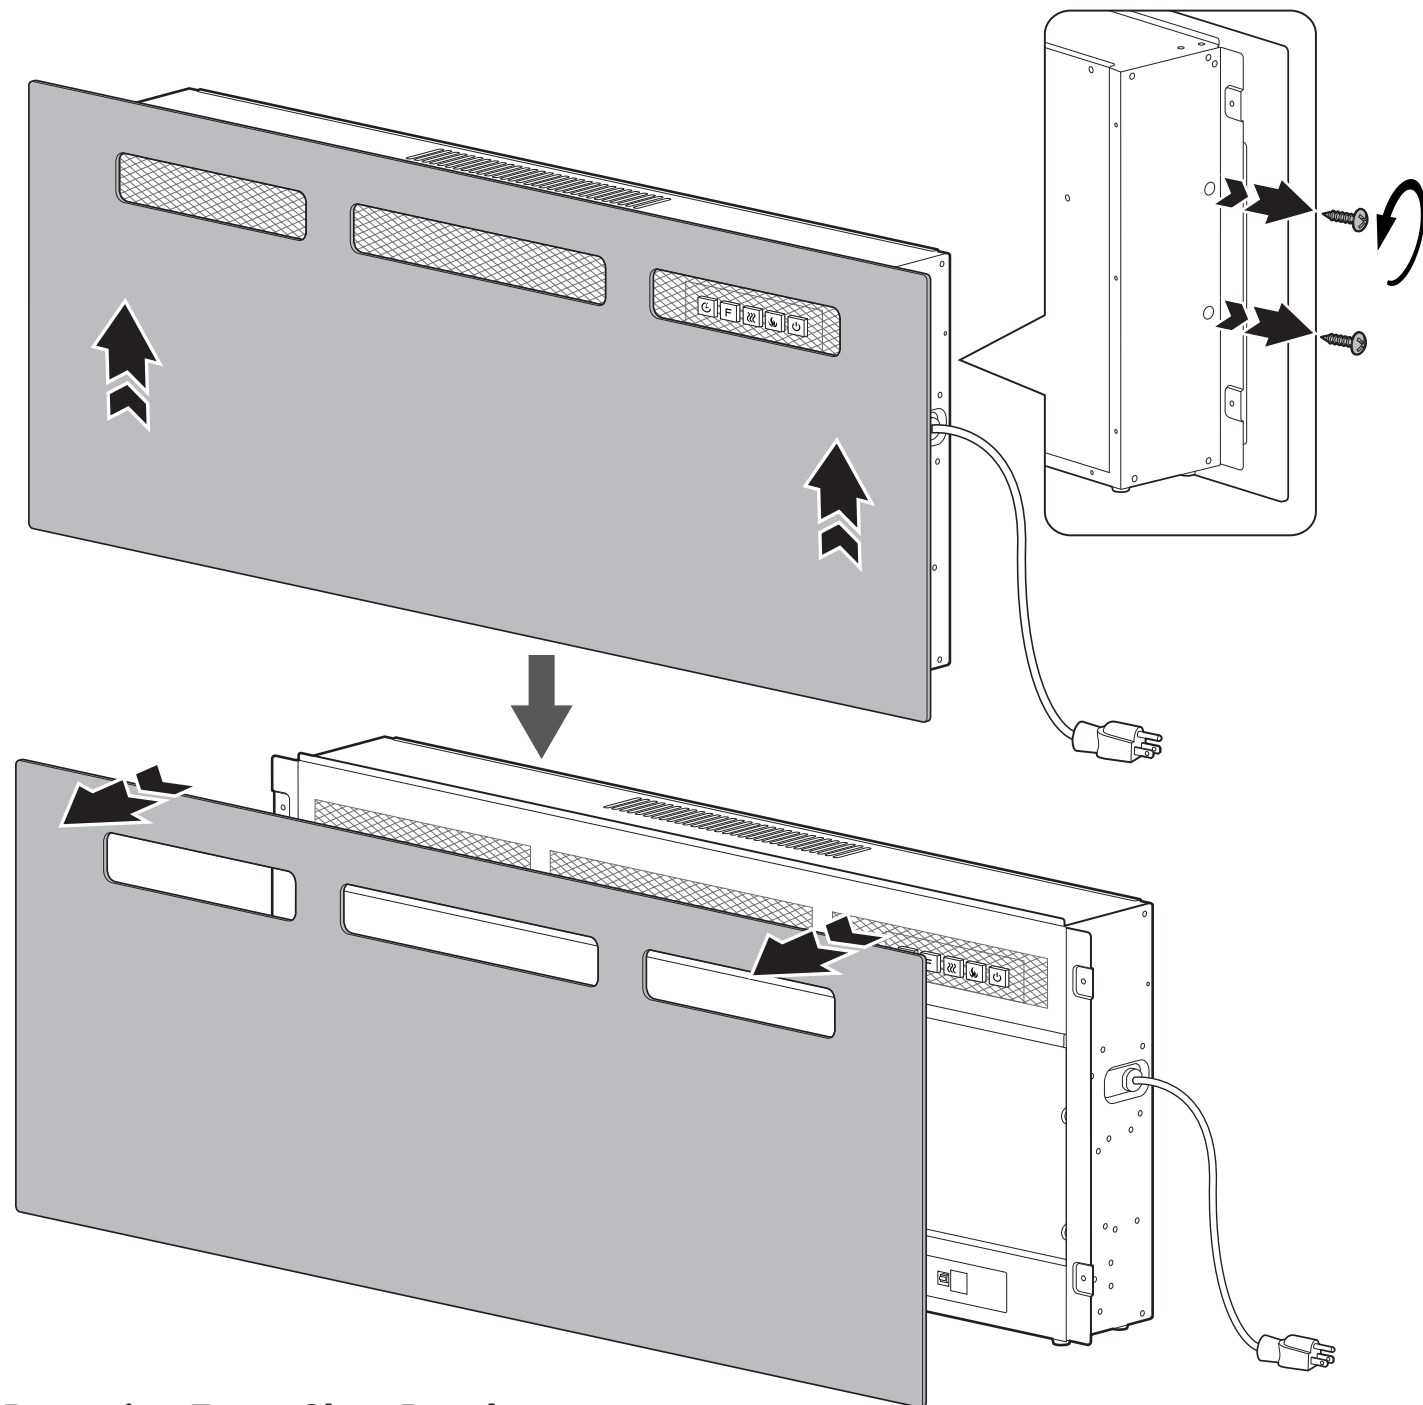


Removing Front Glass Panel

Unscrew the four screws from the sides (two on each side) of the fireplace. Carefully lift and remove the front glass panel. Set aside for later use.

26

Attaching Fireplace

 
Gently hold and place the fireplace in the TV stand by 2 people. Run the power cord and plug through the hole.

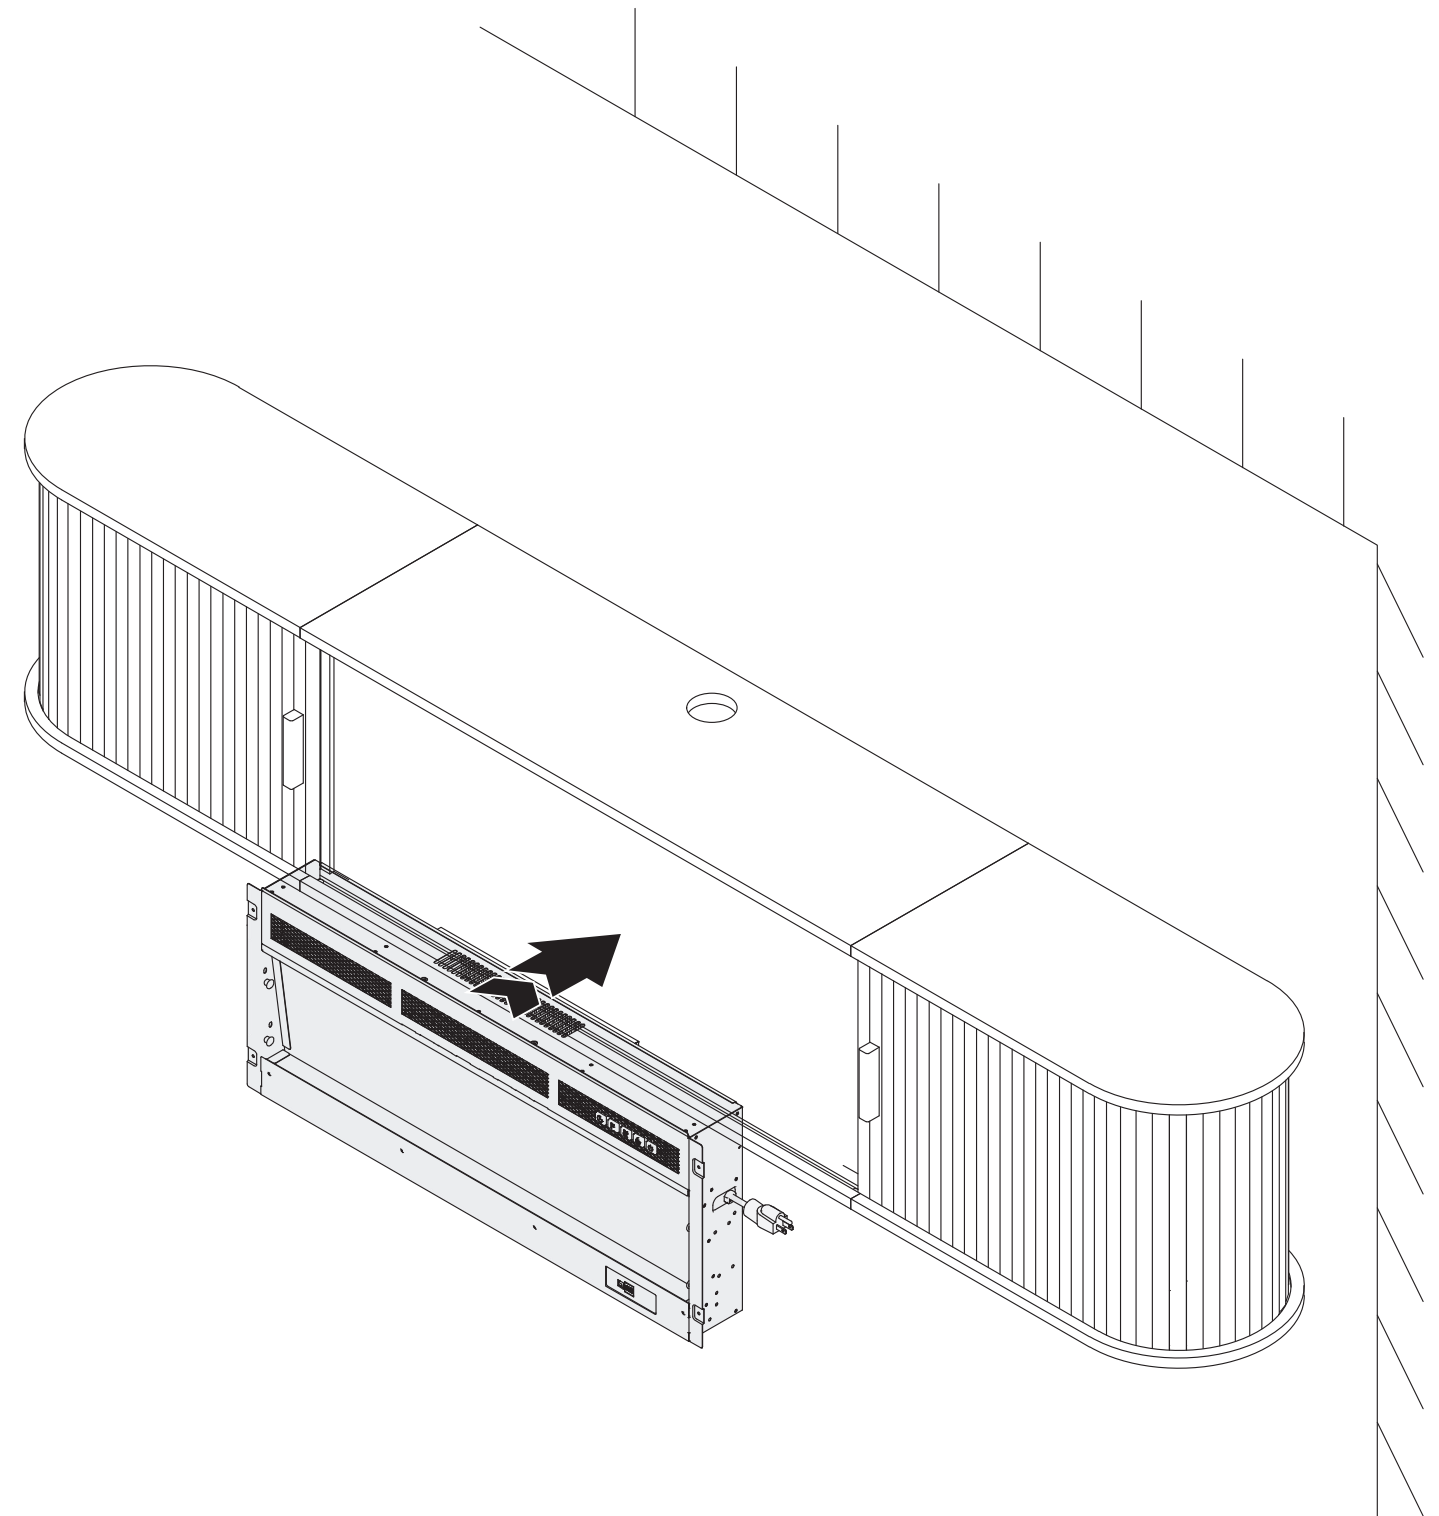

27

Securing Fireplace

 
Align with the holes on the TV stand and fix the fireplace onto the TV stand with four ST4*12 screws (in the package of fireplace).


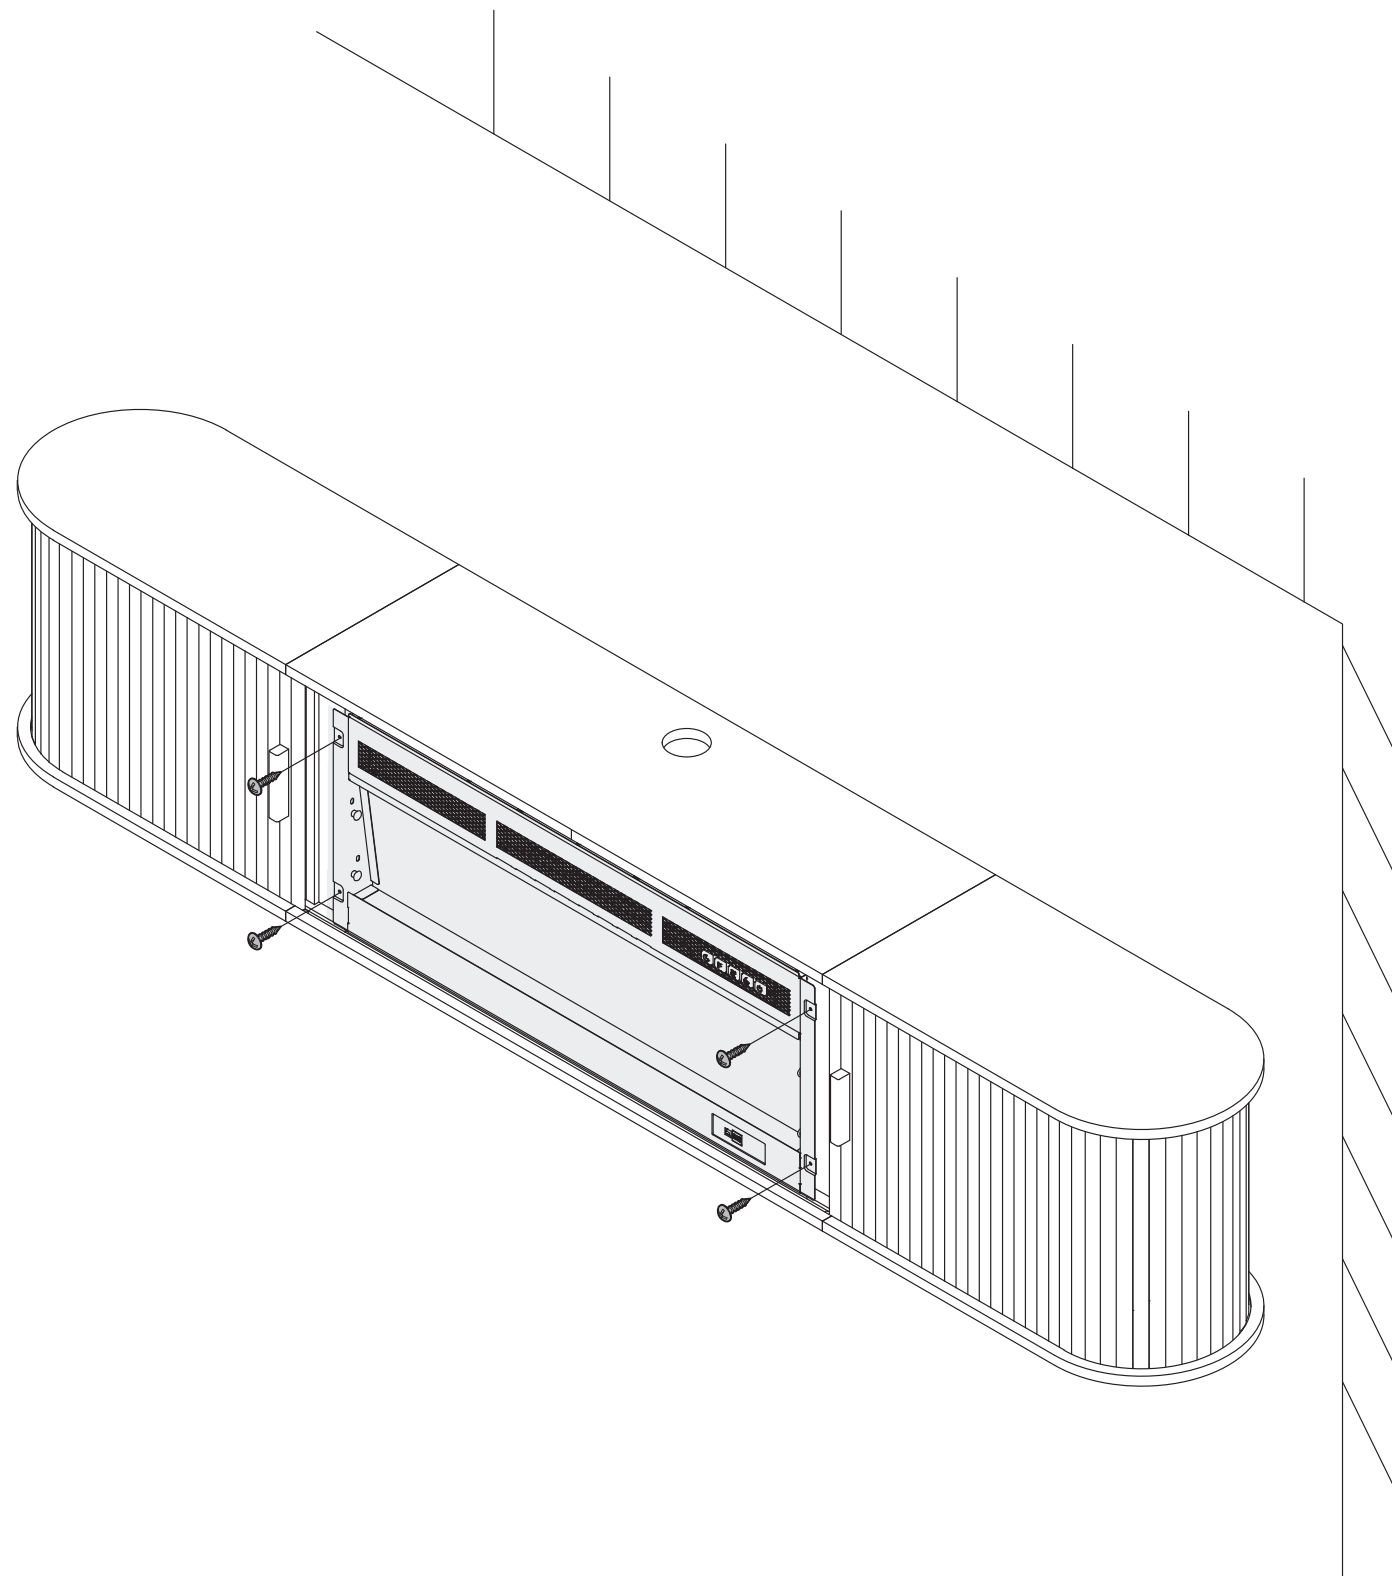


28

Attaching Front Glass Panel

   Place the decorative crystals in. Align with the lugs on the inner sides of the fireplace and attach the front glass panel back in place.

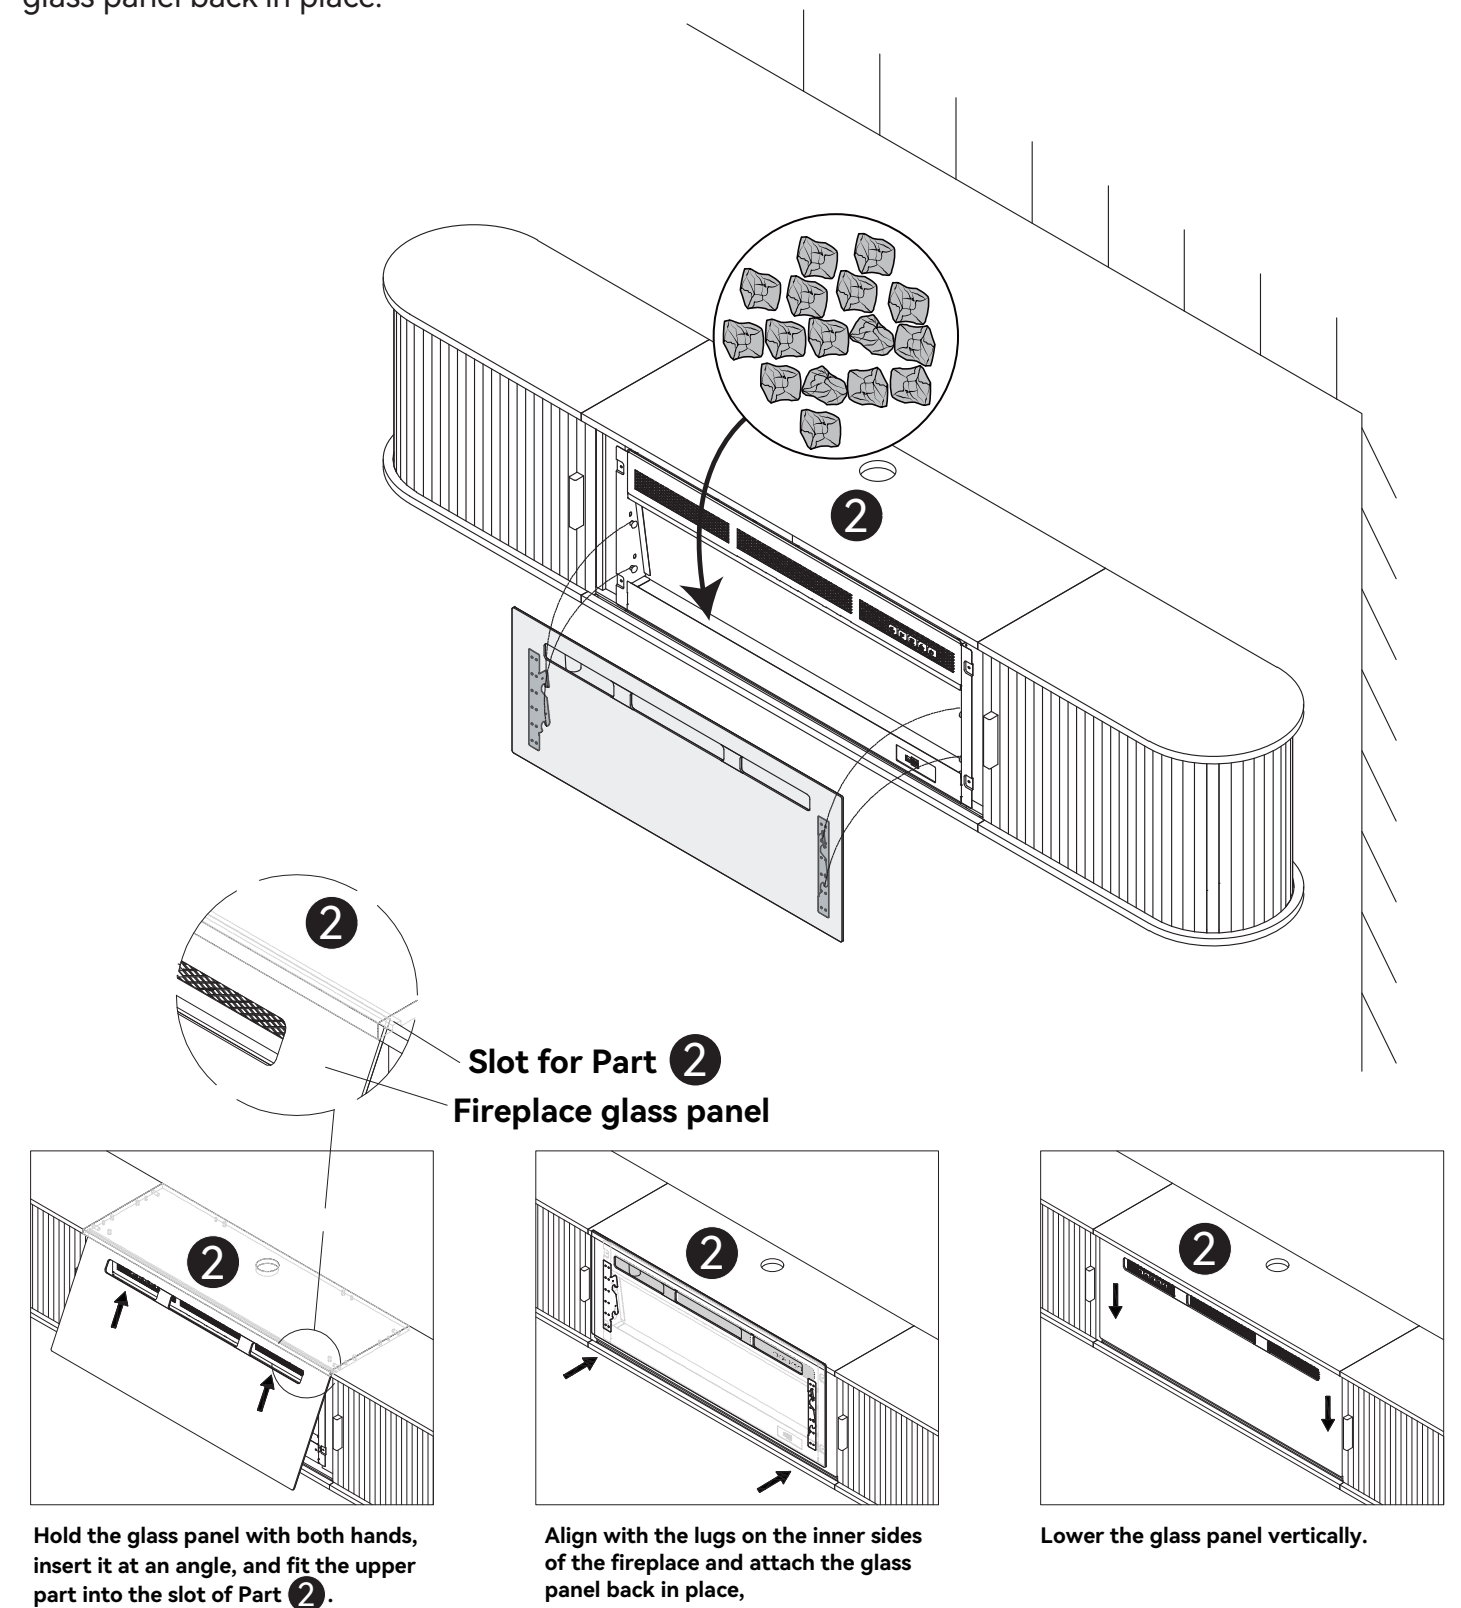


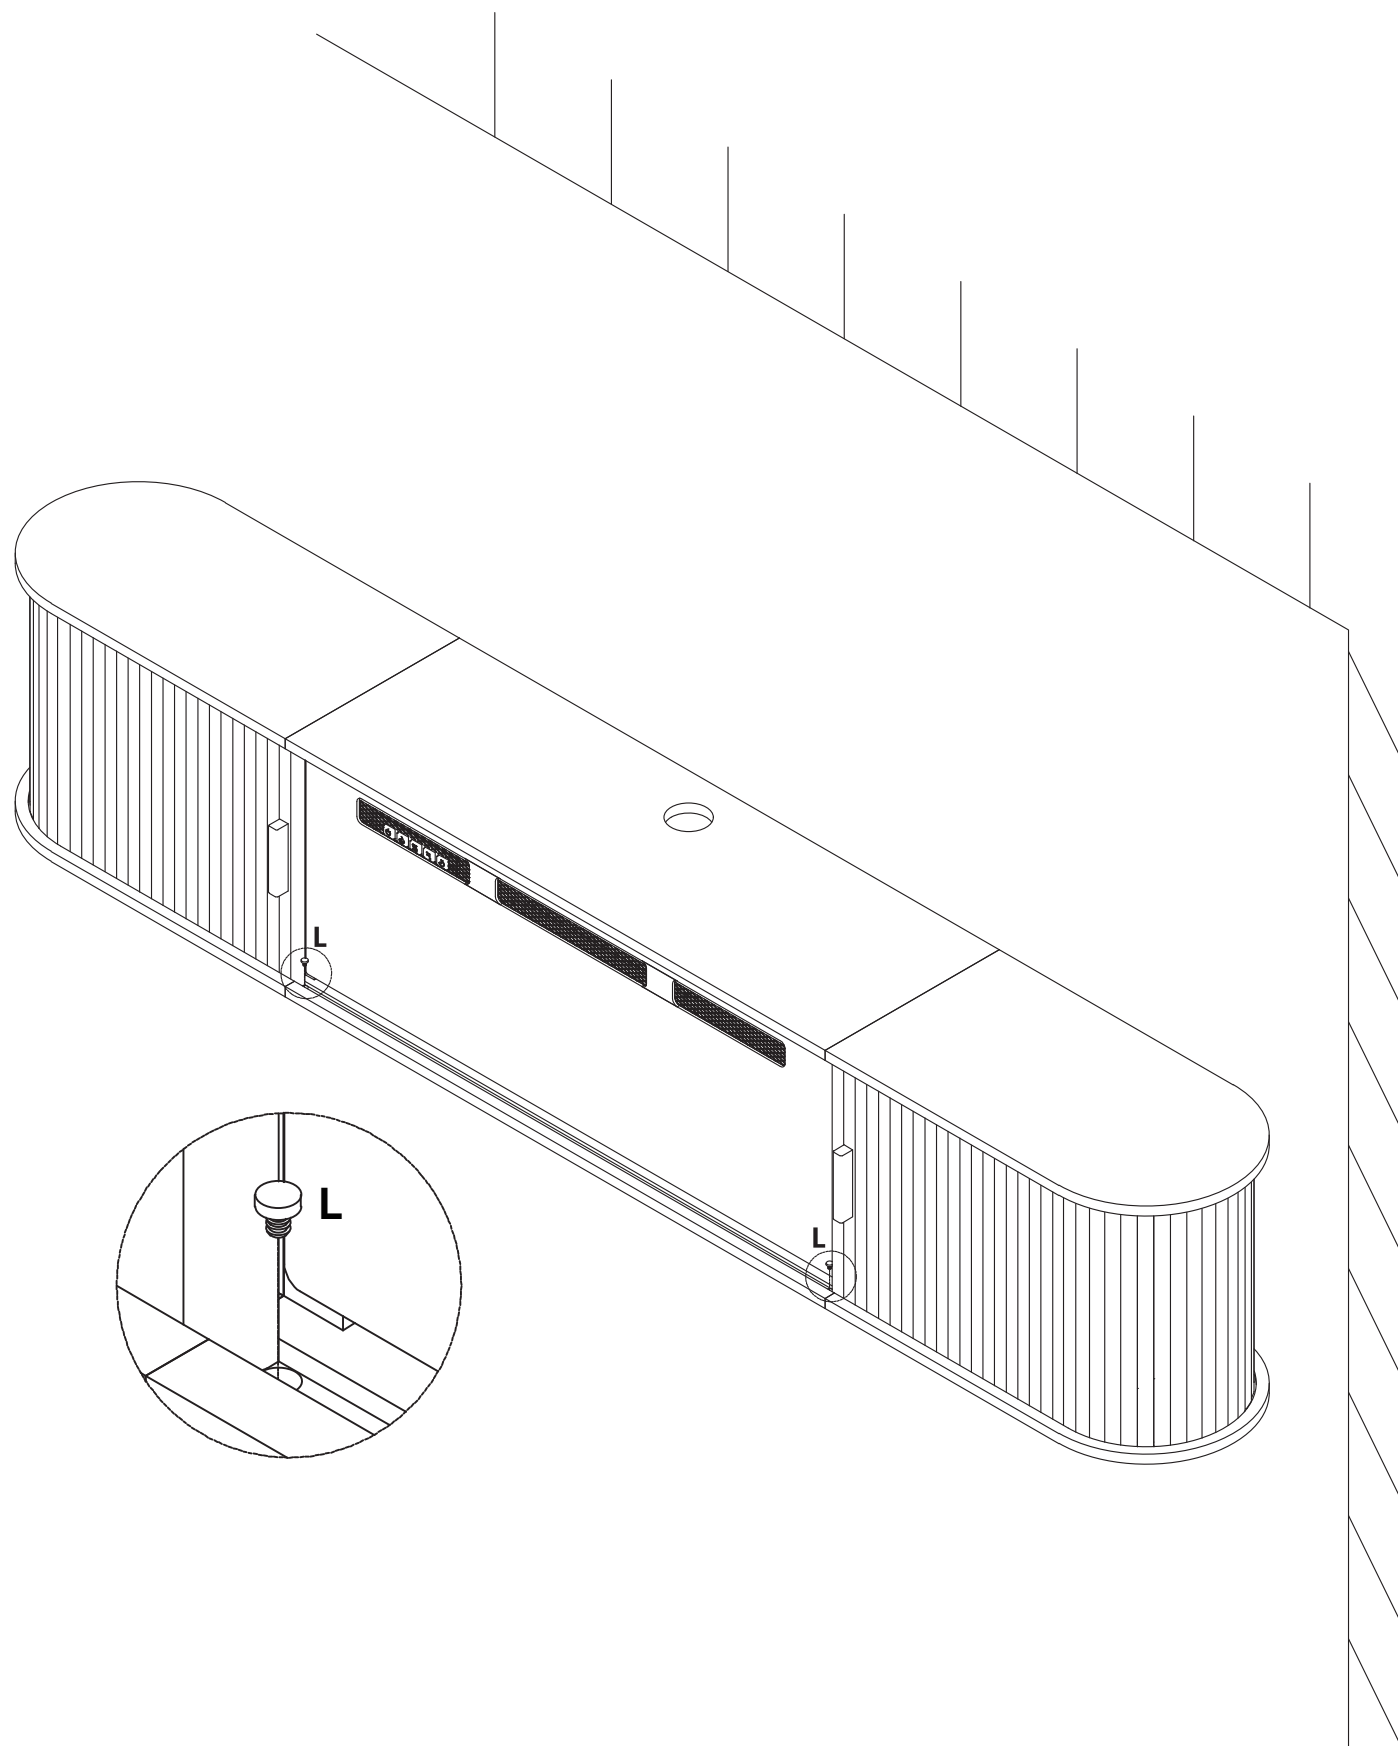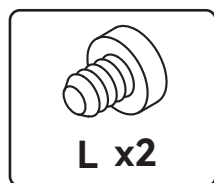

Using with Remote Control



 Remove the plastic tab underneath battery before use.

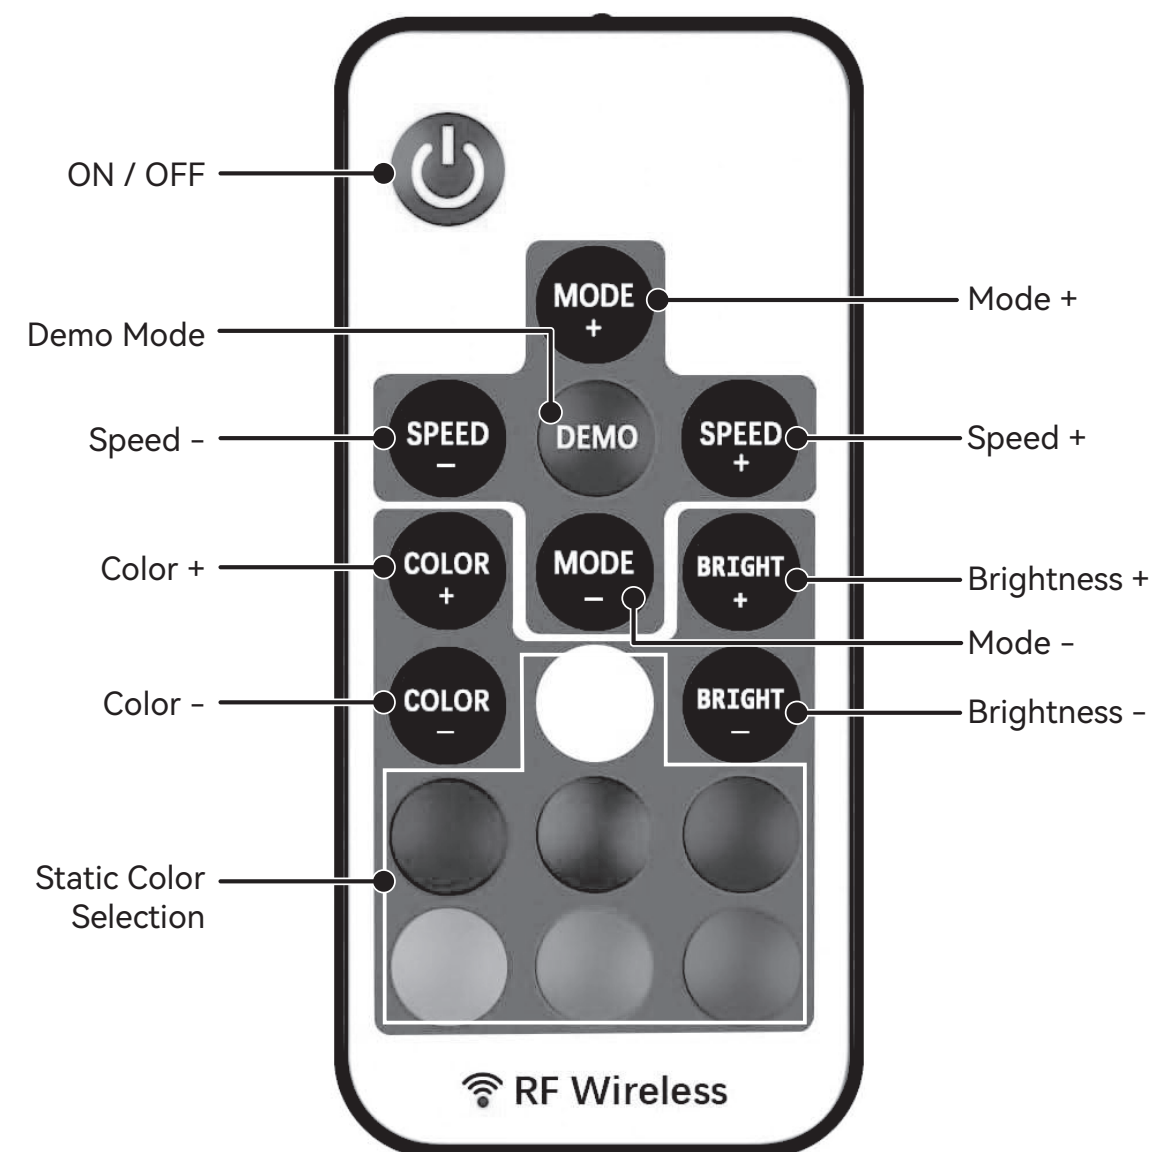


! WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH OF CHILDREN**.
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



Replacing Battery

 - Replace with new battery of the same type (CR2025, 3V) when necessary.
- When not using the remote control for an extended period of time, take out the battery.

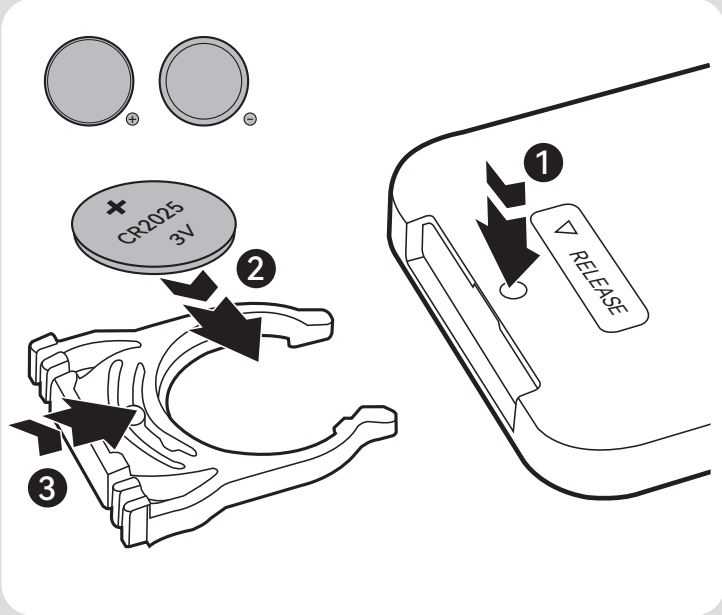

- 1 Press with an eject pin. Pinch the locking tab in then hold to pull the battery compartment cover out.
- 2 Replace the battery with the same type, making sure the (+) side facing up.
- 3 Install the cover back in place.

- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. DO NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- Use or replace with new battery of the same type (CR2025, 3V).
- Non-rechargeable batteries are not to be recharged.
- DO NOT force discharge, recharge, disassemble, heat above 140°F/60°C or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- Ensure the batteries are installed correctly according to polarity (+ and -).
- DO NOT mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

FCC Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

单页尺寸：210*290mm

张开尺寸：420*290mm

骑马钉

材质：封面128克铜版纸

内页80g书纸

单色印刷