
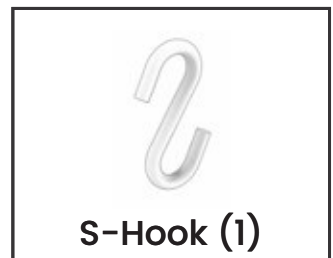
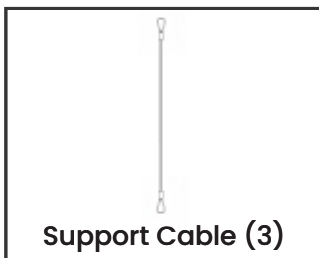
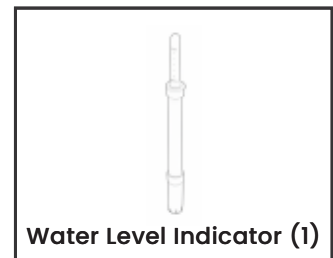
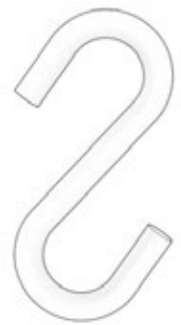


14 in Hanging Planter

PACKAGING CONTENTS:

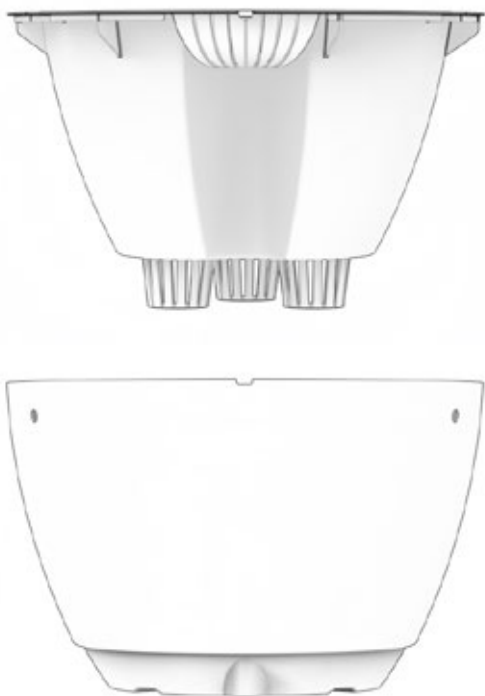

Step 1

To use as a hanging planter, remove liner and install the support cables. Start by feeding a looped end through the hole. Then, feed the other end of the cable through the loop. Repeat for all 3 cables.



Step 2

Move the cables out to the side and insert the liner into the planter. Be sure to align the tab of the liner with the groove in the planter body. Place the water level indicator into the designated channel in the liner and check that the threaded drain plug is secured in place in the bottom of the planter. For outdoor use, completely remove this drain plug to allow for overflow drainage.




Step 3

Attach the ends of the support cables to the lower section of the S-Hook. Use the upper part of the S-Hook to suspend the planter.



General Planting Recommendations

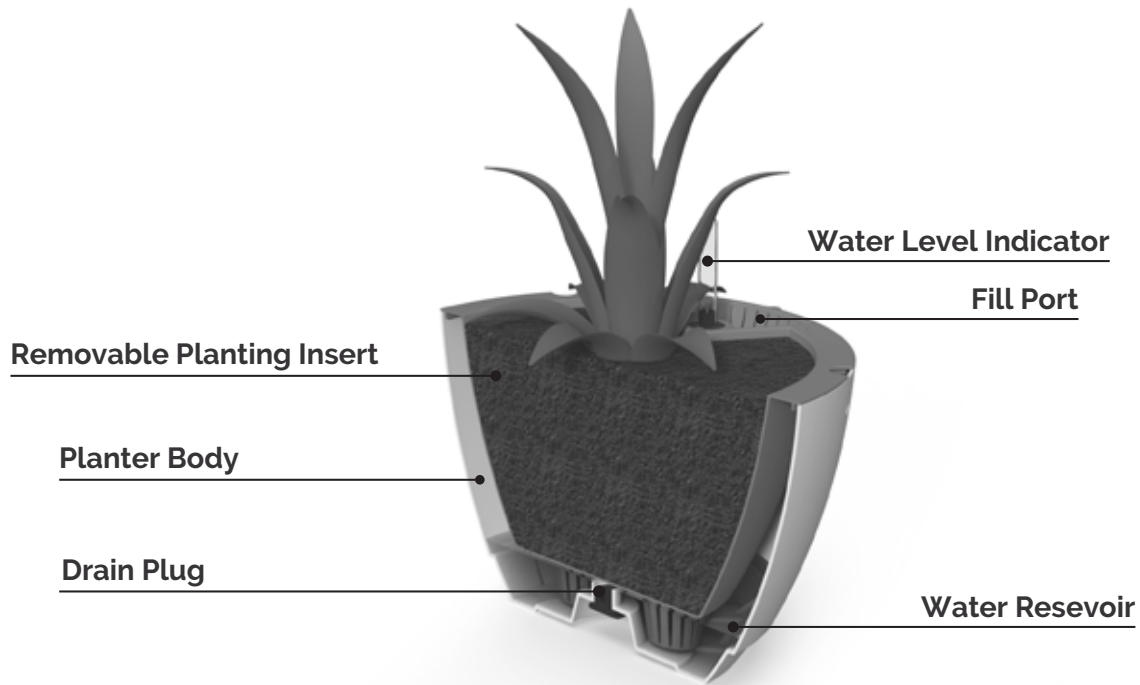

- This planter can be used both indoors and outdoors. For outdoor use, completely remove the drain plug.
- The fill port hole provides you with direct access to the water reservoir.
- Avoid using garden soil or top soil for container planting - it's often too dense and restricts air circulation. A potting mix is strongly recommended and will ensure better plant growth.
- Offers a limited 2-year warranty on the planter and a 1-year warranty on all included hardware.



Four Season Use



Indoor/Outdoor Use



Self-Watering