


 
 
 

 



## CARE AND MAINTENANCE

Spot clean using a mild water-free solvent. Only a professional cleaner should undertake a complete overall cleaning.  
The use of steam or water-based cleaners may cause excessive shrinking or staining.

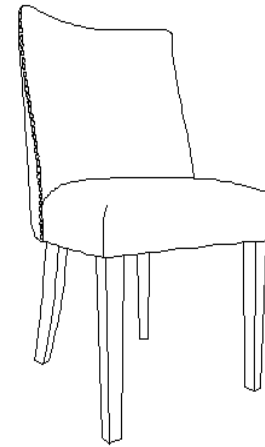
## NOTICE

- \* Please make sure that you have all parts indicated before you begin assembly of this item
- \* This item should be assembled on a soft surface to prevent scratching the finish during assembly
- \* This item may require periodic tightening

### Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	SEAT		1X
B	Front leg-1		1X
C	Front leg-2		1X
D	Back leg-1		1X
E	Back leg-2		1X
H1	Allen bolt		8X
H2	Spring washer		8X
H3	Flat washer		8X
H4	Allen key		1X

**ASSEMBLY INSTRUCTIONS APPLICABLE FOR ALL DINING CHAIRS.**  
**THE DESIGN OF THE CHAIR IN THE DRAWINGS MAY VARY FROM YOUR ACTUAL CHAIR, BUT ASSEMBLY IS THE SAME ON ALL MODELS.**



**Weight Capacity: 275 lbs**

**WARNING: DO NOT STAND ON CHAIR**

**WARNING: DO NOT OVER TORQUE BOLTS/SCREWS**



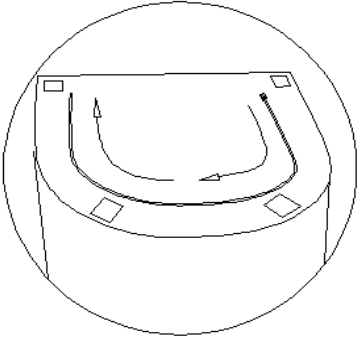
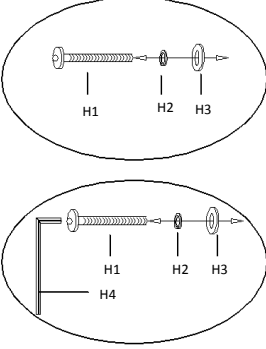
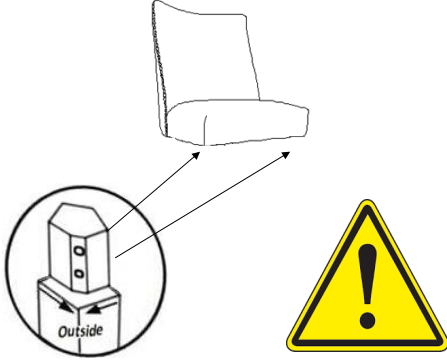
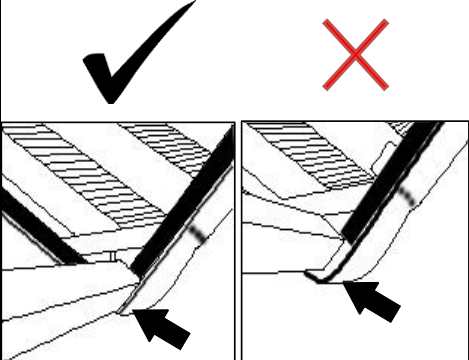
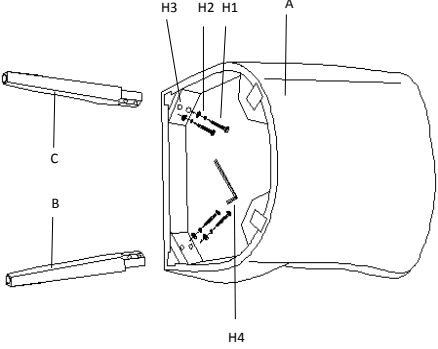
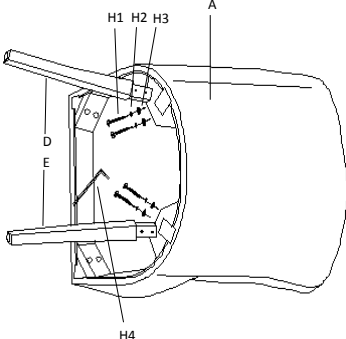
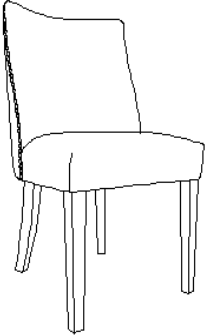
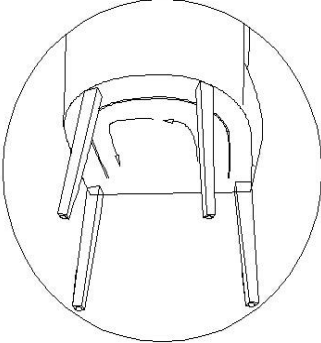
**The legs and hardware are located underneath the chair in the zipper compartment.**

**PREPARATION**

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 10 minutes.

Tools Required for Assembly (included): Allen Key

	
<p><b>STEP1</b> OPEN THE ZIPPER ON THE UNDERSIDE OF THE SEAT AND TAKE OUT LEGS AND HARDWARE</p>	<p><b>STEP2</b> PUT THE WASHERS ON THE BOLT IN THE ORDER SHOWN IN THE PICTURE</p>
	
<p><b>ATTENTION</b></p>	<p>CORRECT INCORRECT</p>
	
<p><b>STEP3</b> INSERT THE FRONT LEGS AND SCREW IN THE BOLTS BUT DON'T TIGHTEN COMPLETELY</p>	<p><b>STEP4</b> INSERT THE BACK LEGS AND SCREW IN THE BOLTS BUT DON'T TIGHTEN COMPLETELY</p>
	
<p><b>STEP5</b> PUT THE CHAIR UPRIGHT AND MAKE SURE ALL LEGS ARE LEVEL, THEN FIRMLY TIGHTEN BOLTS WITH ALLEN KEY WHILE THE CHAIR IS UPRIGHT AS PICTURED ABOVE</p>	<p><b>STEP6</b> CLOSE THE ZIPPER ON THE UNDERSIDE OF THE SEAT, THIS ITEM MAY REQUIRE PERIODIC TIGHTENING</p>
<p><b>The legs and hardware are located underneath the chair in the zipper compartment.</b></p>	