



1021-12XXX-S

GD007

ELECTRIC SIT-STAND DESK

INSTALLATION MANUAL
 
| Read and understand all instructions before use.

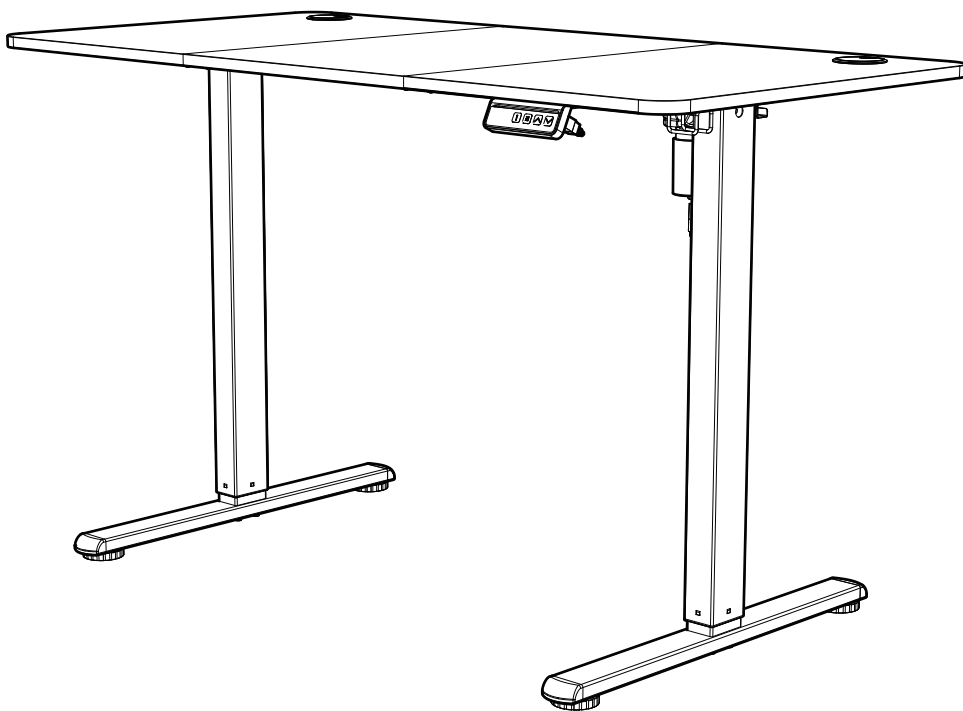

Min 730mm
Max 1180mm



70kg/154lbs

Installation Guide

1. Before installation, please read the manual carefully and familiarize yourself with the installation steps and methods.
2. Before installation, please ensure that all accessories are complete and undamaged.
3. Install the product on a flat surface and ensure that the environment is well-lit.
4. Use the provided tools for installation. For heavier components, it is recommended that two people work together to complete the installation.
5. After installation, please check that all components are securely fastened.

Precautions for Use

1. Do not exceed the maximum weight limit **(70kg/154 lbs)**. Ensure the desk is placed on a stable surface and avoid impacts.
2. Prevent children from climbing or playing on the desk to avoid tipping.
3. This product is intended for indoor use only. Using this product outdoors could lead to product failure and personal injury.
4. This product contains small items that could be a choking hazard if swallowed. Keep these items away from children.
5. Do not stand or sit on the desk; do not place heavy objects on the edge of the desk, as this may cause instability or damage to the desktop.

Maintenance


1. Clean with a soft cloth and neutral detergent. Avoid using alcohol or corrosive solvents.
2. Regularly inspect screws, gas springs, and other components to prevent loosening.
3. Avoid prolonged exposure to sunlight or humid environments to prevent fading or rusting.

After-sales service


1. If you encounter any installation or usage issues, please contact online customer service.
2. If the product is damaged upon receipt, please take photos immediately and contact online customer service. The delivery photos will serve as proof.
3. If missing or damaged parts are found after unpacking, please take photos and contact online customer service to request a replacement.




B1 x2

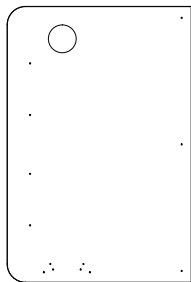


B2 x1

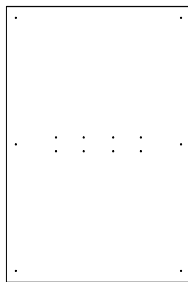


B3 x1

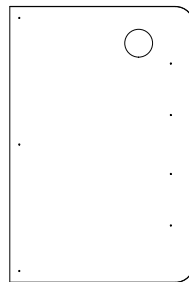


B4 x1

 


B5 x2

 

B6 x2

 

B7 x2

 

B8 x1



 
B9 x1



B10 x1



B11 x4



B12 x1



B13 x1



B14 x1



B15 x6



B16 x1



B17 x2



M6x10

a x10



M8x16

b x4



M6x35

c x8



PWA4.2x13

d x30



D8x40

e x8




M5



f x1





g x2

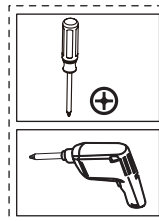


Tools Needed
(Not Included)


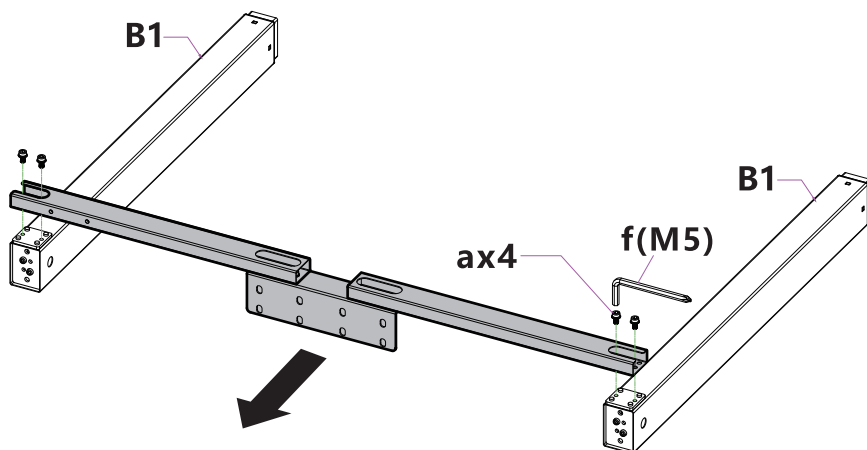
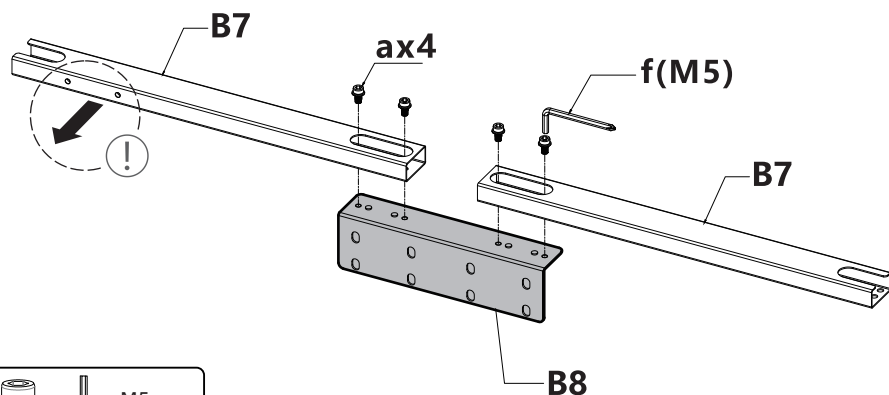


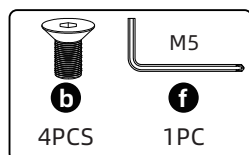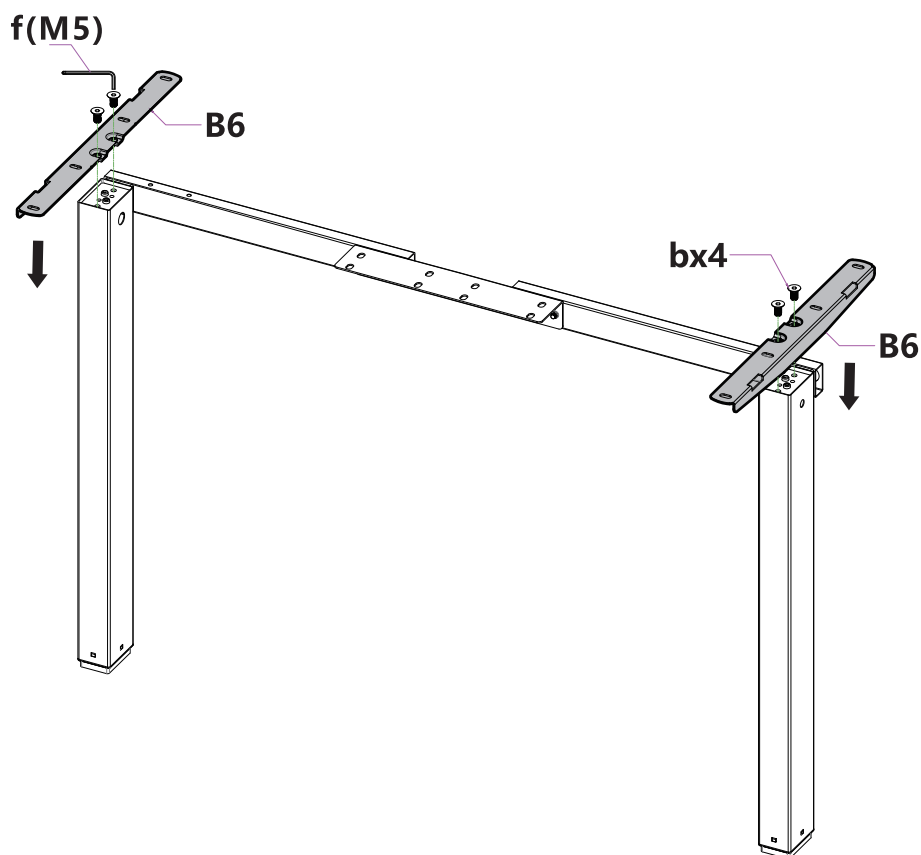

X2

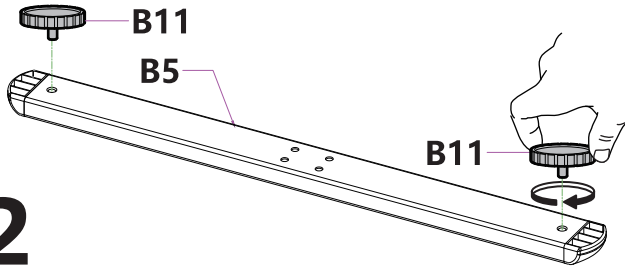




• Note the correct order of screw installation.

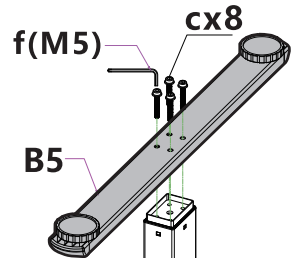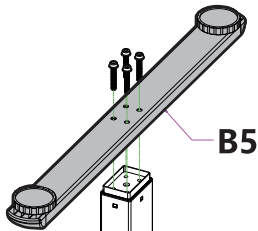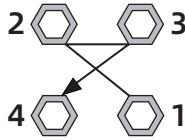



c
8PCS




f
1PC

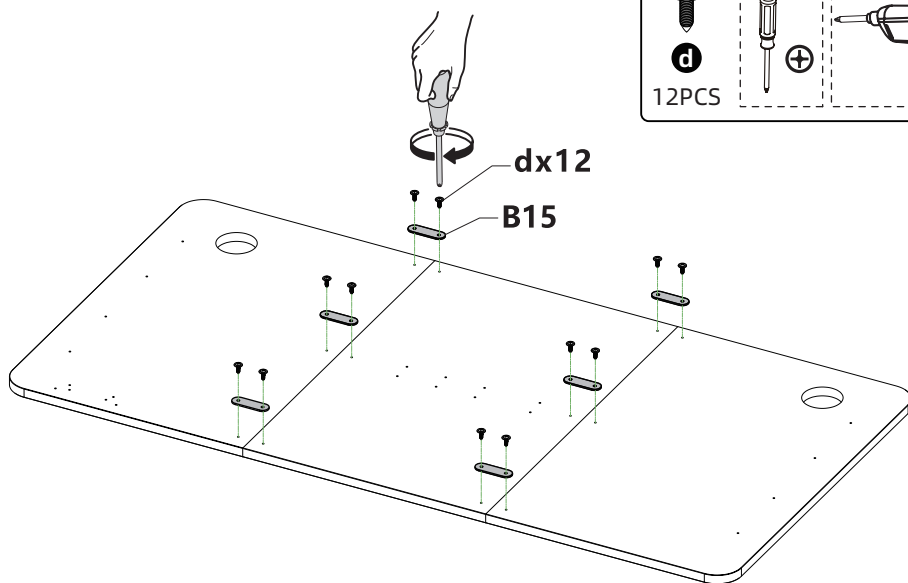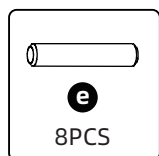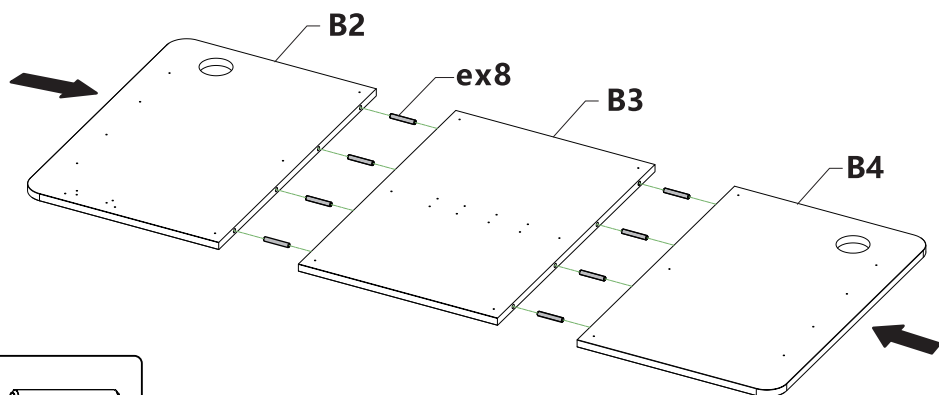

- Finger-tighten all screws to 80%.
- Fully tighten after all are in place.
- If using an electric drill, it is recommended to set the torque to 2-3N.

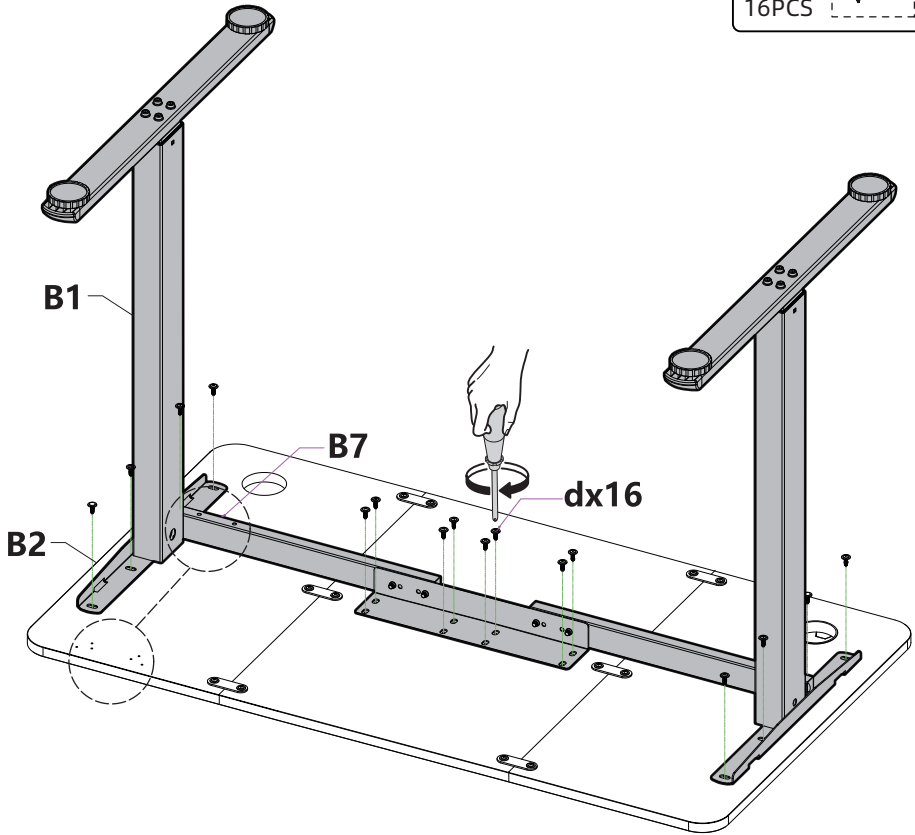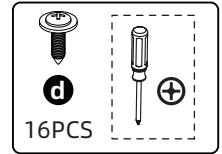


- Please pay attention to install the two motor fixing holes on B7 on the side with reserved holes on the B2 table board, because this will facilitate the installation of the hand controller later.

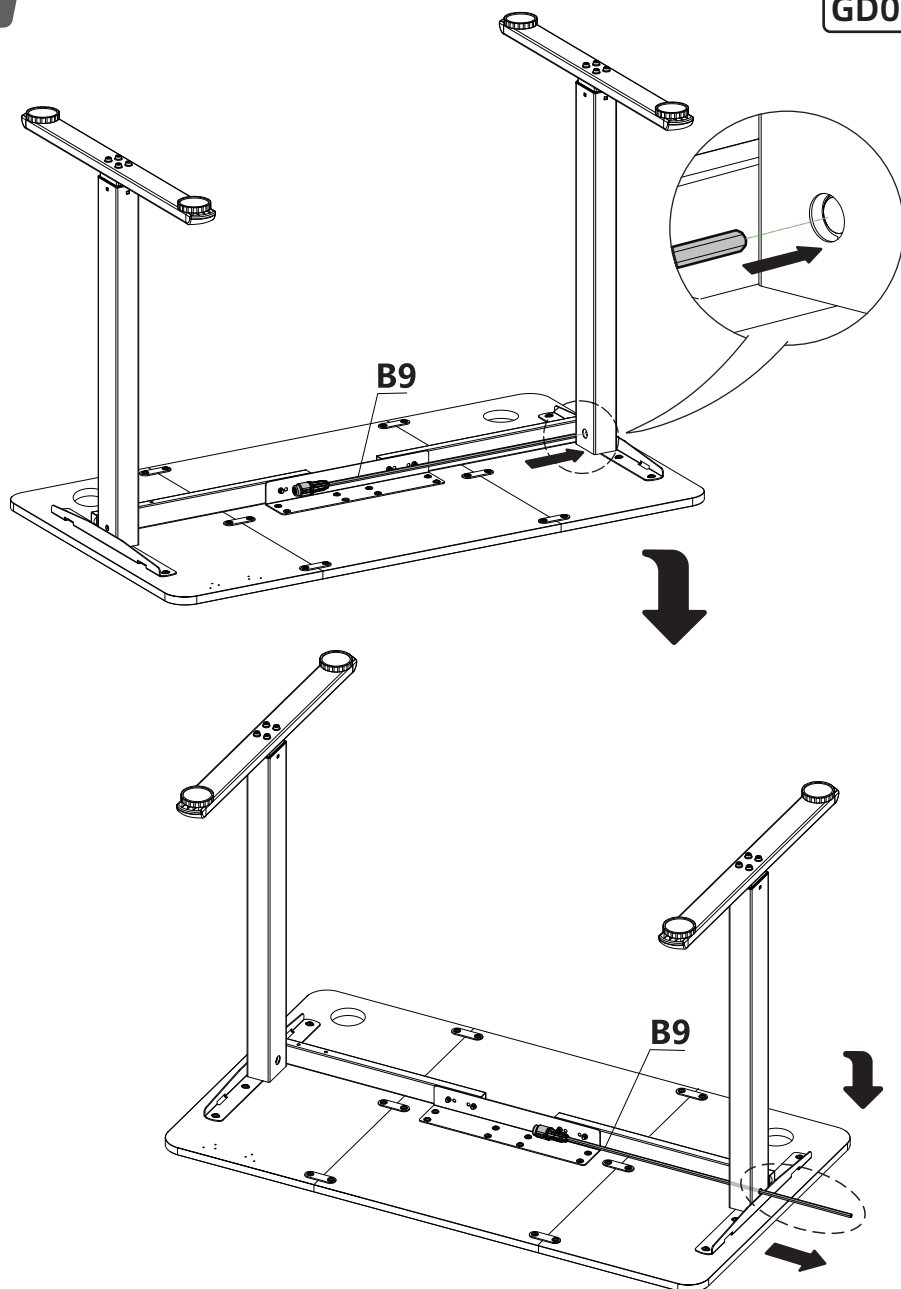




- Please pay attention to inserting the B9 transmission rod into the B1 leg, and it can be slightly extended to facilitate the subsequent installation of the B10 transmission rod.

9

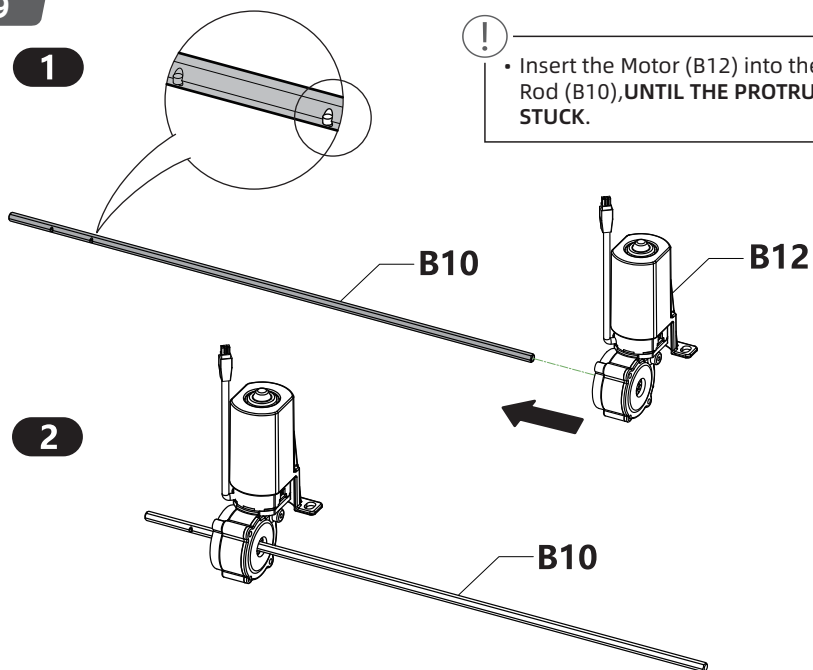


10

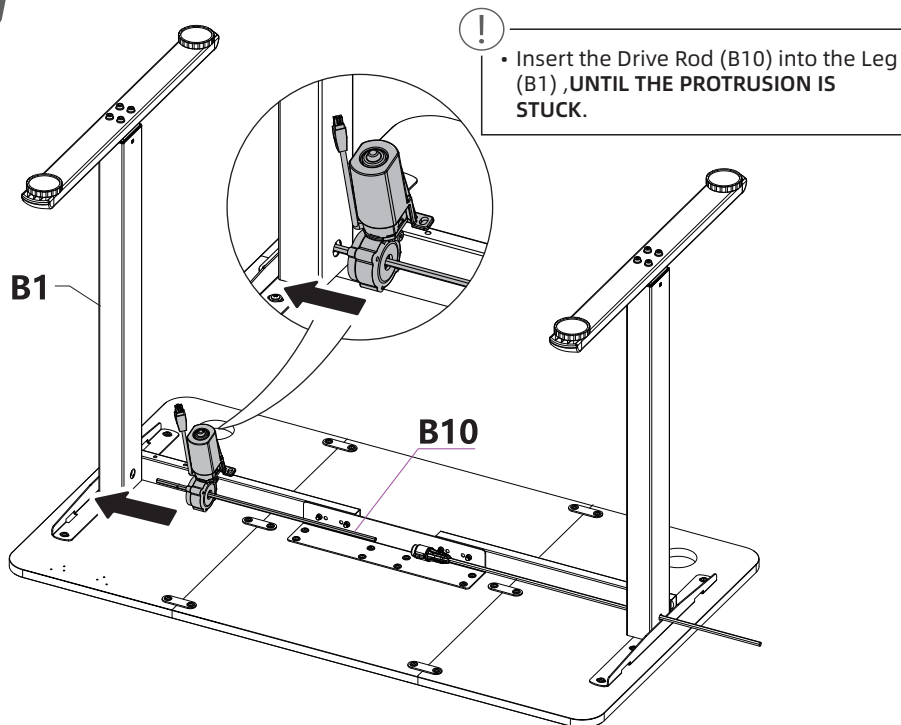


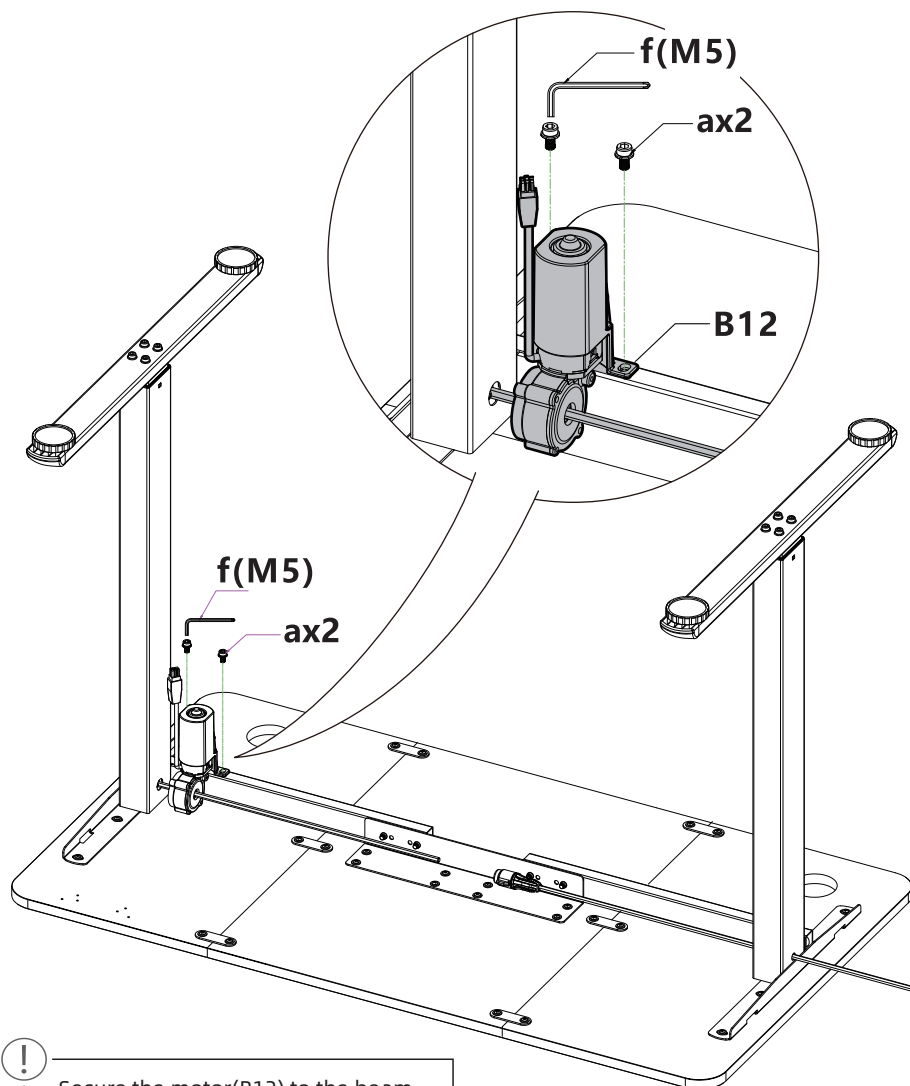
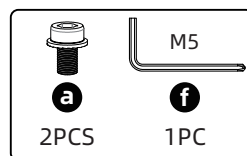



• Secure the motor(B12) to the beam.

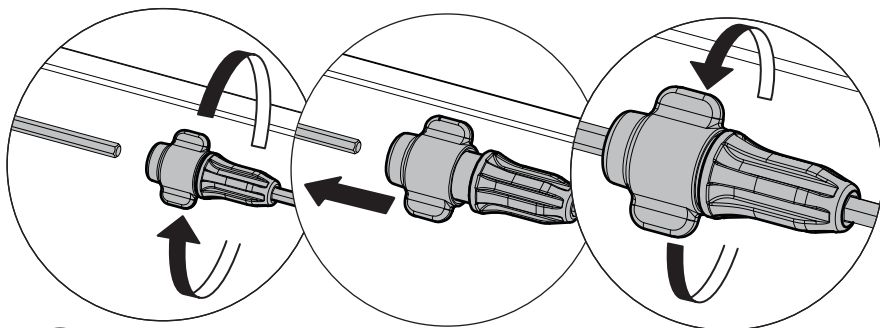



- Loosen the lock by turning it clockwise.
- Pull the drive rod(B9) to the left to connect it with the drive rod(B10). A "click" sound will confirm the connection is successful.
- Finally, tighten the lock by turning it counterclockwise.

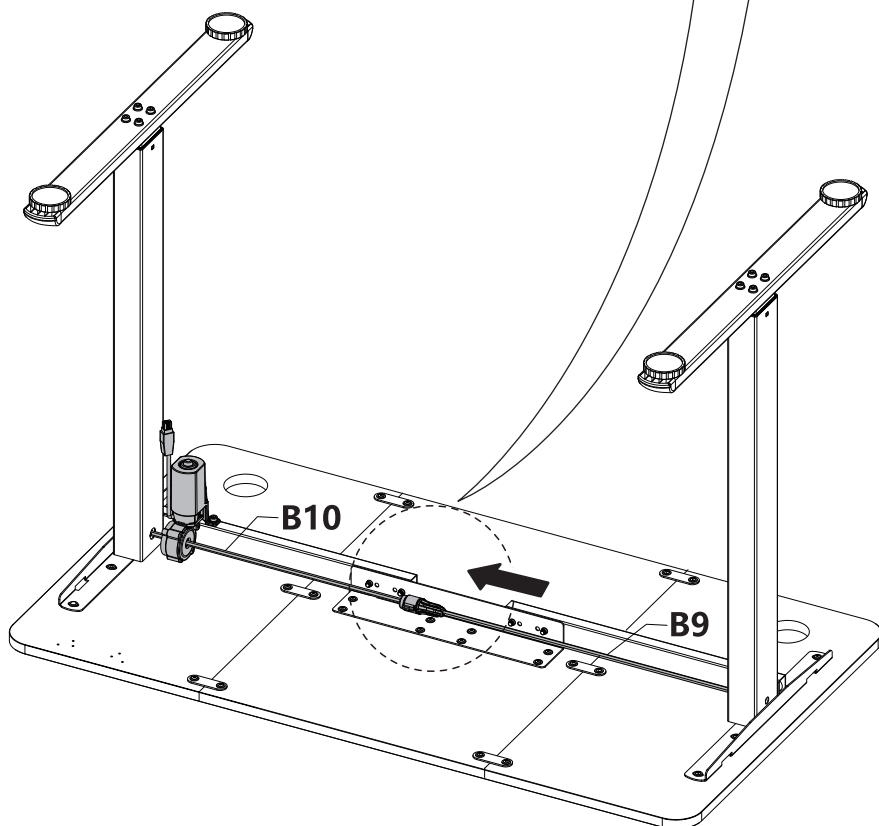

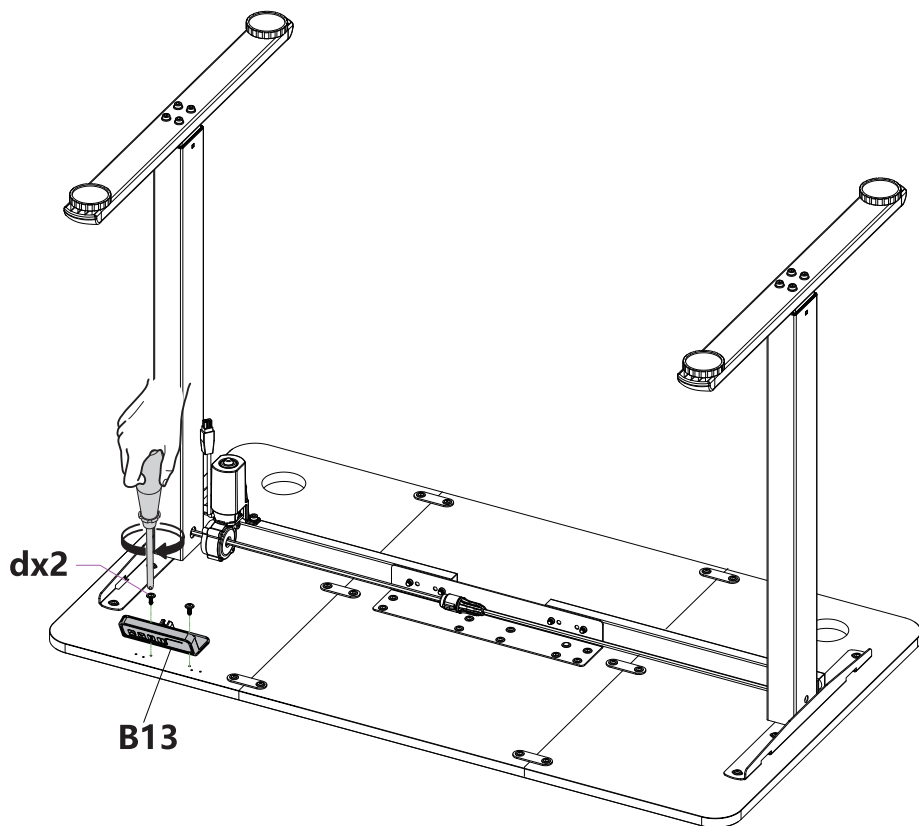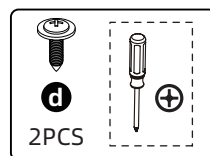


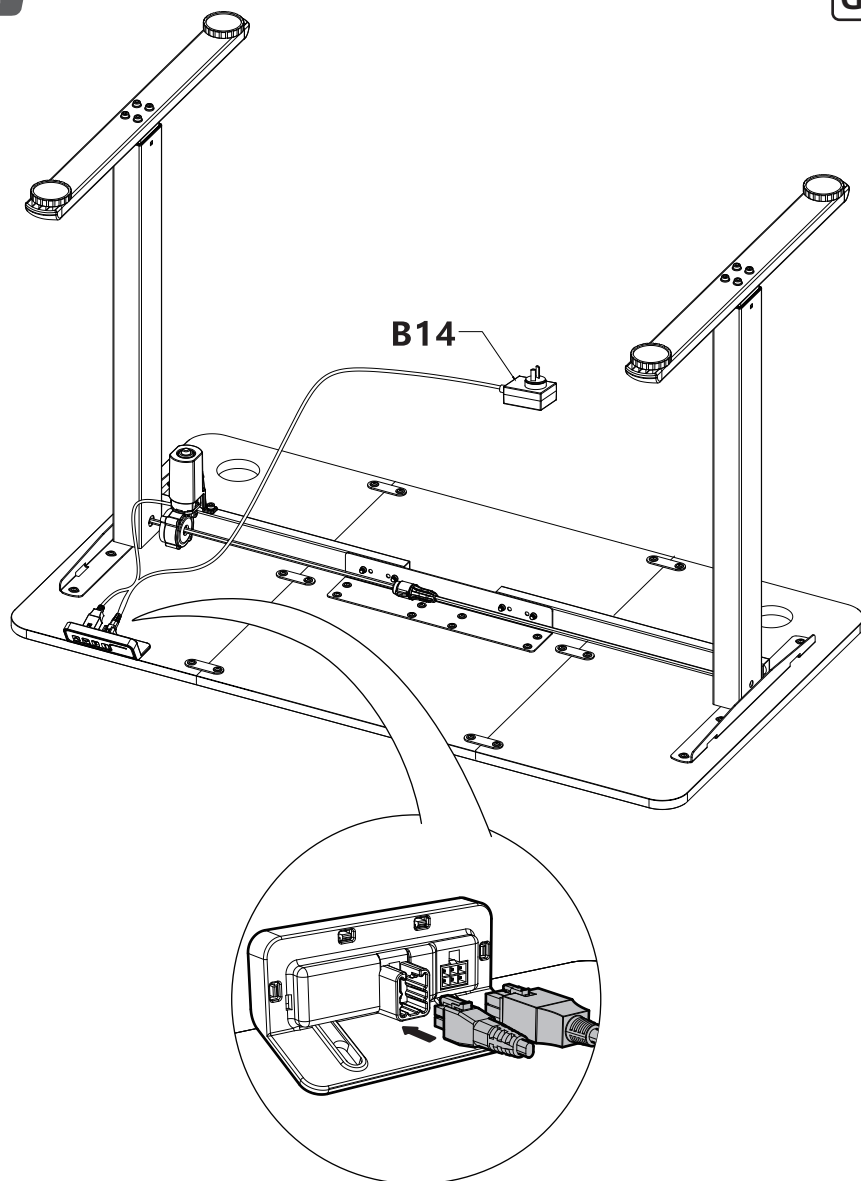


- Plug the power cord(B14) and motor plug into the hand controller.

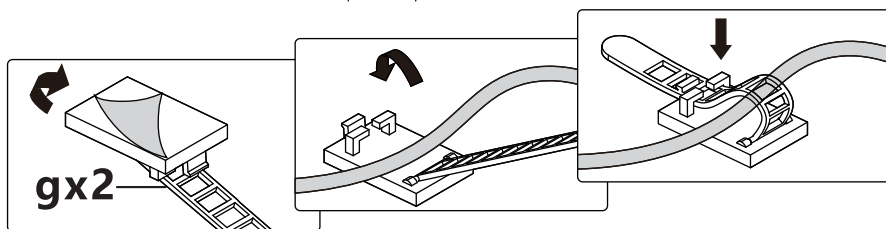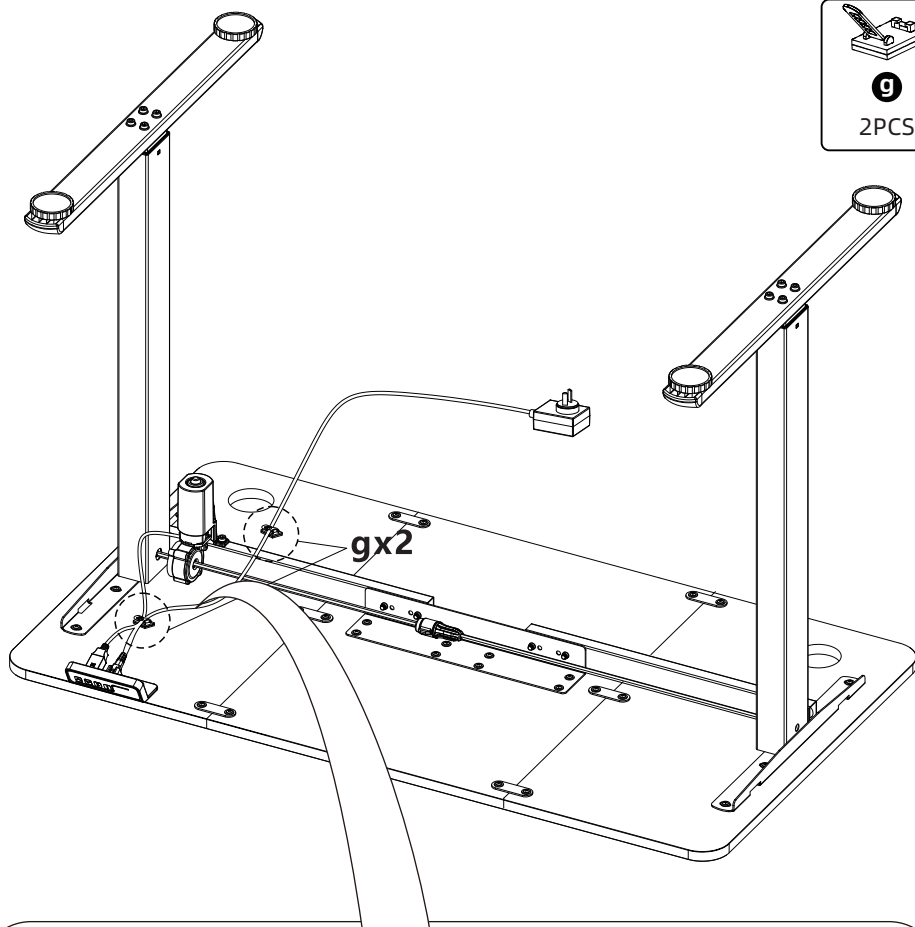

- Remove the sticker from the back of the cable clamp and attach it in a satisfactory position.
- Gather and secure both cables neatly as shown.

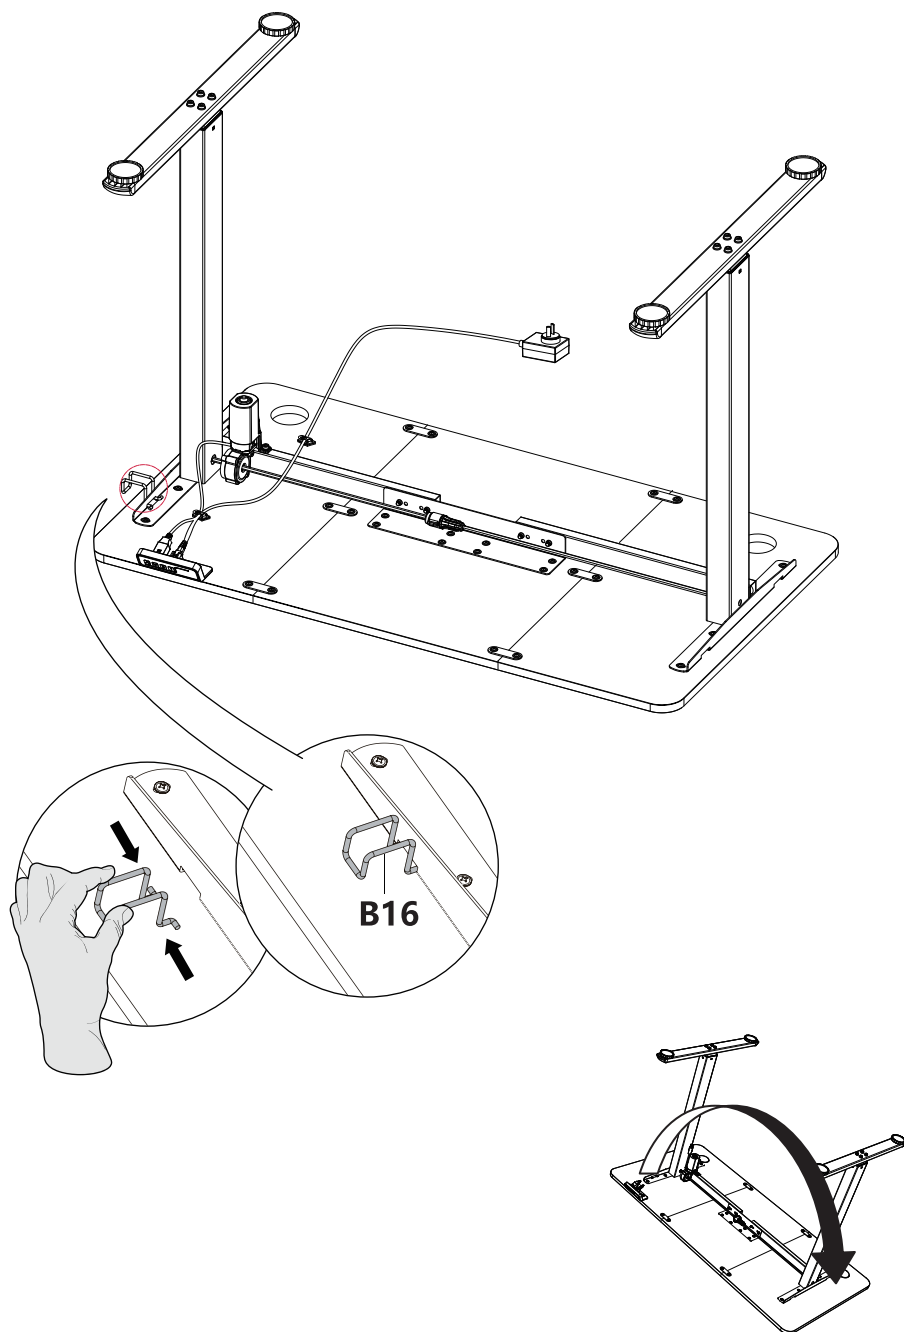


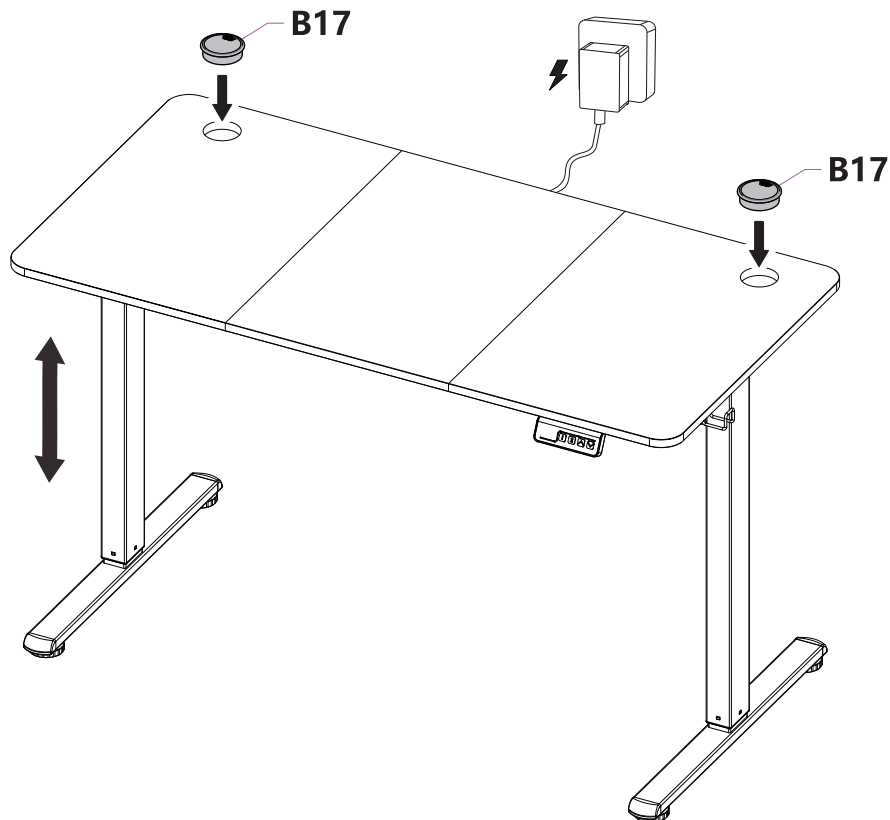

IMPORTANT! You must Reset the desk prior to use:


1. Press and hold the "▼" button on the Handset until the desk reaches its lowest height. Release the "▼" button.
2. Press and hold the "▼" button again for more than 3 seconds until "25E" is displayed. Release the "▼" button.
3. Press and hold the "▼" button until the desk lowers a little bit more, slightly rises and stops. Release the "▼" button.

The handset will then display the current height.
Your desk is now ready to use.

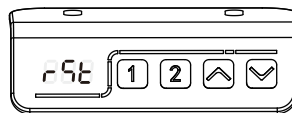

- If the left side doesn't go up/down when using the desk, go back to step 7-10. Make sure the drive rod is installed correctly.

Digital Control Panel For Electric Height Adjustable Desk User Guide

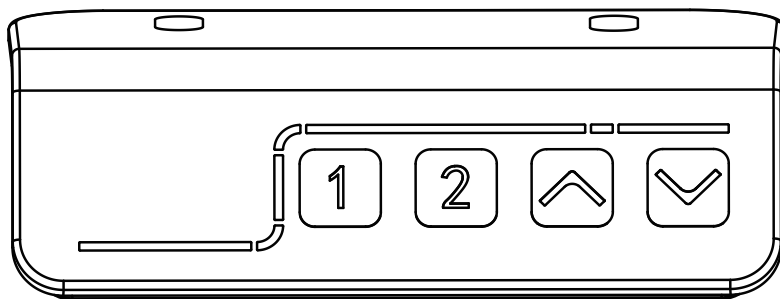

Lifting Function

1. Press the "▲" button, the desk will rise automatically and stop automatically when it rises to the highest point.
2. Press the "▼" button, the desk will descend and stop automatically when it descends to the lowest point.

Memory Mode

1. To store a certain height in the controller's memory, press the "1" button for more than three seconds. "5-1" will be displayed, indicating that the current height has been saved to the "1" button successfully. Repeat the process using button "2".

Reset Mode

1. If the height of the desk is incorrect, press the "▼" until the desk moves to the fully lowered position. Press and hold the "▼" again for at least three seconds and release. "5-1" will be displayed. Continue holding until the desk goes down to its lowest level and comes back up slightly.
2. If the system displays "Err", press and hold the "▼" for more than three seconds and release. "5-1" will be displayed, then continue the reset operation.

Child Lock

1. **TO LOCK:** Press and hold the "▲" and the "▼" simultaneously for five seconds until the LED reads "Loc".
2. **TO UNLOCK:** Press and hold the "▲" and the "▼" simultaneously for five seconds until the LED switches from "Loc" to the height display.



ADVANCED SETTING

1. Press and hold the "**1**" button and the "**2**" button simultaneously for 20 seconds until the LED flashes. The menu contains 7 items as the table below.
2. Press on "" or "" to perform settings respectively ;press and hold the "**1**" button and the "**2**" button for no less than 5 seconds until the "**888**" is displayed to have current setting saved.

Menu	Setting Range	Remarks
Minimum Height	73cm-108cm (28.7"-42.5")	The setting value should be at least 10cm (3.9") less than the Maximum Height.
Maximum Height	83cm-118cm (32.7"-46.5")	The setting value should be at least 10cm (3.9") less than the Maximum Height.
Starting Height	0cm-30cm (0"-11.8")	Increase the Starting Height to the current height range.
Upward Anti-Collision	U-0 U-9	0 shut down 1~9: The higher the number, the higher the sensitivity.
Downward Anti-Collision	d-0 d-9	0 shut down 1~9: The higher the number, the higher the sensitivity.
Display Decimal Point	F-0	The decimal point is not displayed.
	F-1	The decimal point is displayed
Display Unit	L-0	Change the display to show height in centimeters.
	L-1	Change the display to show height in inches.

TROUBLE SHOOTING

Error Code	Description/Resolution
	Press and hold the down arrow to perform a reset.
	The desk is overheated. Allow the desk to rest for more than 18 minutes before operating.

If you have any questions or suggestions about our products, please feel free to contact us via email: **hofficeservice@gmail.com** for more information. We are committed to ensuring our customers' satisfaction.

Si tiene alguna pregunta o sugerencia sobre nuestros productos, no dude en ponerse en contacto con nosotros a través del correo electrónico: **hofficeservice@gmail.com**. Nos comprometemos a garantizar la satisfacción de nuestros clientes.