 


Instruction Manual

Electric Patio Heater

LT-ZHQ1821SH-BC-M65-BK

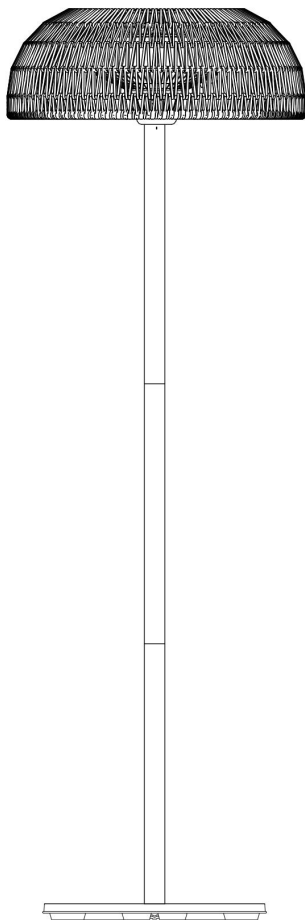

**Please read these instructions carefully before using your
new electric patio heater**

Unpack the halogen heater making sure that all the items are present and that there are no components left in the box and that the heater head is free from any packing material.

Using the detailed drawing follow the steps to assemble your halogen heater.

Do not connect the halogen heater to the electrical supply until all the assembly is complete.

Do not connect the halogen heater to the electrical supply if any of the components or the power cord is damaged in any way.

If in doubt contact your supplier.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.

WARNING: This heater is not equipped with a device to control the room temperature. Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on

their own, unless constant supervision is provided.

Children of less than 3 years should be kept away unless continuously supervised.

Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

CAUTION — Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.

Caution

Only use the halogen heater on a firm solid horizontal area where all the feet on the base are in contact with the floor. (Should the heater be tilted or fall over the auto cut off switch will activate)

1. Site the heater outside or in a large open area and well away from any obstructions such as branches or where the heater is near any objects that can be effected by heat, such as furniture, curtains or other inflammable objects (minimum distance 1 meter).
2. Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.

3. Do not use in unventilated areas
4. Do not use where gas, petrol, paint or other inflammable goods are stored.
5. Do not push any items through, obstruct or cover the grill of the heater head.
6. Do not position immediately above or below an electrical socket.
7. Do not move when connected to an electrical supply and always wait for the patio heater to cool down before storing away.
8. Do not touch the heater head when in use.
9. Do not leave turned on and unattended especially when children and or animals are in the vicinity.
10. The indication of the different positions of switches shall be visible from a distance of 1M.
11. The Marking concerning covering shall be visible after the heater has been installed. It shall not be placed on the back of portable heaters.
12. The unit must be placed with the clearance of 100cm to the wall and 30cm to the ceiling.
13. The unit must be correctly installed according to the instructions. Make sure the head is at least 1.8m from the floor.
14. The unit must be securely placed on a horizontal and flat surface.
15. The unit is at high temperature during operation. It keeps hot for a period after shut down. Potential danger would occur when touching it during this period.
16. Don't place the unit closed to curtain and/or other flammable objects. Otherwise there will be a danger of catching fire.
17. Don't cover the unit with anything during operation or a

short time after it's shut down.

 
18. Don't wrap the power supply cord on the unit.
19. The unit must be handled with care, and avoid vibration or hitting.
20. The unit must be securely grounded during operation.
21. If the unit gets damaged, it must be repaired by professional electricians.
22. When the power supply cord is damaged, it must be replaced by authorized agent or other professional people to avoid danger.
23. The unit must not be positioned under a socket.
24. When assembling, keep clear from any board or flammable material.
25. The unit must be supervised by adults if it's used by a child.
26. Do not install the unit by a swimming pool, in a bathroom or shower area.
27. The unit is for household use only. It is not safe to use on a building site, greenhouse, barn or stable where there's flammable dust.
28. The head of the unit is at high temperature during operation. Unplug the unit and wait till it cools before cleaning.
29. Don't use this unit in place where causticity or volatile air exists, i.e. dust, steam, gas, etc.
30. Don't use this unit as a cloth drier or towel drier.
31. Don't use this unit as a sauna heater.
32. Don't use this unit as a room heater.
33. Don't use this unit in place of animal propagating and raising.
34. Don't immerse this unit into water for cleaning.
35. The unit should be plugged in a socket, which is easily

visible and reachable.


- 36. Two Dark points may exist on the surface of the heating elements during the first few minutes after it is turned on. This is normal, and will not affect the performance of the unit.
- 37. A tilt switch is fitted inside the unit for safety purpose
- 38. The wheels are only for the purpose of moving the heater, once the heater is in the right position, the wheels should be removed for safety purpose.
- 39. Do not use this heater with a programmer, timer or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.
- 40. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 41. Children should be supervised to ensure that they do not play with the appliance.

Assembling Process - Base


Step 1: Fix the bottom tube onto the base by screwing.

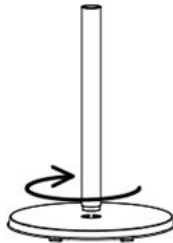

 
Step 2: Connect the middle tube with bottom tube by screwing them together.

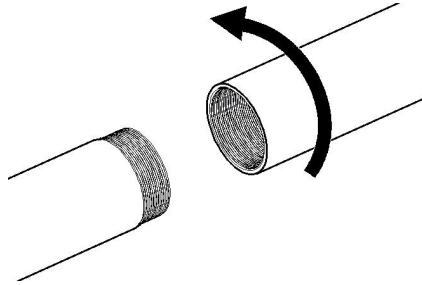

 
Step 3: Connect the top tube with middle tube by screwing them together(as same as Step2).

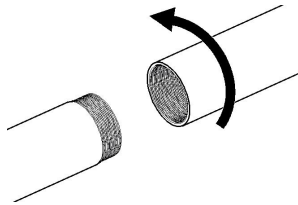


 
Step 4: Place the power cord plug through the base ,bottom tube, middle tube and top tube. Connect the power cord plug to the socket in the heater head.

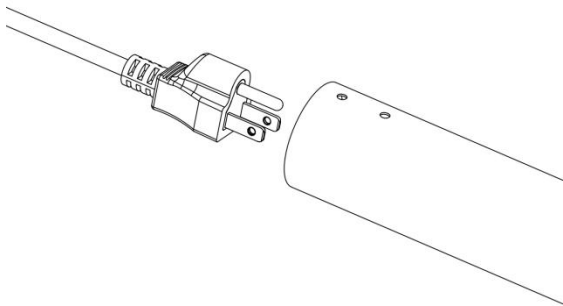

 Step 5: Insert the Heater Head onto the top tube and fix in position using the 4*8mm screws

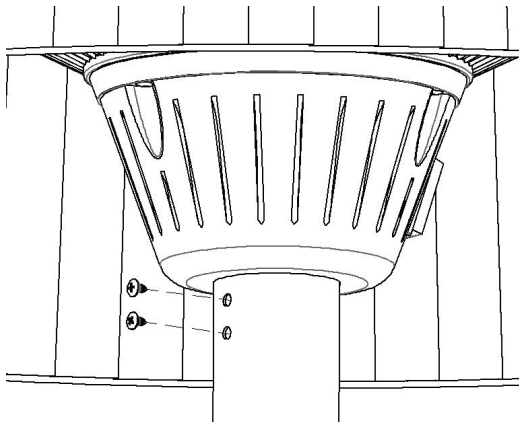

  Step 6: Use 4 pcs $\phi 3.5 \times 14\text{mm}$ screws and 2 crimping tabs to secure the power cord to the base.

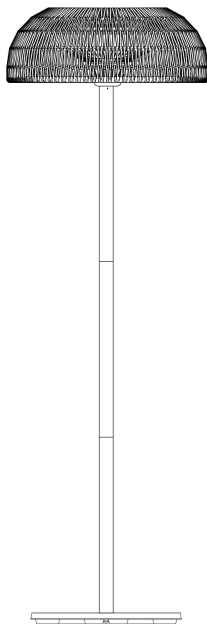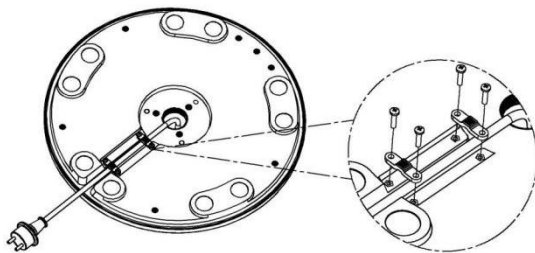


Complete!

Operation

Connect the power cable to at least a 13 amp supply that is located in a safe, dry area.

 WARNING: The heater must be properly installed before it is used

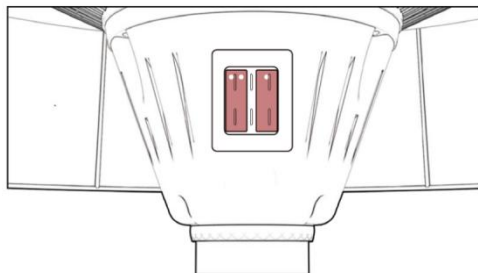

- The switch on the heater head is used to control the three heat settings. (I) for 700W – (II) for 800W– (I&II) for 1500W. The 0 position is off.
- Although the patio heater is shower proof, do not use when raining or in wet conditions.
- Always disconnect the power cable from the electrical supply, when the patio heater is not in use.

Care and maintenance

- When disconnected from the electrical supply, clean the outside of the patio heater with a damp cloth. Never use corrosive or solvent cleaners or immerse in water.
- Any maintenance or repairs including replacing the halogen tube should only be carried out by a qualified electrician or by a recommended service center.

Technical specification

- Power supply 120V~ 60Hz
- Wattage 1500W
- Insulation class I

GROUNDING

This product is for use on a nominal 120V circuit with a grounding plug that looks like the plug illustrated below. Make sure that the product is connected to an outlet having the same configuration as the plug. Do not use an extension cord or power strip. No adaptor should be used with this product.

