


Assembly Instructions

WI7430N

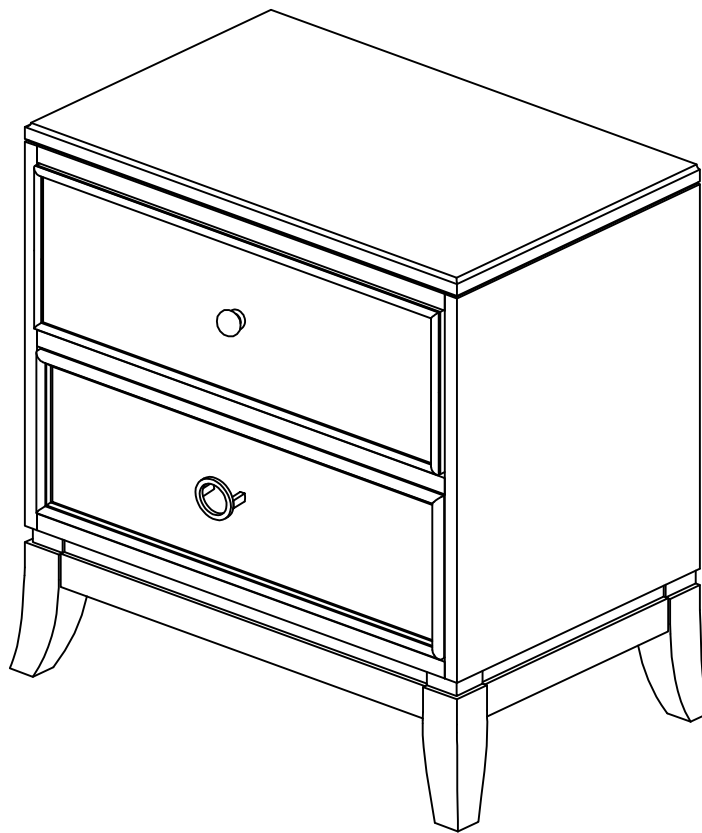

ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.

EASY





DIFFICULT


*** 2 persons recommended**

 Tools Required For Assembly:

Allen Wrench

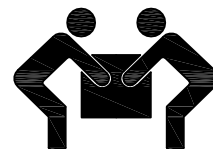

2 PERSONS RECOMMENDED

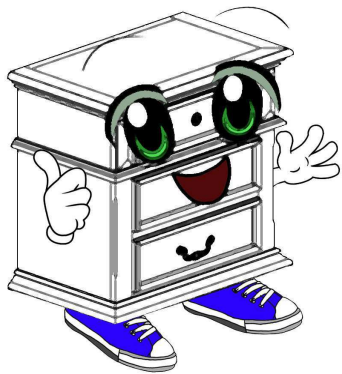

Before you begin, please read Page 2 of "Assembly and Care Advice".

And remember, do not tighten until each step is completed or instructed.

Parts List



#1 x 1pc
Night Stand



#2 x 2pcs
Front Leg

 


#3 x 1pc
Back Leg (L)



#4 x 1pcs
Back Leg (R)


Hardware List




#A x 8pcs
Bolt Ø5/16 x 2"



 
#B x 8pcs
Lock Washer Ø5/16"



#C x 8pcs
Flat Washer Ø5/16"

 

#D x 1pc
Allen Key M4

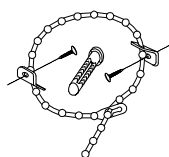


#E x 1set
Tipping Restraint





#A x 8 pcs
#B x 8 pcs
#C x 8 pcs

1. Prepare 8 bolt assemblies by first inserting a lock washer (#B) onto the bolts (#A) then a flat washer (#C) onto that same bolt (#A).

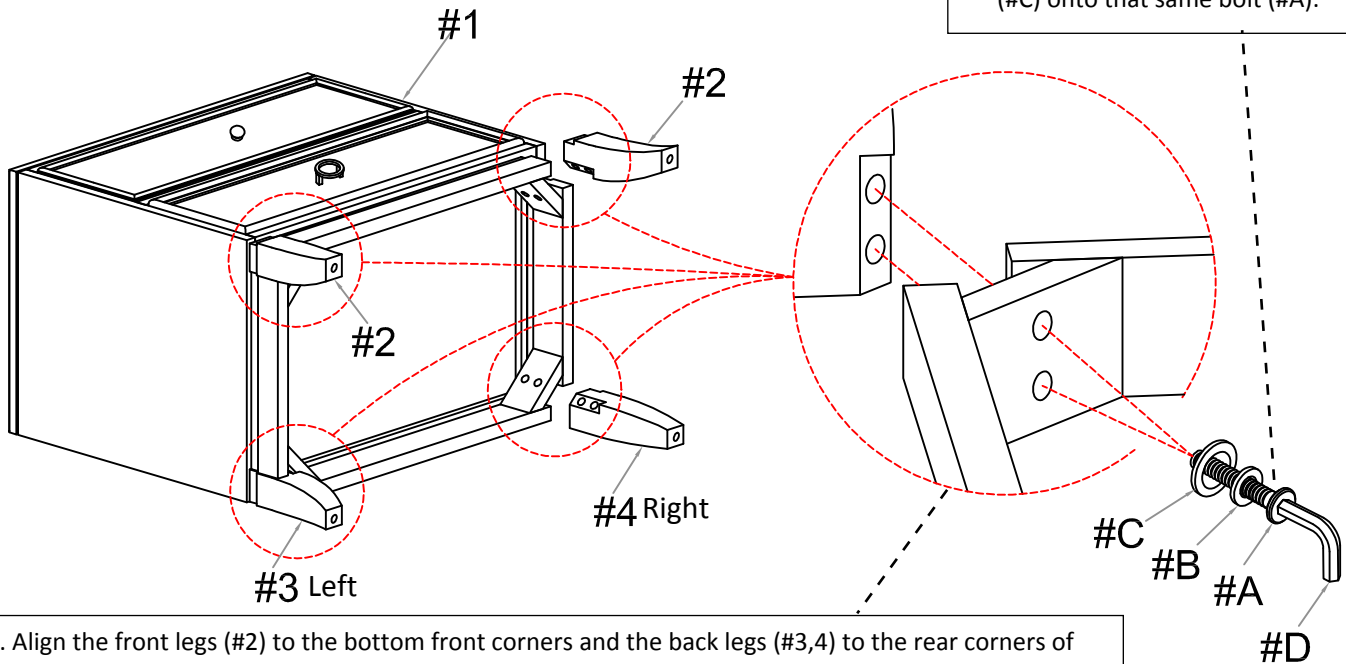

2. Align the front legs (#2) to the bottom front corners and the back legs (#3,4) to the rear corners of the night stand (#1). Insert 2 bolt assemblies into each corner and secure using the Allen wrench (#D).

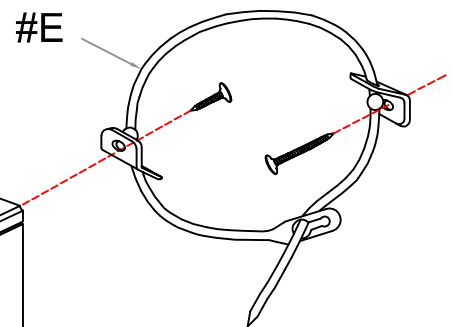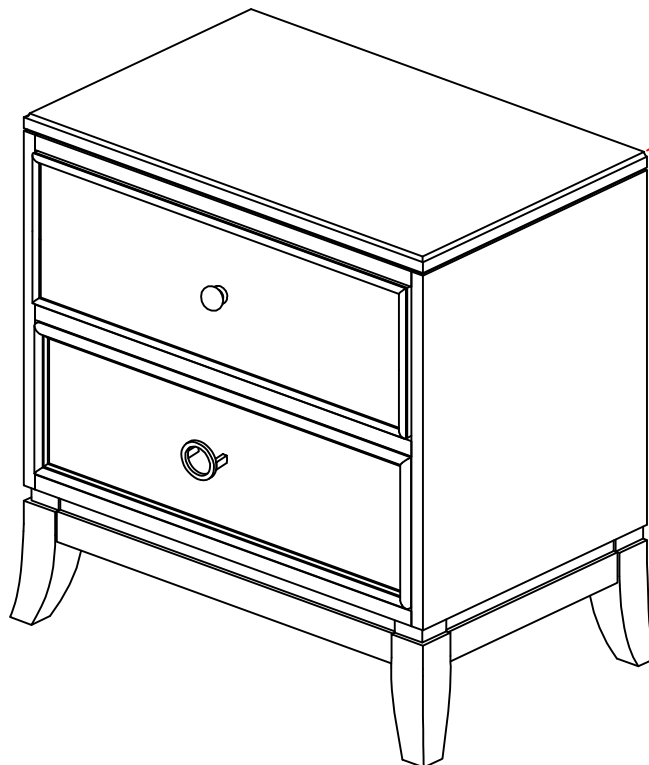

Install the tipping restraint to secure the chest and keep it from tipping over.

ASSEMBLY IS COMPLETED