

Product Warranty Information

Thank you for choosing a Hi-Line product! We strive to bring the best home and garden decor products for our customer from across the world. Our exclusive designs and systematic approach to make your home a wonderland for you! In the event that we have not achieved our usual standard of excellence, we will repair or replace, at our discretion, within the warranty period. A valid proof of purchase, with the purchase date clearly indicated, must be provided. Photos of defective merchandise will also be required to help distinguish the actual cause of the defect. Please read below for a detailed description of warranty coverage.

• Procedure/Service

Should a warranty/claim be needed, you should contact the retailer from whom you purchased the product. If that is not an option, you can contact Hi-Line Gift Ltd at www.hilinegift.com. When contacting Hi-Line Gift Ltd, you must be prepared to show PO#, PO Date, and buyer name, proof of purchase, provide photographs and any other information needed to validate your claim. This may be necessary to distinguish between a partial or complete replacement of a defective product.

The warranty does not cover any items with multiple parts; the warranty will ONLY cover the individual component of the unit/item that may be defective. Replacement parts can be made available to a consumer through the original selling party, or an approved parts retailer. If this is not an option, contact our customer service department. Item is covered under one year limited warranty from the date of purchase. If your purchase was after our 30-day grace period, payment information will be requested for shipping charges.

• Return/Damage Claim Instructions

⚠ Do not discard the box / original packaging.
The item must be returned in the original box, otherwise your return will not be accepted.

⚠ Take a photo of the box markings.
In case a part is needed for replacement, a photo of the markings (text) on the box is required to identify the item number and ensure you receive the correct parts.

⚠ Take a photo of the damaged part if (applicable).
A photo of the damage is always required to file a claim and get your replacement of refund processed quickly, Please make sure you have the box even if it is damaged.

⚠ Send us an email with the Images required.
Email us directly from marketplace where your item was purchased with the attached images and a description of your claim.

• Not Covered Under Warranty

The limited warranty will NOT cover cases of damages due to

1. Inadequate care and/or neglect
2. Environmental and/or natural elements
3. Improper Installation/use and/or Maintenance

This warranty also does not cover any additional charges or installation, removal, disposal and/or shipping costs or consequential damage associated with any warranty claim.

Owner's Manual

Item # 78688-A



HI-LINE GIFT LTD.



**Have Questions or Issues?
Need help with assembly?
Contact us via email or phone.**

(For faster assistance, please include PO#, PO Date, and Buyer Name in your email.)

Email: support@hilinegift.com

Website: www.hilinegift.com

Call: 1-800-868-9176 (US) 905-564-2815 (Canada)

Before you start

- Please read this instruction before use of this product.
- Separate and count all parts and hardware. If any parts are missing do not attempt to use the product until they have been obtained and correctly installed.
- Read through each step carefully and follow the proper order.
- Place the product on a level surface, near to the area where it is likely to be placed in use.
- Keep pets, babies and children away from all small parts and components of this product as they potentially pose a serious choking hazard.
- Please keep this instruction manual for future reference.

LBS

20 LBS
CAPACITY

1 PERSON
ASSEMBLY

APPROXIMATELY
20 MIN.
ASSEMBLY

PARTS

A

1 PC

B

1 PC

C

1 PC

D


1 PC

Product assembly

NOTE:

Carefully remove all parts from box and remove protective wrapping. In order to let you assemble more easy, please only match caps on screws firstly, let caps loosely, make sure don't tighten them before match all parts.

- 1 Insert the light on Part A into the hole at the bottom, wrap light into circles.
- 2 Hang the light circle into buckle under Part C.
- 3 Let light go into the top of Part B, then press Part C onto Part B strongly.
- 4 Put Part D onto Part C.
- 5 Finish the assembly. You need to stick the solar accordingly to the below guidance.

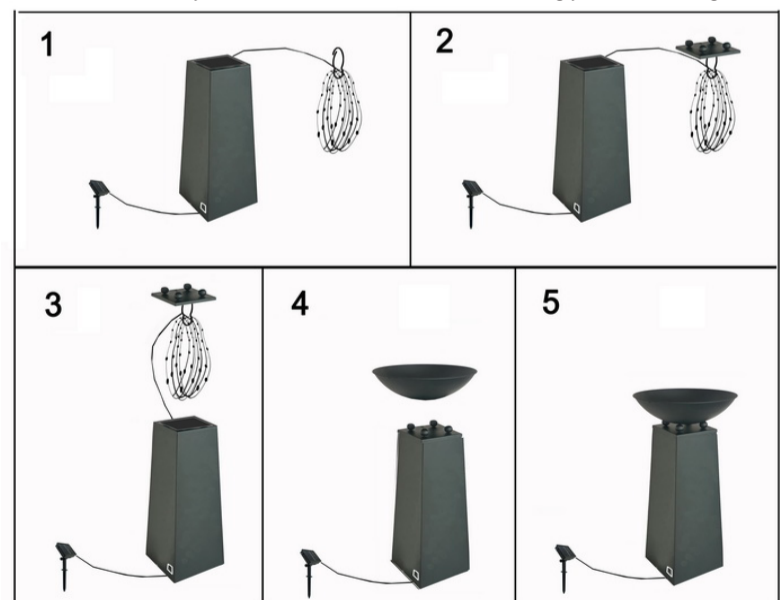

Button Panel on Solar Stick

Turn On / Turn Off
[You can cover the front of solar panel by hand, to make sure whether the lights are turned on or off.]



HI-LINE GIFT LTD.



Scan for assembly video