 


END TABLE MANUAL

 


Installation of Cams and Pins

 
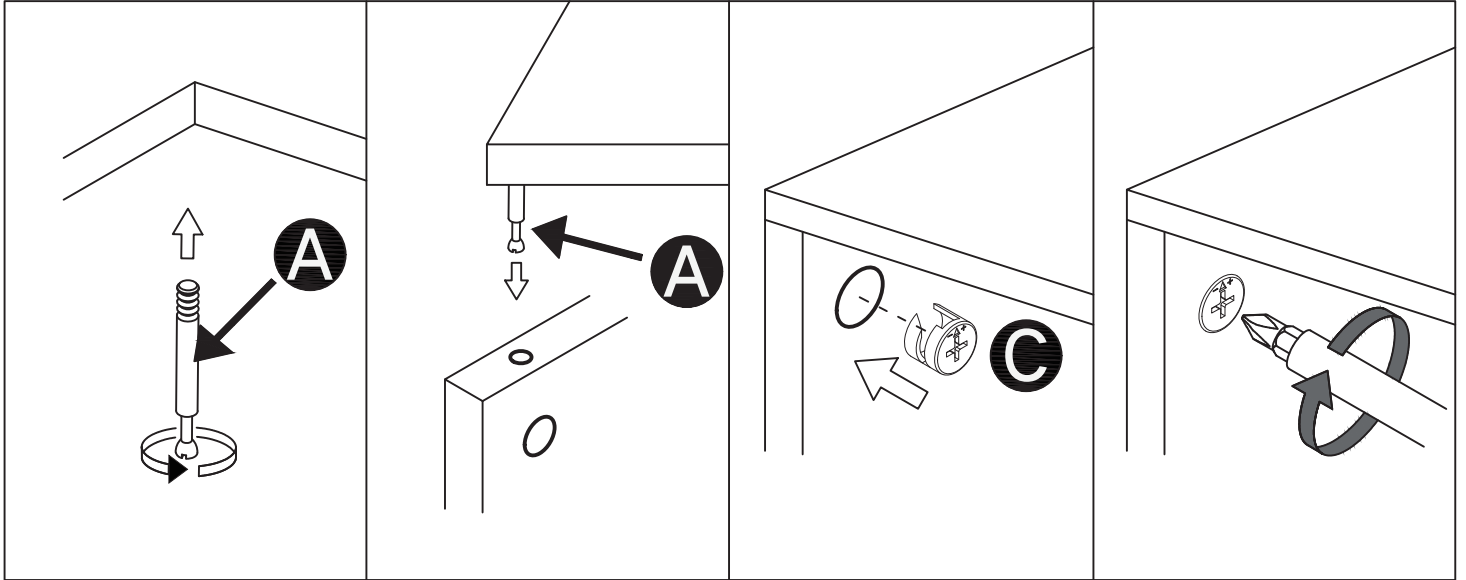 




 
 
 
Screw the pin into the hole. To set the cams correctly, ensure that the arrow on the cam is opening to the hole of the pin it is locking. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

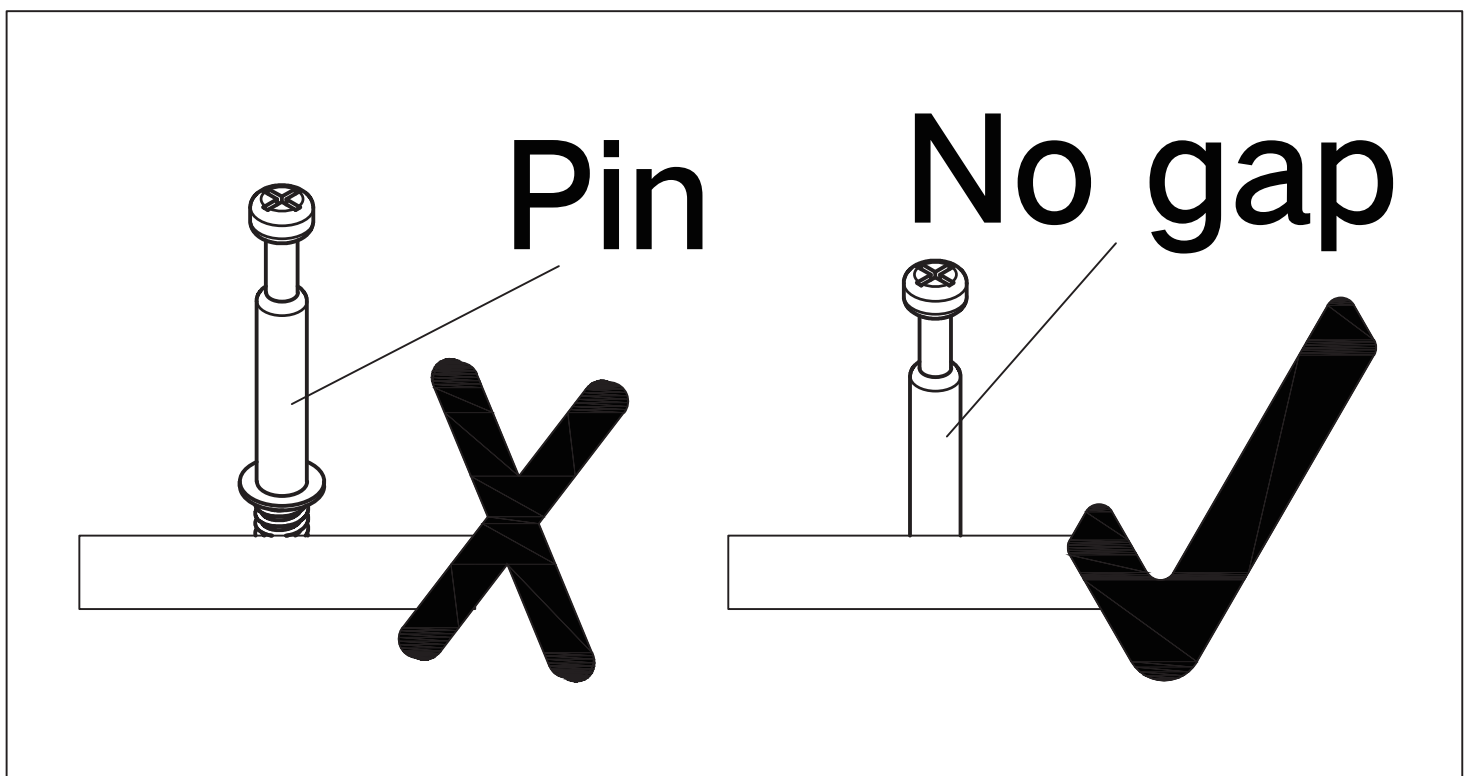

 
 
 

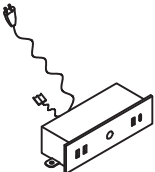 
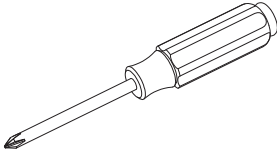 
Read each step carefully before starting. It is very important that each step of instruction is performed in the correct order. If these steps are not followed in sequence, assembly difficulties will occur.

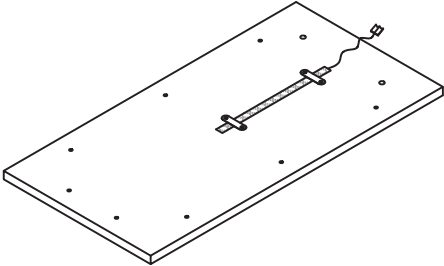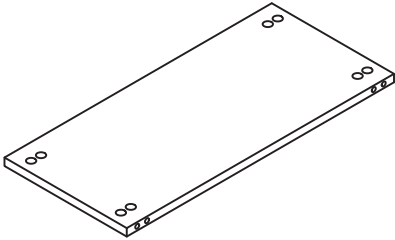


Parts & Hardware List

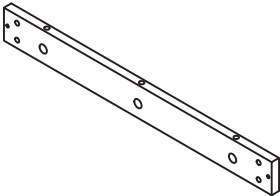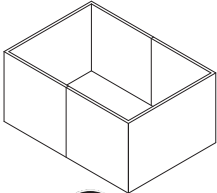 1 1pc	 2 1pc	 3 2pcs
 4 2pcs	 5 2pcs	 6 2pcs
 7 1pc	 8 2pcs	 9 1pc




Parts & Hardware List

 A 30pcs	 C 30pcs	M6X25MM  E 10pcs	M4X10MM  N 2pcs
 W 1pc			

 
1

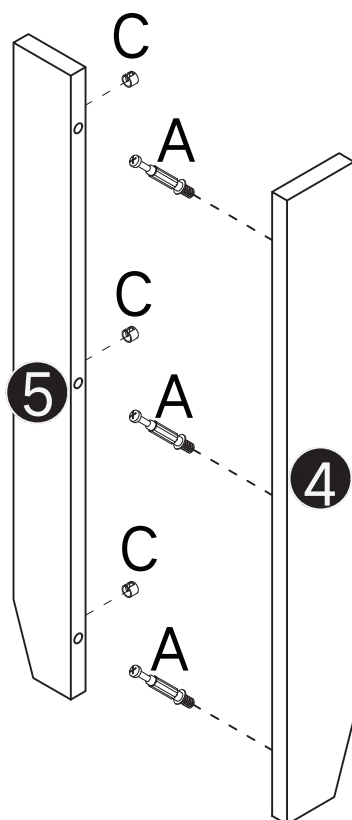



x2

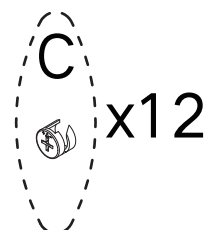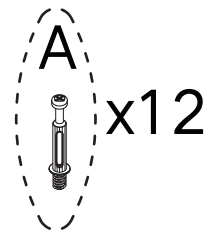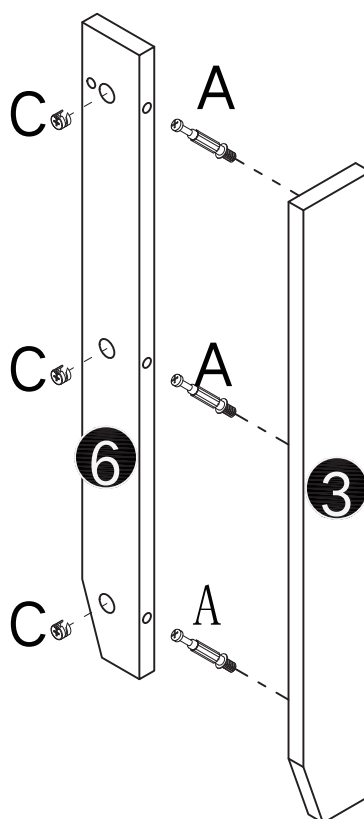   



2

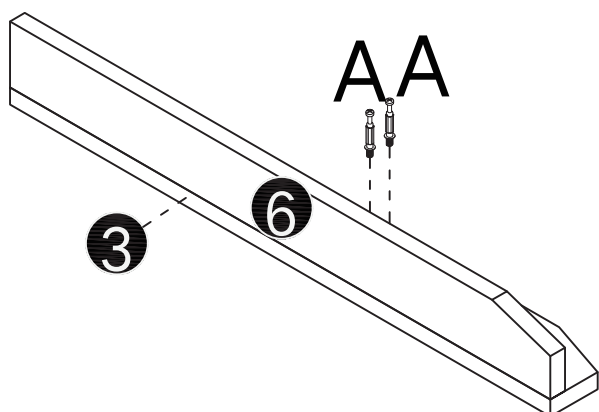 




x2

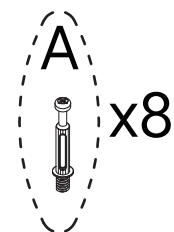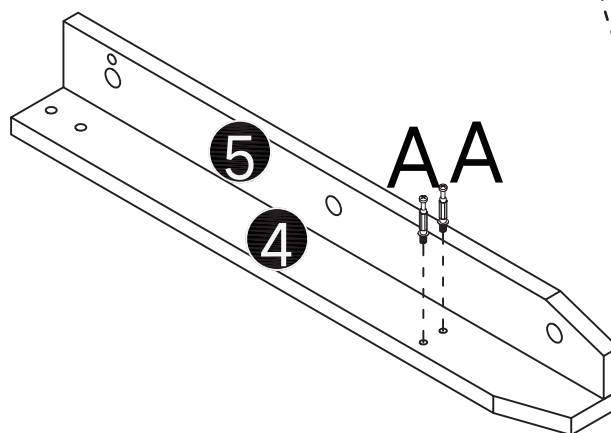  




3

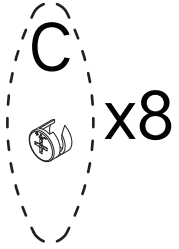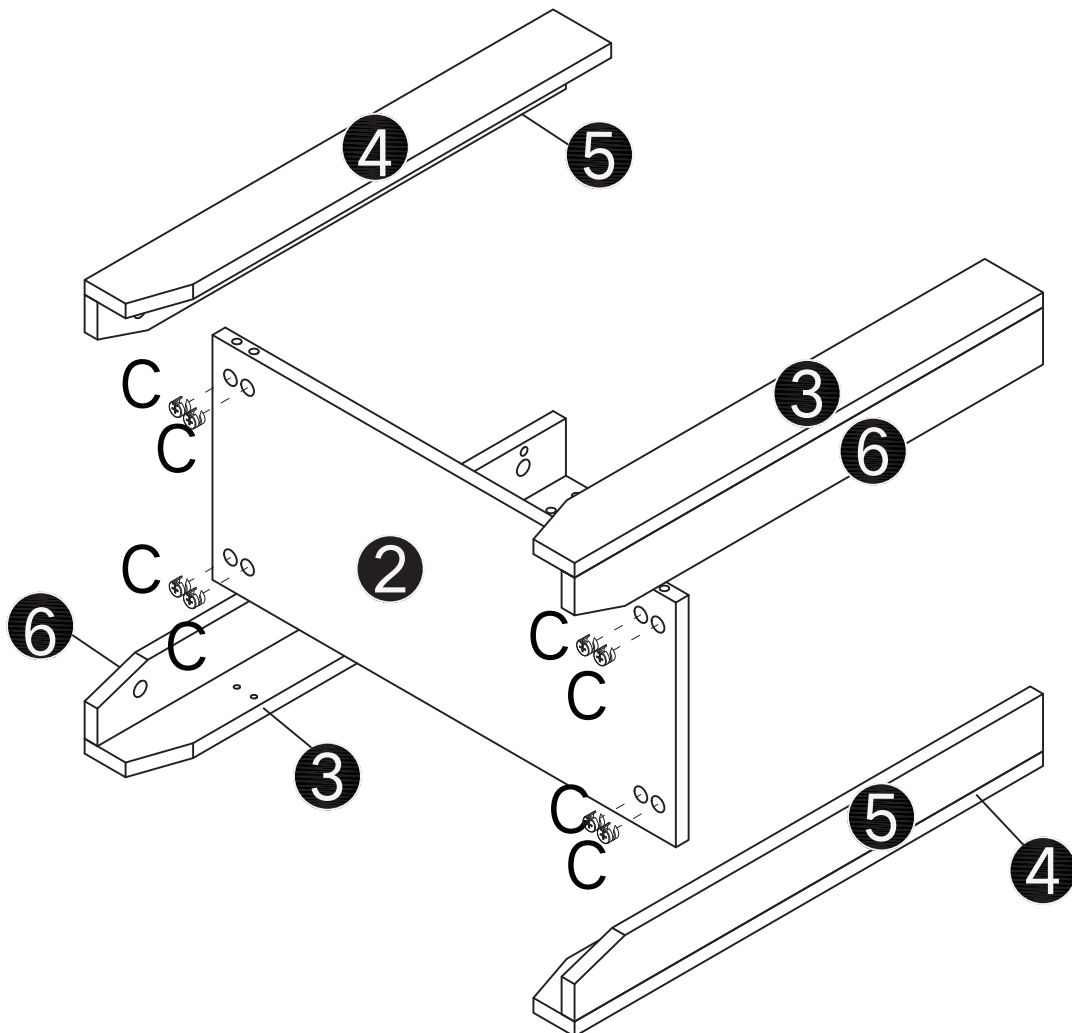  



4

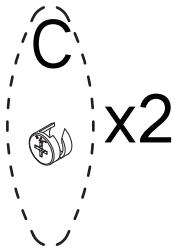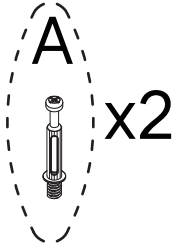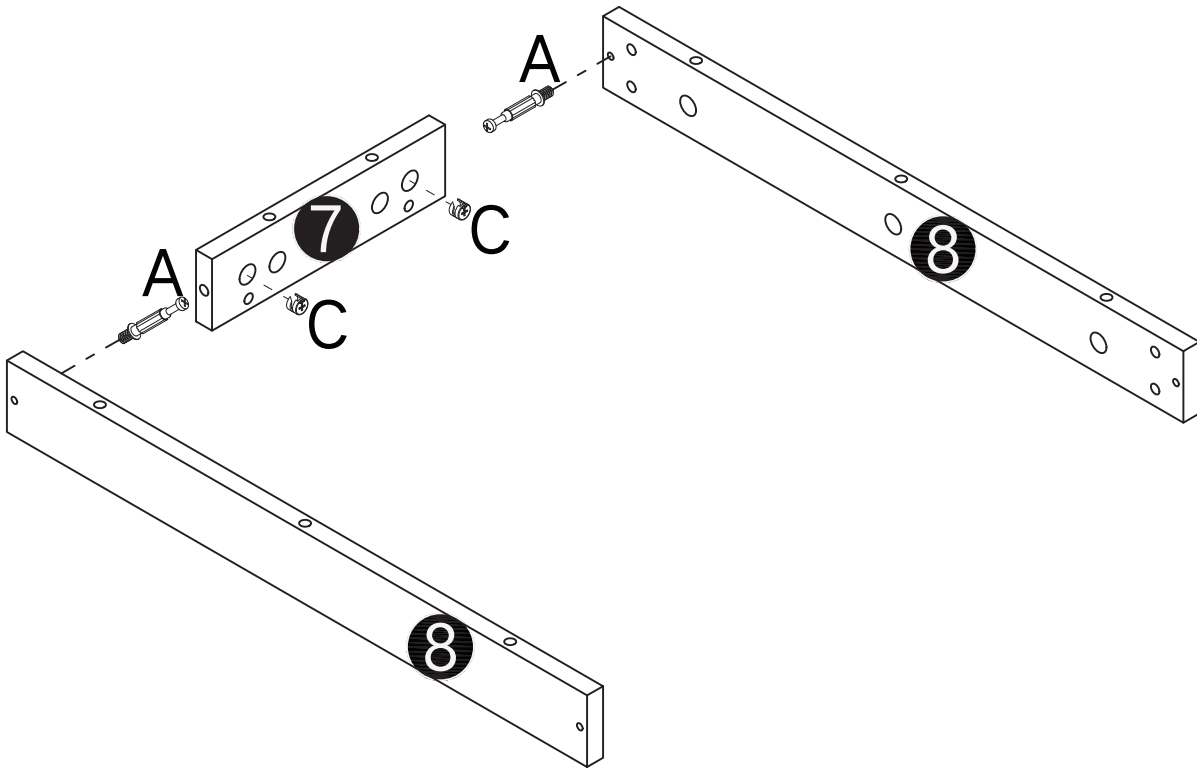   



5

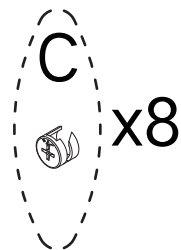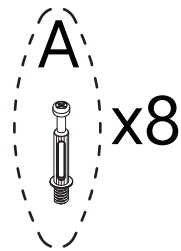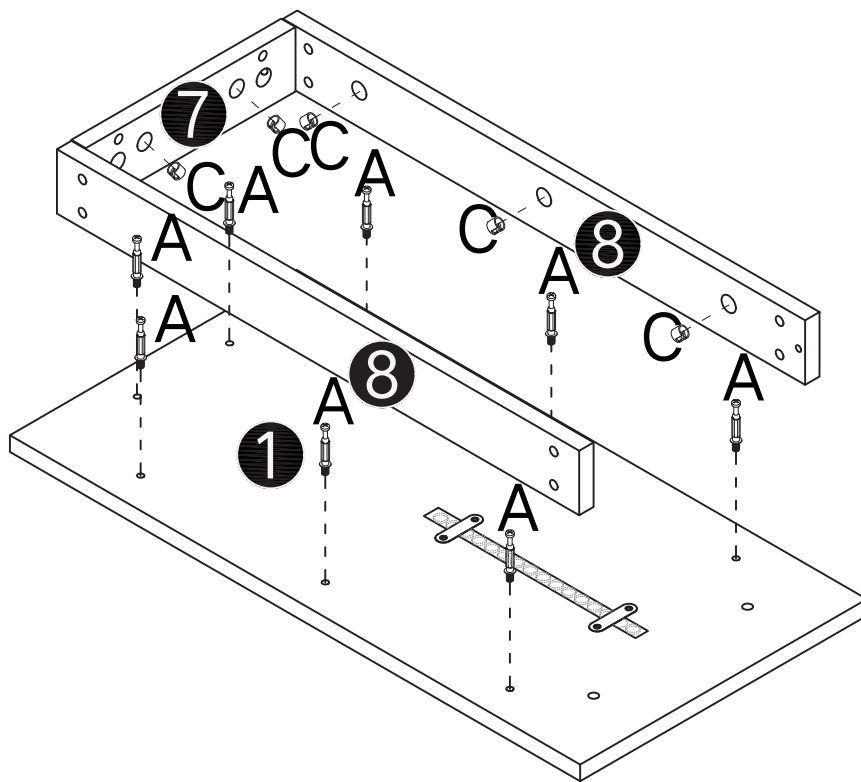   

6

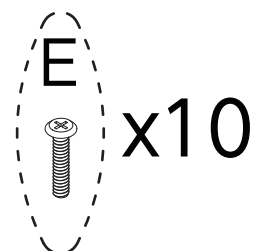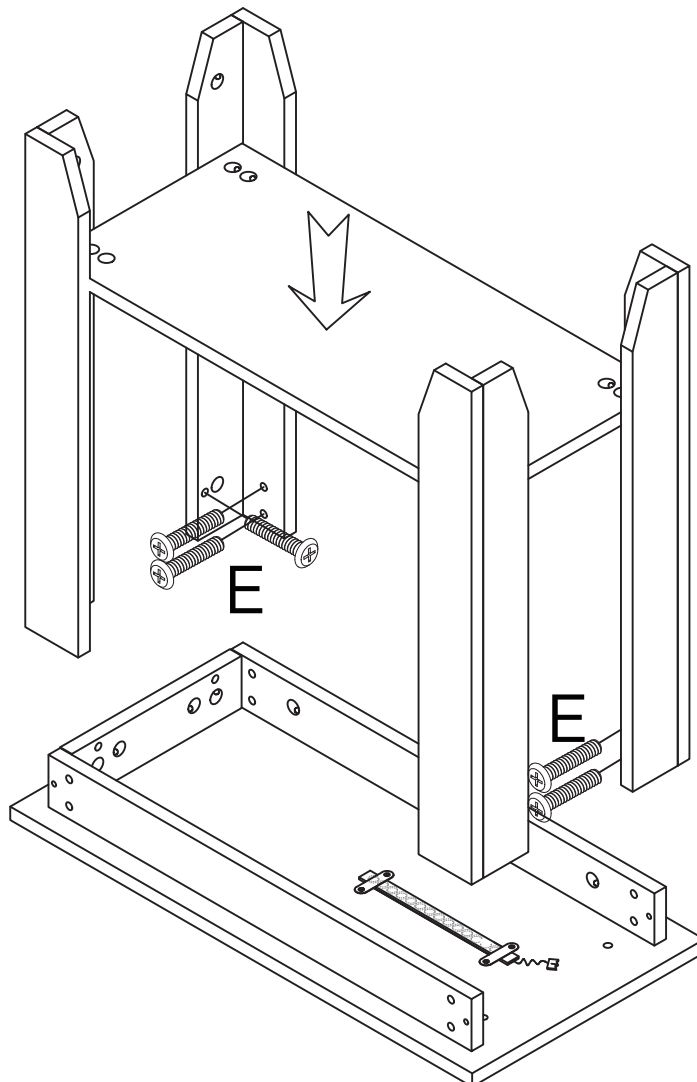  

7

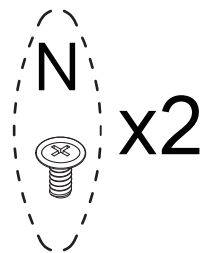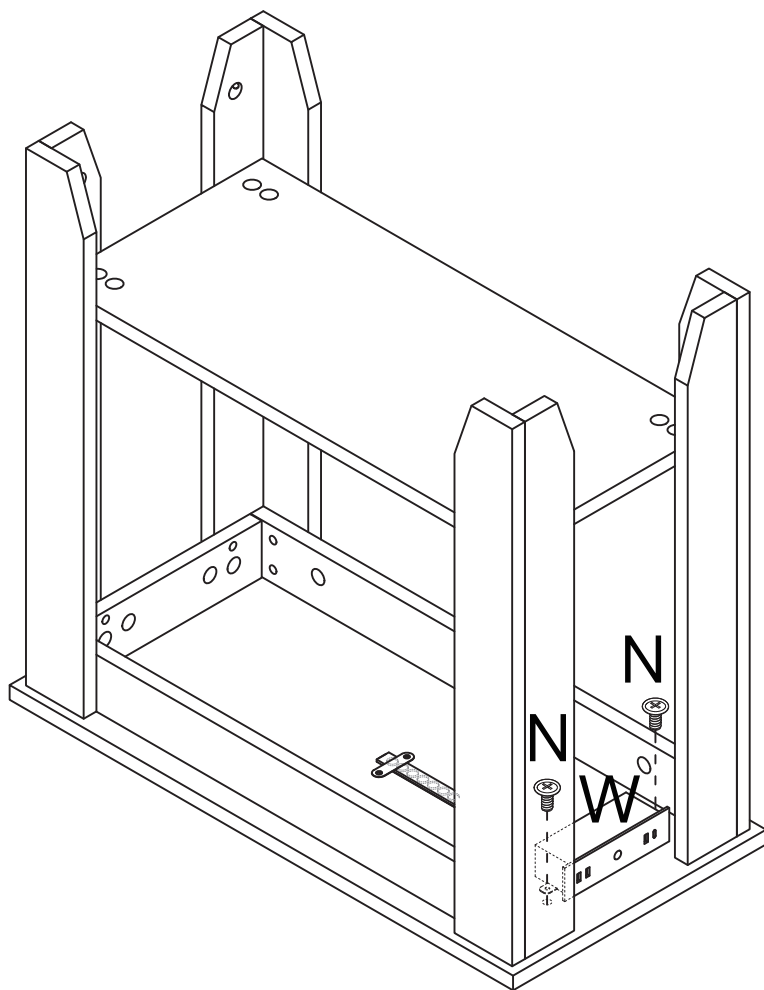  

8

