


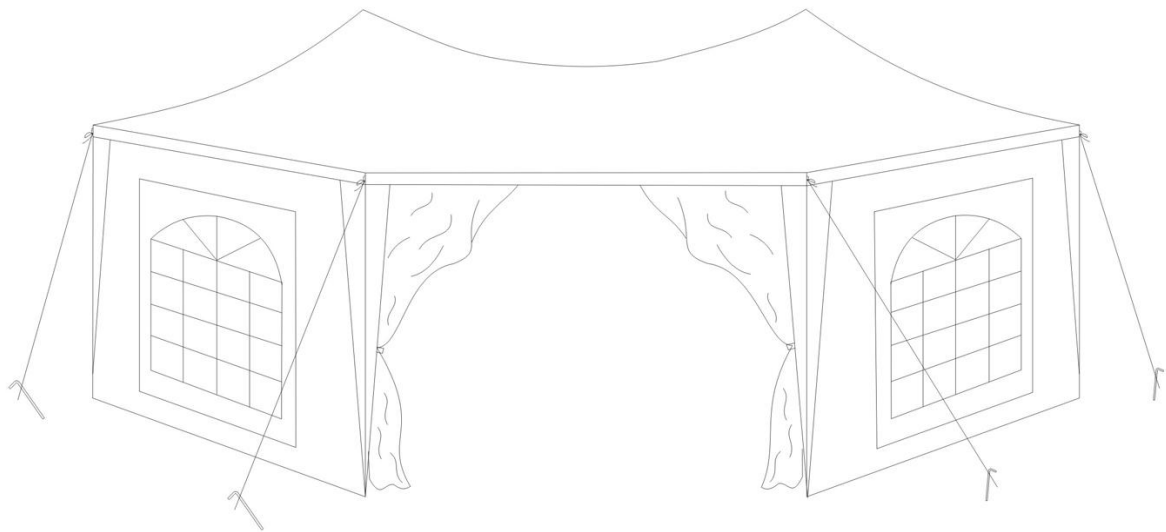

29' x 20' Large Heavy Duty Decagon
10-Wall Party Wedding Gazebo Canopy Tent

Model # 01-0006-002



Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.

ASSEMBLY INSTRUCTIONS



8.9X6.5M

Assembly Instructions


ItemNO	Pic	Qty
1		11pcs
2		10pcs
3		10pcs
4		10pcs

ItemNO	Pic	Qty
5		2pcs
6		2pcs
A		2pcs
B		2pcs
C		6pcs


Pic	Qty
	10pcs
	10pcs
	2pcs
	30pcs
	10pcs

Pic	Qty
	44pcs
	1pc
	2pcs
	2pcs


Step.1

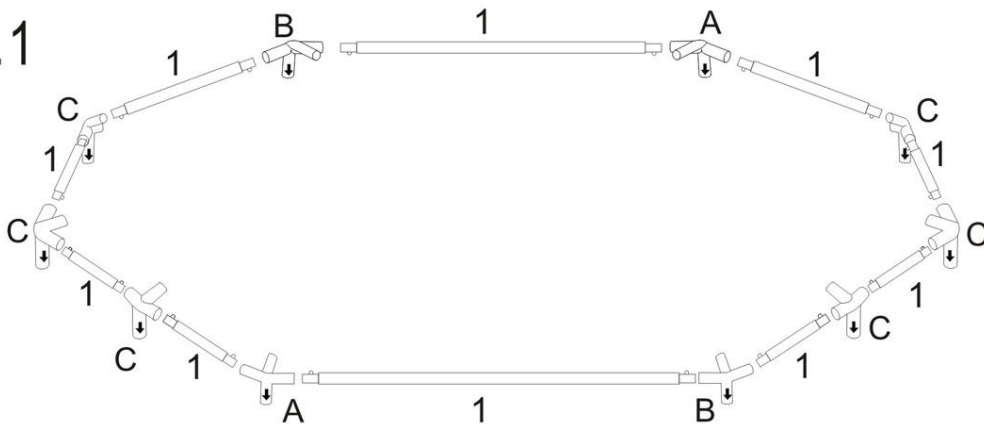



Step.2

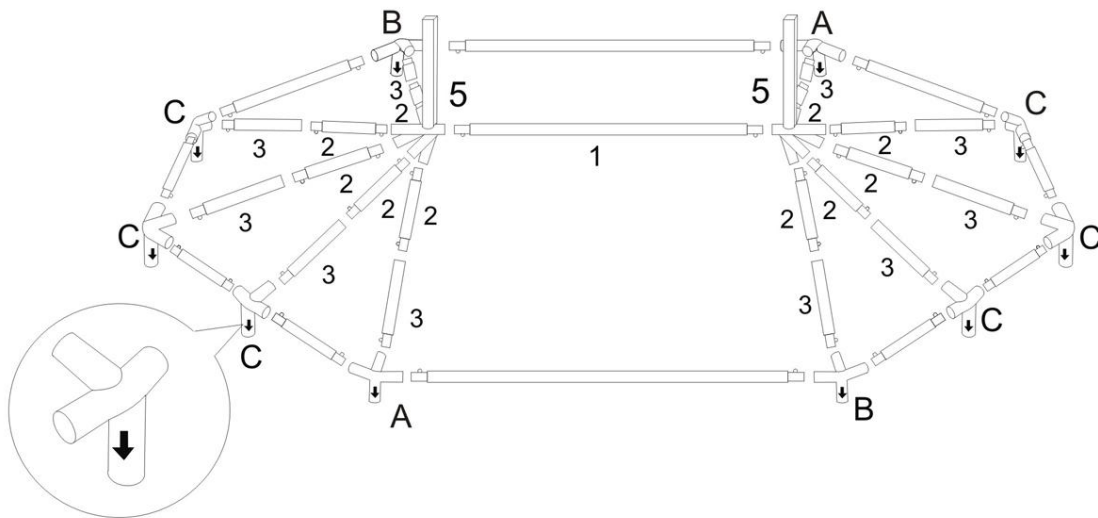


Step.3

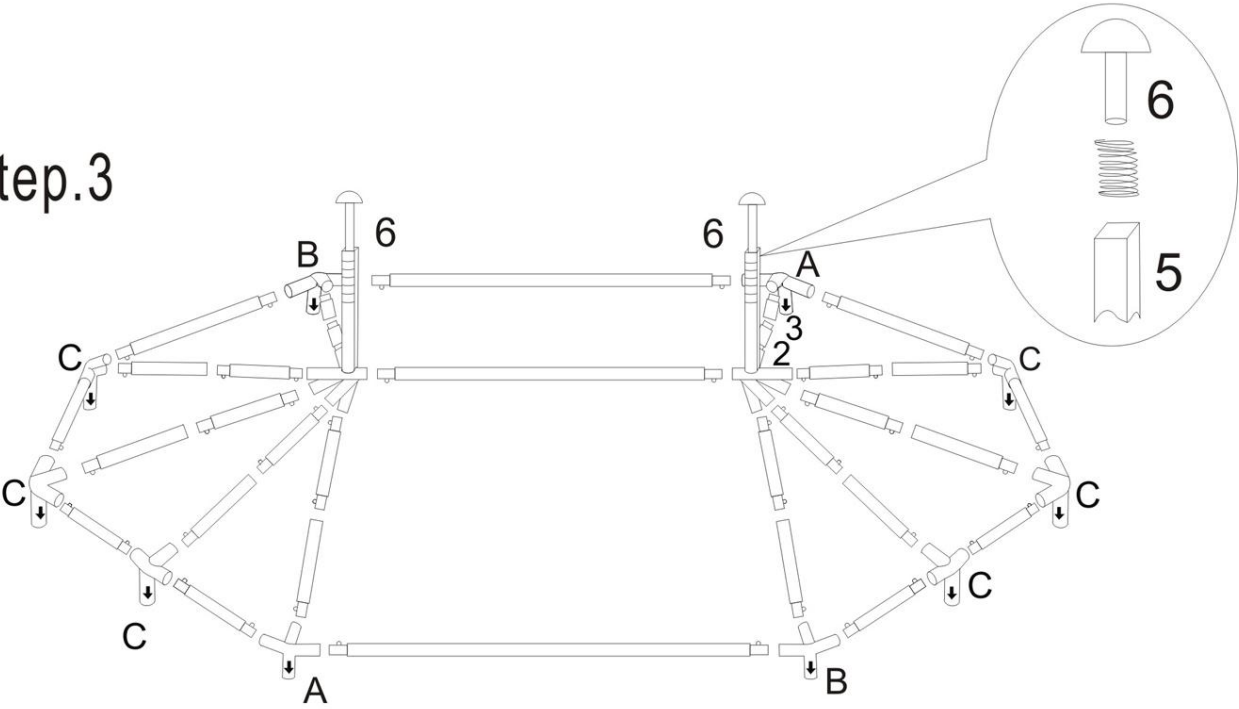


Step.4

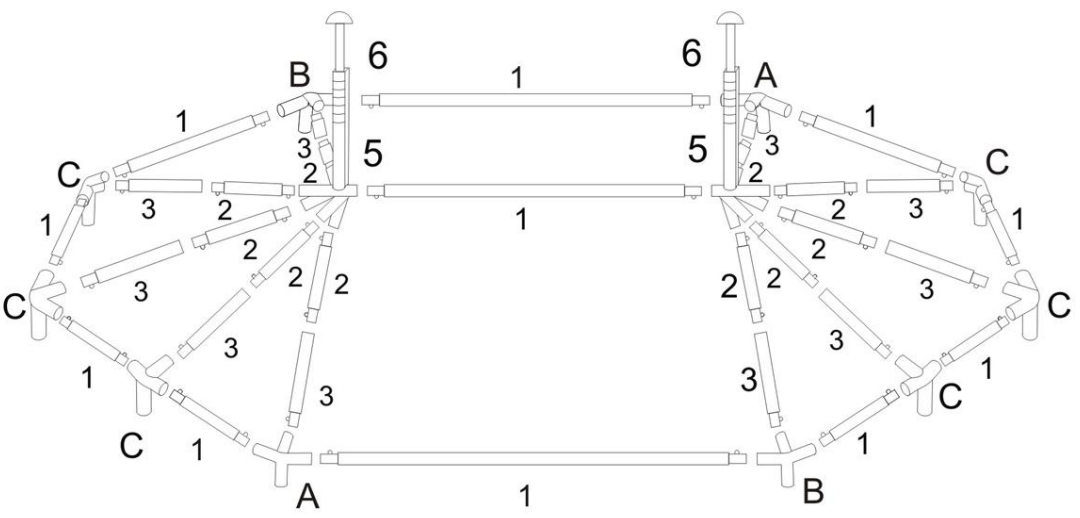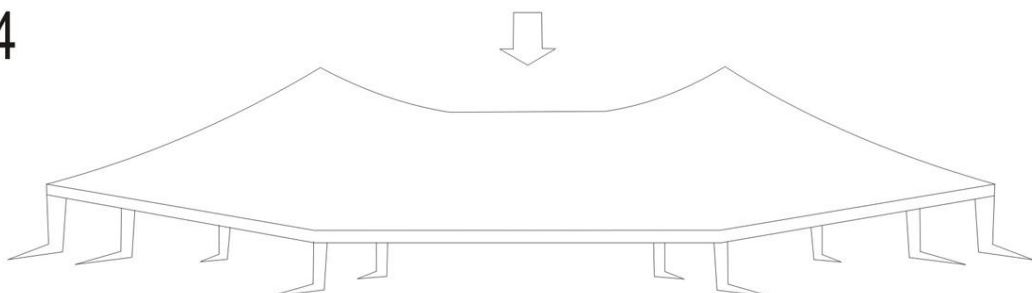


Step.5

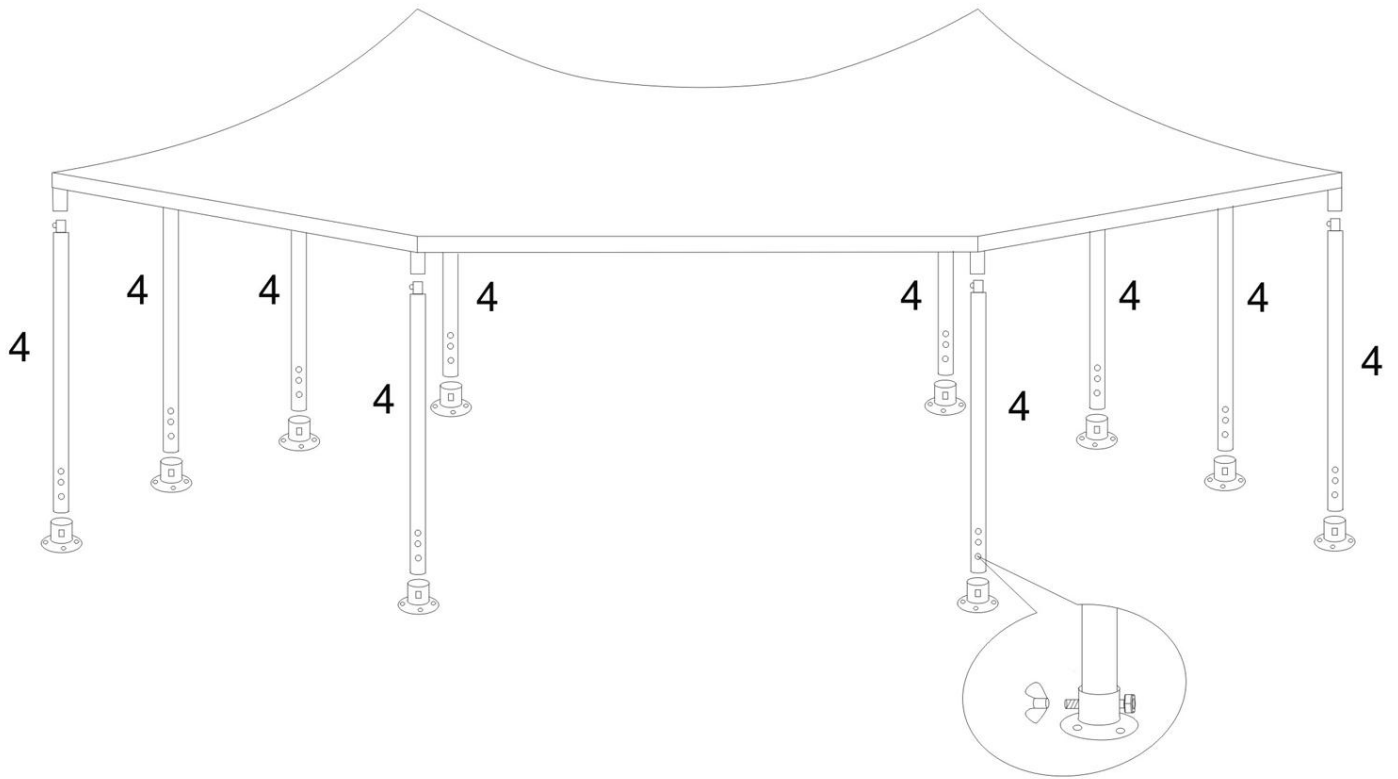

Step.6

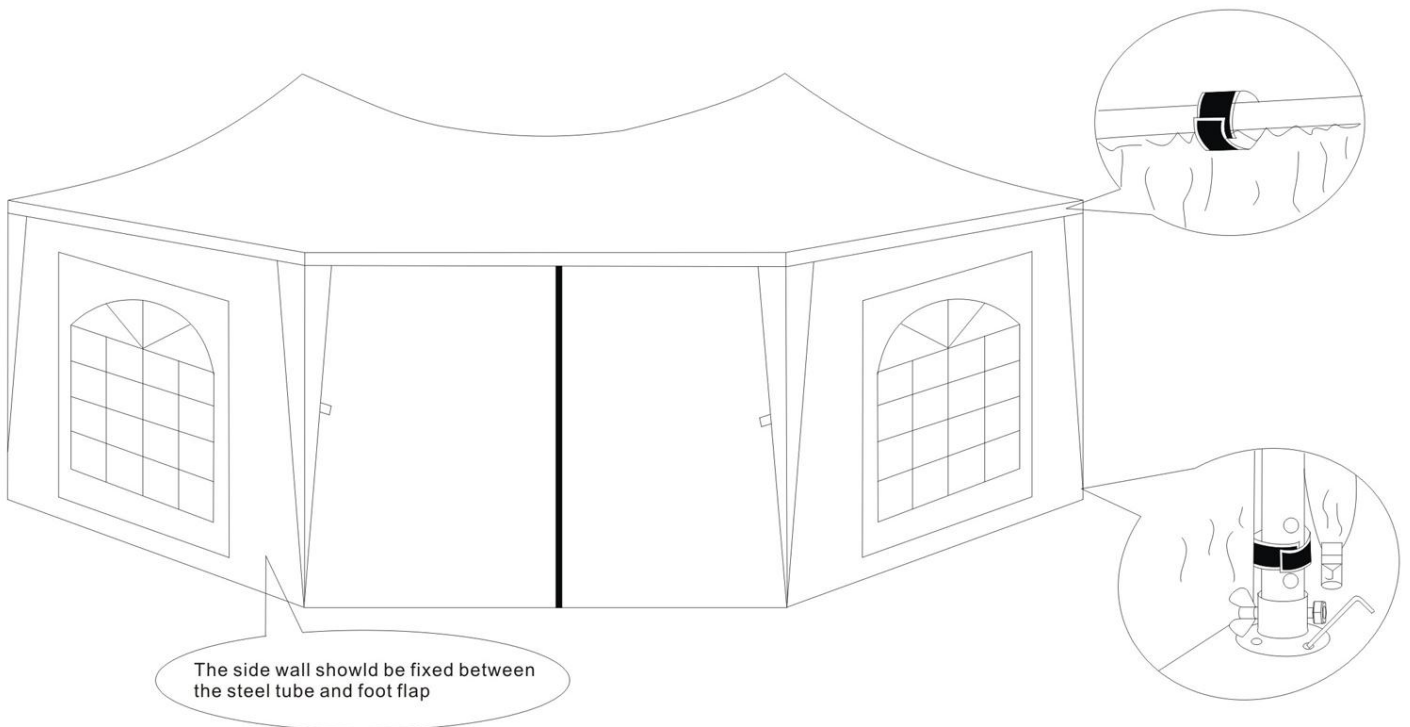

Step.7

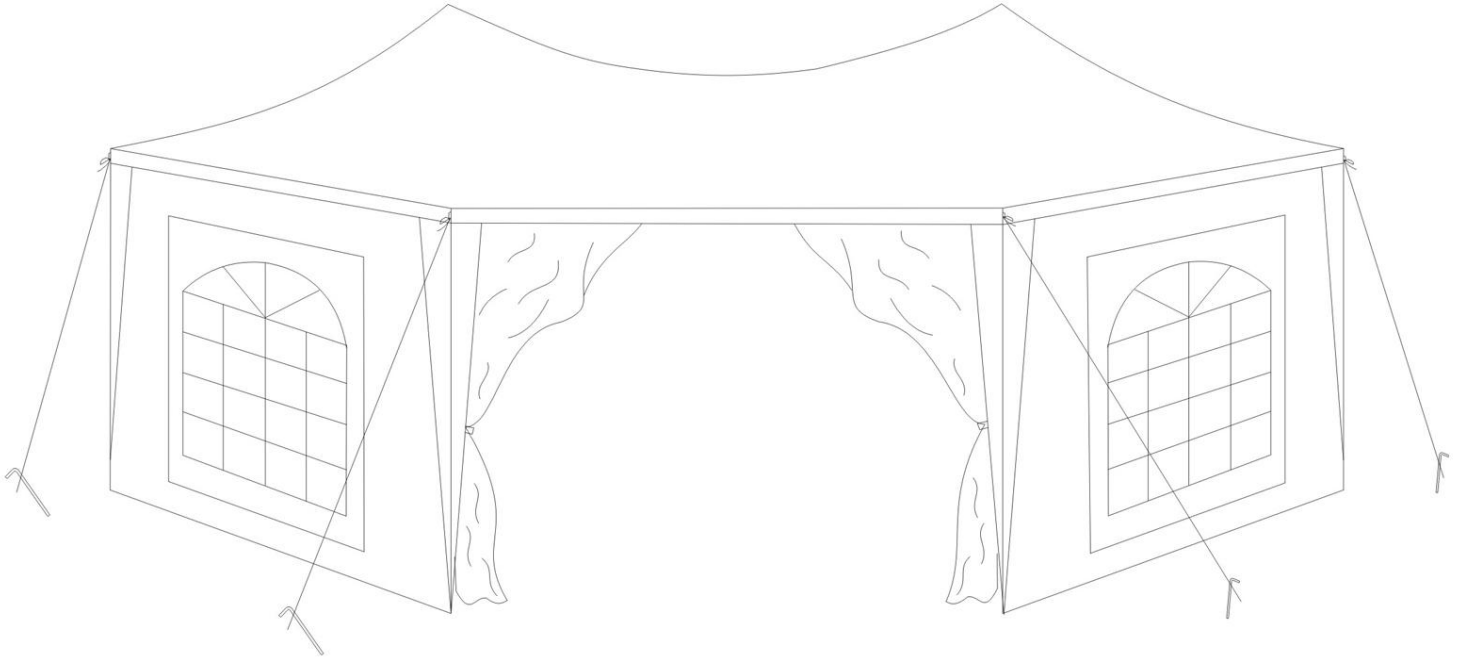

WARNING INSTRUCTION

- 1) Take the canopy out of the box carefully and place on dry surface (sand, grass, or hard surface).
- 2) please have at least 4 people helping with the assembly, in order to avoid the damage of steel pole.
- 3) Secure tent in windy conditions by using the rope that is located on each side of the canopy and hammering stakes into the ground at a 30 degree angle to balance the sides of tent. If the canopy is placed on a hard surface, secure the 4 sides with bricks or sand bags to weigh the canopy down.
- 4) DO NOT ASSEMBLE TENTS IN RAIN, SEVERE WIND OR SNOWY WEATHER CONDITIONS, BECAUSE THIS WILL DAMAGE YOUR TENT. It is the owner's responsibility if the tents are set-up and damaged during these conditions.
- 5) Store your canopy/tent in a cool dry place when not in use.

Contact Us!

We are here to help!

customerservice@aosom.com or 1-877-644-9366