


**SPORTSPOWER™**

# Sunnyslope Wooden Play Set

**Style # (WP-572)**

OWNER'S MANUAL

ASSEMBLY, INSTALLATION, CARE, MAINTENANCE AND USER INSTRUCTIONS

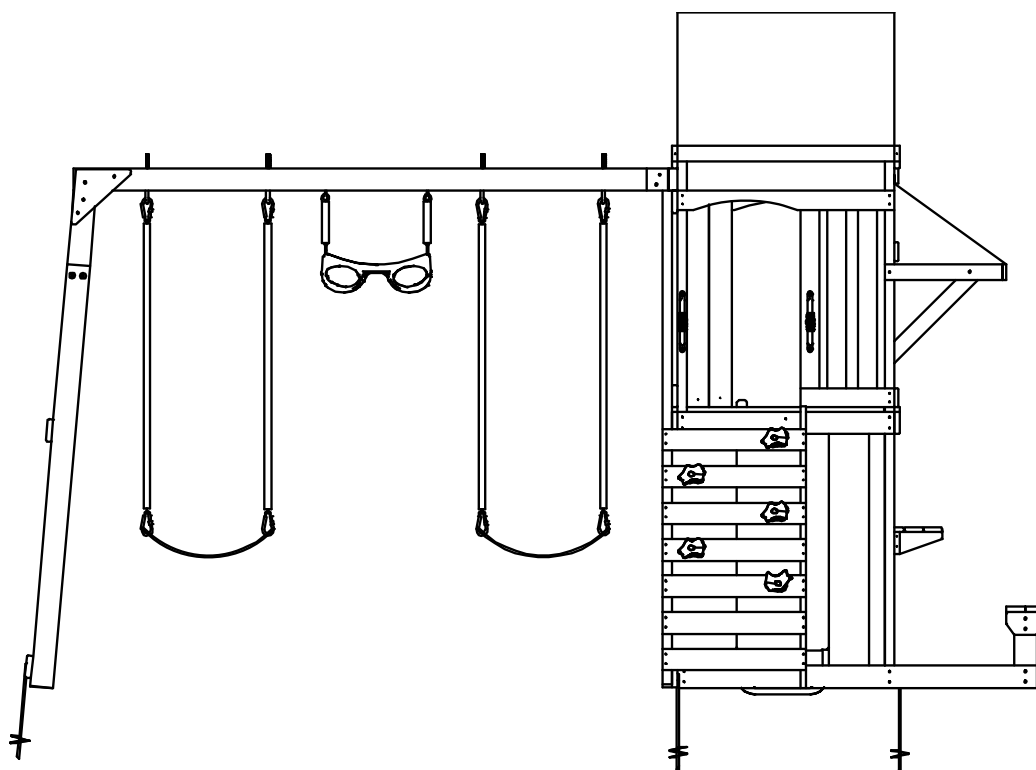

## **⚠ WARNING ⚠**

**CHOKING HAZARD** - Small parts.  
Not for children under 3 years.

**FOR RESIDENTIAL USE ONLY  
ASSEMBLY REQUIRES AT LEAST FOUR ADULTS**

**DO NOT RETURN TO THE STORE**

For Customer Service, please call 1-866-370-2131 or visit [www.sportspowerltd.net](http://www.sportspowerltd.net)

**Monday – Friday 9:00 AM – 5:00 PM Eastern Time**

Sportspower Limited

Level 20, Parkview Centre, 7 Lau Li Street, Causeway Bay, Hong Kong

## INTRODUCTION

Dear Valued Customer,

Congratulations on your wood swing set purchase! Please read and completely understand the contents of this owner's manual. This manual contains specific instructions that must be followed to prevent injuries.

This equipment is for residential use only. This swing set is NOT intended for public or commercial use. The warranty will be voided if the swing set is used in a commercial application.

The product was designed to be used by children between the ages of 3-10. Children must NOT play on this set until it is properly assembled and inspected by an adult. Adult supervision is required at all times while children are playing on the equipment. Do not allow children under six (6) years old to be near during the assembly of this product due to choking hazards of small parts.

The equipment must be installed on level ground. Uneven ground must be leveled prior to installation. Installation on sloping or uneven ground will put stress on the joints, causing the unit to become loose and unstable which may result in serious injuries. You must ensure there are no obstructions or structures (e.g. electrical wires, branches, house, fence, garage, etc) within six (6) feet in any direction from the equipment.

The U.S. Consumer Product Safety Commission's Outdoor Home Playground Safety Handbook recommends to install and maintain the playground equipment over at least 9 inches of wood chips, mulch or shredded rubber (for equipment up to 8 feet high) or sand or pea gravel (for equipment no more than 5 feet high) as shock absorbing material. Dirt and grass, which are the most prevalent surfaces under home playground equipment, do not adequately protect children from serious head injuries. Install protective surfacing at least six feet in all directions from play equipment. For swings, the surface should extend, in back and front, twice the height of the suspending bar. Do not install your swing set over hard surface, e.g. asphalt, concrete, packed earth, tile or brick floor. Do not allow children to use the product during windy or wet weather conditions. You should consult a local licensed contractor about ways to anchor the product in your location.

Please thoroughly read and follow the instructions in this Owner's Manual to ensure proper and enjoyable play for your children. The equipment must be checked before each use and maintained regularly. This includes, but is not limited to inspecting the swing set for cracks, excess wear, missing parts, loose connections, and for overall integrity. When the set shows any signs of weakness or damage, you must stop using the swing set immediately, properly store the set or restrict access by users until the condition is resolved.

Your product is warranted against defects in material and workmanship. Extended warranty is also offered to those customers registering their products at [www.sportspowerltd.net](http://www.sportspowerltd.net) within 14 days from the date of purchase. Please refer to our warranty policy at the back of this manual for details.

**If you experience any problems with your product, do not return to the store. For customer service, please call 1-866-370-2131 Monday-Friday 9:00am-5:00pm Eastern Time or visit [www.sportspowerltd.net](http://www.sportspowerltd.net)**

## TABLE OF CONTENTS

<b>IMPORTANT WARNINGS AND INSTRUCTIONS .....</b>	<b>4</b>
<b>IMPORTANT CONSUMER INFORMATION SHEET .....</b>	<b>9</b>
<b>GROUND COVER INFORMATION .....</b>	<b>14</b>
<b>COMPLETE PRODUCT VIEW .....</b>	<b>15</b>
<b>TOOLS NEEDED .....</b>	<b>16</b>
<b>WOOD PARTS LIST.....</b>	<b>17</b>
<b>HARDWARE PARTS LIST .....</b>	<b>19</b>
<b>SPARE PARTS LIST .....</b>	<b>20</b>
<b>HARDWARE PRE-ASSEMBLE .....</b>	<b>21</b>
<b>ASSEMBLY AND INSTALLATION INSTRUCTIONS .....</b>	<b>22</b>
AREA OF INSTALLATION – PLAYHOUSE .....	23
AREA OF INSTALLATION – THE SWING SUPPORT BEAM .....	38
AREA OF INSTALLATION – SWING AND TRAPEZE BAR .....	41
AREA OF INSTALLATION – SLIDE .....	42
<b>PRODUCT WARRANTY .....</b>	<b>44</b>

# IMPORTANT WARNINGS AND INSTRUCTIONS

**BEFORE YOU BEGIN:** Carefully read all instructions in this manual before assembling and using this product. The unit must be assembled by adults. Heavy duty working gloves must be worn to avoid injuries during assembly.



## **WARNING**

**READ ALL INSTRUCTIONS BEFORE ASSEMBLING OR USING THIS EQUIPMENT**

### **AGE LIMIT**

- This product is designed to be used by up to seven (7) children between the ages of 3 to 10. Maximum individual user weight is 100 pounds (45kg) each with a combined maximum weight of 700 pounds (315kg.)
- The play set is designed for children over three (3) years of age. Use by smaller children can result in entrapment and serious injury.
- On-site adult supervision is required at all times for children of all ages.
- Do not allow use by children with any physical condition that may affect his/her ability to use this equipment safely.

### **IMPORTANT:**

- Children must NOT play on this set until it is properly assembled and inspected by an adult.
- The Wood Play Set must be properly installed and anchored BEFORE children can play on the Wooden Swing Set.
- You MUST read and follow all instructions in this manual before installing or attempting to use the Wooden Swing Set.

Failure to follow these important requirements may result in the warranty being voided and/or serious injury. Please supervise your children carefully during the installation and assembly of the Wood Play set.

Please also pay close attention to the periodic maintenance that is required to keep you Wood Play Set in a safe condition for maximum enjoyment of backyard fun!

## IMPORTANT WARNINGS AND INSTRUCTIONS



### BEFORE YOU BEGIN ASSEMBLY:

- Take a complete inventory of components using the parts list.
- Sort and lay out the wood pieces. Label each piece of wood for easy reference. For easy identification during the assembly process, write the board's letter on masking tape and adhere to each piece of the wood. Some wooden components may twist or warp in the carton after packaging. Usually, these parts straighten out when assembled. You may also see some cracking of the grain. This is normal.
- Sort all hardware according to size. Do not worry if extra hardware is included.

### Find a safe play location.

- You **MUST** install the Wooden Swing Set on level ground. Uneven ground must be leveled prior to installation. The manufacturer cannot assume responsibility for any failure from incorrect installation. Installing on sloping ground will put stress on all the joints, which will cause the set to become loose and unstable.
- Find a location where the equipment can be placed more than 6 feet from any structure or obstruction (ex: electrical wires, branches, house, fence, garage) The safe play area refers to a zone extending 6' beyond the gym set on all sides, including the space above the gym set.
- The safe play area must be free of all structures, landscaping, trees and branches, rocks, wires and other obstacles to safe play. Children can be seriously injured running or swinging into these obstacles.
- Remove any rocks or any jagged or sharp object that could endanger your children's safety.
- Remove all tripping hazards from the safe play area. Tripping hazards include but are not limited to: roots, stumps, rocks, landscaping, sprinkler heads, railroad ties, plumbing, and electrical connections.
- Do **NOT** install your swing set over gravel, asphalt, packed earth or any other hard surface. The following is a list of recommended ground covers from the Consumer Product Safety Commission.

SUGGESTED MATERIAL	UNCOMPRESSED DEPTH
Double Shredded Bark Mulch	9"
Uniform Wood Chips	12"
Fine Gravel	12"
Fine Sand	12"

## IMPORTANT WARNINGS AND INSTRUCTIONS

**BEFORE YOU BEGIN:** Carefully read all instructions in this manual before assembling and using this product. The unit must be assembled by adults. Heavy duty working gloves must be worn to avoid injuries during assembly.



### **WARNING**

#### **READ ALL INSTRUCTIONS BEFORE ASSEMBLING OR USING THIS EQUIPMENT**

Observing the following statements and warnings reduces the likelihood of serious or fatal injury.

#### **PLAY SUPERVISION**

- DO NOT allow more than one child to play on the individual swing or slide at the same time.
- DO NOT allow children to stand on the swing seat.
- DO NOT allow children to walk too close to moving parts. ALWAYS keep a safe distance to avoid being struck by other children while playing.
- DO NOT allow children to twist the swing chains or ropes, or loop them over the top support bar as this may reduce the strength of the chain or rope.
- Owners shall be responsible for maintaining the legibility of the warning labels.
- Warning the owner to instruct children not to use the equipment in a manner other than intended.
- DO NOT swing empty seats as this may cause injuries.
- ALWAYS guide children to sit in the center of swinging parts, with their full weight placed in the seat center and holding on to the swing chains.
- DO NOT allow children to jump off the equipment while it is in motion. ALWAYS come to a full stop before dismounting.
- ALWAYS dress children appropriately for playing, e.g. wear well-fitted rubber sole shoes, and remove loose or sharp items such as jewelry, hair accessories, scarves, ponchos that may become entangled in the equipment or cause injuries.
- ALWAYS make sure children remove their bike or other sports helmets before playing on the playground. Helmets can become entrapped in the playground, posing a strangulation hazard.
- DO NOT allow children to climb onto swing or jump to and from different play areas of the equipment. ALWAYS return safely to the ground before approaching another play area.
- DO NOT allow children to climb on structural parts (e.g. legs, top bar). These are structural components and are not designed for play.
- ALWAYS check the slide or other parts exposed to the body for extreme heat from the sun before allowing children to use the equipment.
- ALWAYS prevent access and secure from any unauthorized use when there is no adult supervision.
- DO NOT allow pets or other animals near the equipment to prevent damage or injuries.

# IMPORTANT WARNINGS AND INSTRUCTIONS

## INSPECTION PRIOR TO EACH USE OR DAILY INSPECTION

- DO NOT use the equipment if any bolts or nuts are missing or loose. ALWAYS check to ensure the equipment and all parts are well secured and stable before each use.
- ALWAYS clear the play area of any rocks, sharp objects, or any materials that could be potentially hazardous to users.
- DO NOT attach items to the equipment that are not specifically designed for use with the equipment, including, but not limited to, jump ropes, clothesline, pet leashes, cables and chains as they may cause choke hazards.
- The wood, steel and plastic parts used in your product are subject to normal wear. Gradual deterioration of the material will occur, the speed of which will depend on the level of exposure to UV rays, airborne pollution, outdoor weather conditions such as rain and wind and the amount of use. You must inspect the equipment prior to every use. This includes, but is not limited to inspecting the set for cracks, excess wear, missing parts, loose connections, and for overall integrity. When the set shows any signs of weakness, you must stop using the play set immediately, properly store the set or restrict access by users until the condition is resolved.
- Verify that the suspended climbing ropes, chain or cable are secured at both ends and tightened, so that there is no loose ropes, chain or cable hanging that can result in choking hazard.

## WEATHER CONDITIONS

- DO NOT use this equipment if the swing seat, slide or other parts are wet. Use the swing set only when the parts are clean and dry. If the equipment is wet, the user could slip and suffer injuries.
- Please be aware of weather conditions when using the equipment. If it is too windy, users could lose control and suffer injuries. The playground equipment must be properly anchored, stored away or restricted from use during inclement weather such as heavy winds or severe weather storms. You should consult a local contractor about ways to anchor the product in your location.

## DISPOSAL INSTRUCTIONS

- Please use care when disassembling the equipment. Wear heavy duty working gloves to avoid injuries.
- Fully disassemble the entire swing and climber before disposal. Do not leave partially disassembled equipment parts in areas accessible by children.
- All plastic and steel parts could be recycled. Take it to your local recycling center. Do not let children play with any disassembled parts destined for disposal, such as chains, slide, tubing, bolts, nuts, screws, etc.

## IMPORTANT WARNINGS AND INSTRUCTIONS

### AT THE BEGINNING OF EACH PLAY SEASON:

- Tighten all hardware.
- Lubricate all metallic moving parts per manufacturer's instructions.
- Check all protective coverings on bolts, pipes, edges, and corners. Replace if they are loose, cracked, or missing.
- Check all moving parts including swing seats, ropes, cables, and chains for wear, rust, or other deterioration. Replace as needed.
- Check metal parts for rust. If found, sand and repaint using a nonlead-based paint meeting the requirements of 16 CFR 1303.
- Check all wood members for deterioration and splinters. Sand down splinters and replace deteriorating wood members.
- Reinstall any plastic parts, such as swing seats or any other items that were removed for the cold season.
- Rake and check depth of loose fill protective surfacing materials to prevent compaction and to maintain appropriate depth. Replace as necessary.

### TWICE A MONTH DURING PLAY SEASON:

- Tighten all hardware.
- Check all protective coverings on bolts, pipes, edges, and corners. Replace if they are loose, cracked, or missing.
- Rake and check depth of loose fill protective surfacing materials to prevent compaction and to maintain appropriate depth. Replace as necessary.

### ONCE A MONTH DURING PLAY SEASON:

- Lubricate all metallic moving parts per manufacturer's instructions.
- Check all moving parts including swing seats, ropes, cables, and chains for wear, rust, or other deterioration. Replace as needed.

### At the end of each play season or when the temperature drops below 32°F (temperature to be selected by the manufacturer).

- Remove plastic swing seats and other items as specified by the manufacturer and take indoors or do not use.
- Rake and check depth of loose fill protective surfacing materials to prevent compaction and to maintain appropriate depth. Replace as necessary.
- Owners shall be responsible for maintaining the legibility of the warning labels.

**When conducting inspections, it is recommended that you use the Outdoor Home Playground Safety Checklist published by the US Consumer Product Safety Commission, a copy of which is contained in this user manual.**



## IMPORTANT CONSUMER INFORMATION SHEET

The Consumer Product Safety Commission estimates there are about 200,000 playground related injuries involving children each year. Injuries involving this hazard pattern tend to be among the most serious of all playground injuries and have the potential to be fatal, particularly when the injury is to the head. The surface under and around playground equipment can be a major factor in determining the injury-causing potential of a fall. It is self evident that a fall onto a shock absorbing surface is less likely to cause a serious injury than a fall onto a hard surface. Playground equipment should never be placed on hard surfaces such as concrete or asphalt and while grass may appear to be acceptable it may quickly turn to hard packed earth in areas of high traffic. Shredded bark, mulch, wood chips, fine sand or fine gravel are considered to be acceptable shock absorbing surface when installed and maintained at a sufficient depth under and around playground equipment.

Table below lists the maximum height from which a child would not be expected to sustain a life-threatening head injury in a fall onto four different loose-fill surfacing materials if they are installed and maintained at depths of 6" (15.25CM), 9" (22.9CM), and 12" (30.5CM).


FALL HEIGHT IN FEET FROM WHICH A LIFE THREATENING HEAD INJURY WOULD NOT BE EXPECTED			
TYPE OF MATERIAL	6"(15.25CM) DEPTH	9"(22.9CM) DEPTH	12"(30.5CM) DEPTH
Double shredded bark mulch	6"(15.25CM)	10"(25.4CM)	11"(27.94CM)
Wood Chips	6"(15.25CM)	7"(17.8CM)	12"(30.5CM)
Fine Sand	5"(12.7CM)	5"(12.7CM)	9"(22.86CM)
Fine Gravel	6"(15.25CM)	7"(17.8CM)	10"(25.4CM)

However, it should be recognized that all injuries due to falls cannot be prevented no matter what surfacing material is used. We recommend that a shock absorbing material should extend a minimum of 6ft in all directions from the perimeter of stationary equipment such as climbers and slides. However, because children may deliberately jump from a moving swing, the shock absorbing material should extend in the front and rear of a swing a minimum distance of 2 times the height of the pivot point measured from a point directly beneath the pivot on the supporting structure.

This information is intended to assist in comparing the relative shock-absorbing properties of various materials. No particular material is recommended over another. However, each material is only effective when

Properly maintained. Materials should be checked periodically and replenished to maintain correct depth as determined necessary for your equipment. The choice of a material depends on the type and height of the playground equipment, the availability of the material in your area and its cost.

Note: The maximum fall height for this product is 6 feet. The minimum ground Clearance between the bottom of the suspended plays and the playing or ground service must be 8 inches.

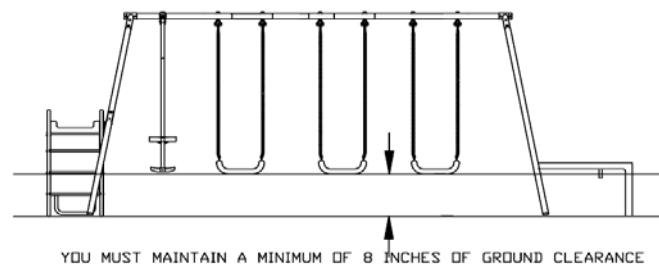

This information has been extracted from the CPSC publication on "Playground Safety". You can obtain more information by sending a postcard to the: Office of public Affairs, U.S. Consumer Product Safety Commission, Washington, D.C.20207

## IMPORTANT CONSUMER INFORMATION SHEET

The following guidelines are extracts from the Consumer Product Safety Commission Outdoor Home Playground Safety Handbook. It is recommended that you read the entire handbook and take necessary precautions to prevent serious injuries to your children, including:

### CHOOSING A SITE

- When you choose a home playground, a location away from roads and driveways and readily visible from inside the home and patios or porches, is important.
- Create a site free of obstacles that could cause injuries such as low overhanging tree branches, overhead wires, tree stumps and/or roots, large rocks, bricks and concrete.
- Choose a level location for the equipment. This can reduce the likelihood of the play set tipping over and loose-fill surfacing materials washing away during heavy rains. Some sites may need regrading to improve drainage or to reduce the slope.
- Locate play set at least 6 feet from any structure or obstacles, such as a house, fence, sheds, trees or poles. Swings should be further away from structures to the front and rear of the swings-a distance equal to twice the height of the top bar from which the swing is suspended.
- Locate bare metal platforms and slides out of direct sunlight to reduce the likelihood of serious burns. A slide that faces north will receive the least direct sunlight.

### SELECT PROTECTIVE SURFACING

One of the most important things you can do to reduce the likelihood of serious head injuries is to install shock-absorbing protective surfacing under and around your play set. The protective surfacing should be applied to a depth that is suitable for the equipment height in accordance with ASTM F1292. There are different types of surfacing to choose from; whichever product you select, follow these guidelines:

**Do not install home playground equipment over concrete, asphalt, or any other hard surface. A fall onto a hard surface can result in serious injury to the equipment user. Grass and dirt are not considered protective surfacing because wear and environmental factors can reduce their shock absorbing effectiveness. Carpeting and thin mats are generally not adequate protective surfacing.**

#### Loose-Fill Materials

- Maintain a minimum depth of 9 inches of loose-fill materials such as wood mulch/chips, engineered wood fiber (EWF), or shredded/recycled rubber mulch for equipment up to 8 feet high; and 9 inches of sand or pea gravel for equipment up to 5 feet high. NOTE: An initial fill level of 12 inches will compress to about a 9-inch depth of surfacing over time. The surfacing will also compact, displace, and settle, and should be periodically refilled to maintain at least a 9-inch depth.
- Use containment, such as digging out around the perimeter and/or lining the perimeter with landscape edging. Don't forget to account for water drainage.
- Check and maintain the depth of the loose-fill surfacing material. To maintain the right amount of loose-fill materials, mark the correct level on play equipment support posts. That way you can easily see when to replenish and/or redistribute the surfacing.
- **Do not** install loose fill surfacing over hard surfaces such as concrete or asphalt.

# IMPORTANT CONSUMER INFORMATION SHEET

## **Poured-In-Place Surfaces or Pre-Manufactured Rubber Tiles**

You may be interested in using surfacing other than loose-fill materials-like rubber tiles or poured-in-place surfaces.

- Installations of these surfaces generally require a professional and are not “do-it-yourself” projects
- Review surface specifications before purchasing this type of surfacing. Ask the installer / manufacturer for a report showing that the product has been tested to the following safety standard: *ASTM F1292 Standard Specification for Impact Attenuation of Surfacing Materials within the Use Zone of Playground Equipment*. This report should show the specific height for which the surface is intended to protect against serious head injury. This height should be equal to or greater than the *fall height*-vertical distance between a designated play surface (*elevated surface for standing, sitting, or climbing*) and the protective surfacing below-of your play equipment.
- Check the protective surfacing frequently for wear.

## **PLACEMENT**

Proper placement and maintenance of protective surfacing is essential. Be sure to:

- Extend surfacing at least 6 feet from the equipment in all directions.
- For to-fro swings, extend protective surfacing in front of and behind the swing to a distance equal to twice the height of the top bar from which the swing is suspended.

## IMPORTANT CONSUMER INFORMATION SHEET

### Outdoor Home Playground Safety Checklist

Use this to help make your home playground a safe place to play!

<b>Supervision</b>	Be sure to always supervise children on play equipment.
<b>Surfacing</b>	<p>Install a protective surface under and around play equipment to reduce the likelihood of serious head injuries.</p> <p>For most play equipment, install protective surfacing 6 feet in all directions beyond the equipment.</p> <p>For swings, extend protective surfacing in front and back of the swing to a distance that is twice the height of the bar from which the swing is suspended.</p> <p>For tire swings, install protective surfacing outward from the swing equal to the suspension chain plus 6 feet.</p>
<b>Types of Surfacing</b>	<p>Carpeting and thin mats are not adequate as protective surfacing. Maintain at least 9 inches of loose-fill material (see page6) or use an ASTM F1292 rated material at the depth required for the equipment height.</p> <p>Use wood mulch/chips, shredded rubber mulch, or engineered wood fiber for equipment up to 8 feet high.</p> <p>Use sand, pea gravel, or mulch products listed above for play equipment up to 5 feet high; or</p> <p>Use surface mats tested to provide impact protection equal to or greater than the height of the play equipment.</p>
<b>Equipment Maintenance</b>	Periodically check nuts, bolts, caps, swing seats, suspension ropes, chains, and cables and replace as necessary. Maintain loose-fill surfacing and surface mats.
<b>Opening</b>	Eliminate openings that can trap a child's head or neck, such as openings in guardrails or ladders. Openings should be smaller than 3 1/2 inches to prevent entry of a small child's body, or larger than 9 inches to allow a child's head and body to slide completely through.
<b>Ropes</b>	Never attach jump ropes, clotheslines, pet leashes, or cords of any kind to play equipment. Anchor any climbing ropes at both ends. Remove drawstrings from children's clothes. Children can strangle on these.
<b>Anchors</b>	Bury or cover anchors with adequate surfacing material to prevent tripping. Play equipment should not tip over.
<b>Guardrails or Barriers</b>	Make sure that platforms and ramps over 30 inches high have guardrails and barriers to prevent falls.
<b>Repair</b>	Repair sharp points and edges on equipment that can cause injuries.
<b>Upkeep of Hardware</b>	Replace missing hardware, eliminate protruding bolts, and close "S" hooks that can cause injuries.

# IMPORTANT CONSUMER INFORMATION SHEET

## What to Inspect:

### **Hardware:**

Inspect all nuts and bolts and tighten if required. Hardware should be firmly against, but not crushing the wood. Over-tightening hardware crushes wood fibers and can split wooden components resulting in the bolt thread extending beyond the wood. This poses a severe safety hazard. If bolt threads protrude beyond the wood surface, replace the bolt with a shorter one that will not protrude. If splintering has occurred from over-tightening, larger washers can be purchased at your local hardware store and installed under the bolt head. Be sure to reuse or replace your lock washers.

### **Major Wooden Parts:**

Inspect for structural defects and splintering. If necessary, lightly sand and refinish with an exterior water repellent stain. Seasonal checking or cracking of the grain on wooden parts is quite natural and water and heat are the most frequent causes of expansion and contraction of wood fibers. Our wood set has been treated with stain to resist weathering. But it needs to be maintained periodically by applying new stain or paint.

### **Dowels (Rungs)**

Inspect for structural defects and splintering. If necessary, lightly sand and refinish with a clear water repellent, exterior sealant or boiled linseed oil. Do NOT paint, varnish or finish rungs with any substance that may reduce your child's ability to firmly grasp or step on the rungs.

### **Swing hangers**

Inspect for correct installation. Assure the bend of the swing hanger is positioned tightly against the stop washer and the ladder or swing beam. The axis of the swing hanger bushing must be perpendicular to the swing motion. Spray the nylon bushings with a household lubricant such as WD-40, if you hear squeaking.

### **Plastic Swing Seats**

Check for evidence of deterioration. Replace any swing seat that has developed cracks in the seat or has exposed metal in the edges of the swing seat. If there are already exposed metal inserts on the edge of the seat, remove the seats and chains to prevent serious injury. Remove plastic swing seats and take indoors or do NOT use when the temperature drops below 32 degrees F.

### **Ropes, Cables and Chains**

Check for evidence of deterioration. Ropes, cables and chains should be removed and replaced if excessive wear is found. Contact our service center for replacement parts.

### **Metallic Components**

Check for rusted areas on components such as monkey bars, hand supports, brackets, etc. Sand and repaint using a non lead-based paint that meets the requirements of Title 16 CRF part 1303.

### **Play Area**

Inspect to assure that the swing set has settled properly and the location of the set is still level.

## GROUND COVER INFORMATION

SELECTING THE CORRECT LOCATION FOR YOUR PLAY PRODUCT IS IMPORTANT FOR YOUR CHILDREN'S SAFETY AND THE PRODUCT'S LONGEVITY

**Dimensions:**


Product Dimension: 153.31" x 124.92"

**General Information:**

The play set has been designed and engineered for up to 6 children.


Maximum of 100 lb. (45kg) per child Combined weight is not to exceed 700 pounds (315 kg).

### RECOMMENDED PLAY AREA DIAGRAM

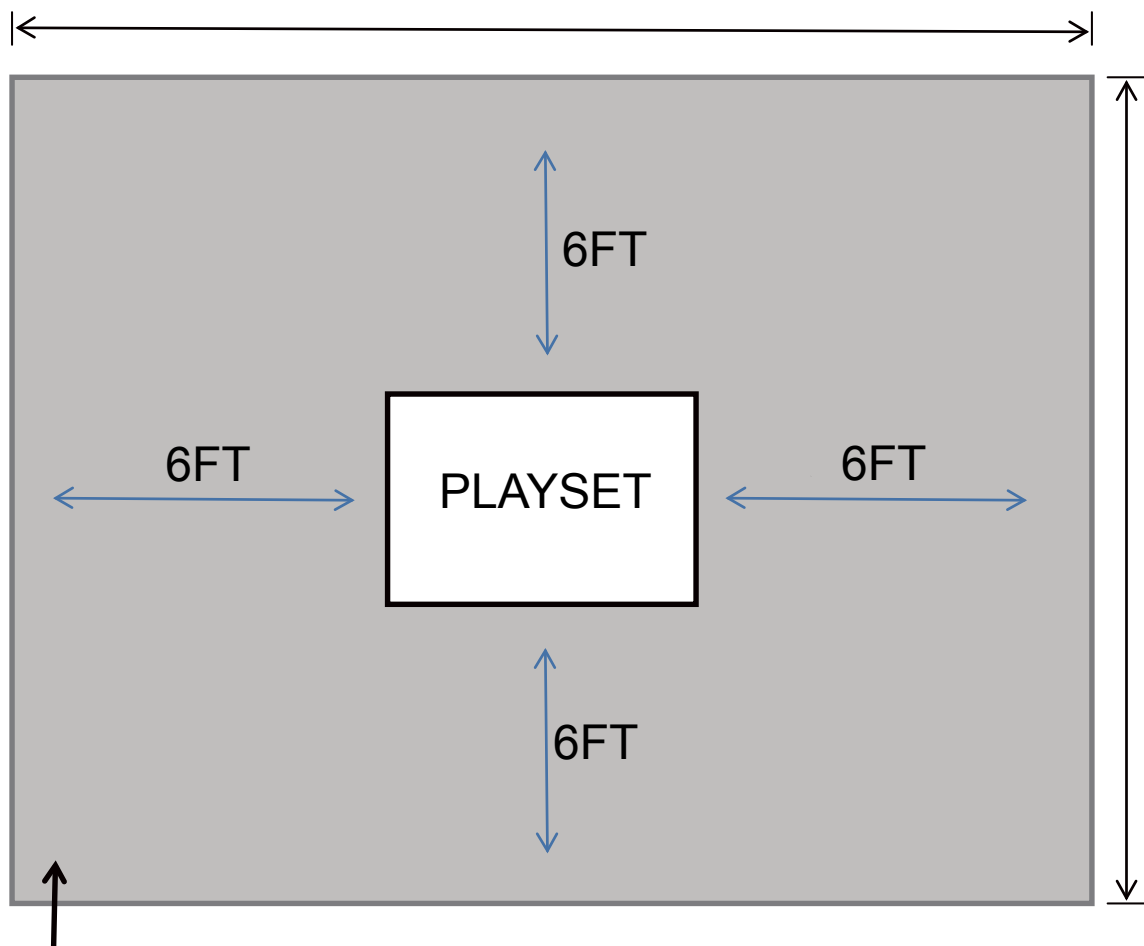


Recommended dimension of play area using appropriate ground cover

**FRONT VIEW OF COMPLETE PRODUCT**

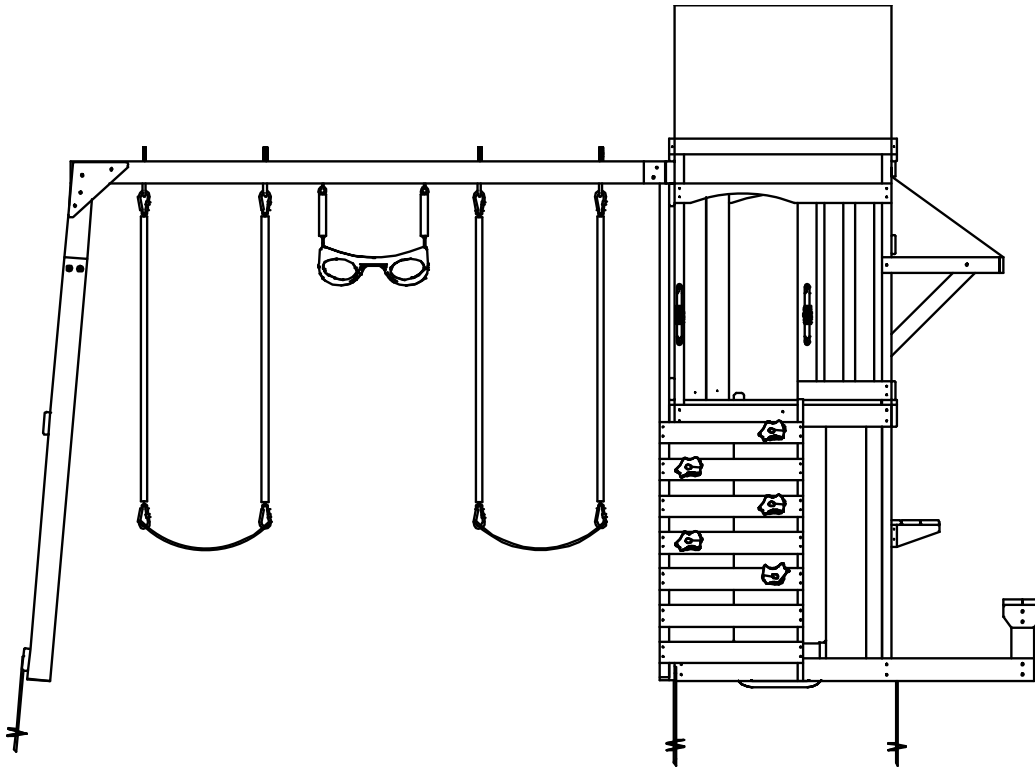


**BACK VIEW OF COMPLETE PRODUCT**

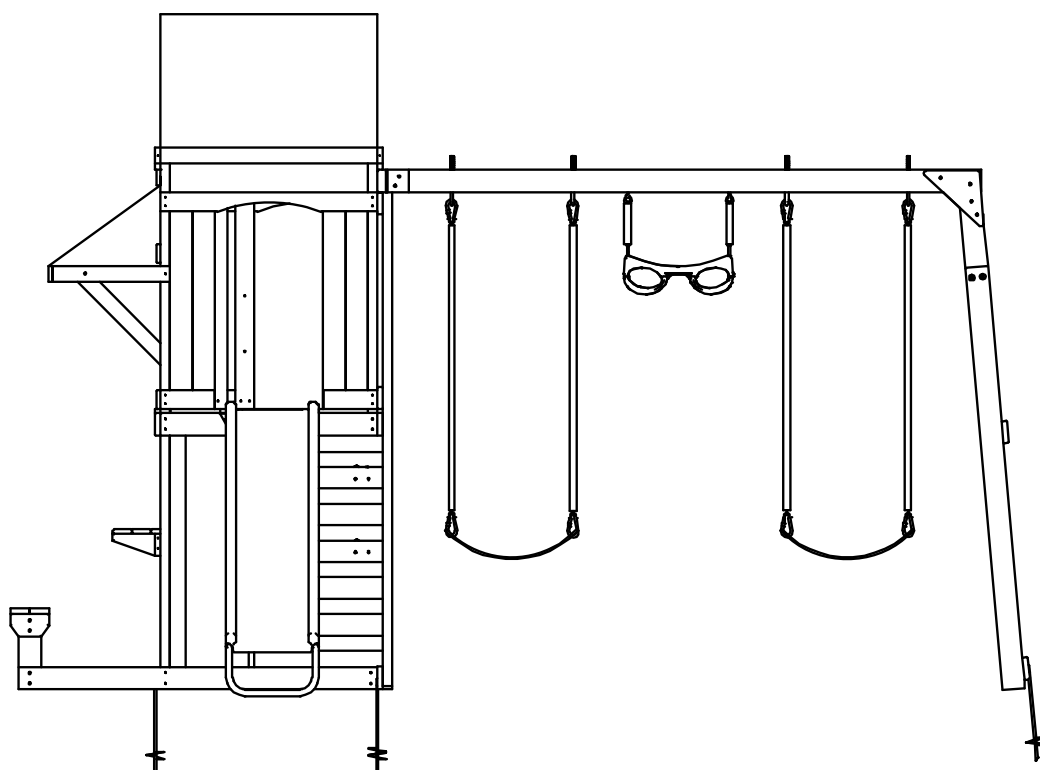

## TOOLS NEEDED

These are the tools that are generally required for installation.  
These tools are not included in the purchased packaging unless stated below.

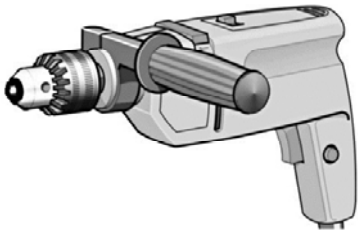


Electric Drill



Phillips Head Screw Driver




Ladder or Step Tool

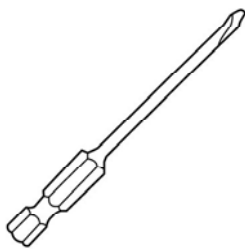

Phillips Head Screwdriver




Tape Measure

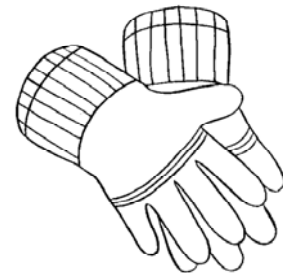


Working Gloves


### INCLUDED

 

**Special Socket Wrench**

 


**Big Allen Wrench  
(#6)**

 

**Small Allen Wrench  
(#5)**




# WOOD PARTS LIST

 


AB1X1PCS



 AB2X1PCS




AB3X1PCS

 


AB4X2PCS



 AB5X1PCS



AB6X1PCS

 

AB7X1PCS



 
AB8X1PCS



AB9X1PCS




AB10X1PCS



AB11X1PCS



 
AB12X1PCS




A12X2PCS



 
AB13X1PCS



AB14X8PCS

 

AB15X1PCS

 

AB16X1PCS



AB17X5PCS



AB18X2PCS



 
AB20X4PCS




AB19X2PCS



AB22X5PCS



AB21X1PCS

 


A22BX1PCS



A22AX1PCS



 AB24X5PCS




AB23X2PCS




AB25X1PCS



 AB24AX2PCS



AB27X1PCS

 


AB26X1PCS



AB28X2PCS


# WOOD PARTS LIST

 


AB29X2PCS



 AB30X2PCS




AB31X1PC

 

AB32X1PC



 
AB33X1PC




AB34X1PC



 
AB35X1PC



AB36X1PC

 


AB37X1PC

 

AB38X1PC



 
AB39 X2




AB40 X2



 AB41 X1




AB42 X2

 

AB43 X2



 AB44 X1



AB46X2



 
AB45 X3



AB47X2




AB48 X2




AB49X1



 
AB50X2



AB51X2

 


AB52X1

 

AB53X1

# HARDWARE PARTS LIST

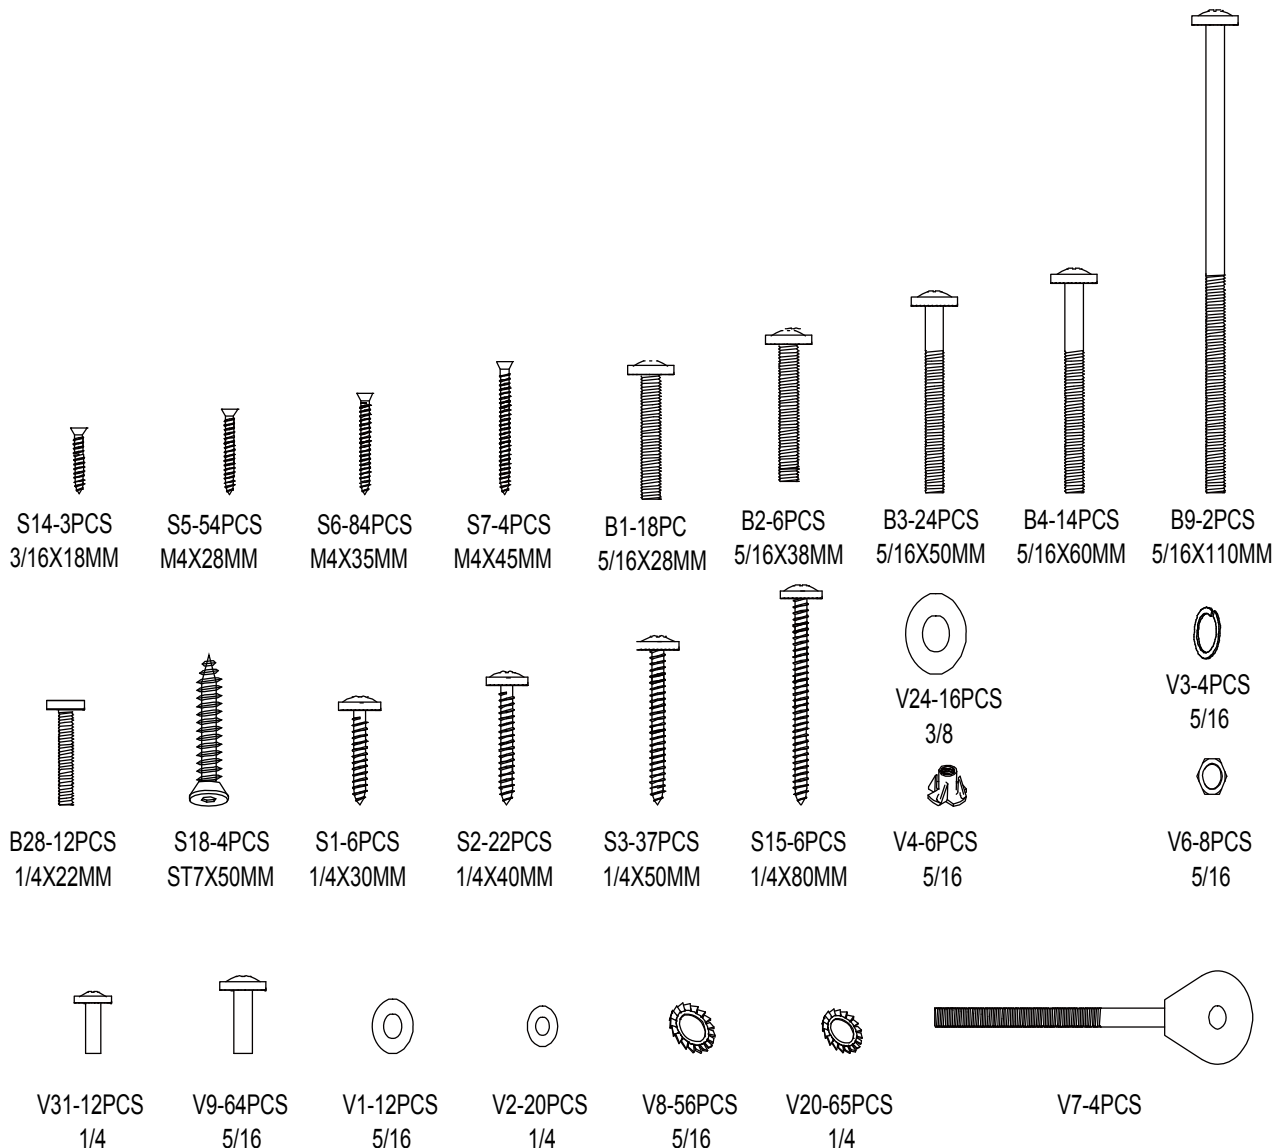


## **NOTE: EXTRA HARDWARE MAY BE INCLUDED**

### **Measuring Hardware**


It is very important that you get the right hardware in the correct place when assembling the unit. You can use a ruler to measure your hardware or you can compare the hardware to the hardware identification page.

### **NOTES:**


- 1) Do not include bolt head when measuring length of bolt.
- 2) Include full length of deck screw when measuring

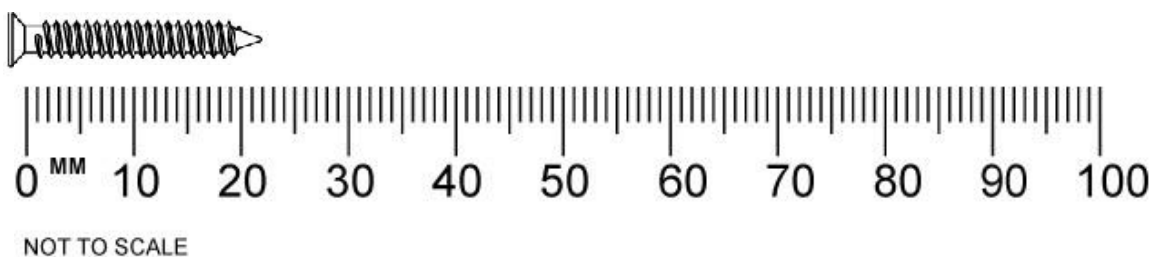

## COMPONENT PARTS LIST

 

U2X2pcs

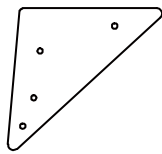

U3X2pcs



 
U50X4pcs




U32X3pcs




U4X5pcs




U42X2pcs

 

U8X1pc

 


U11X2pcs

 


U13X2pcs




U1X1pc

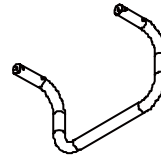


U10X1pc

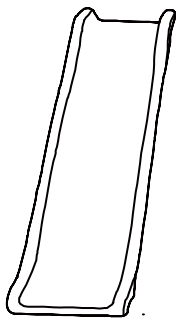


U9X1pc

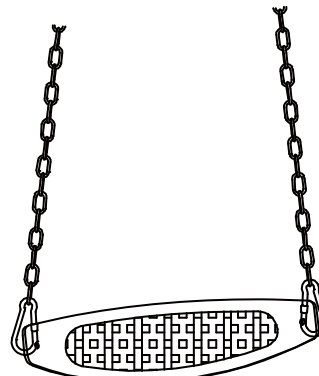

U5X2pcs

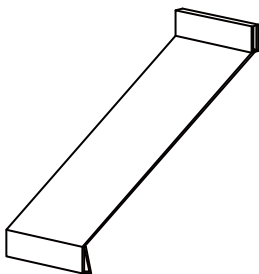

U572SX1pc

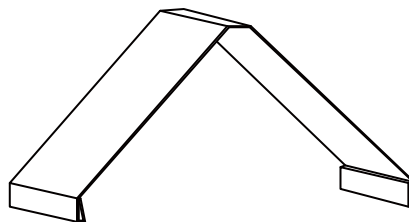

U572BX1pc

Please pre-assemble the wood boards listed below before you begin to assemble the product.  
Hammer the square head rivets into the pre-drilled holes as shown below.





**V4**  
**Large Square**

**Head Rivet for the following:**



**V4**

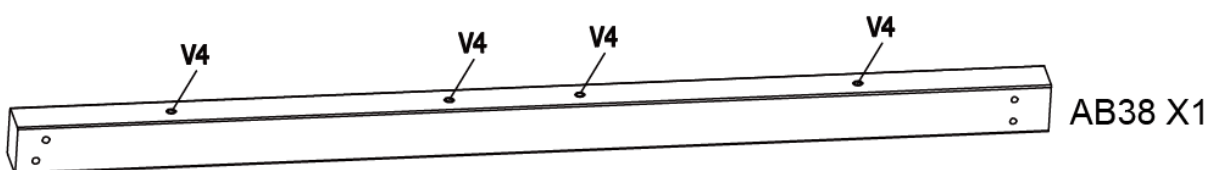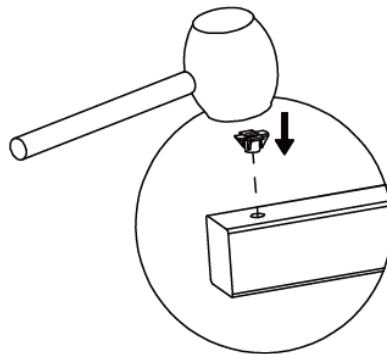


# ASSEMBLY AND INSTALLATION INSTRUCTIONS

## STEP 1

Part#	Qty	Hardware#	Qty
AB1	1 pc	B3	8 pcs
AB6	1 pc	V8	8 pcs
AB8	1 pc	V9	8 pcs
AB10	1 pc		

- Connect AB8 to AB1 and AB6, using B3, V8 and V9 (4 sets).
- Connect AB10 to AB1 and AB6, using B3, V8 and V9 (4 sets) as shown below.

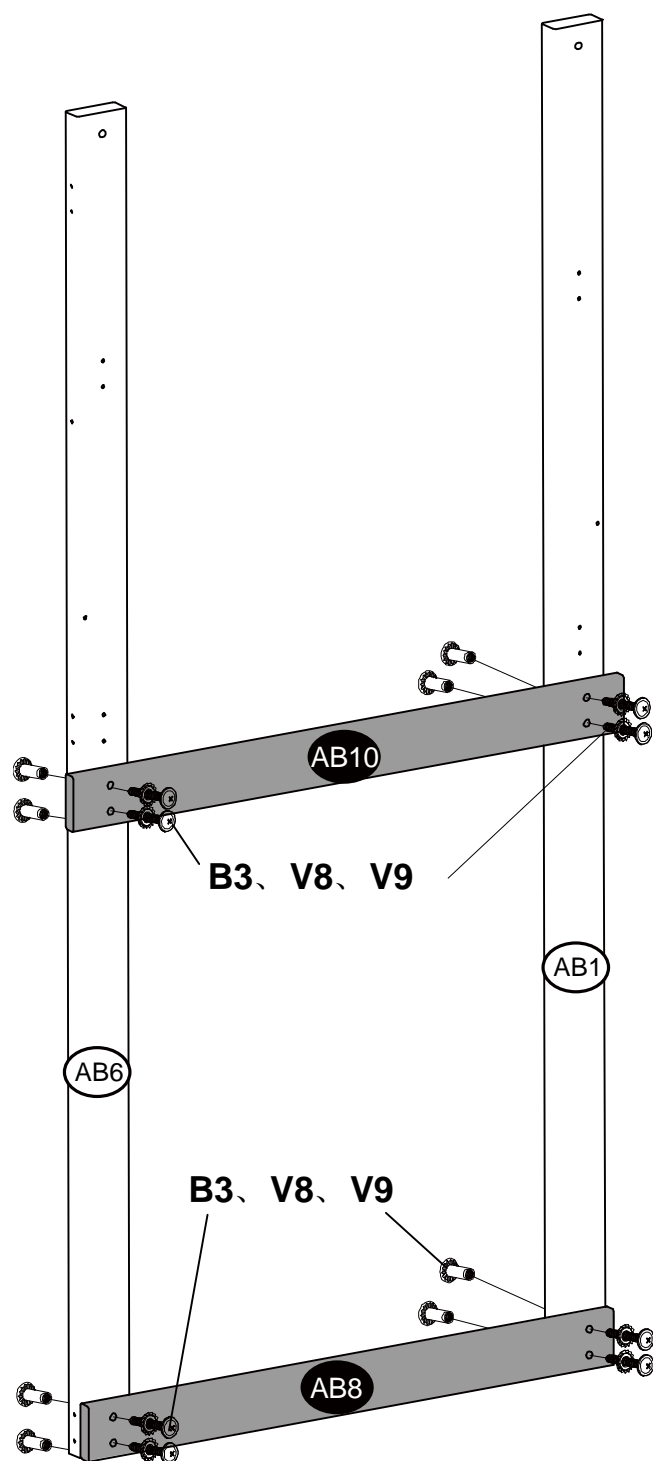


# ASSEMBLY AND INSTALLATION INSTRUCTIONS

## STEP 2

Part#	Qty	Hardware#	Qty
AB2	1 pc	B3	8 pcs
AB5	1 pc	V8	8 pcs
AB9	1 pc	V9	8 pcs
A22B	1 pc		

- Connect AB9 to AB2 and AB5 using B3, V8, and V9 (4 sets).
- Connect A22B to AB2 and AB5 using B3, V8, and V9 (4 sets) as shown below.

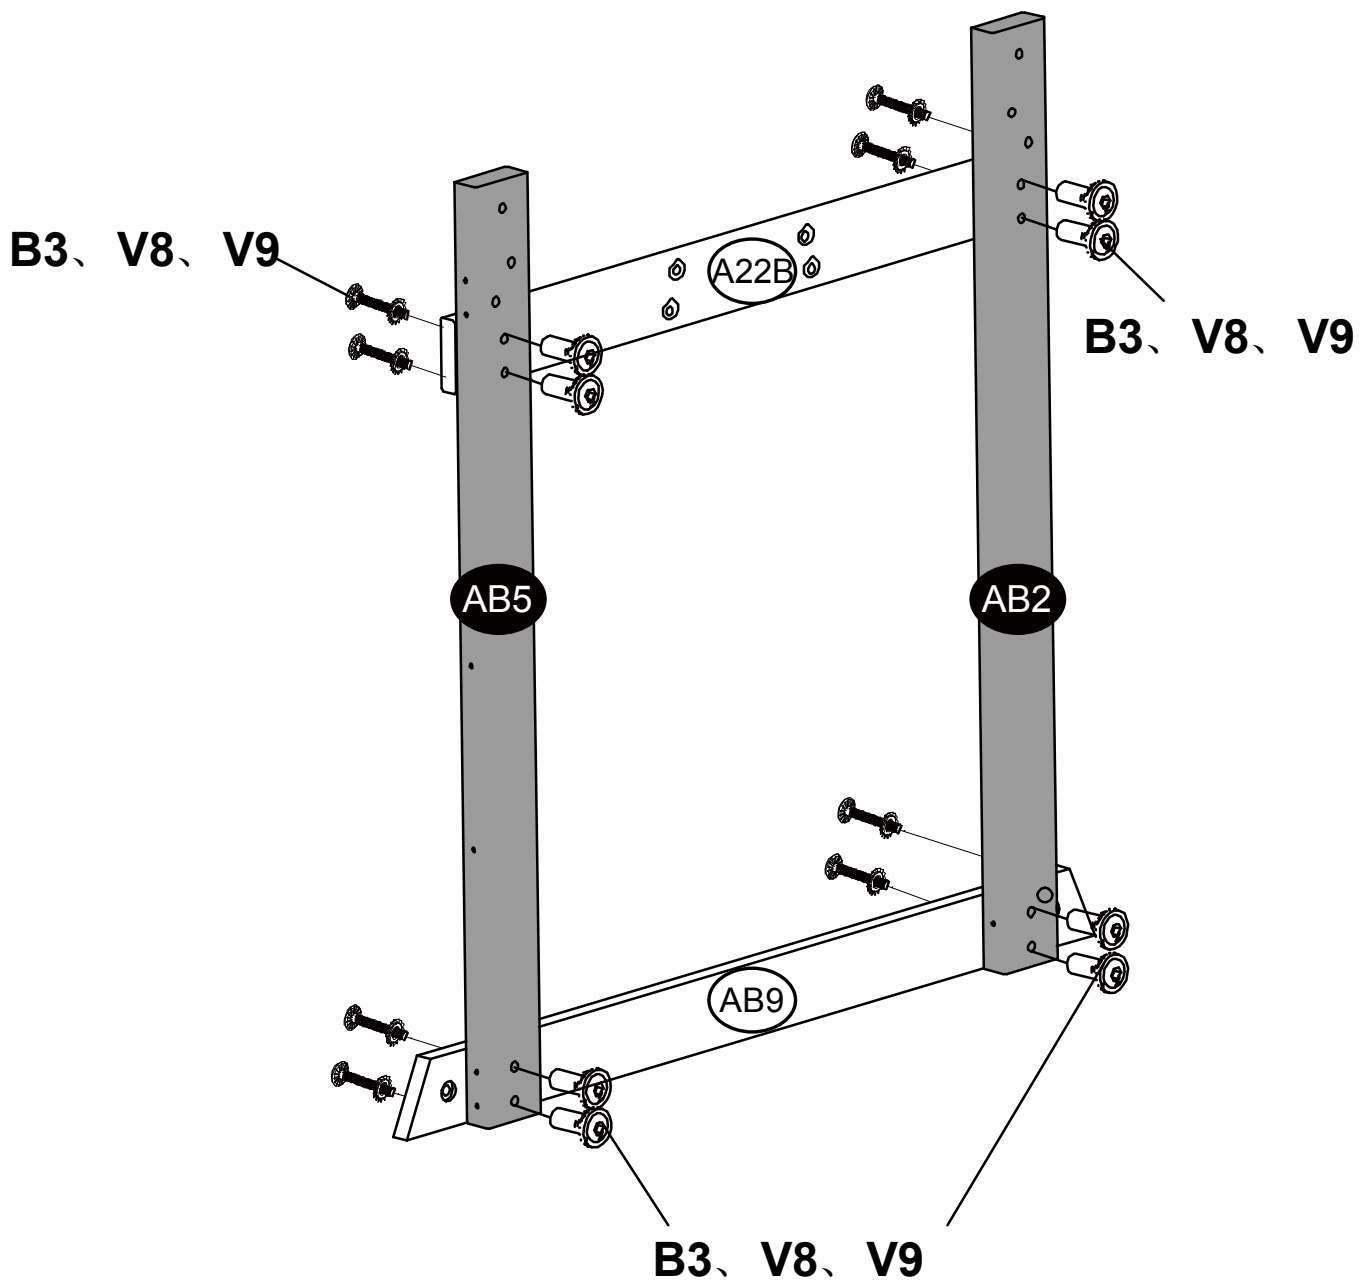


# ASSEMBLY AND INSTALLATION INSTRUCTIONS

## STEP 3

Part#	Qty	Hardware#	Qty
A12	2 pcs	B2	6 pcs
AB48	2 pcs	B3	4 pcs
AB49	1 pc	B4	4 pcs
		V8	14 pcs
		V9	14 pcs

- Connect A12 to AB9 , A22B, using B2, V8, and V9 (6 sets).
- Connect AB49 to A12 using B3,V8 and V9 (4 sets) .
- Connect AB48 to AB49 using B4 ,V8 and V9 (4 sets) as shown below.

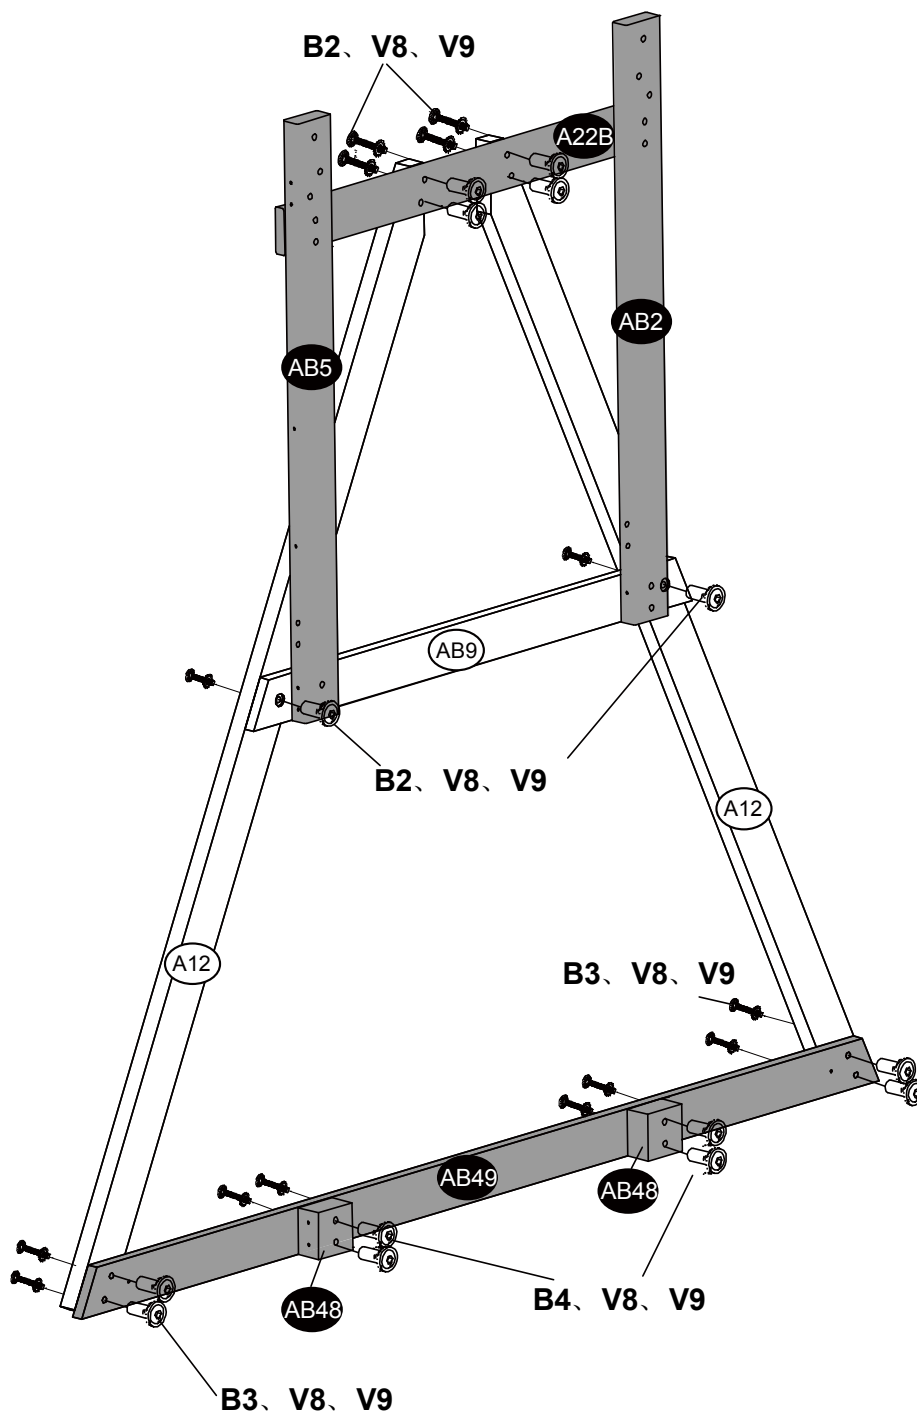




# ASSEMBLY AND INSTALLATION INSTRUCTIONS

## STEP 4

Part#	Qty	Hardware#	Qty
AB4	2 pcs	S3	12 pcs
AB7	1 pc	V20	12 pcs
U1	1 pc		

- Insert U1 into the slot on AB1 and AB2.
- Connect AB7 to AB5 and AB6, using S3, V20 (4 sets).
- Connect AB4 to AB1, AB6 and AB48, using S3, V20 (8 sets) as shown below.

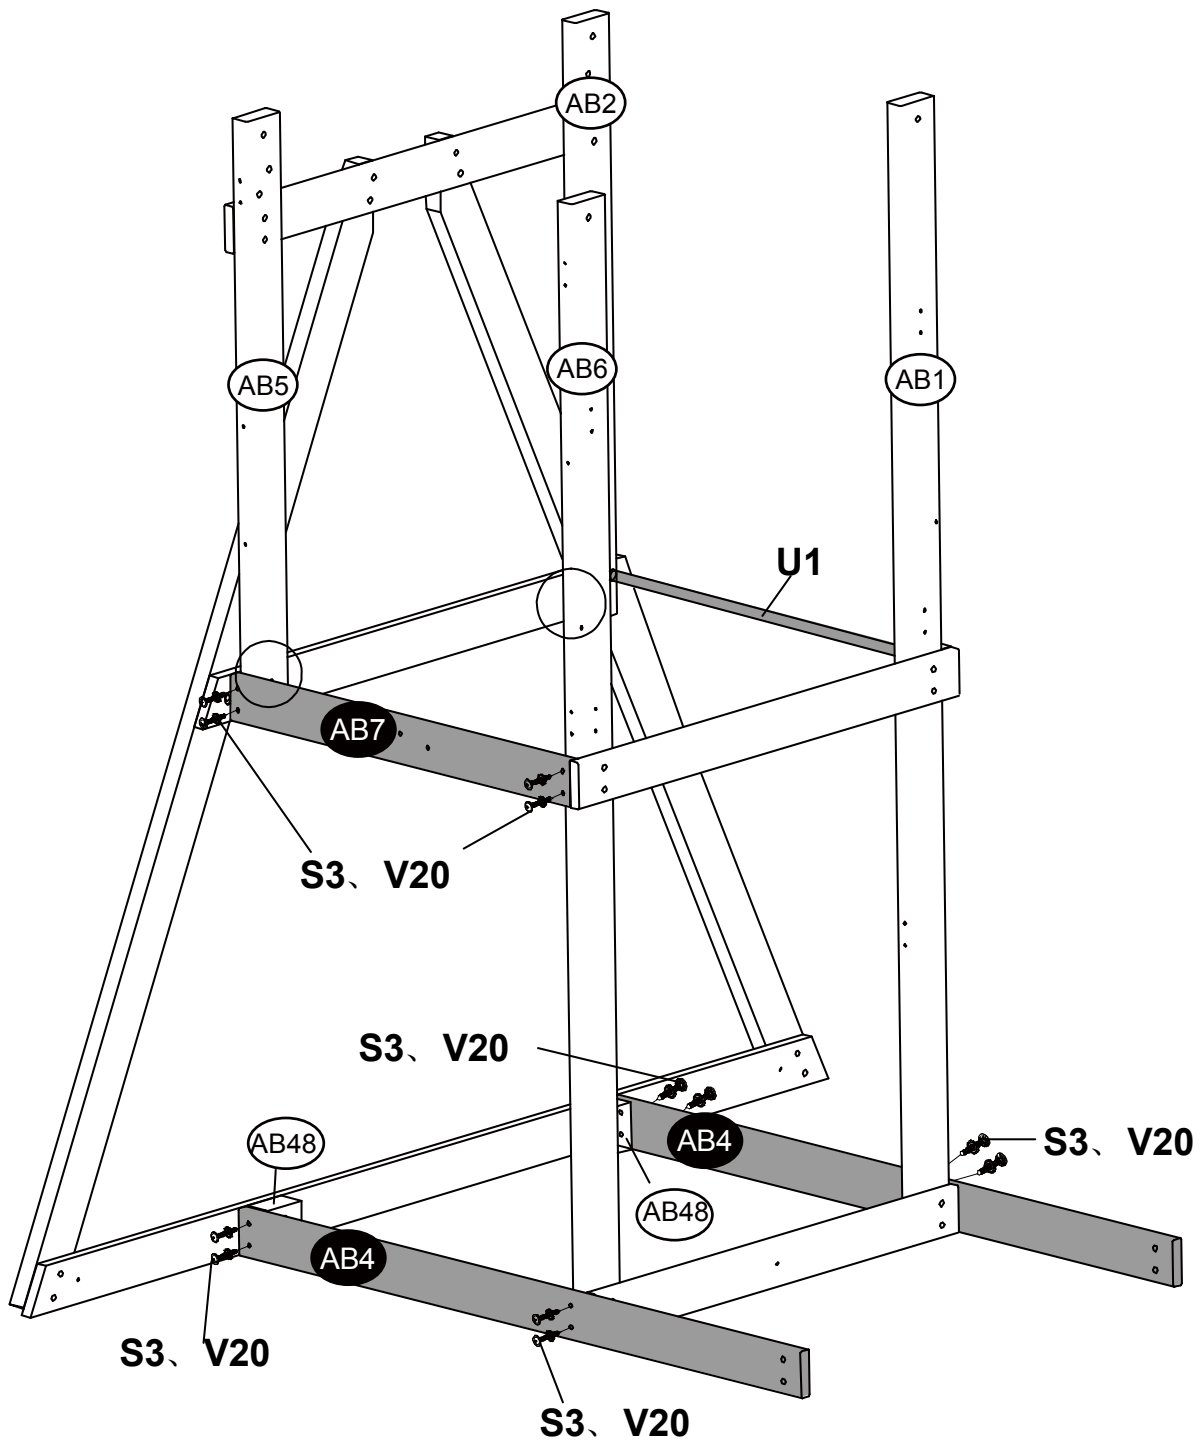


# ASSEMBLY AND INSTALLATION INSTRUCTIONS

## STEP 5

Part#	Qty	Hardware#	Qty
AB11	1 pc	S3	5 pcs
AB12	1 pc	V20	5 pcs
AB16	1 pc	S5	2 pcs
AB47	1 pc		

- Connect AB11 to AB12 using S3 and V20 (1 set).
- Connect AB11 to AB1 and AB2 using S3 and V20 (2 sets) .
- Connect AB12 to AB7 using S3 and V20 (1 set).
- Connect AB16 to AB7 using S3 and V20 (1 set).
- Connect AB47 to AB4 and AB7 using S5 (2 pcs) as shown below

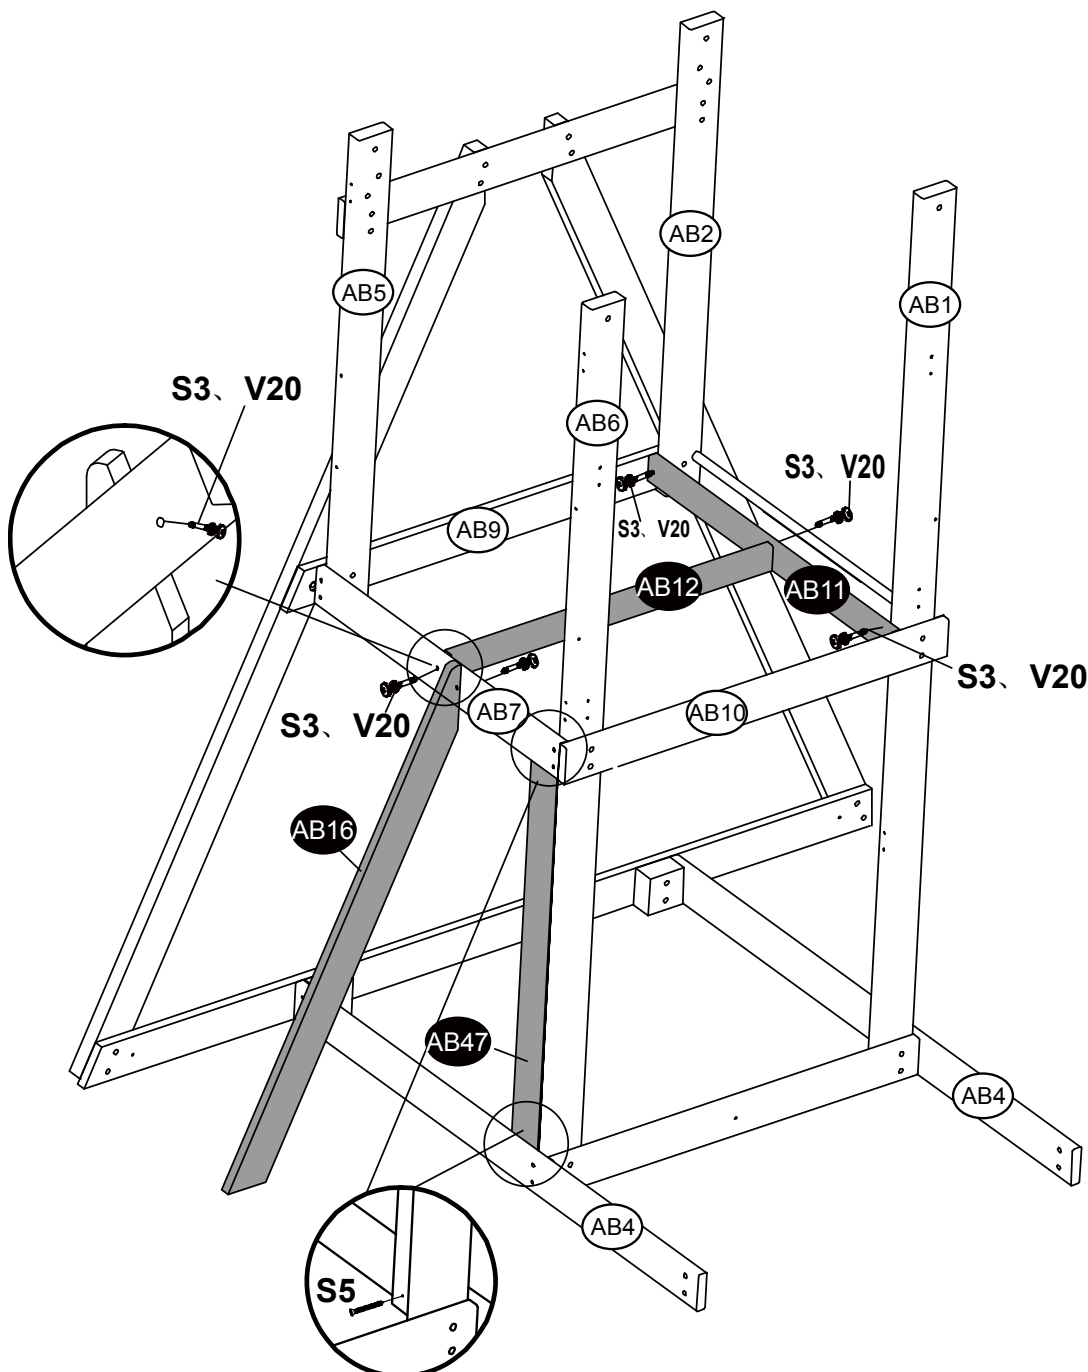


# ASSEMBLY AND INSTALLATION INSTRUCTIONS

## STEP 6

Part#	Qty	Hardware#	Qty
AB3	1 pc	S3	4 pcs
AB17	5 pcs	S5	2 pcs
AB18	2 pcs	S6	28 pcs
AB47	1 pcs	B28	10 pcs
U4	5 pcs	V20	4 pcs
		V31	10 pcs
		V2	10 pcs

- Connect AB3 to AB1 and AB2 using S3 and V20 (4 sets).
- Connect AB17 (5pcs) and AB18 (2 pcs) to A12 and AB16 using S6 (28pcs).
- Connect U4 to AB17, using B28, V2 and V31 (10 sets). (**Note:**There are 2 Blue and 3 Yellow U4 pieces. You can mix and match as you please.)
- Connect AB47 to AB3 and AB4,using S5 (2 pcs) as shown below.

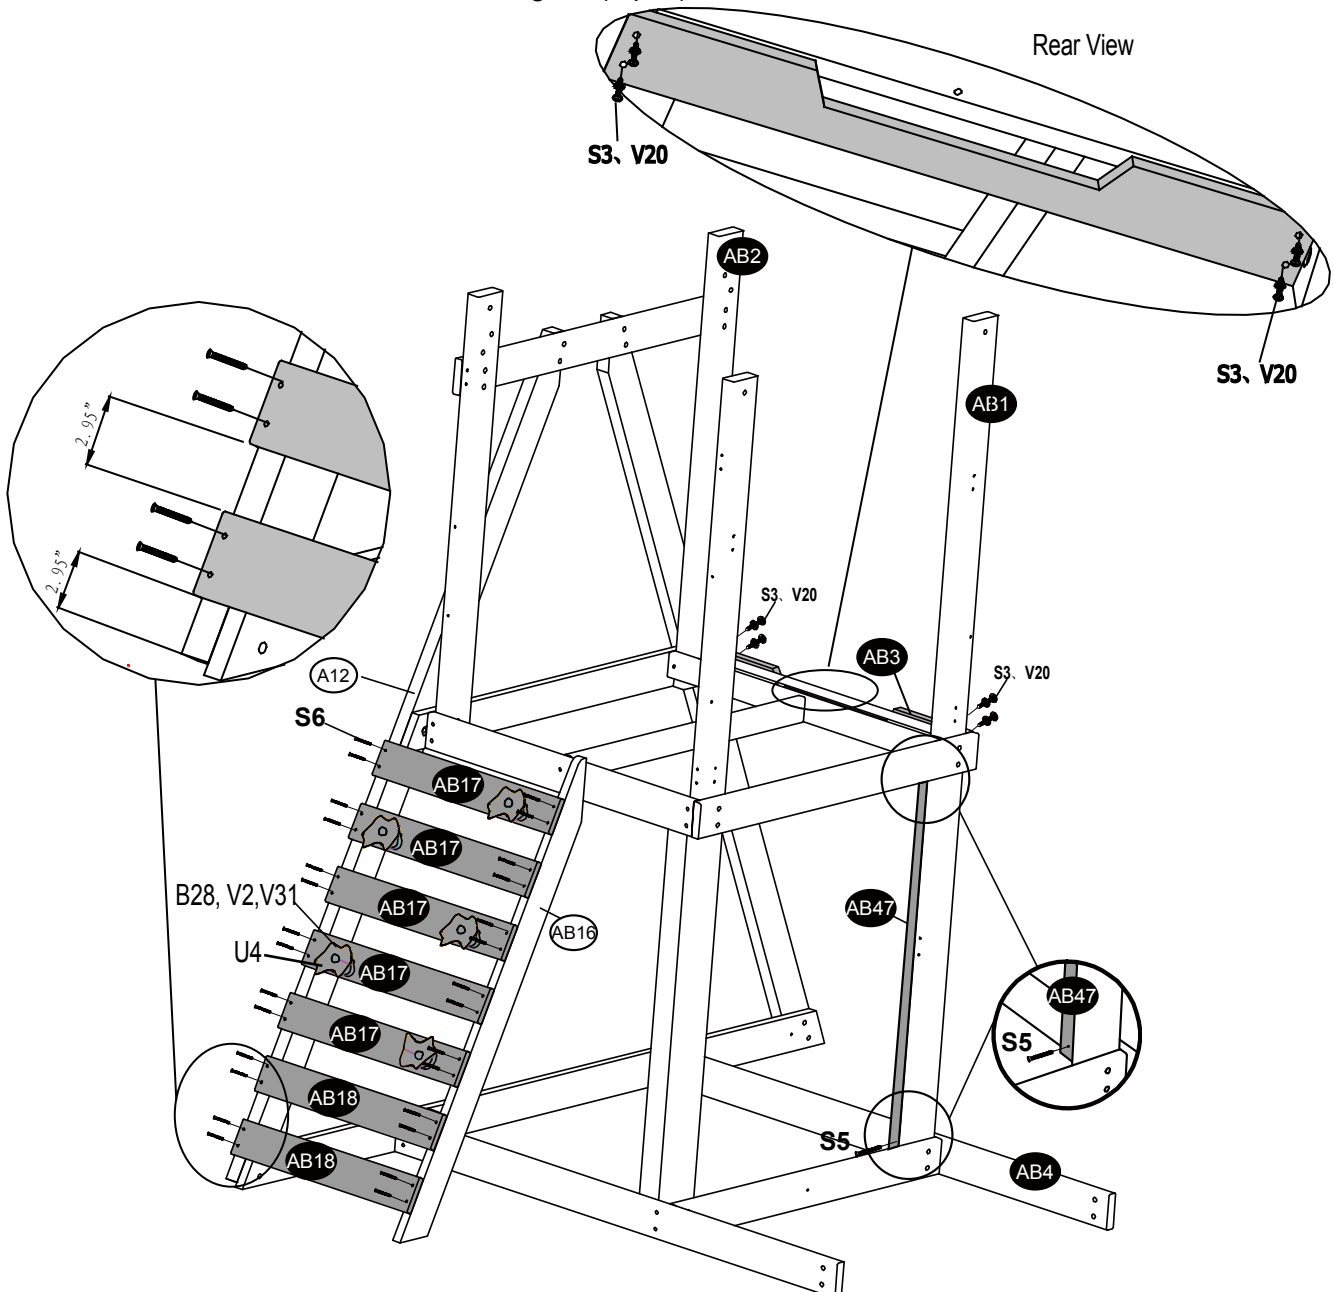


## ASSEMBLY AND INSTALLATION INSTRUCTIONS

### STEP 7

Part#	Qty	Hardware#	Qty
AB13	1 pc	S6	30pcs
AB14	8 pcs		
AB15	1 pc		

- Connect AB13 and AB15 on the 2 ends of the playhouse as shown using S6 (6pcs).
- Connect all 8 pieces of AB14 in between using S6 (24pcs) as shown below.

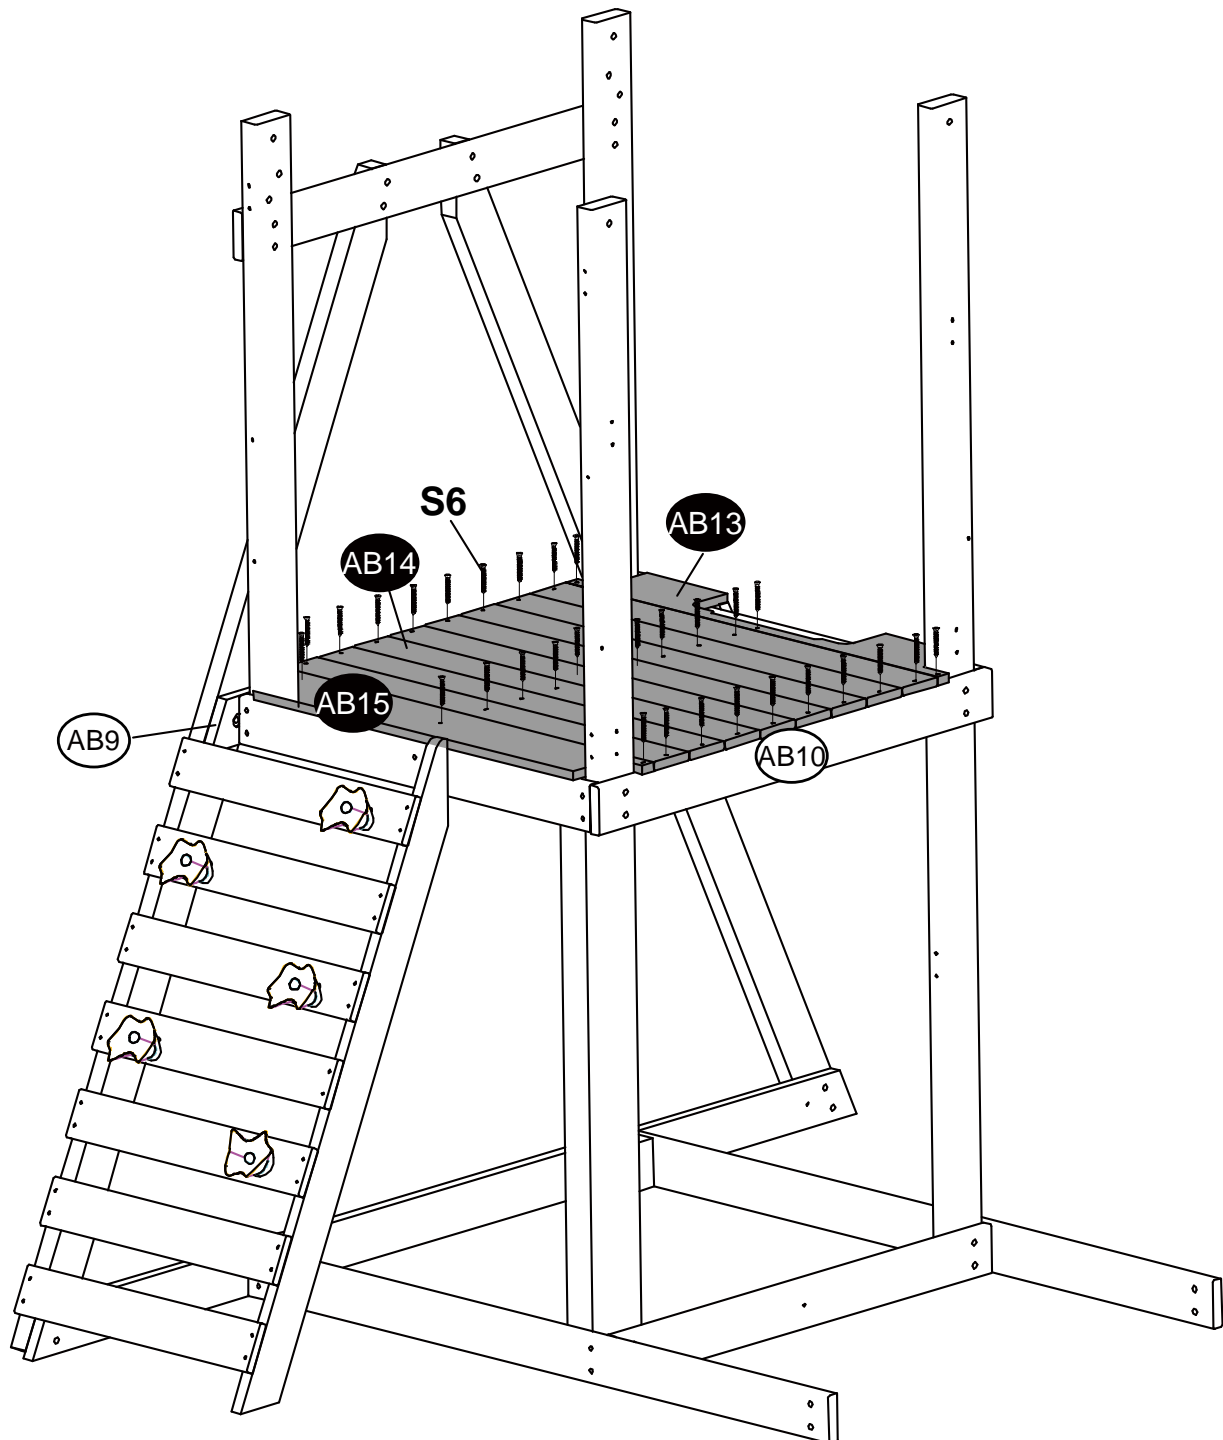


# ASSEMBLY AND INSTALLATION INSTRUCTIONS

## STEP 8

Part#	Qty	Hardware#	Qty
A22A	1 pc	B4	4 pcs
AB25	1 pc	V8	4 pcs
AB27	1 pc	V9	4 pcs
AB32	1 pc	S2	6 pcs
		S15	4 pcs
		V20	10 pcs

- Connect AB25 to AB6 using S2 and V20 (2 sets).
- Connect A22A between AB2, AB5 and A12 using S15 and V20 (4 sets).
- Connect AB27 to AB5 and AB6 using S2 and V20 (4 sets).
- Connect AB32 to AB2 and AB5 using B4,V8 and V9 (4 sets) as shown below.

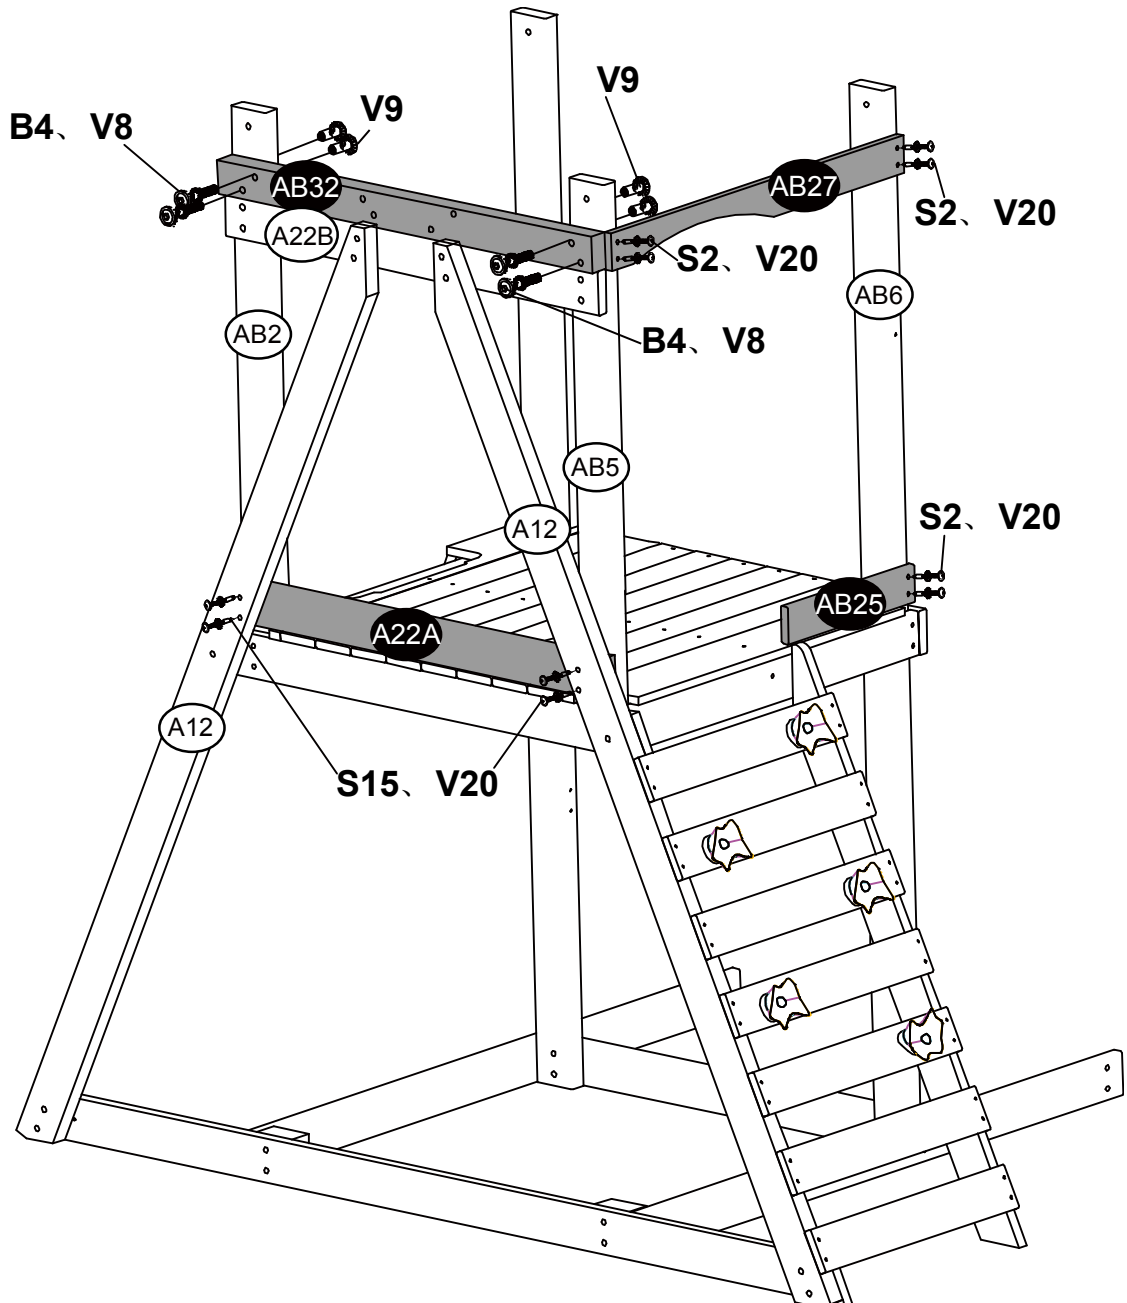


# ASSEMBLY AND INSTALLATION INSTRUCTIONS

## STEP 9

Part#	Qty	Hardware#	Qty
AB19	2 pcs	S2	4 pcs
AB22	5 pcs	S5	18 pcs
AB24A	2 pcs	V20	4 pcs
AB26	1 pc		

- Connect AB19 to AB1 and AB2, using S2 and V20 (4 sets).
- Connect AB24A and AB26 to AB25 and AB27 from inside, using S5 (8 pcs) .
- Connect AB22 to A22A and A22B using S5 (10 pcs) from inside as show below.

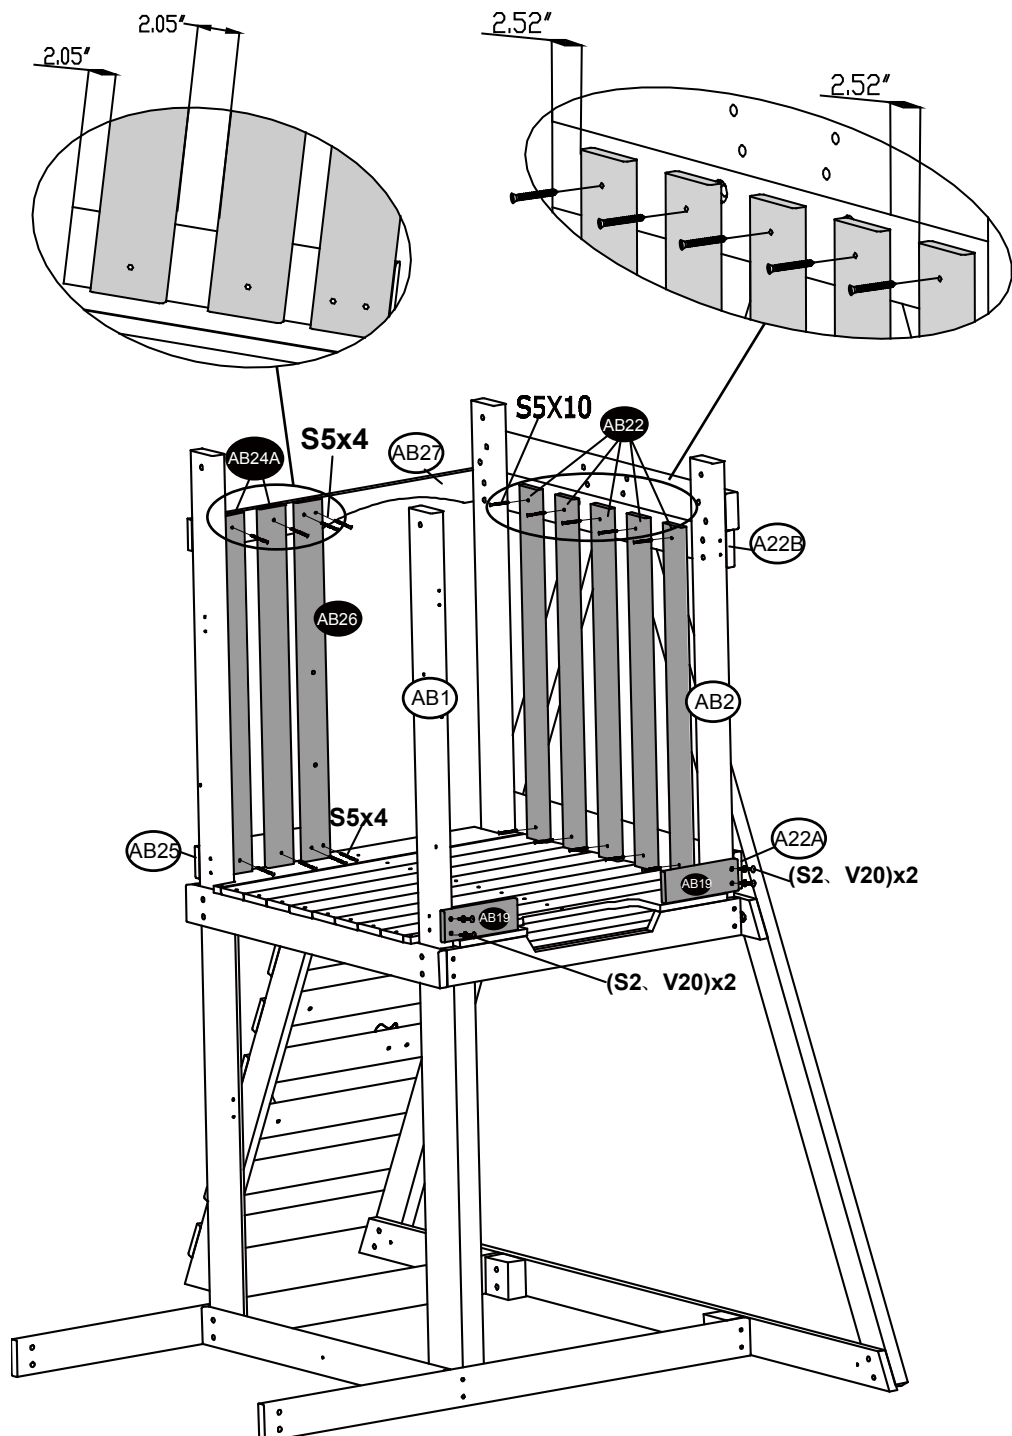


## ASSEMBLY AND INSTALLATION INSTRUCTIONS

## STEP 10

Part#	Qty	Hardware#	Qty
AB21	1 pc	S2	12 pcs
AB23	2 pcs	B3	4 pcs
AB28	2 pcs	V8	4 pcs
		V9	4 pcs
		V20	12 pcs

- Connect AB21 to AB1 and AB2, using S2 and V20 (4 sets).
- Connect AB23 to AB1 and AB6, using S2 and V20 (8 sets).
- Connect AB28 to AB1, AB6 and AB2, AB5, using B3, V8 and V9 (4 sets) as shown below.

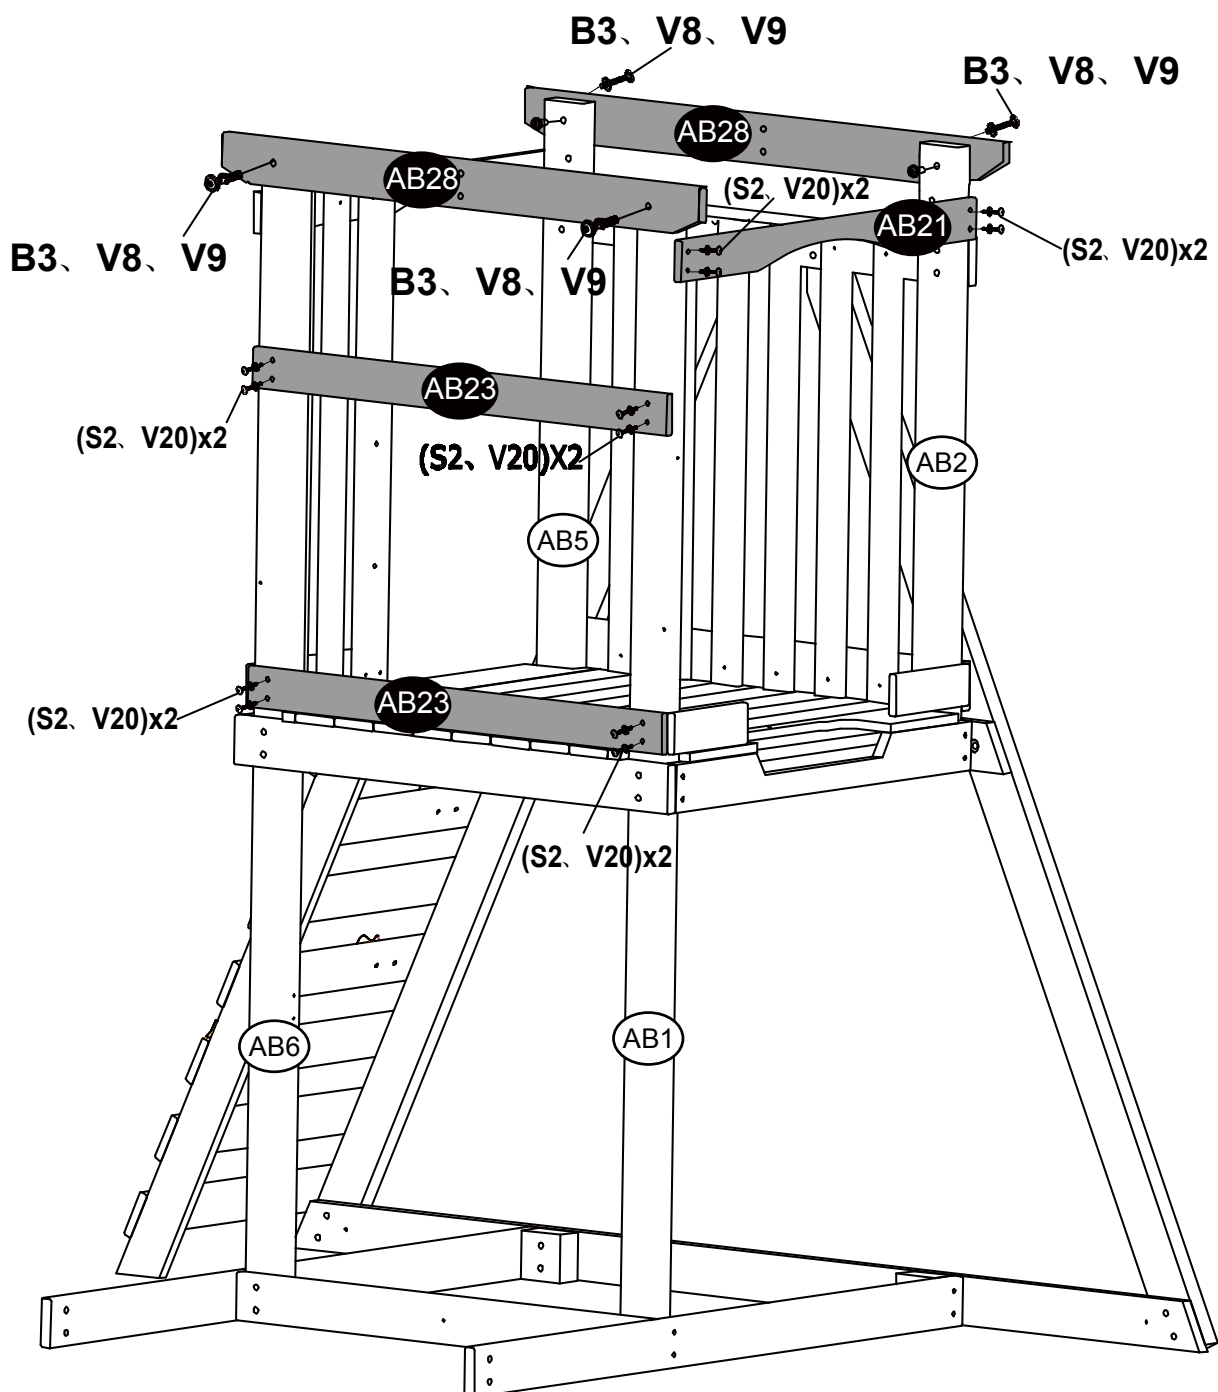


# ASSEMBLY AND INSTALLATION INSTRUCTIONS

## STEP 11

Part#	Qty	Hardware#	Qty
AB20	4 pcs	S5	18 pcs
AB24	5 pcs		

- Connect AB20 to AB19 and AB21 from inside, using S5 (8 pcs) .
- Connect AB24 to AB23 from inside using S5 (10 pcs) as shown below.

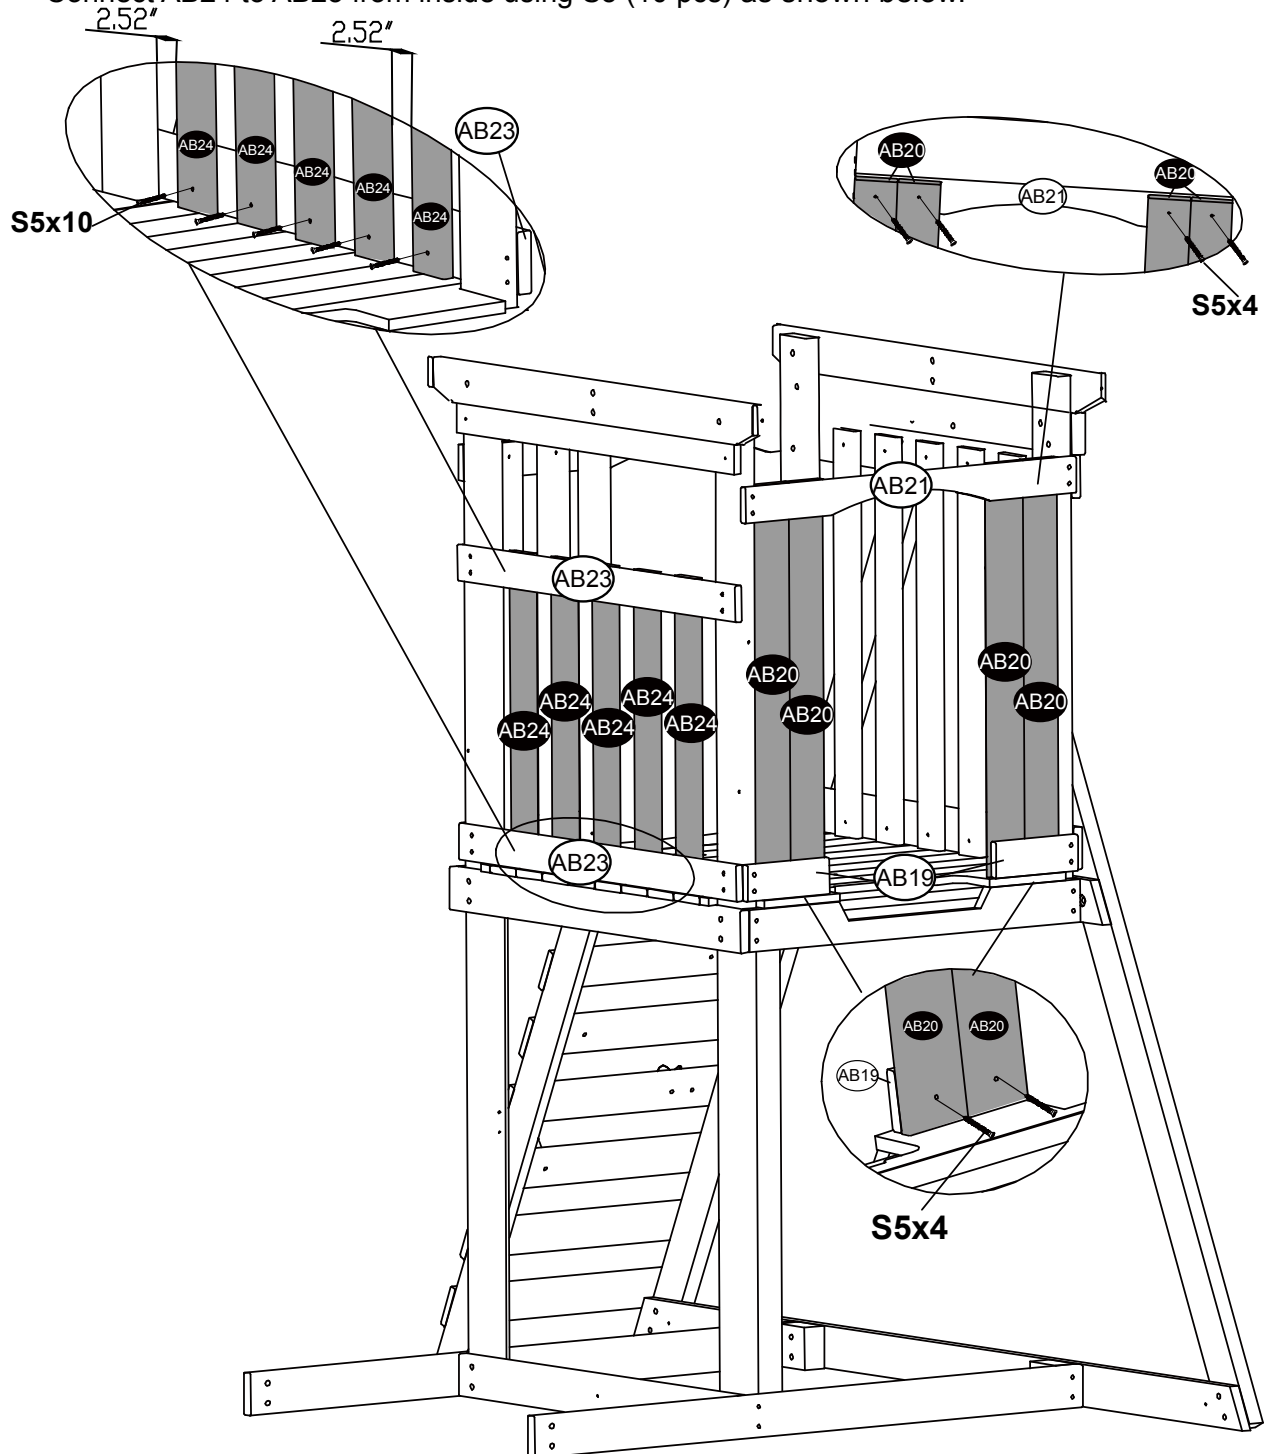




# ASSEMBLY AND INSTALLATION INSTRUCTIONS

## STEP 12

Part#	Qty	Hardware#	Qty
AB30	2 pcs	S3	2 pcs
AB31	1 pc	S6	2 pcs
AB50	2 pcs	B1	6 pcs
AB51	2 pcs	V8	6 pcs
		V9	6 pcs
		V20	4 pcs
		S15	2 pcs

- Connect AB30 to AB28, using B1, V8 and V9 (4 sets).
- Connect AB31 to AB30, using S6 ( 2 pcs).
- Connect AB50 to AB1 and AB6, using S3 and V20 ( 2 sets).
- Connect AB51 to AB1 and AB6, using S15 and V20 (2 sets).
- Connect AB50 to AB51, using B1, V8 and V9 (2 sets) as shown below.



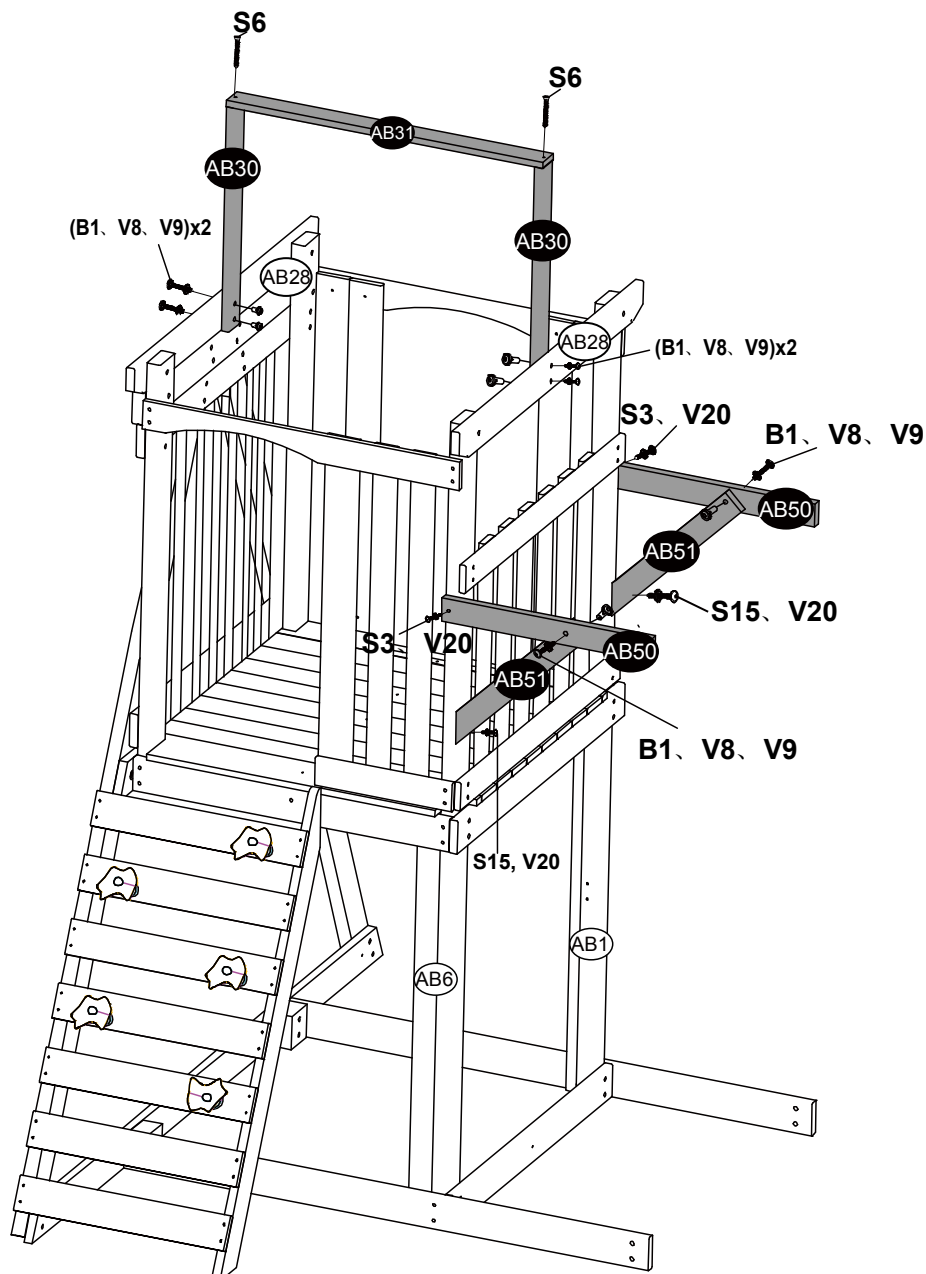


# ASSEMBLY AND INSTALLATION INSTRUCTIONS

## STEP 13

Part#	Qty	Hardware#	Qty
AB29	2 pcs	U572S	1 pc
AB52	1 pc	U572B	1 pc
AB53	1 pc	S6	8 pcs

- Guide AB29 through the edges of U572B. Lay the canopy over the top of the playhouse, then attach AB29 to AB28, using S6 (4 pcs).
- Guide AB52 and AB53 through U572S and attach to AB50, AB1 and AB6, using S6 (4 pcs) as shown below.


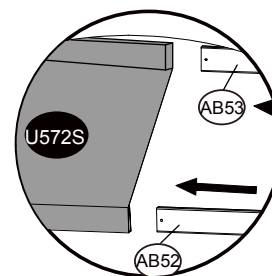
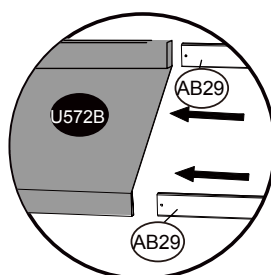
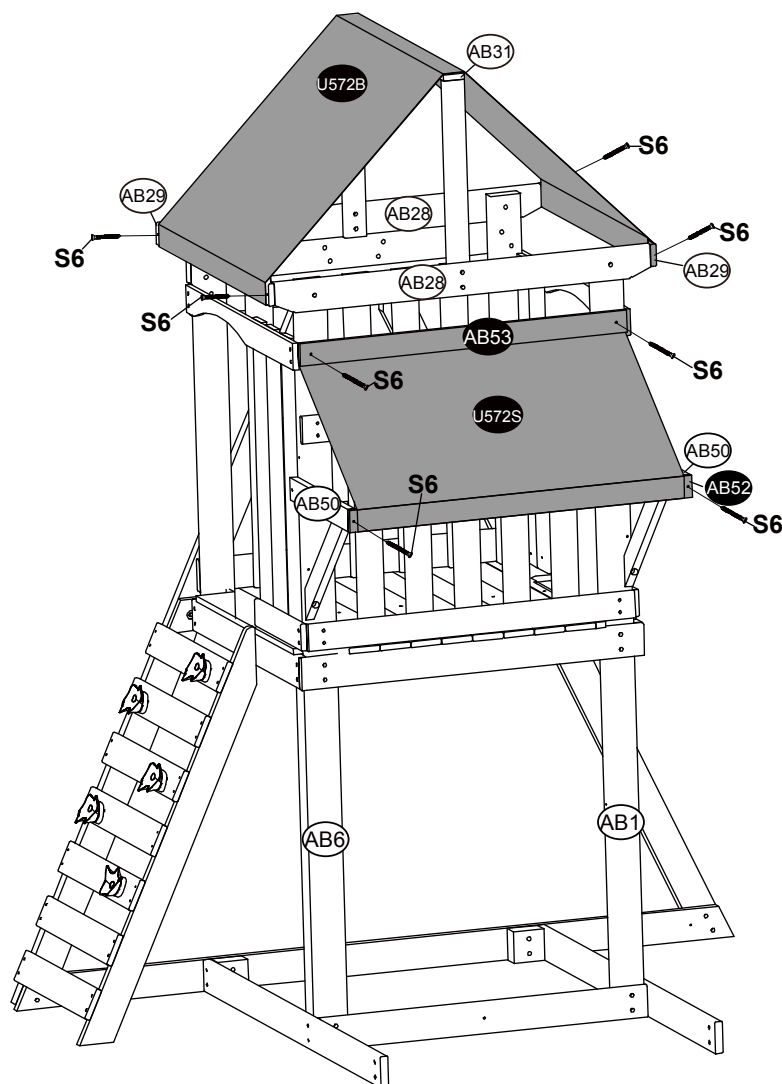


# ASSEMBLY AND INSTALLATION INSTRUCTIONS

## STEP 14

Part#	Qty	Hardware#	Qty
AB41	1 pc	S5	3 pcs
AB42	2 pcs	S6	2 pcs
AB44	1 pc		
AB45	3 pcs		

- Connect AB44 to AB45, using S5 (3 pcs).
- Connect AB41 to AB42, using S6 (2 pcs) as shown below

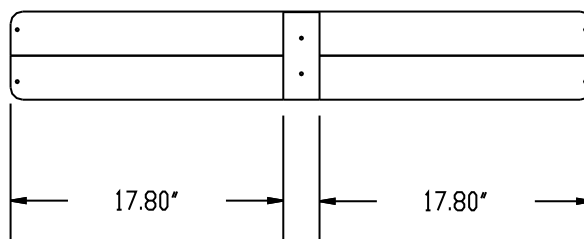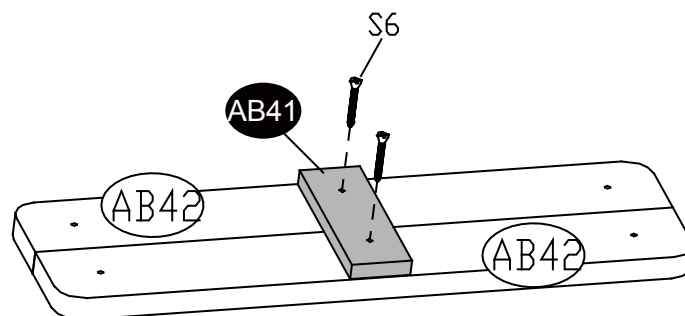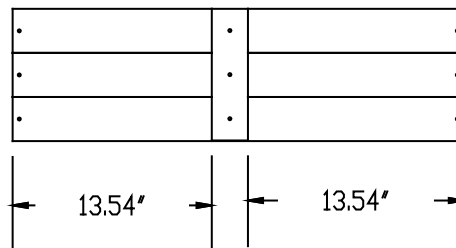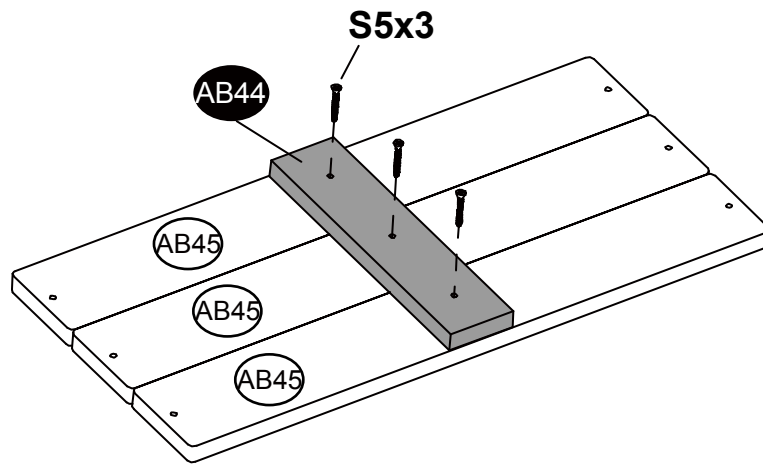


# ASSEMBLY AND INSTALLATION INSTRUCTIONS

## STEP 15

Part#	Qty	Hardware#	Qty
AB39	2 pcs	B1	8 pcs
AB40	2 pcs	V8	8 pcs
AB43	2 pcs	V9	8 pcs
AB46	2 pcs	S3,V20	4 sets
		S7	4 pcs
		S6	4 pcs

- Connect AB43 to AB1 using S3 and V20 (2 sets) to AB6 using S3 and V20 (2sets).
- Connect AB46 to AB1 and AB43, using S7 (2pcs) and S6 (2 pcs).
- Connect AB46 to AB6 and AB43, using S7 (2 pcs) and S6 (2 pcs).
- Connect AB40 to AB4, using B1, V8 and V9 (4 sets).
- Connect AB39 to AB40, using B1, V8 and V9 (4 sets) as shown below.

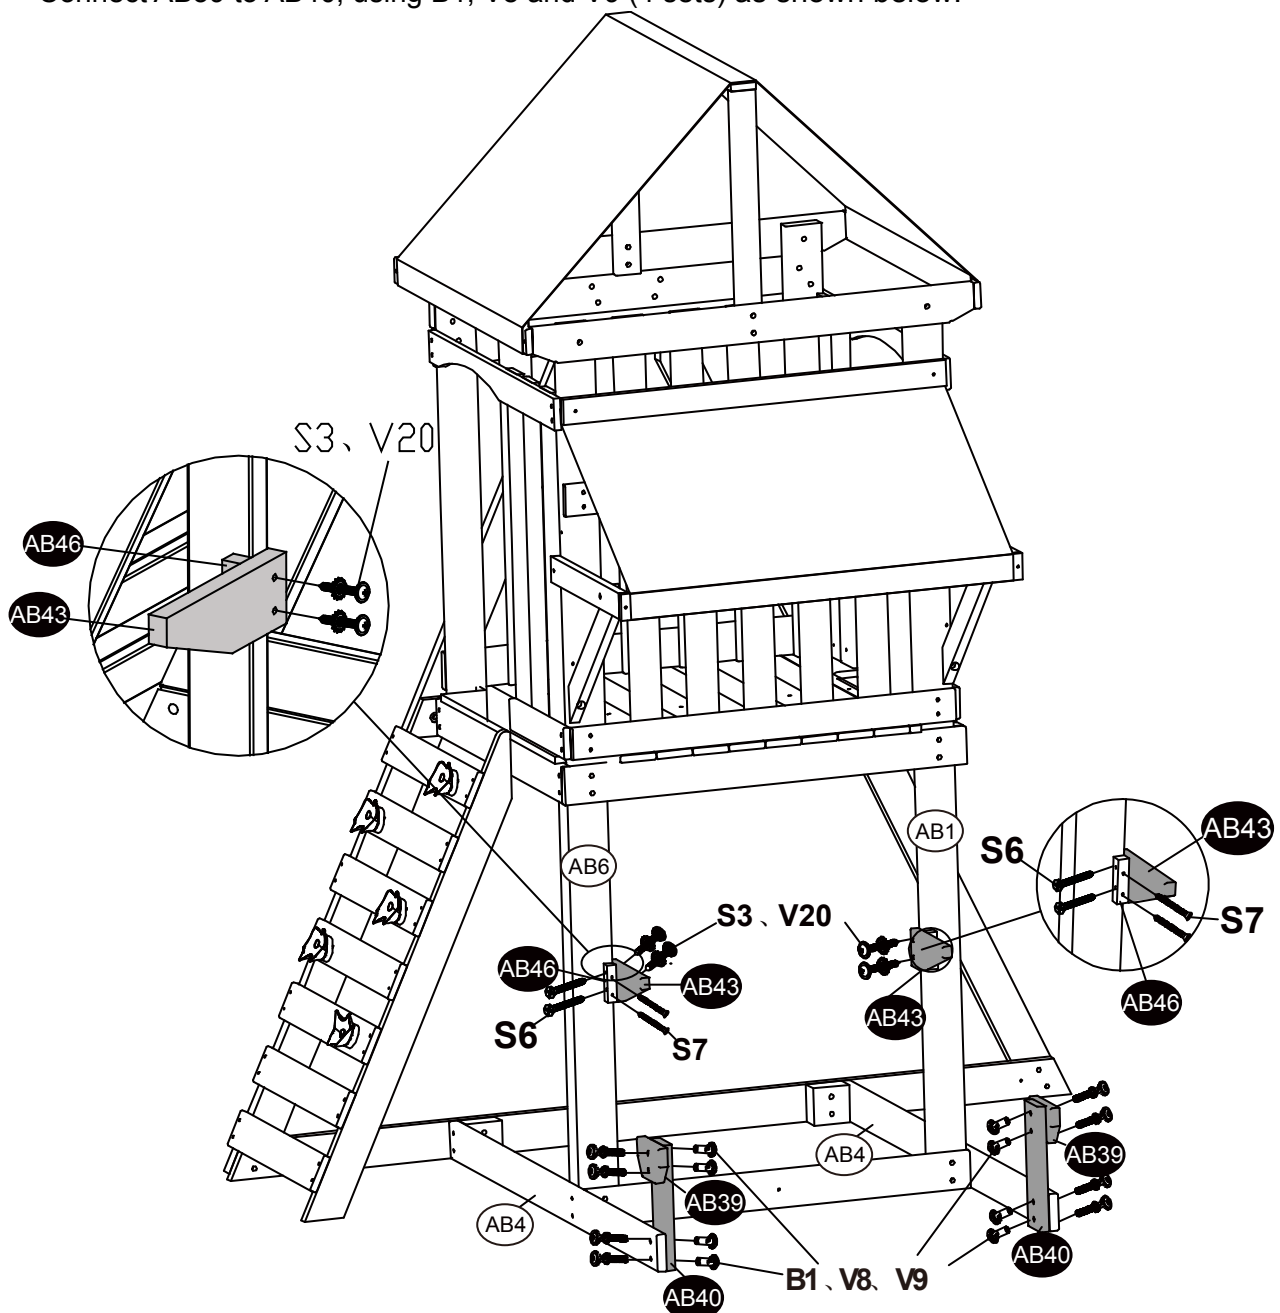


## ASSEMBLY AND INSTALLATION INSTRUCTIONS

### STEP 16

Part#	Qty	Hardware#	Qty
AB42	1 set	S6	10 pcs
AB45	1 set		

- Connect AB45 to AB43, using S6 (6 pcs).
- Connect AB42 to AB39, using S6 (4 pcs) as shown below.

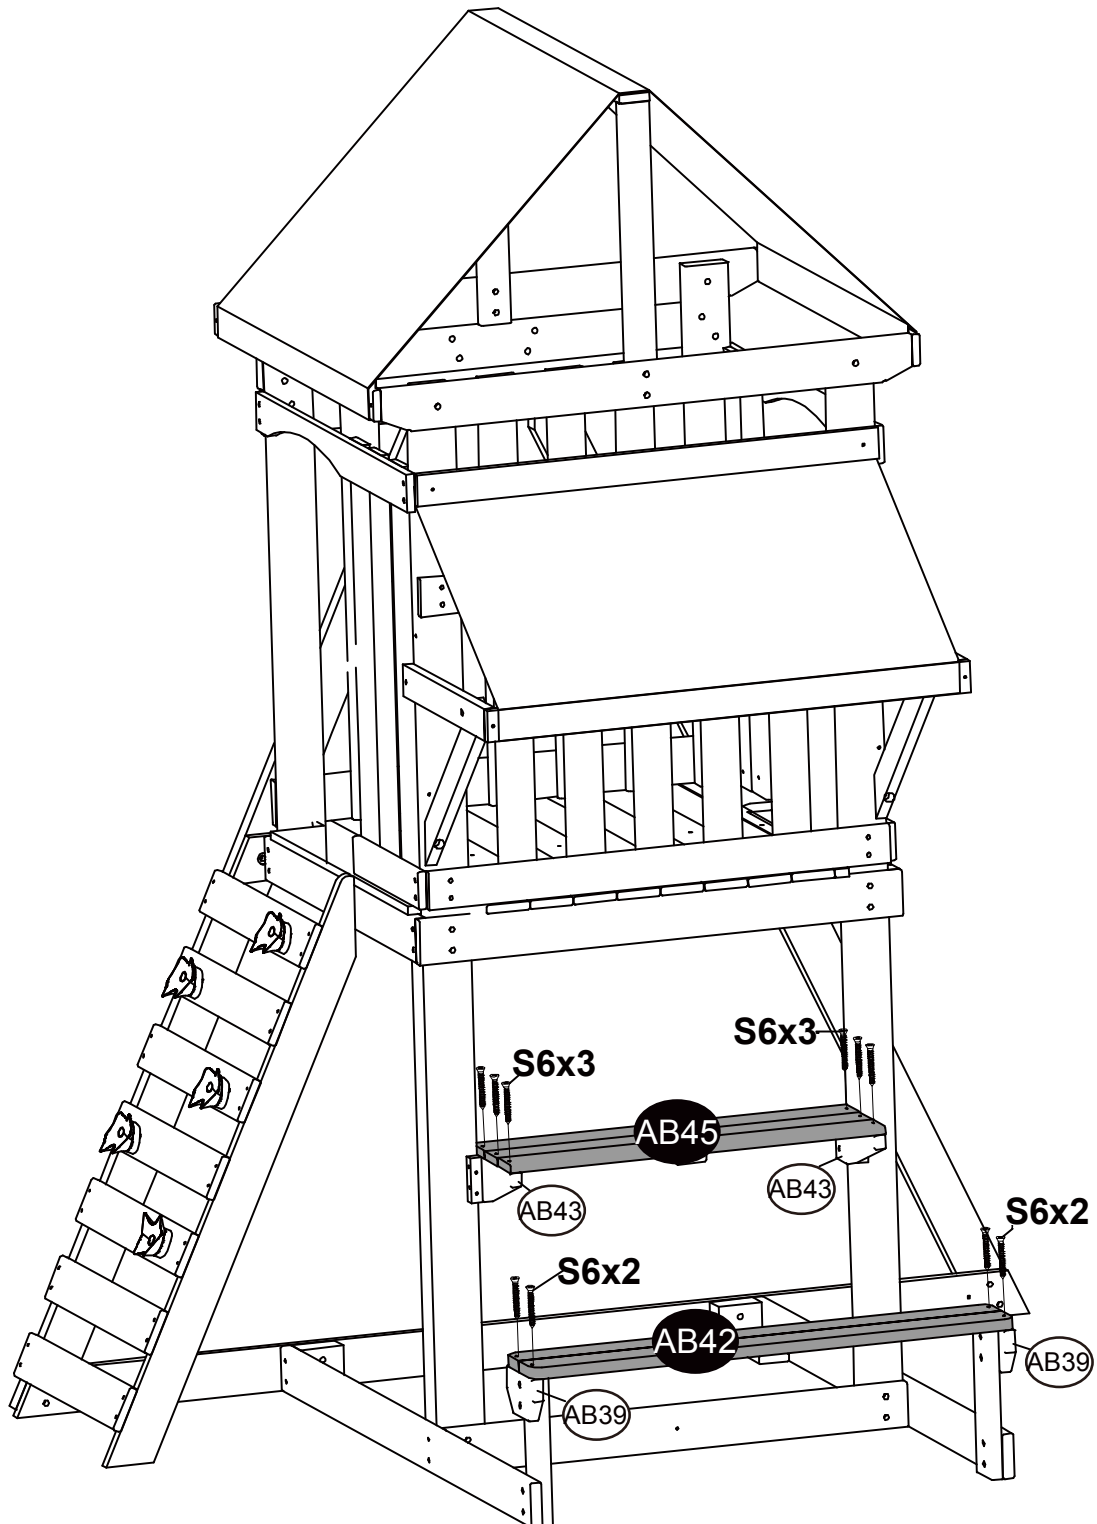


## ASSEMBLY AND INSTALLATION INSTRUCTIONS

## STEP 17

Part#	Qty	Hardware#	Qty
AB33	1 pc	B9	2 pcs
AB34	1 pc	S3	10 pcs
AB35	1 pc	V8	4 pcs
AB36	1 pc	V9	2 pcs
AB37	1 pc	V20	10 pcs

**ASSEMBLE THE SWING SUPPORT BEAM IN THE FOLLOWING ORDER:**

- Insert B9, V8 through AB33, AB34 and AB35 and fasten with V8 and V9 on the other end of screw.
- Connect AB36 to AB33, AB34 and AB35, using S3 and V20 (6 sets).
- Connect AB37 to AB33 and AB35, using S3 and V20 (4 sets) as shown below.

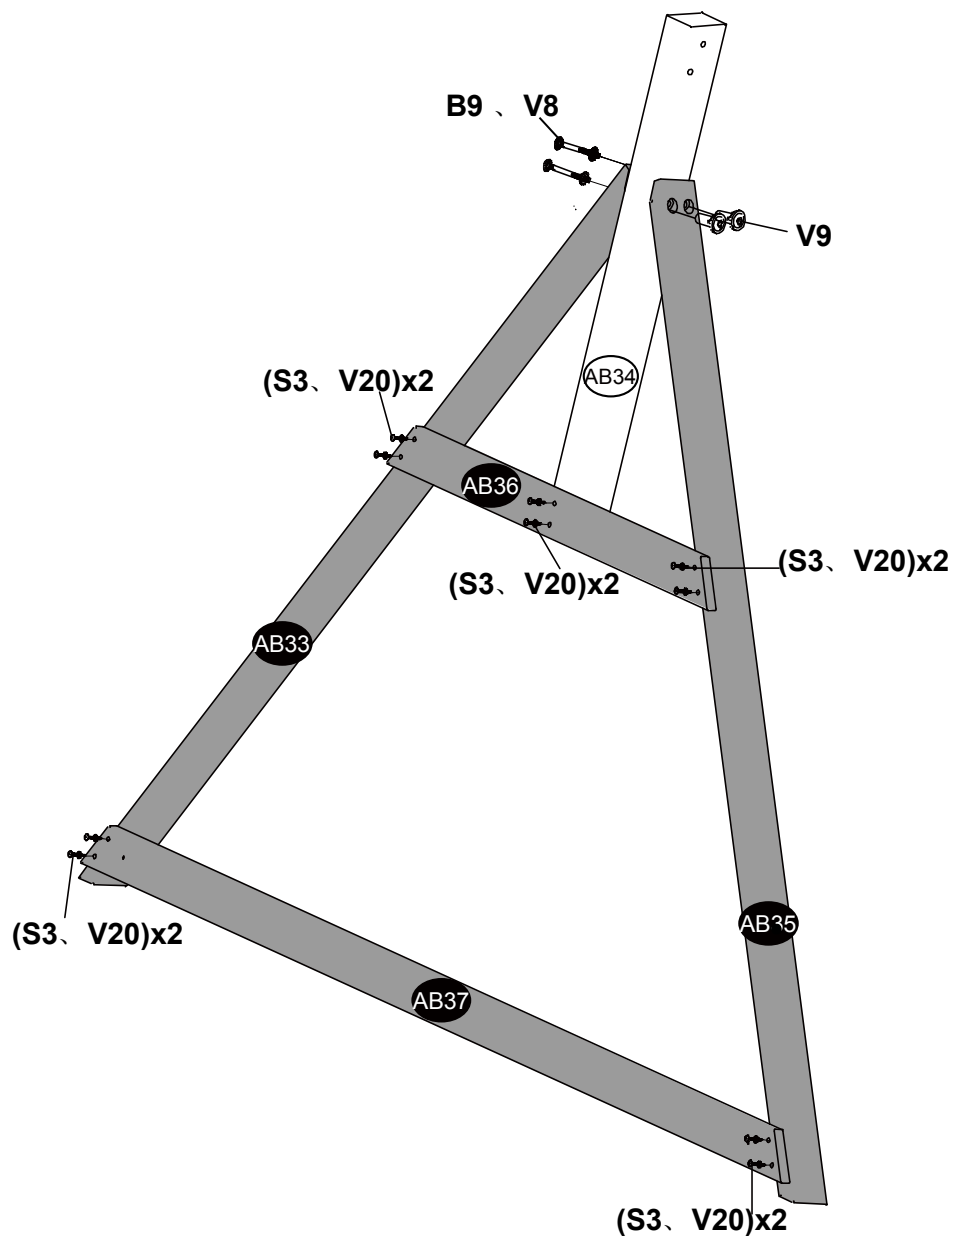


# ASSEMBLY AND INSTALLATION INSTRUCTIONS

## STEP 18

Part#	Qty	Hardware#	Qty
AB38	1 pc	B4	2 pcs
U2	2 pcs	V1	8 pcs
V7	4 pcs	V6	4 pcs
		V24	4 pcs
		V9	2 pcs

- Connect U2 to AB38, using B4, V24 and V9, V24(2 sets).
- Connect V7 to AB38 with V1 and V6 (4 sets) as shown below.

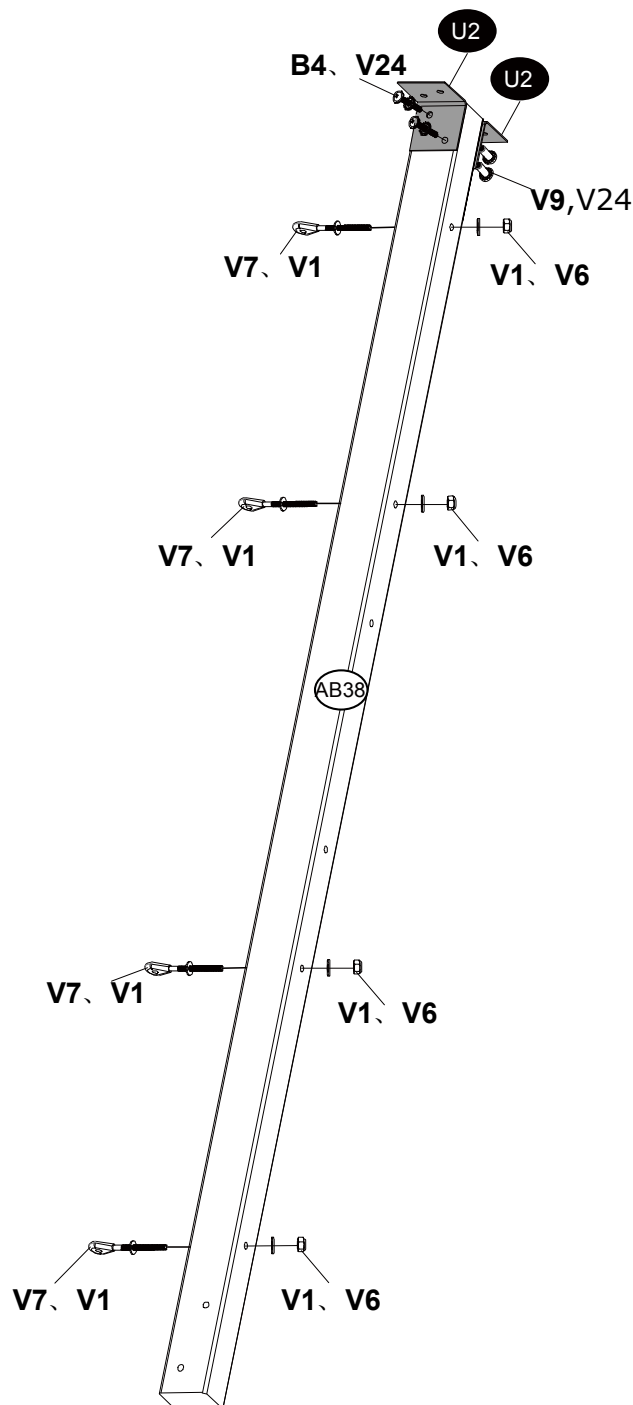


# ASSEMBLY AND INSTALLATION INSTRUCTIONS

## STEP 19

Part#	Qty	Hardware#	Qty
U3	2 pcs	B1	4 pcs
U42	2 pcs	B4	4 pcs
U32	1 pc	B28,V2,V31	2 sets
		S1,V2	2 sets
		V24	12 pcs
		V9	8 pcs
		S5	1 pc
		S14	1 pc

- Attach U2 to AB32 on both sides using B1, V24 and V9 (4 sets).
- Attach U3 to AB34 and AB38 on both sides using B4, V24 and V9, V24 (4 sets).
- Attach U42 to AB26, using B28, V2 and V31, and to AB5, using S1 and V2 (2 sets) as shown below.
- Connect U32 to AB15 and AB26, using S14 (1 pc) and S5 (1 pc) as shown below.

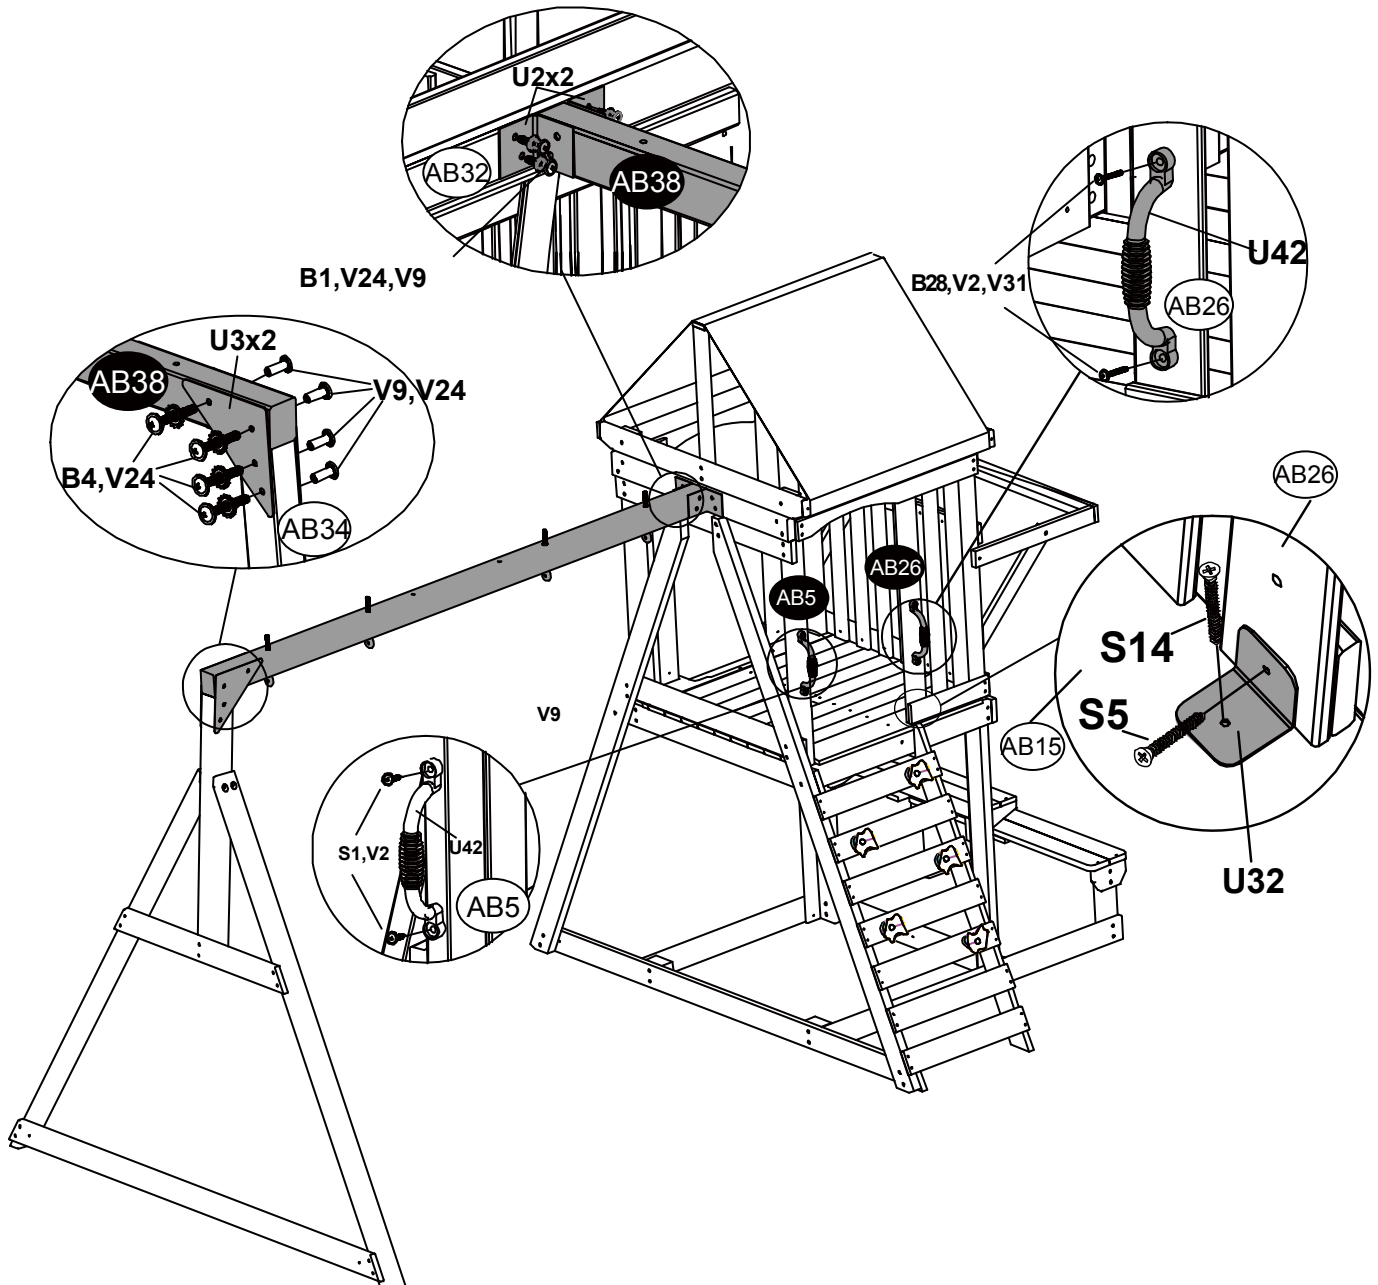



# ASSEMBLY AND INSTALLATION INSTRUCTIONS

## STEP 20


Part#	Qty	Hardware#	Qty
U8	1 pc	V1	4 pcs
U13	1 pc	V2	2 pcs
		V6	4 pcs

### ATTACH SWING TO THE SUPPORT BEAM IN THE FOLLOWING ORDER:

- Connect the swings by attaching the hooks on the swing chain to the support beam as shown in the enlarged diagram. Make sure the hook is securely closed.

### ATTACH TRAPEZE AND HANDLE TO THE SUPPORT BEAM IN THE FOLLOWING ORDER:

- Attach the long end of U13 to AB38, using V1 (4 pcs) and V6 (2 pcs).
- Attach the short end of U13 to U8 using V2 (2 pcs) and V6 (2 pcs).

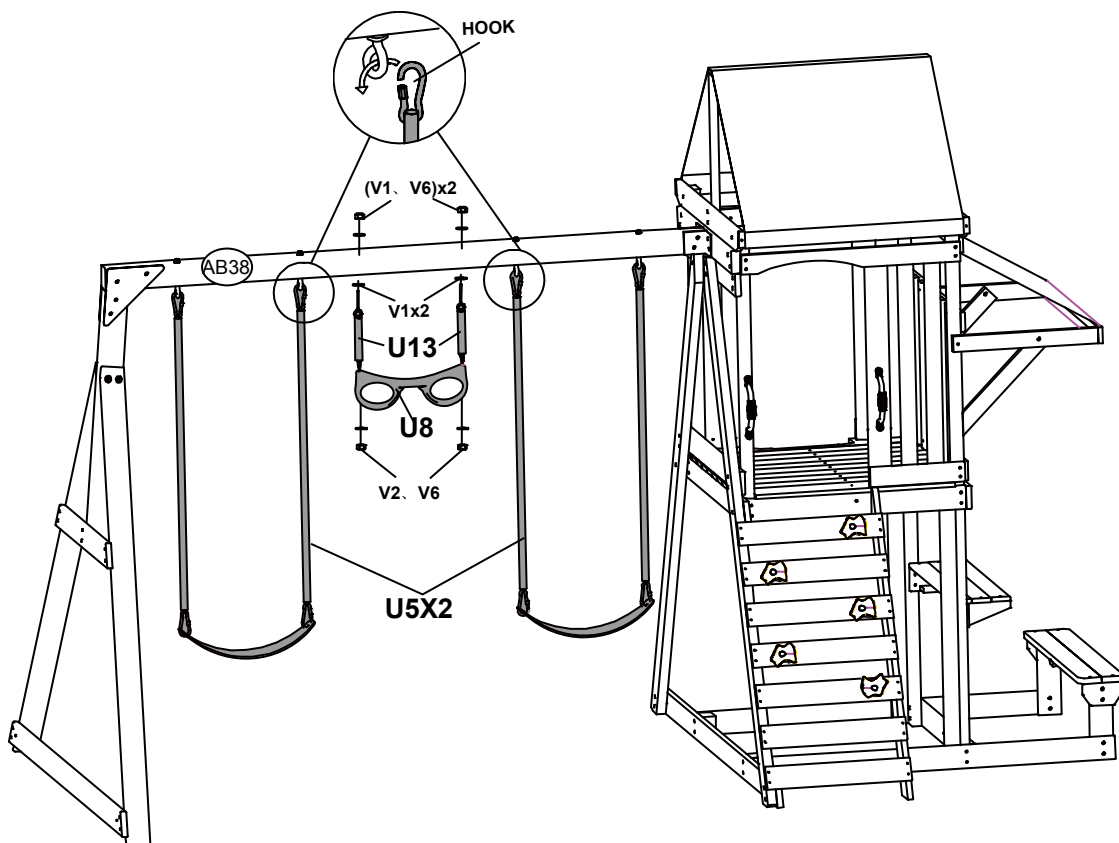


# ASSEMBLY AND INSTALLATION INSTRUCTIONS

## STEP 21

Part#	Qty	Hardware#	Qty
U9	1 pc	S18,V2,V3	4 sets
U10	1 pc	S5	10 pcs
U11	2 pcs	S14	2 pcs
U32	2 pcs		

### ATTACH SLIDE TO THE PLAYHOUSE IN THE FOLLOWING ORDER:

- Attach U10 to U9, using S18, V2 and V3 (4 sets).
- Connect U9 to U1 from the underside, using U11 and S5 (8pcs).
- Connect U32 to AB13 and AB20, using S5 (2 pcs) and S14 (2 pcs) as shown below.

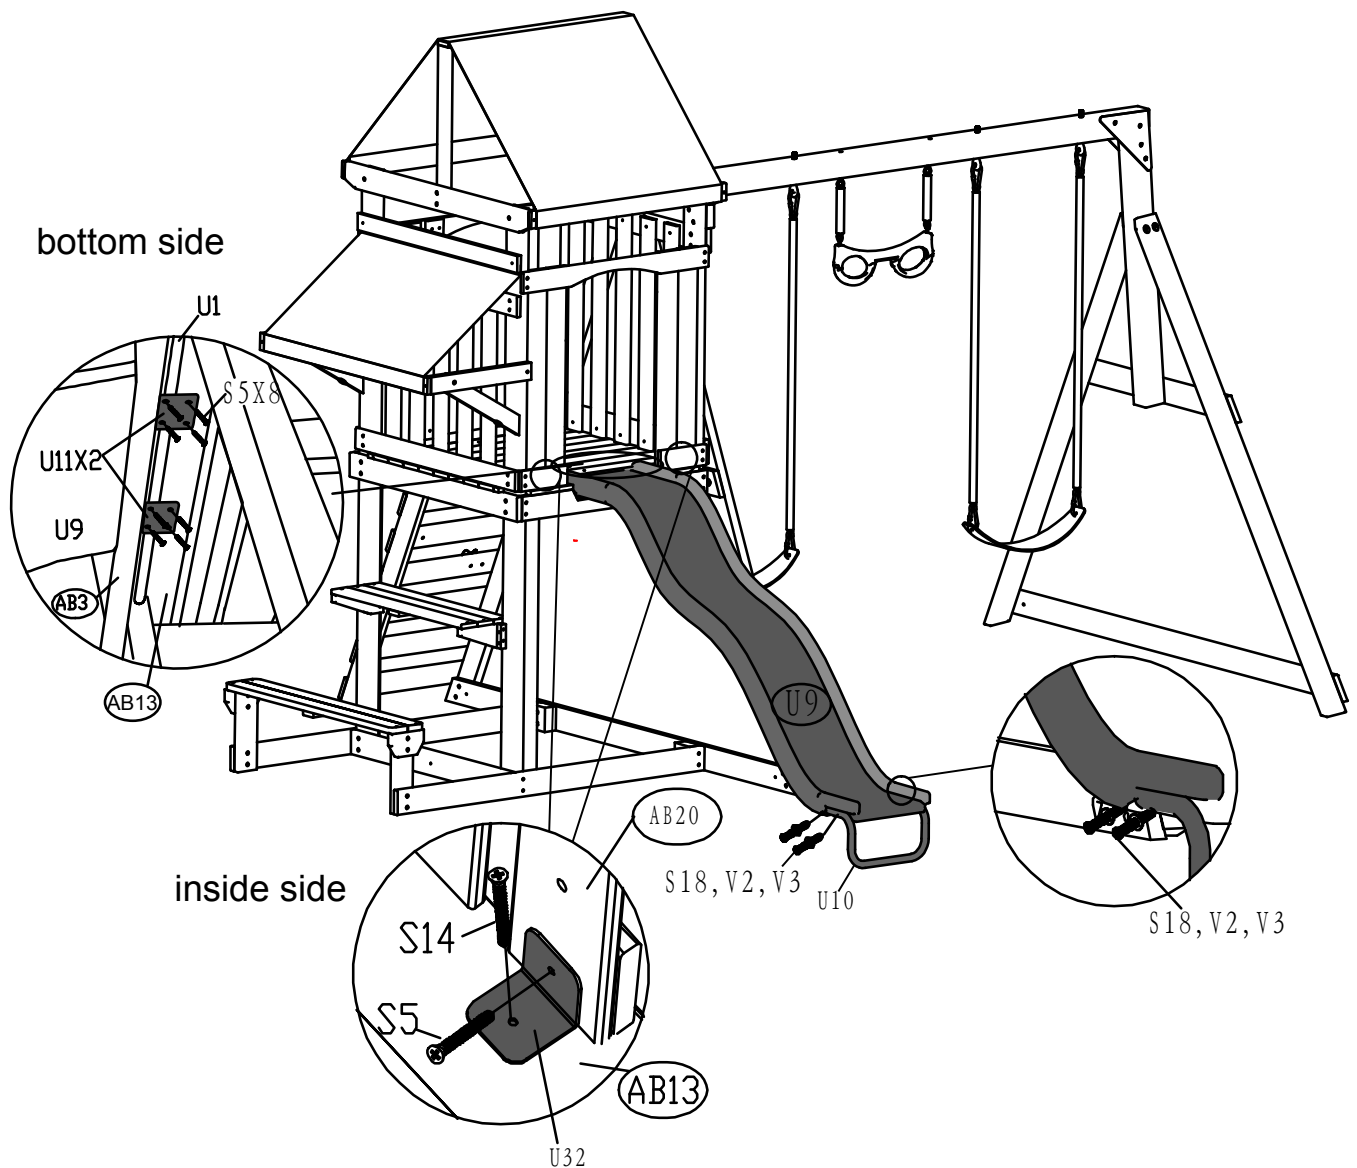


# ASSEMBLY AND INSTALLATION INSTRUCTIONS

## STEP 22

Part#	Qty	Hardware#	Qty
U50	4 pcs	S1	4 pcs

- Use U50 as the anchoring stakes for this set.
- Hammer U50 into the ground and secure it, using S1 (4 pcs) as shown below.

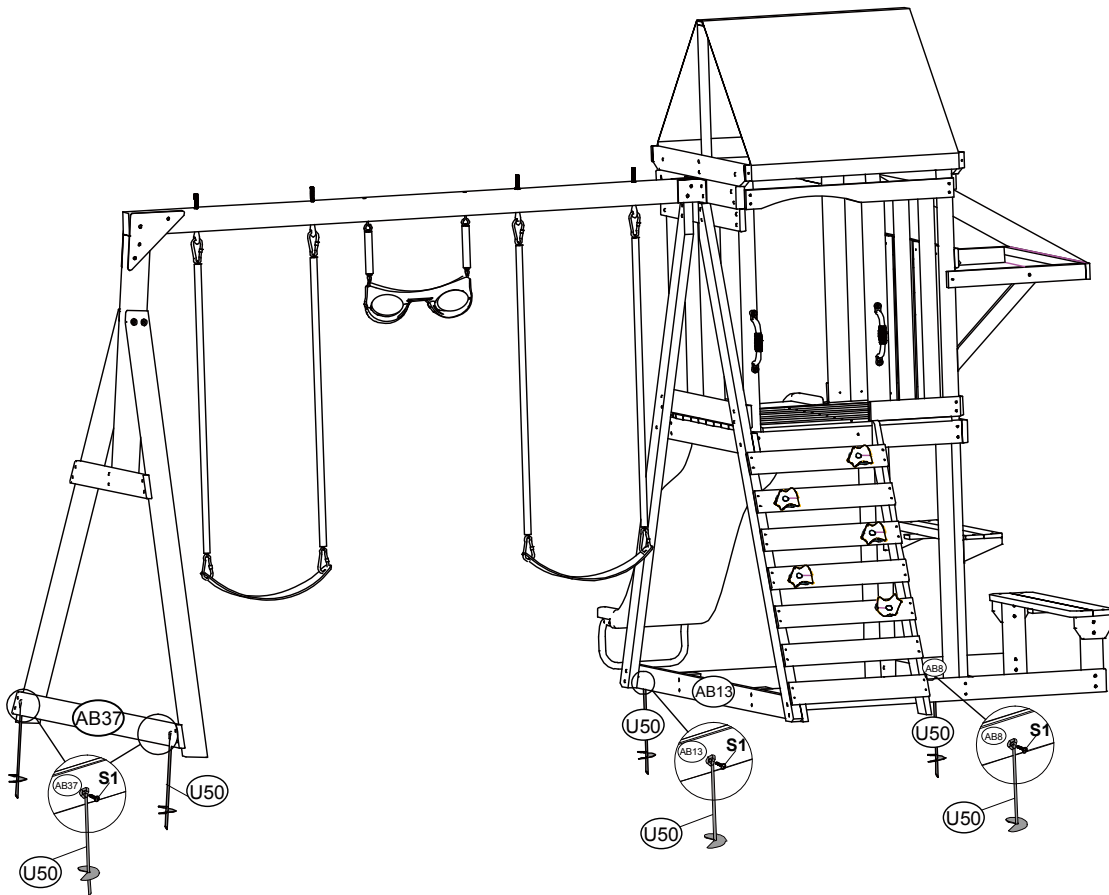

### IMPORTANT:

**BEFORE ALLOWING CHILDREN TO PLAY ON THE EQUIPMENT, THE 4 ANCHORS PROVIDED MUST BE INSTALLED. ALSO, PLEASE GO OVER THE ENTIRE UNIT AND MAKE SURE ALL SCREWS ARE TIGHTENED ALL THE WAY AND INSPECT THE ENTIRE UNIT TO ENSURE THE EQUIPMENT IS STABLE AND PROPERLY INSTALLED BEFORE ALLOWING CHILDREN TO PLAY.**

Sportspower Ltd warrants its products to be free from defects in material and workmanship under normal use and service conditions for 180 days after the date of purchase. Extended warranty for an extra 90 days will be offered to those customers registering their products at [www.sportspowerltd.net](http://www.sportspowerltd.net) within 14 days from the date of purchase.

All warranty coverage extends only to the original purchaser of the product and is not assignable or transferable. The original store or online purchase receipt must be kept as proof of purchase in order for the warranty to be valid. These documents must be presented in the event of making a claim under warranty.

During the warranty period, Sportspower will provide repair or replacement of defective equipment or parts thereof covered by the warranty. Any handling, transportation, delivery and other incidental charges in respect of the servicing of the equipment shall be borne by the Purchaser. If the product includes a number of accessories, only the defective part or accessory will be replaced.

The warranty will become void if any defects or damages are associated with the use of unauthorized replacement parts. All replacement parts must be obtained from Sportspower authorized agents.

All decisions made by Sportspower in respect of the servicing of the equipment (including repairs, replacements or issues relating to defects of workmanship or materials) shall be conclusive and the Purchaser agrees to be bound by such decisions. Any defective equipment or part thereof replaced shall become the property of Sportspower.

In the event of a product or accessory being replaced during the guarantee, the guarantee on the replacement will expire at the original date, i.e. 180 days from the original purchase date.

This warranty excludes defects caused by the product not being used in accordance with instructions, accidental damage, misuse or being tampered with by unauthorized persons.

The Sportspower Limited Warranty does not cover:

- (a) Products used for commercial or rental purposes.
- (b) Loss or damage to product due to: (i) abuse, repairs and/or tampering by any person other than the authorized personnel of Sportspower; (ii) negligence and/or misuse (including foreign object, accident, improper storage, exposure to sun/moisture, excessive temperature, sand, dust, dirt, other pollution or other environmental conditions and failure to follow precautions or proper operating instructions stated in the User's Manual such as improper installations); (iii) fire, flood, lightning strike, wind storm or other acts of God; (vi) freight or improper transport damages, and (v) improper usage (including use by under-age, over-weight or excessive number of users permitted as stated in the User's Manual).
- (c) Defects, damages or accidents due to the malfunction, connection to or use of non-Sportspower or unauthorized parts. In such event, Sportspower reserves the right to cancel the Limited Warranty coverage immediately.

To the extent allowed by the applicable local law, the remedies in the Limited Warranty are the Purchaser's sole and exclusive remedies.

## PRODUCT WARRANTY

SPORTSPOWER IS NOT RESPONSIBLE OR LIABLE FOR INDIRECT, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THE PRODUCT OR OTHER DAMAGES WITH RESPECT TO ANY ECONOMIC LOSS, LOSS OF PROPERTY, LOSS OF REVENUE OR PROFITS, LOSS OF ENJOYMENT OR USE, COST OF REMOVAL, INSTALLATION OR OTHER CONSEQUENTIAL DAMAGES. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. ACCORDINGLY, THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

THE WARRANTY EXTENDED HEREUNDER IS IN LIEU OF ALL OTHER WARRANTIES AND ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE IS LIMITED IN ITS SCOPE AND DURATION TO THE TERMS SET FORTH HEREIN. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS. ACCORDINGLY, THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE. THIS WARRANTY IS VALID ONLY IN THE UNITED STATES.

**PLEASE NOTE: ANY REPAIRS OR REPLACEMENTS MUST BE MADE USING AUTHORIZED SPORTSPOWER PARTS IN ORDER FOR THIS WARRANTY TO BE VALID.**

**For Customer Service, please call 1-866-370-2131**

**Monday – Friday 9:00 AM – 5:00 PM Eastern Time**

**or visit [www.sportspowerltd.net](http://www.sportspowerltd.net)**

Sportspower Limited

Level 20, Parkview Centre, 7 Lau Li Street, Causeway Bay, Hong Kong

NA-20-WP-572-18001