


Cozy Cloud Recliner

Owner's Manual

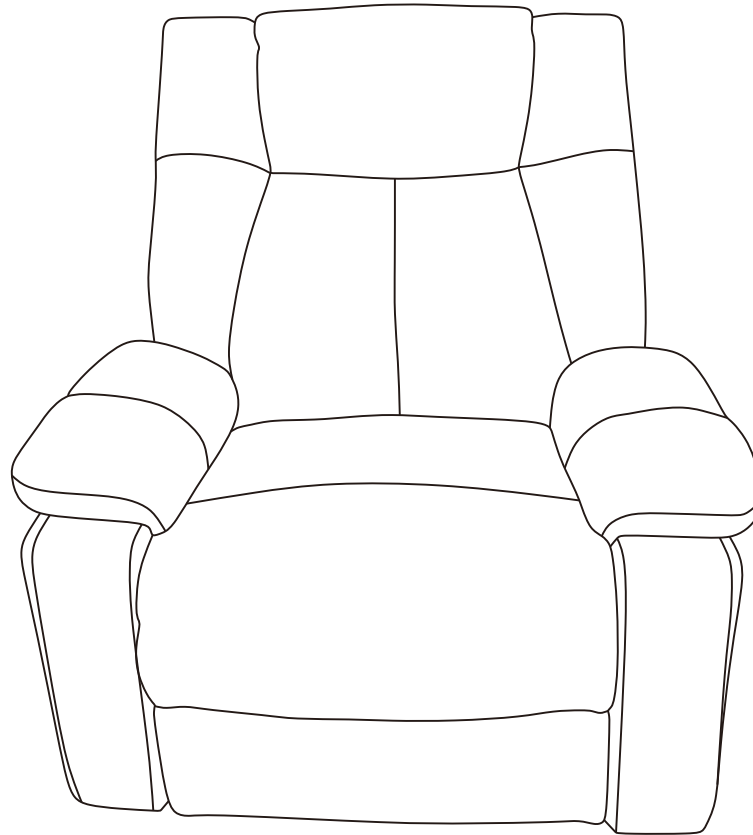


Important Caution

Before beginning assembly of the product, make sure all parts are present. Compare parts with the package contents list and hardware contents. If any part is missing or damaged, do not attempt to assemble the product. If any part is missing or damaged, please contact customer service

- Some parts may contain sharp edges. Wear protective gloves if necessary during assembly.
- When using power tools, please start with the minimum power setting to avoid potential damage to the parts.

Safety Guide

- For your safety and to reduce the risk of severe personal injury, the user must read and understand this Safety Guide.
- Assemble each piece only by following the instructions. Using tools or hardware not included in the original packaging, or improper assembly may cause the product to malfunction or create a risk of severe personal injury.
- Assemble on a flat and soft surface, such as carpeting, to avoid scratches or damage.

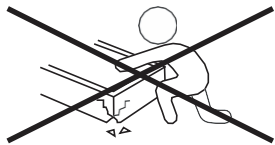

NOTICE

- Tighten all bolts and screws again within the first two weeks of assembly.
- Check the tightness of all bolts every two months; tighten them if necessary.

Care & Maintenance

- Fluff cushions regularly to maintain their shape and loft.
- Vacuum crevices weekly using a soft brush attachment to prevent dust and soil from settling into the fabric.
- Keep furniture out of direct sunlight and away from heat sources to prevent fading and deterioration.
- Spills should be wiped up immediately. Blot (do not rub) spills promptly with a clean, colorfast, absorbent cloth.
- Always pre-test cleaning agents in a small, inconspicuous area first.

Read & Save These Instructions Before Assembly

- Please separate and identify all parts, making sure you have all parts listed.
- To avoid scratches during assembly, please assemble on a soft mat or similar surface.
- Please assemble step by step and follow the instructions.
- Washers must be used.
- Do not fully tighten each screw and nut until all screws are properly aligned.

Return Policy:

- If you want to return the product, please contact us about return issue, make sure that the boxes packaging are complete, the product is not damaged, stained and not affecting secondary sales.
- Return product that do not use the original packaging may be rejected, and the pictures may be requested to offer.

Read & Save These Instructions Before Assembly


- Two adults are required for safe assembly.




Parts List

Carton	Part				Hardware			
BOX A	A	Backrest		1 PC				
	B	Right Armrest Frame		1 PC				
	C	Left Armrest Frame		1 PC				
	D	Left Armrest Sleeve		1 PC				
	E	Right Armrest Sleeve		1 PC				


1 Take the corresponding parts out of Box A.

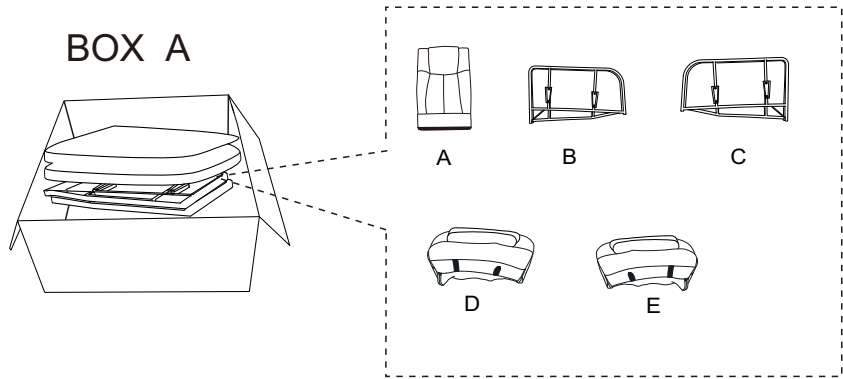


2 Take the corresponding parts out of Box B.
⚠ Caution: Cut the zip ties carefully to avoid personal injury.

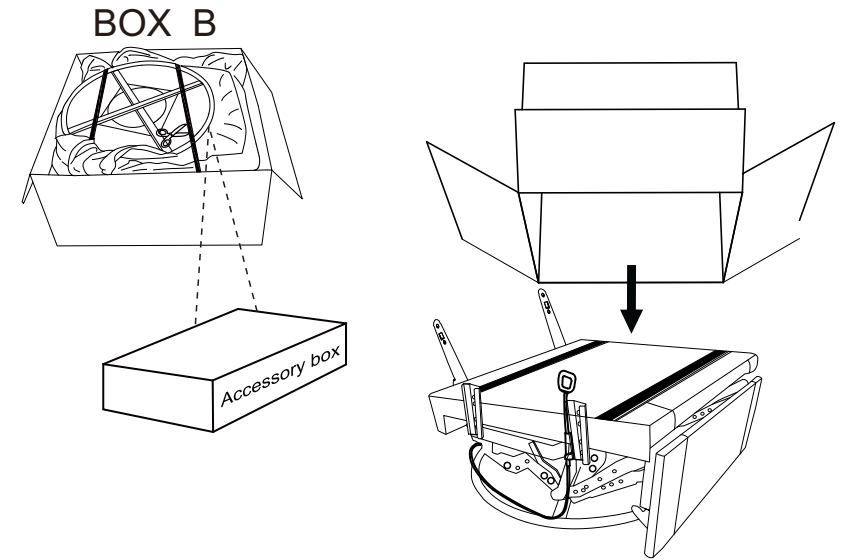


- 3** Pull the pull cord upward to unfold the footrest, then take out the corresponding parts under the footrest. Do not stand in front of the footrest to prevent injury from the popping-out footrest.

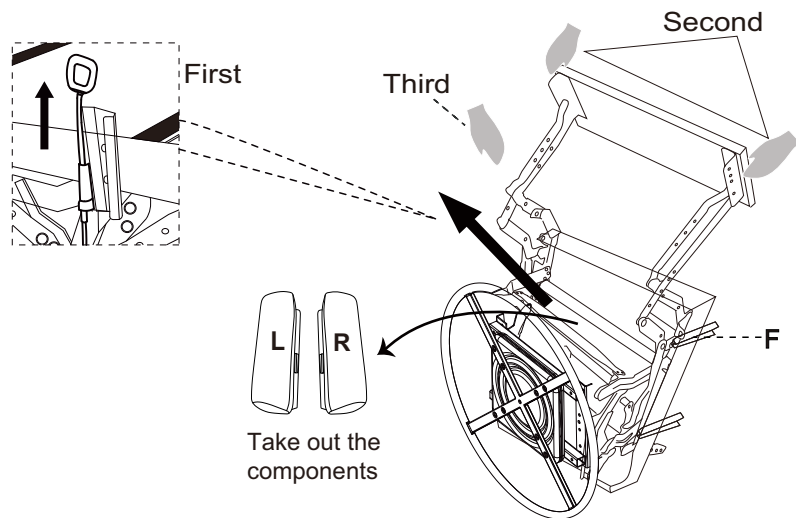


- 4** Unfold the armrest frame outward, then secure the connecting tube (G) to the corresponding position of the armrest frame.

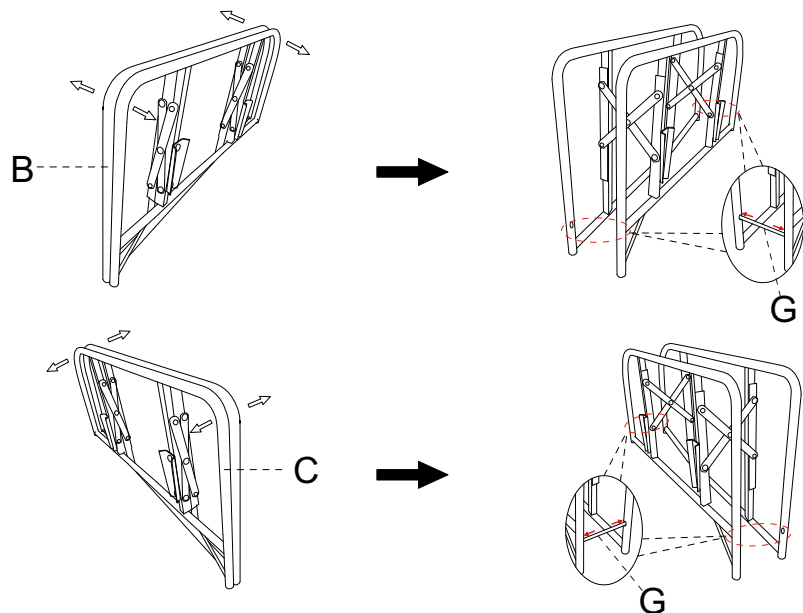


- 5** Slide the armrest sleeve(D) onto the armrest frame(B) and zip up the bottom zipper.

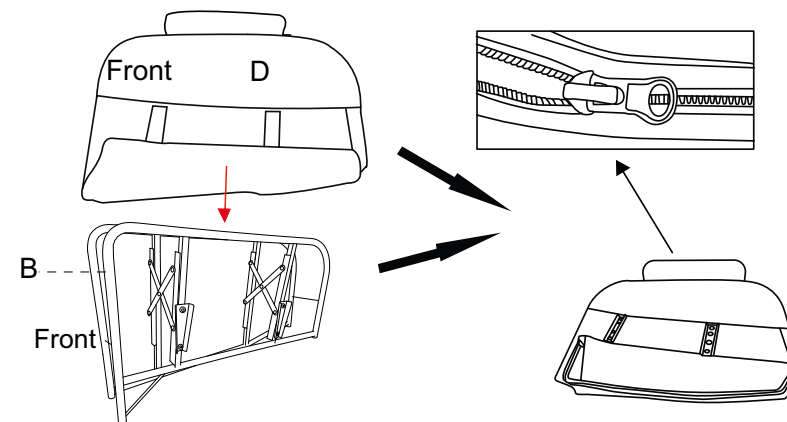


- 6** Slide the armrest sleeve(C) onto the armrest frame(E) and zip up the bottom zipper.

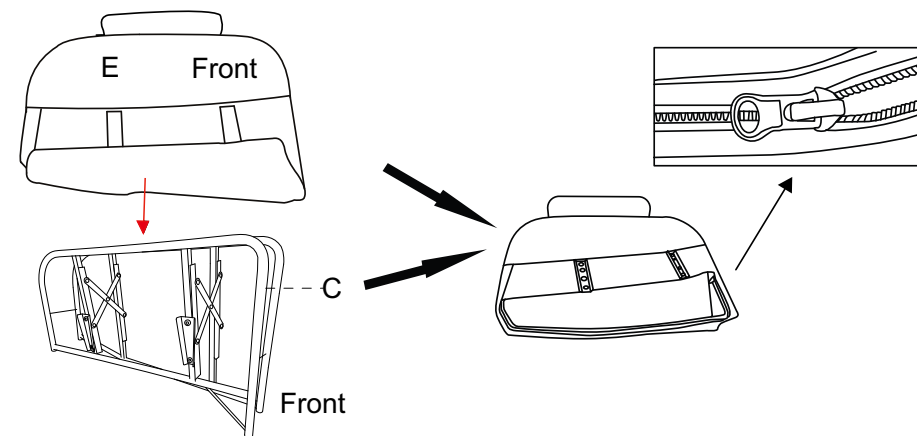


- 7** Insert the armrest frame into the tabs on both sides of seat base (F), then press down to secure.

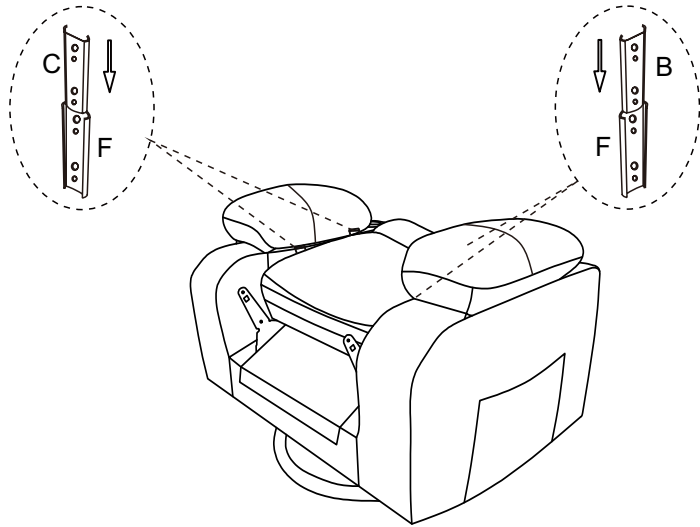


- 8** Insert the backrest (A) into the tabs of seat base (F), then press down to secure.

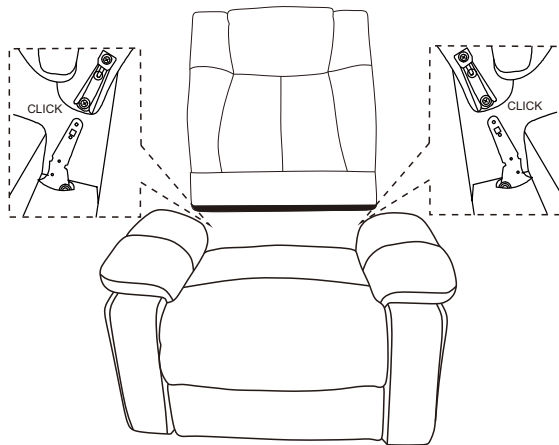


- 9** Insert the left & right back wings (H) into the tabs on both sides of backrest(A), then press down to secure.

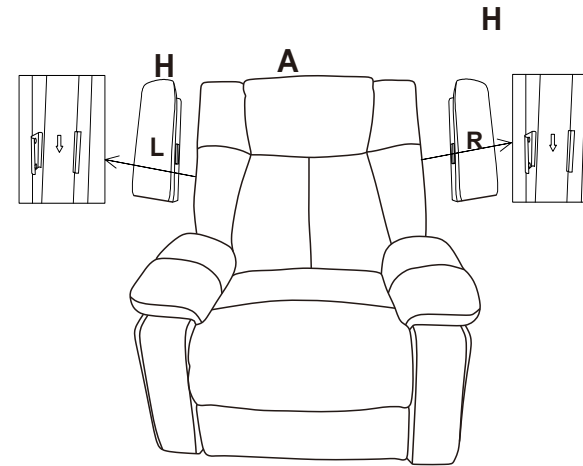


- 10** Insert the power supply as shown in the figure.

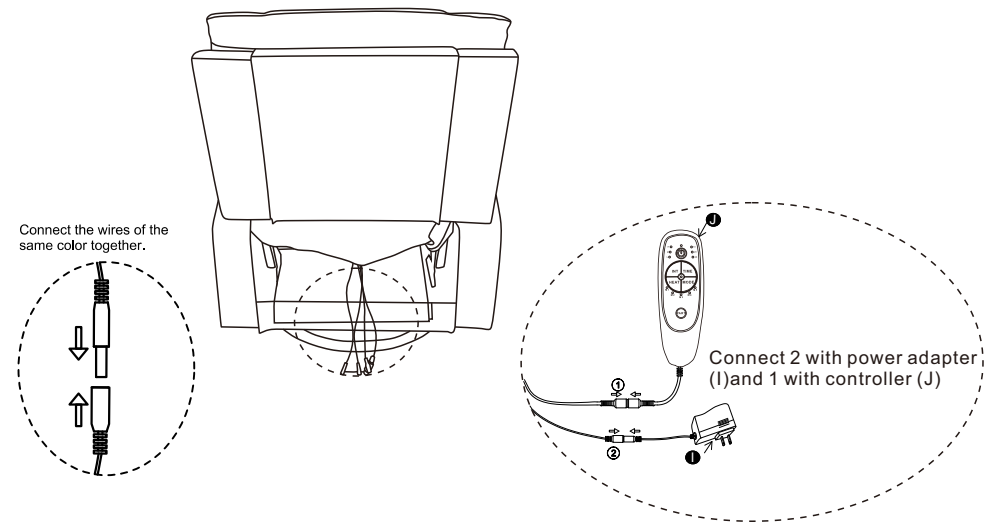

- 11** Secure the hook-and-loop tape of the bottom of backrest (A) onto the rear underside of seat base (F).

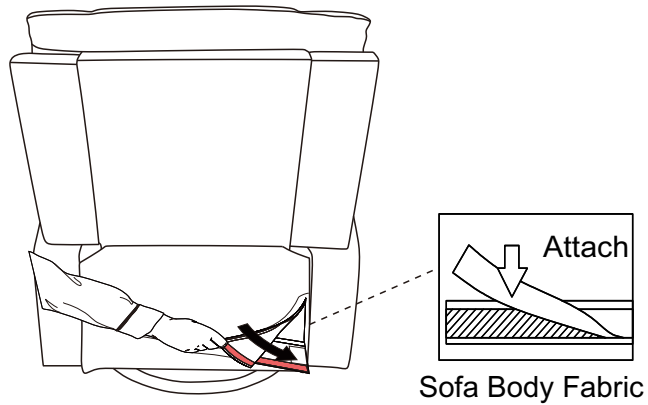



Function 1

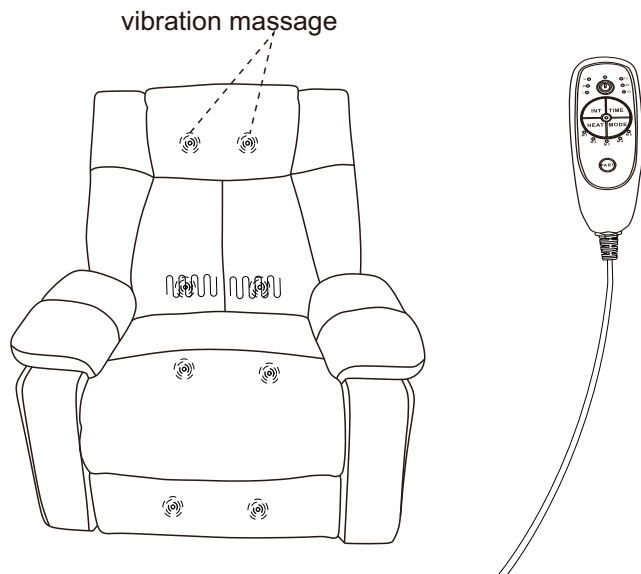


Function 2

Pull the handle to spread out the sofa

Use your legs to push the footrest back to its original position.

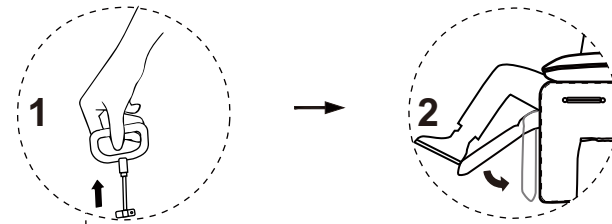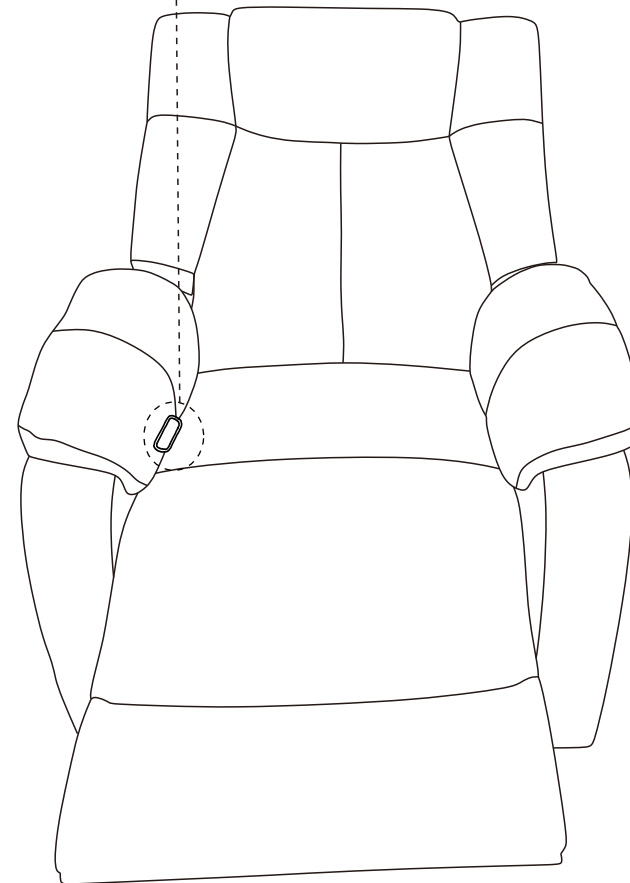


Function 3

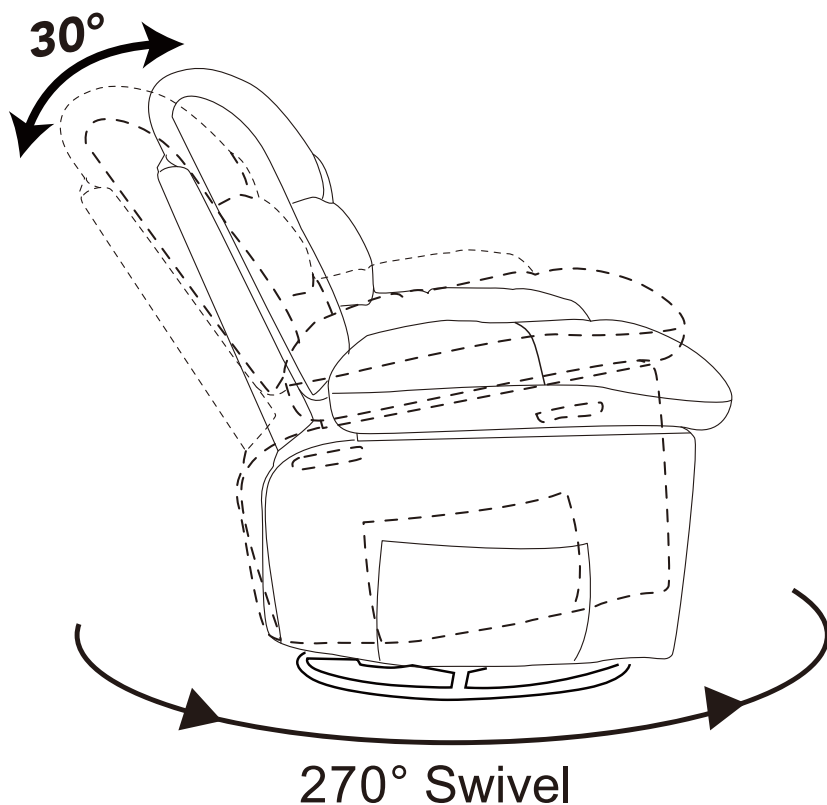

- Backrest reclines backward up to 30°
- Gentle horizontal rocking motion
- Swivel range: 270° when powered, 360° when unplugged
- Note: Reclining angle is not lockable

Massage Controller Detail View

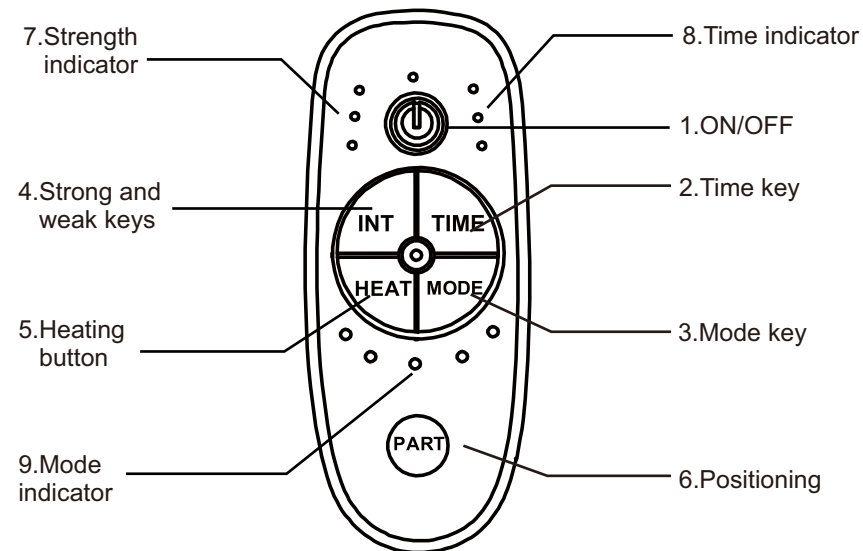

I 、 Specifications of power adapter

Power on in standby state. The user can realize the function through the hand controller control

Input :AC 100-240V, 50Hz/60HZ; Output: DC12V1A.

II 、 Product features

1. Motor vibration at position 8
2. 1-way heating plate
3. Three-segment timing, the default timing shutdown time is 10Min
4. 3rd gear vibration intensity
5. 5 vibration modes

III 、 Function details

1. ON/OFF: Switch on and of
2. TIME: Positioning cycle by massage time (10/20/30 min), Boot default 10min
3. MODE: Tap the five vibration modes to switch (M1/M2/M3/M4/M5),The default startup mode is M4
4. INT: Switch point by vibration intensity (H/M/L),Boot the default M file (medium Files)
5. HEAT: Click heating switch circulation
6. PART: Vibration positioning key, Boot the default vibration is full on, tap to switch to a single part vibration
7. Strength indicator
8. Time indicator
9. Mode indicator