



## READ BEFORE OPENING

**1** To begin enjoying your new Deco Home topper, simply remove plastic packaging with the provided easy opener. If using scissors, be careful not to cut through to the topper.

**2** Place topper on a flat surface in a well-ventilated room and allow 48 hours for expansion.



**3** After your topper is fully expanded, you may begin enjoying the benefits of your new topper.

Due to the unique properties of memory foam, dimensions after expansion may vary; this is normal and will not affect the performance of your new topper.

New memory foam may initially have a slight odor; it is completely harmless and will dissipate over a short time with regular use.

Discoloration to memory foam may appear over time due to oxidization. Oxidization is a natural process that occurs when memory foam is exposed to light and will not affect the performance of your topper.

[View this product on decogear.com](https://www.decogear.com)

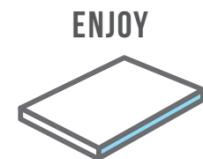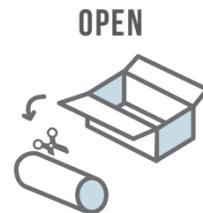

### Manufacturer's 1-Year Limited Warranty

The manufacturer warrants that all parts and components are defect free in materials and workmanship for 1 year. This warranty is valid only in accordance with the conditions set forth below:

1. The warranty extends only to the original consumer purchaser and is not transferable. In addition, proof of purchase must be demonstrated.
2. This limited warranty is the only written or express warranty given by the manufacturer. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited in duration to the duration of this warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.
3. This warranty gives you specific legal rights. You may also have other rights which vary by state

#### Procedure for Replacement or Return within the 1 Year:

To return the product for replacement or refund within the 1 year, the original purchaser must pack the product securely and send it postage paid with a description of the reason for replacement or refund, proof of purchase, and include your order number on the package, to the following address:

Deco Home  
80 Carter Drive  
Edison, NJ 08817