 
 






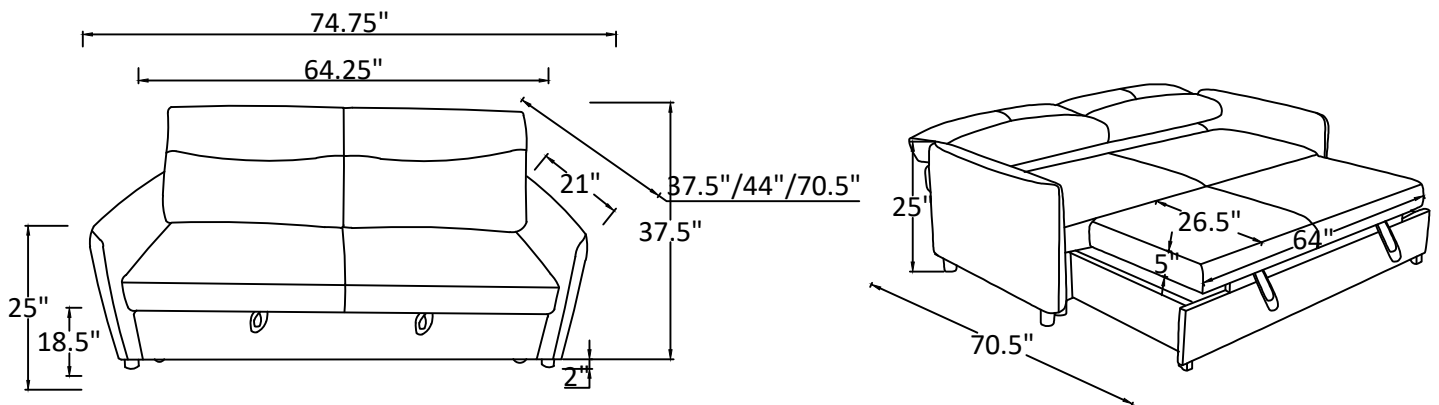


# ASSEMBLY INSTRUCTIONS



No.	Description		Qty	Ctn no.
#1	SOFA		1	1/1
#2	ARM		1	1/1
#3	ARM		1	1/1
#4	BackCushion		2	1/1

No.	Description	Size	Picture	Qty	Ctn no.
#A	leg	ø55*80MM		8	1/1
#B	Iron wheel	H80MM		4	1/1
#C	Washer	ø58mm		8	1/1
#D	Screw for leg	M5*25mm		16	1/1

## STEP 1


### TOOLS REQUIRED



2 -People  
Recommended




power tools  
(Not included)

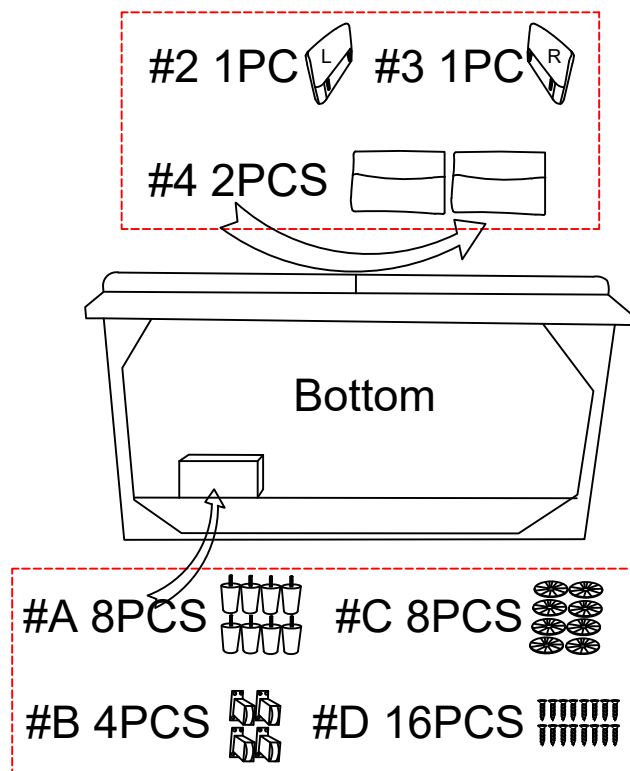


## STEP 2


Install the sofa legs at the positions marked on the bottom according to the signs and fix them with screws.

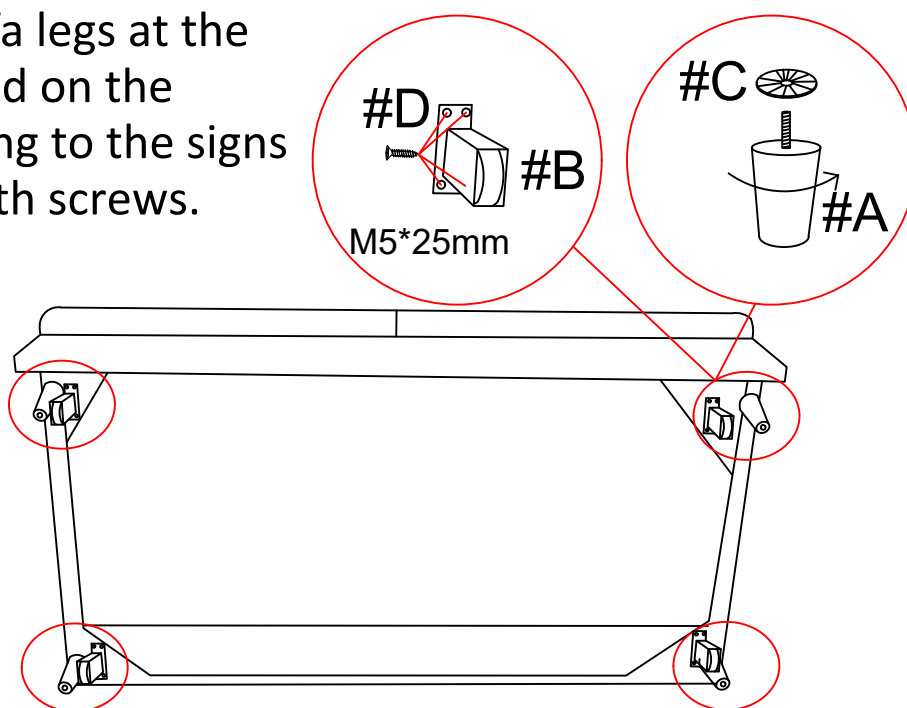


## STEP 3


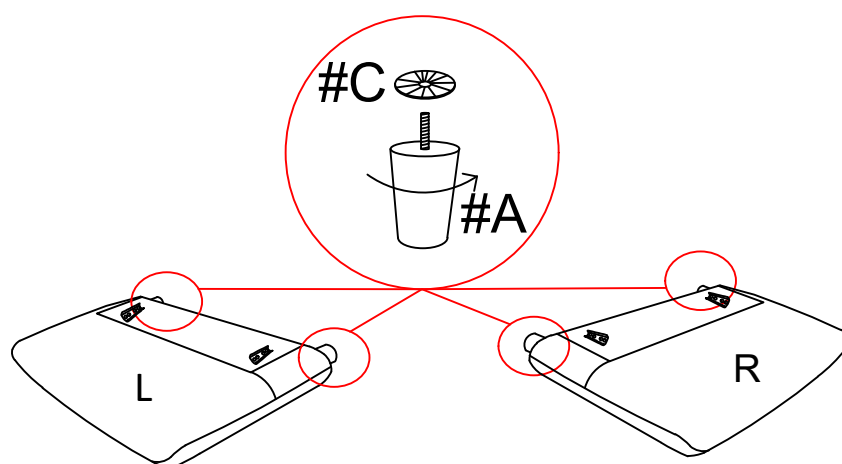


## STEP 4

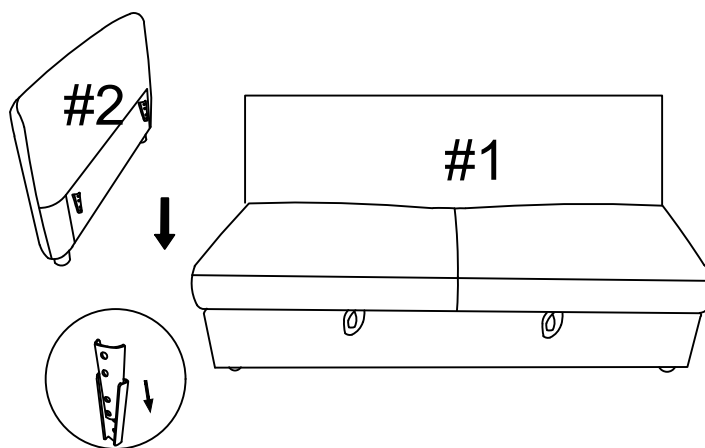

Stand on the side of the sofa. Grasp both sides of the sofa armrest with two hands. Align the bottom of the conical plug of the sofa armrest with the upper side of the conical plug on the side of the sofa. Look down. When the conical plugs are aligned, make sure that the conical plug of the sofa armrest can be inserted into the conical plug of the sofa from top to bottom. Press it to make it firm.

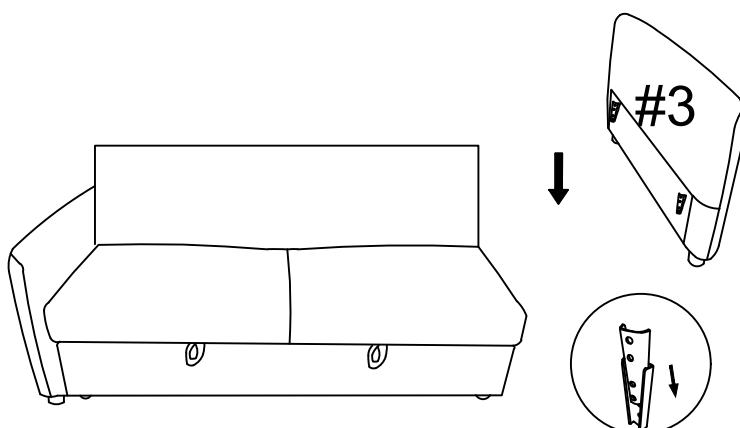


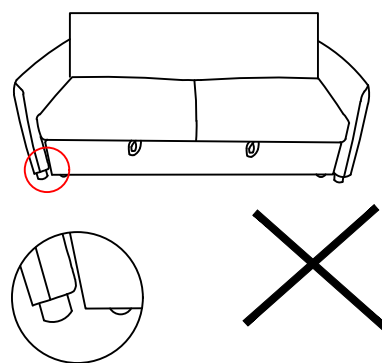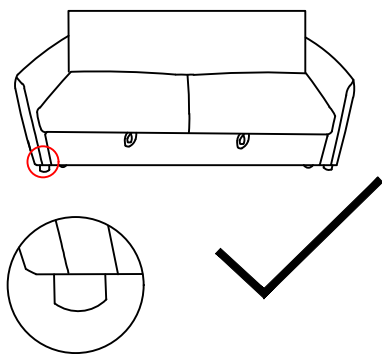

Be careful that the sofa legs should not be crooked and should be parallel to the ground.


## STEP 5

Put the sofa throw pillow in place.

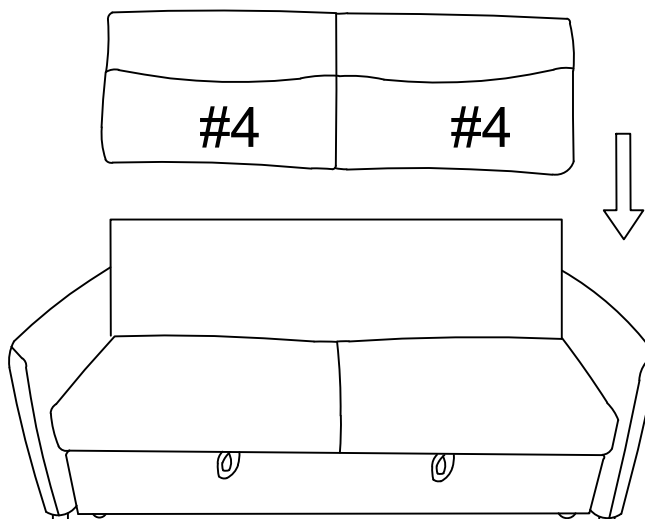


## STEP 6

As shown in the picture, you will get the assembled sofa.

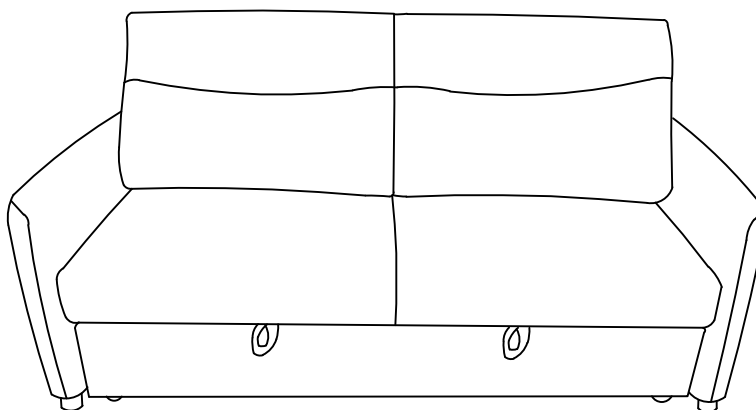


## STEP 7

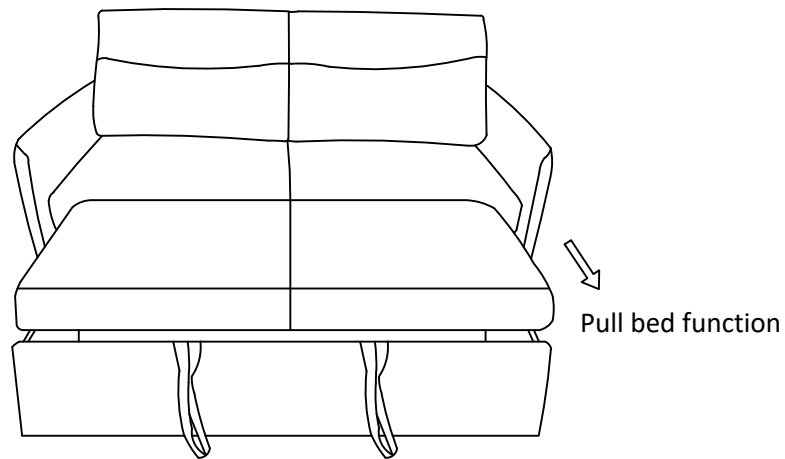

Grasp the pull strap with both hands and pull out the sofa bed horizontally. Then pull up the pull strap and lift and put down the sofa bed.

## STEP 8

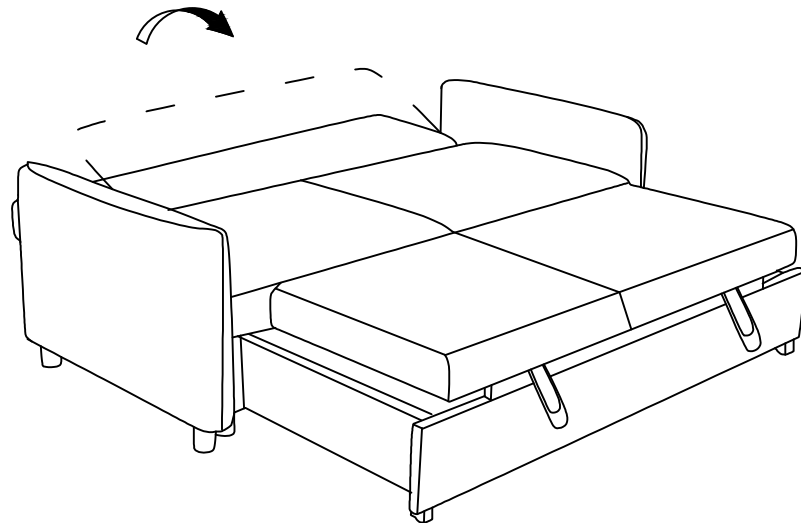

The backrest is adjustable. You can choose a comfortable angle and lift it up or put it down. When the backrest is lifted to the highest point, the gear can be reset.