
ASSEMBLY INSTRUCTIONS

TOOLS REQUIRED

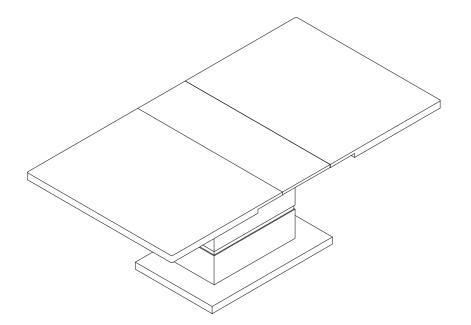

Socket Wrench

(Included)





2 - People Recommended

ASSEMBLY RATING







EASY ── DIFFICULT

The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.

Thank :	you f	or you	ur purc	hase!

We hope you enjoy this new addition to your home for many years to come.

Our commitment to providing quality products does not simply end when you purchase our product. We fully stand behind our products from start to finish.



Are you missing anything?		Check out our Quick Tips!
Double-check all parts, hardware and accessories listed on Page 6 are accounted for.		We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then!
Should we send any replacements?		Prep Time!
Are there any irregularities or flaws in the parts? We can send replacements!		Please review the assembly instructions and all diagrams prior to assembling. Arrange parts as recommended on Page 7 and group identical hardware together to make assembling easier.

PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.





Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.





Suitable Location

Assembling near the area of the intended location is highly recommended.





Sufficient Space

Make sure you have enough space to move around during the assembly.





Avoid Scratches

Use cardboard, blankets or a carpeted area while assembling furniture to prevent scratches.





Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

ASSEMBLY AND CARE ADVICE




FAILURE TO FOLLOW THE GUIDELINES BELOW MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.



Position each part correctly and insert screws or bolts into their respective holes.




Use the appropriate hand tools or power tools for assembly. Select steps, such as tightening screws and/or bolts, may require hand tools to avoid causing damage during assembly.

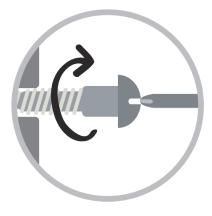

Turn clockwise to tighten and only tighten when step is completed or when instructed to do so.



Save the instructions and store any supplied tools for later maintenance.

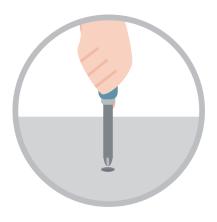


After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

DINING TABLE



- Please keep instructions for future reference.
- · Check the quantity and irregularity of parts and hardware before you start.

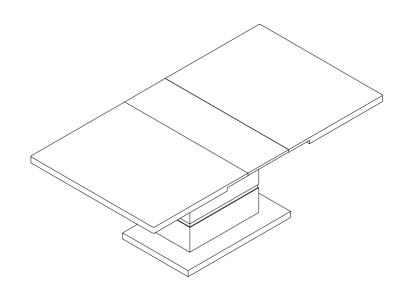

PARTS



1pc



Top Panel



1pc



Base





Bottom Panel

HARDWARE





4pcs



Rod 5/16" x 26-1/8"



Flat Washer





Nut M8



Socket Wrench M8







Adjustable Foot

packed in 2 cases

Carton	Designation	Part		Hardware	
	Top Panel	#1			#A x 4pcs #B x 4pcs #C x 4pcs #D x 1pc #E x 6pcs
	Base				
	Bottom Panel	#3			

ASSEMBLY INSTRUCTIONS

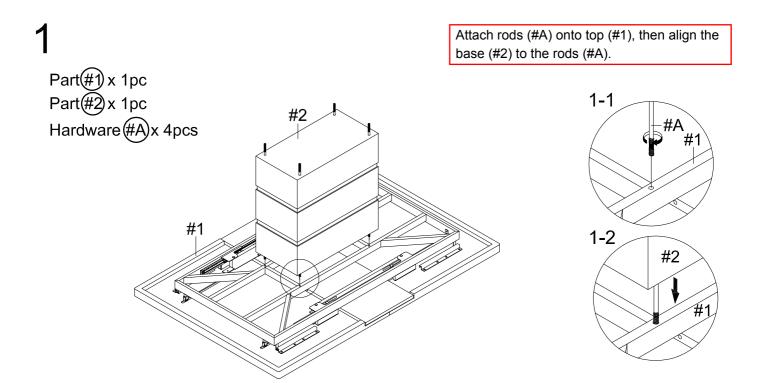

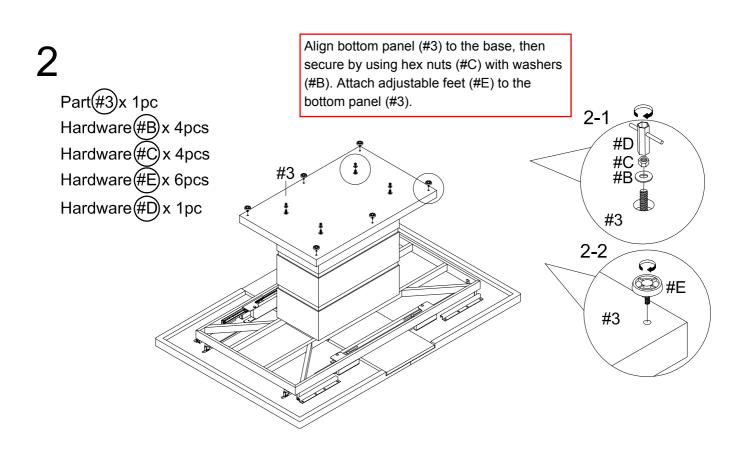

ASSEMBLY INSTRUCTIONS

