

Use and Care Instructions

Thank you for choosing Easy Goods Living furniture!

Wood is a natural material that changes and ages over time. Slight fading and small cracks are normal in the aging process and are not considered damage. With appropriate care and a stable environment, the appearance and life of your wooden furniture can be extended with proper care.

Surface Protection

Easy Goods Living furniture is protected with a high-quality polyurethane coating. This finish provides a highly durable barrier to many common elements, however any finish will breakdown from prolonged exposure or unusual abuse.

Cleaning

Always use a soft, clean cloth duly dampened in mild water to dust wood furniture and wipe according to the direction of the grain. Do not use soap and water directly to clean wood furniture, as the water will penetrate the surface and cause damage. Never use abrasive cleaners or household cleaning products on any finished product. In most cases, spills should be wiped up with a dry soft, clean cloth, wipe again with a damp clean cloth. Waxing and detergents are not required or recommended.

Furniture Care Tips

Do use table pads with trivets and/or placemats when utensils or dishes are extremely hot. Do use placemats or other protective items when eating or working on furniture surfaces.

Do use protective pads under clocks, telephones, radios, or any object placed on furniture.

Do lift objects carefully; do not drag them over the furniture's surface.

Do regulate humidity levels in your home. Do not use detergents or chemical cleaners on your furniture as this may damage the finish.

Do not write on thin paper over the surface of the furniture without a protective pad or other protective buffer.

Do not use polish remover, hair spray, or perfume near the furniture as this may damage the finish.

Do not use products containing silicone on the furniture.

Do not expose the furniture to strong sunlight, which causes discoloration.

Do not expose the furniture to extreme heat, cold, or humidity, which may cause the wood to swell or warp.

Do not leave the furniture wet or any water standing on the furniture.

General Warranty

Given proper care and correct use of our product we guarantee the finish color and construction integrity will maintain its natural functionality and luster for 3 years from the date of purchase. This excludes normal use and wear of the product such as scratches, water stains from cups and/or damage from improper care.