


Armless Home Office Chair




Parts list

(1) Aax1

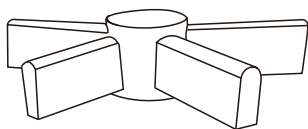


(2) Abx5

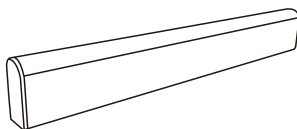


(3) Acx1



 
(4) Bx1




(5) Cx1

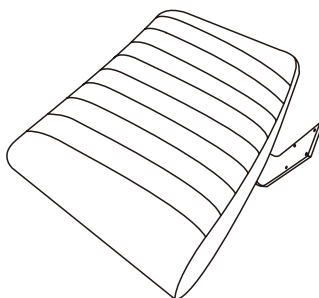


(6) D x1

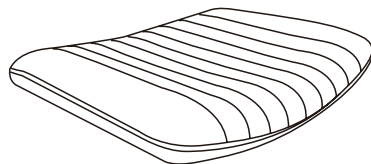

(7) E x1

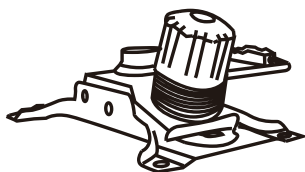

 (8) Gx1



(9) Hx4



(10)Ix9




(11)Jx5




Installation steps

①

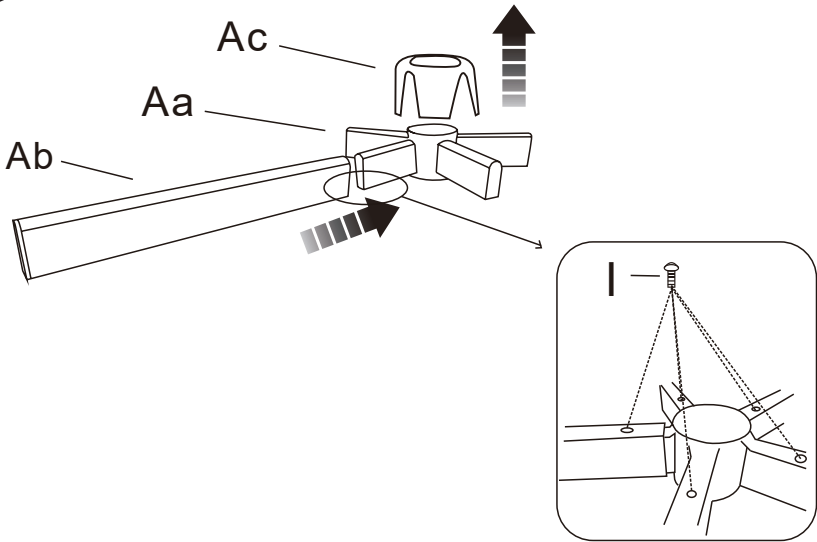


②

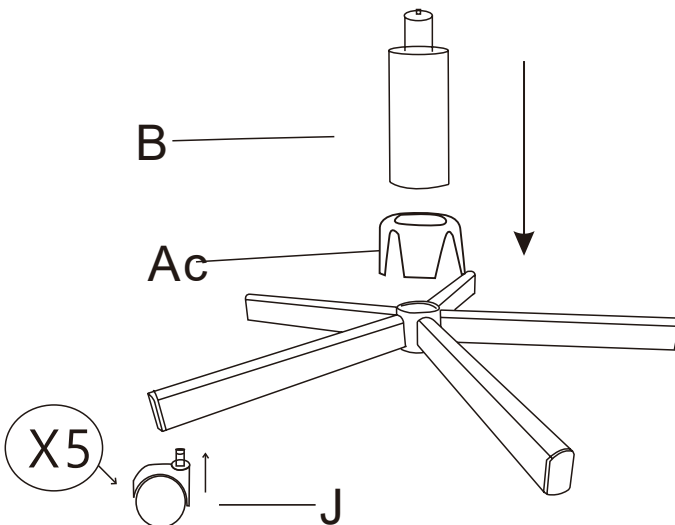


Installation steps

③

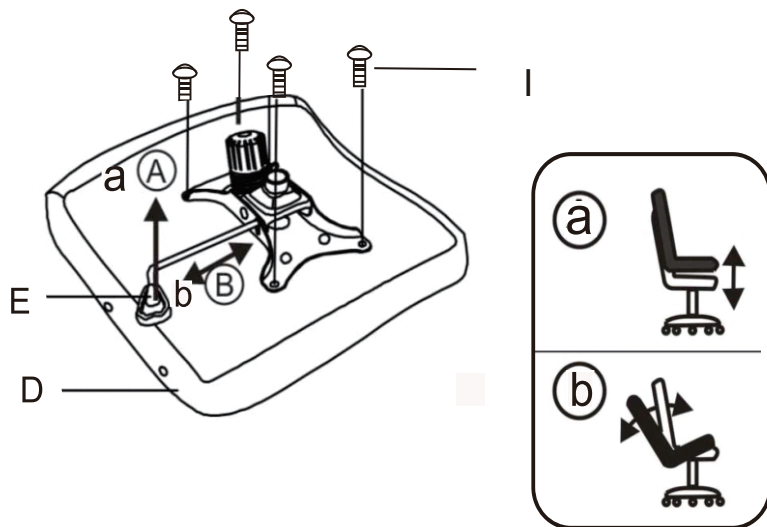

④

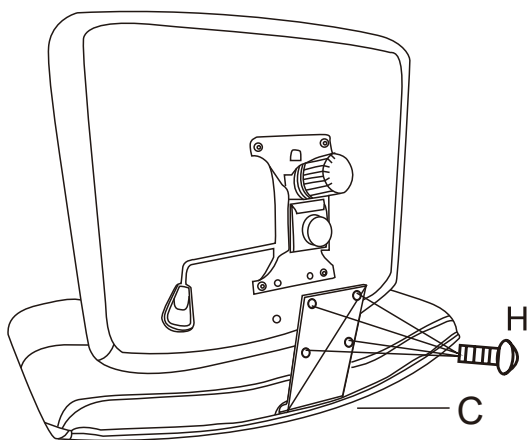

Installation steps

5



1.

Q: I found that there is a large gap between the chair cushion and backrest after I finished the installation, they are not aligned well, what should I do?

A: You can refer to step 3, loosen the screws first, then adjust the chair until the gap does not exist. Finally, lock the screws between the fixed chair cushion and seat back.

2.

Q: How to take off the protective cover on the gas lift?

A: The protective cover is difficult to remove due to transportation squeeze, thus you can try harder to take off it. If it doesn't work, you can use tools to cut it down, but please be careful, prevent hurt yourself and the inner part of gas lift.

3.

Q: What to do if the chair makes a noise?

A: The chair noise is due to the mechanism. When the chair noise occurs, you can first try to pull out the lever under the cushion to unlock the chair, the chair noise will disappear. If the noise is still there, please contact us and we will send you a new replacement part.

4.

Q: The chair doesn't stay at the height I want, and sunk when I sit on it. What should I do?

A: This problem can be solved by replacing the gas lift. Please find our, we uploaded the video of gas lift moving process (named: remove the gas lift). If you can't solve the problem even with the help of the video, please contact us and we will send you a new replacement part.