 



TV STAND

ASSEMBLY INSTRUCTIONS

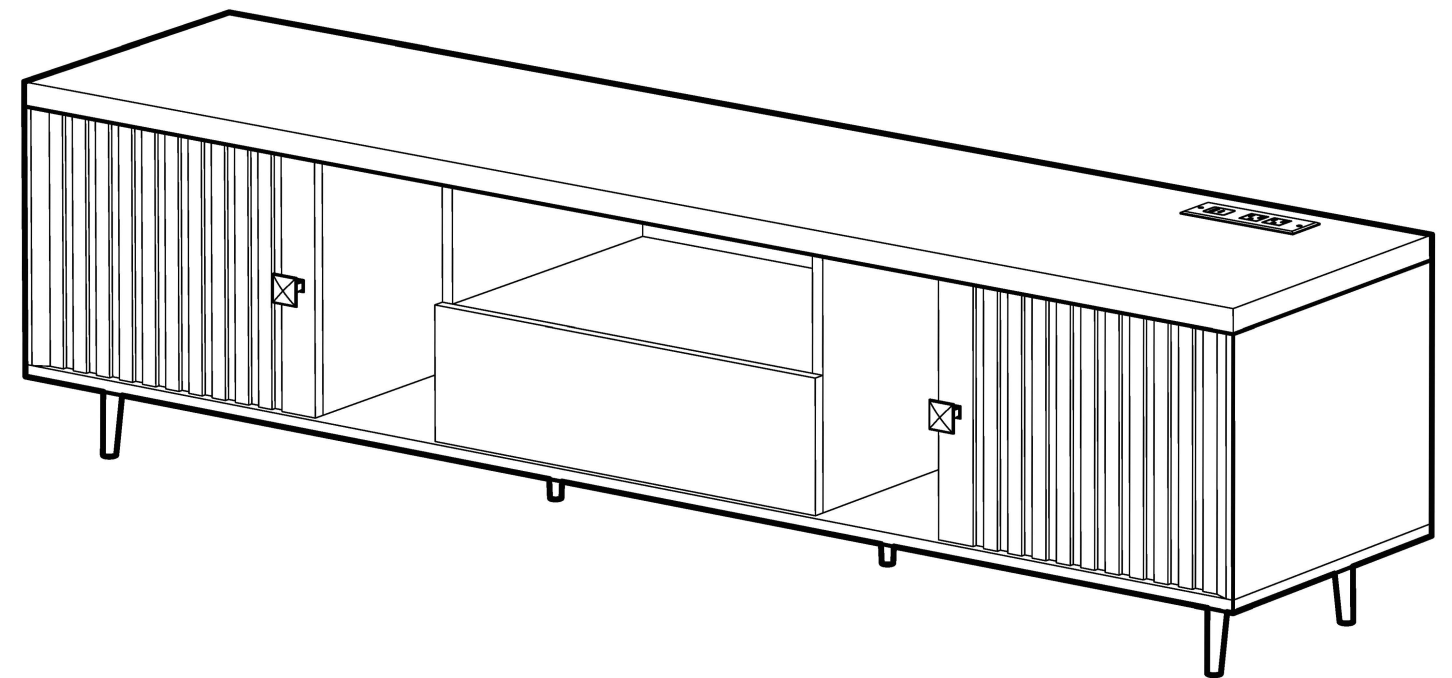


24/7
Service

 
Any other questions, contact us via email. We provide 24/7 online service with dedicated one-on-one expert support for all your inquiries.

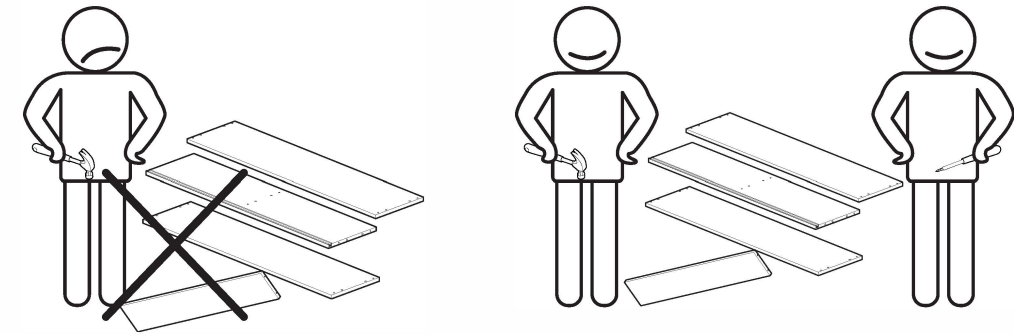

 We recommend at least 2 people for the assembly.

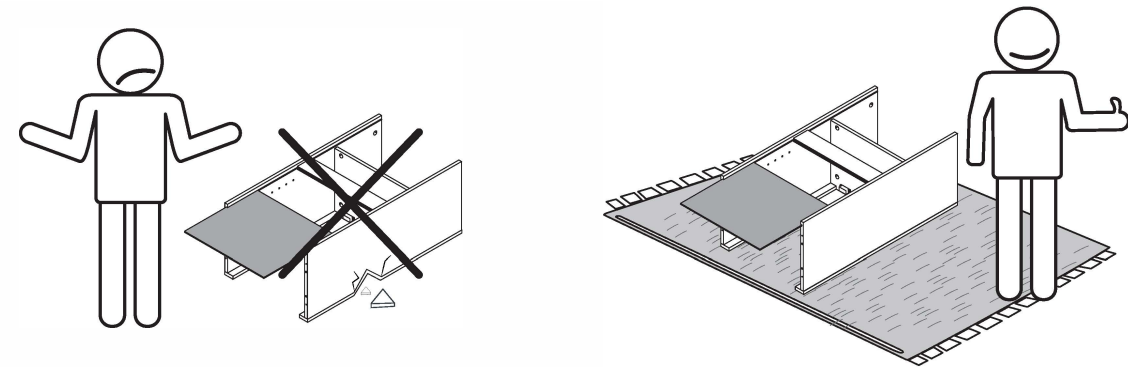

 To prevent any damage during assembly, place a mat under the pieces.

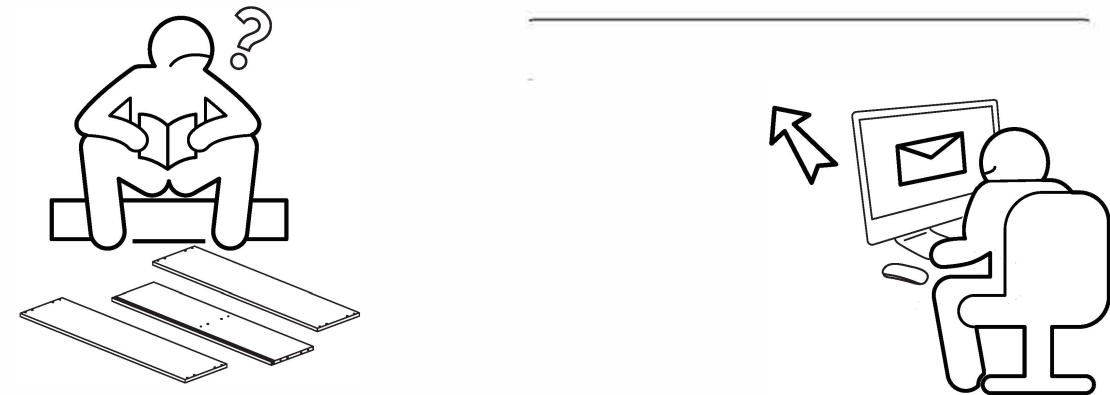


⚠ Warning	Flammable, please keep away from open flames!
⚠ Warnung	Entflammbar, bitte von offenen Flammen fernhalten!
⚠ Attention	inflammable, veuillez tenir à l'écart des flammes nues !
⚠ Attenzione	infiammabile, tenere lontano da fiamme libere!
⚠ Advertencia	Inflamable, mantener alejado de fuego!
⚠ Waarschuwing	Ontvlambaar, uit de buurt van open vuur houden!
⚠ Ostrzeżenie	Produkt łatwopalny, trzymać z dala od otwartego ognia!


PARTS DIAGRAM



Check if all parts and hardwares are included. Contact us via **email** if there is any part missing or damaged.

  HARDWARES

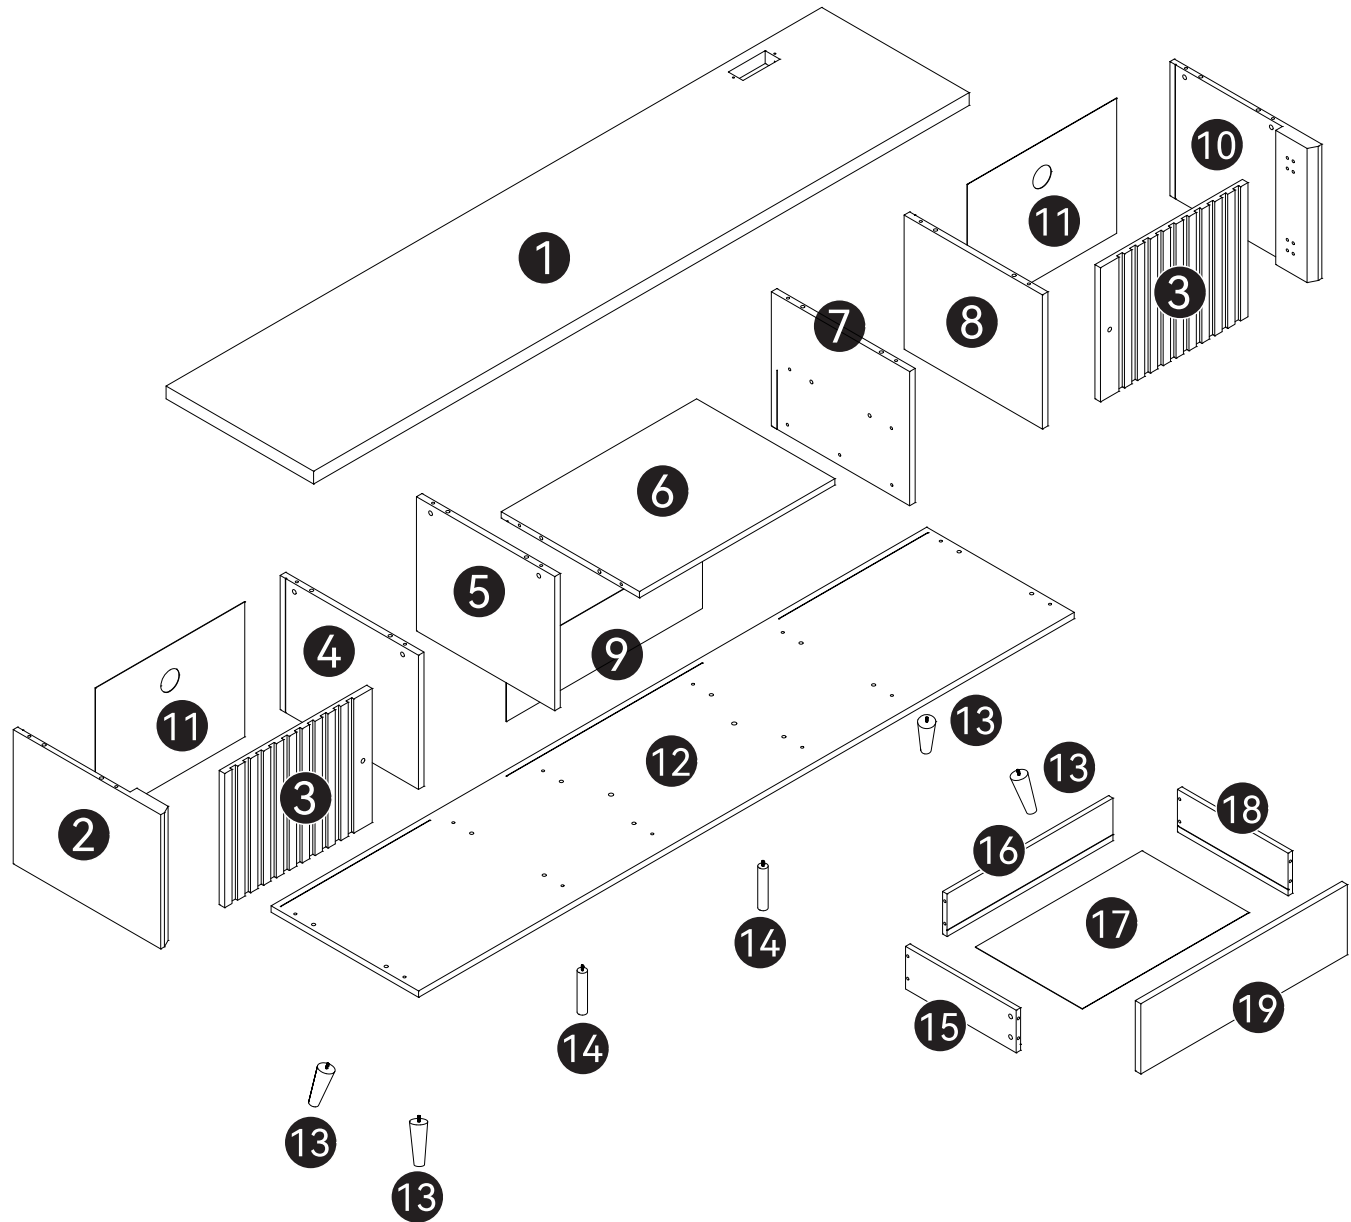


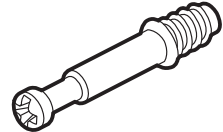

M6x35mm
A x 20



 
M15x9.5mm
B x 20

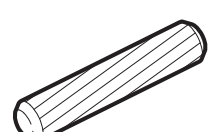

M6x30mm
C x 28



 
M4x12mm
D x 24

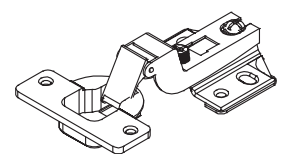

E x 4



 
M4x30mm
F x 4



G x 2



 
M4x20mm
H x 2

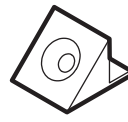

I x 12



 M3x16mm
J x 12



K x 4



L x 2



M4x12mm
M x 28



 
M4x40mm
N x 12



M3.5x12mm
O x 2




S x 4

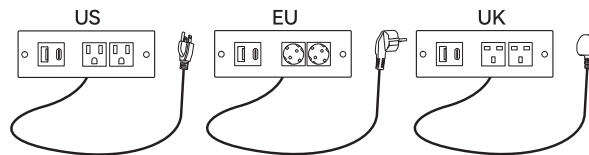


US EU UK
The product comes with a plug that varies by market.
The one actually received shall in kind prevail.
P x 1



 
M3.5x12mm
Q x 12

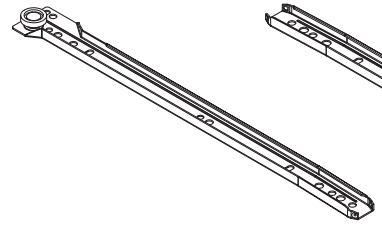


CL x 1

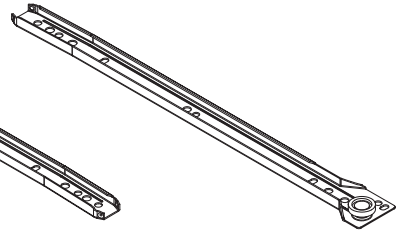 


CR x 1

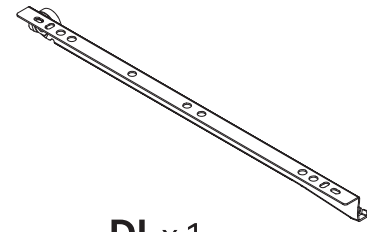 


DL x 1

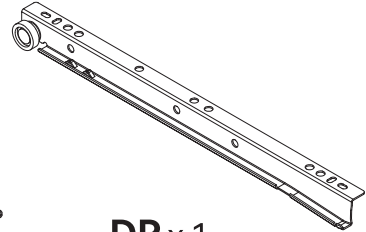 

DR x 1

 


R x 2

 

Double Ended Screwdriver
x 1

SPARE PARTS

 
 The spare parts are the additional parts provided in case of missing or damaged ones. Keep the spare parts and tools for future use.

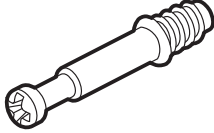

M6x35mm
A x 2



 M15x9.5mm
B x 2

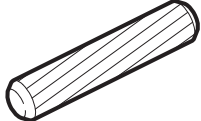


M6x30mm
C x 2



M4x12mm
D x 2



 M4x12mm
M x 2

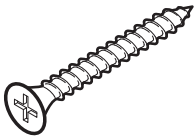

M4x40mm
N x 1



M3.5x12mm
Q x 1

 
 


S x 1


CAM LOCK FASTEN SYSTEM

 Insert the cam bolt into the hole, then insert the cam lock and tighten.


1

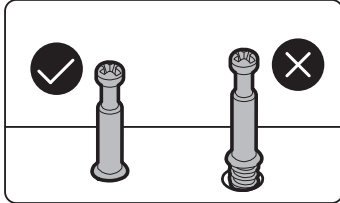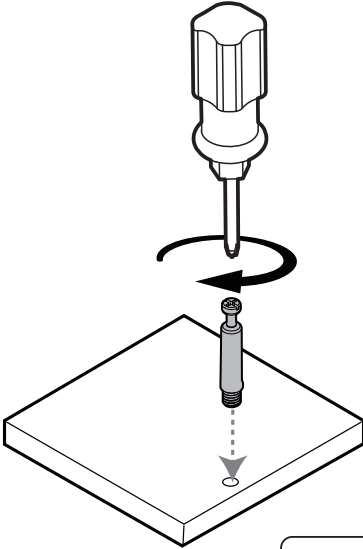

2


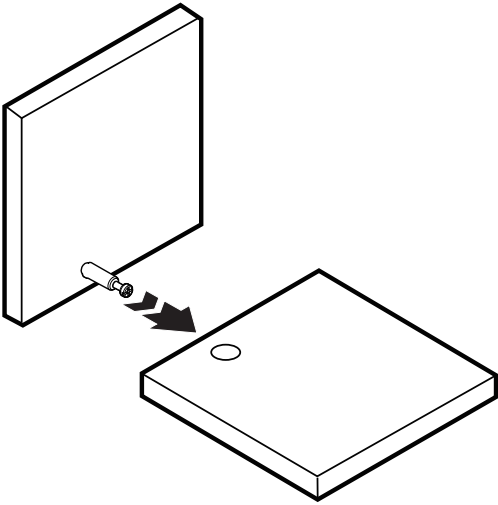 



3

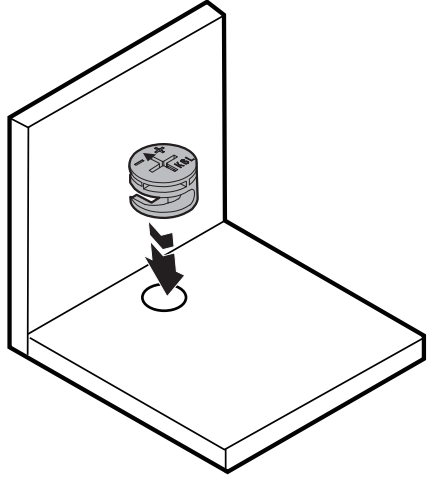 

 Point the opening towards the edge of the board.

 
 
 
4

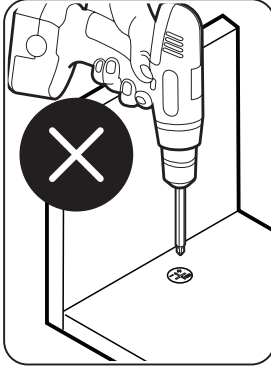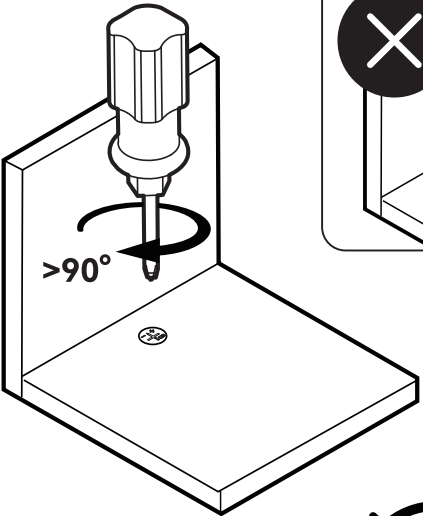





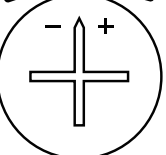
UNLOCK  LOCK

ASSEMBLY

 
 
 
1

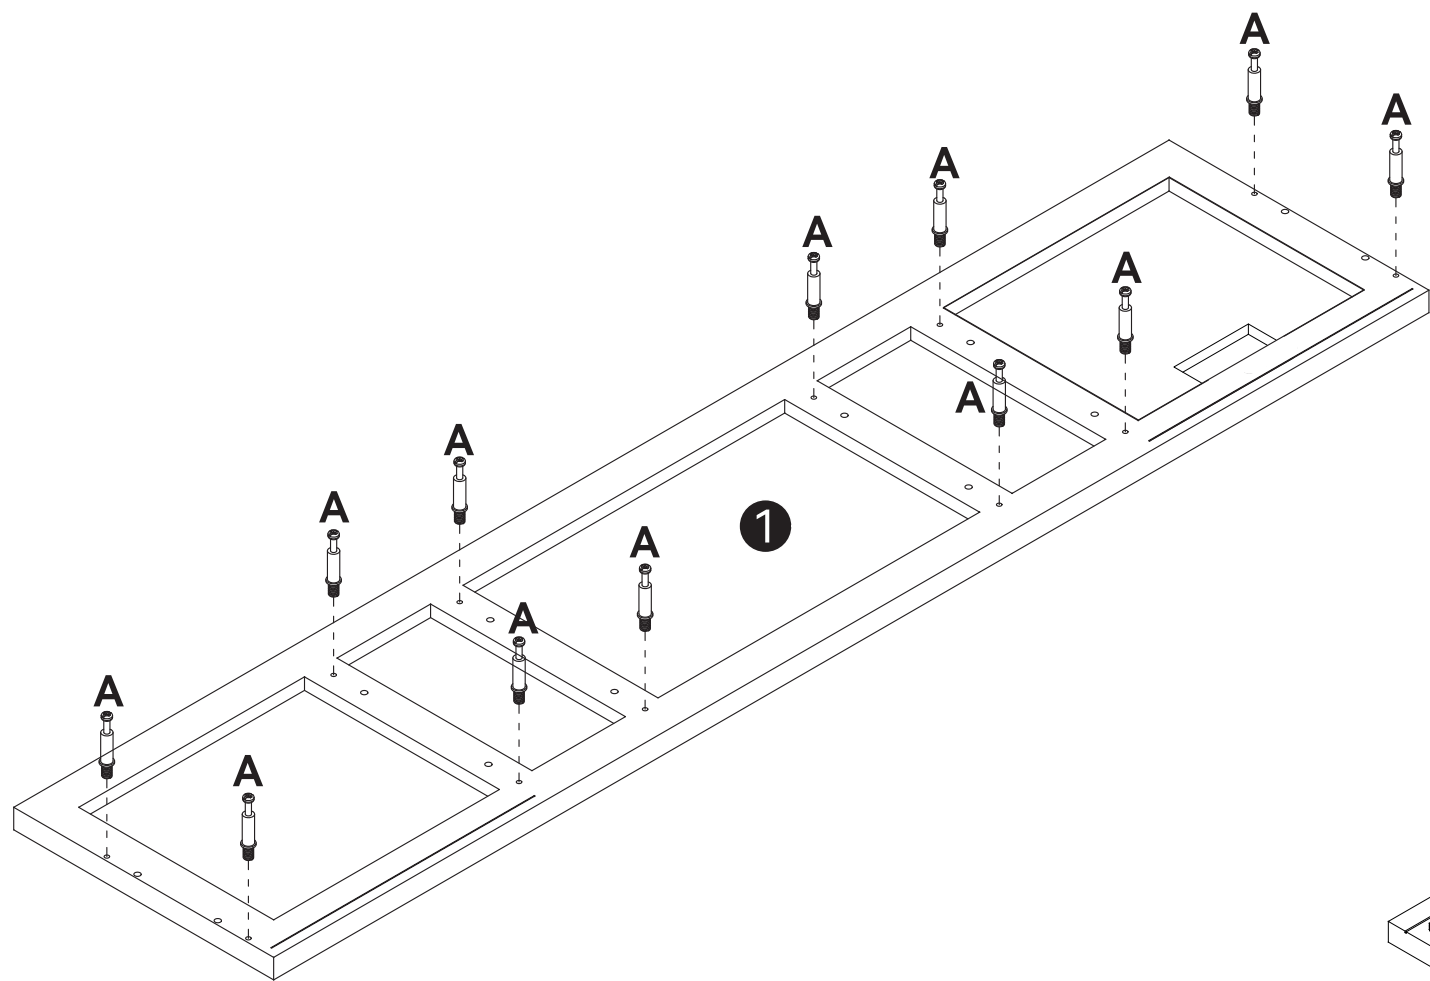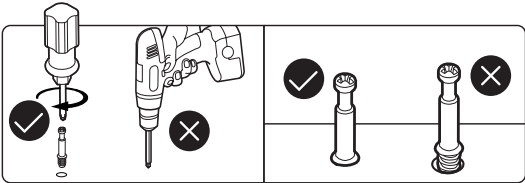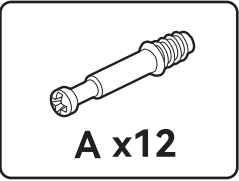




2

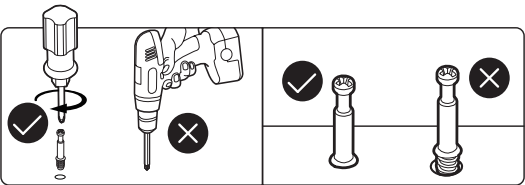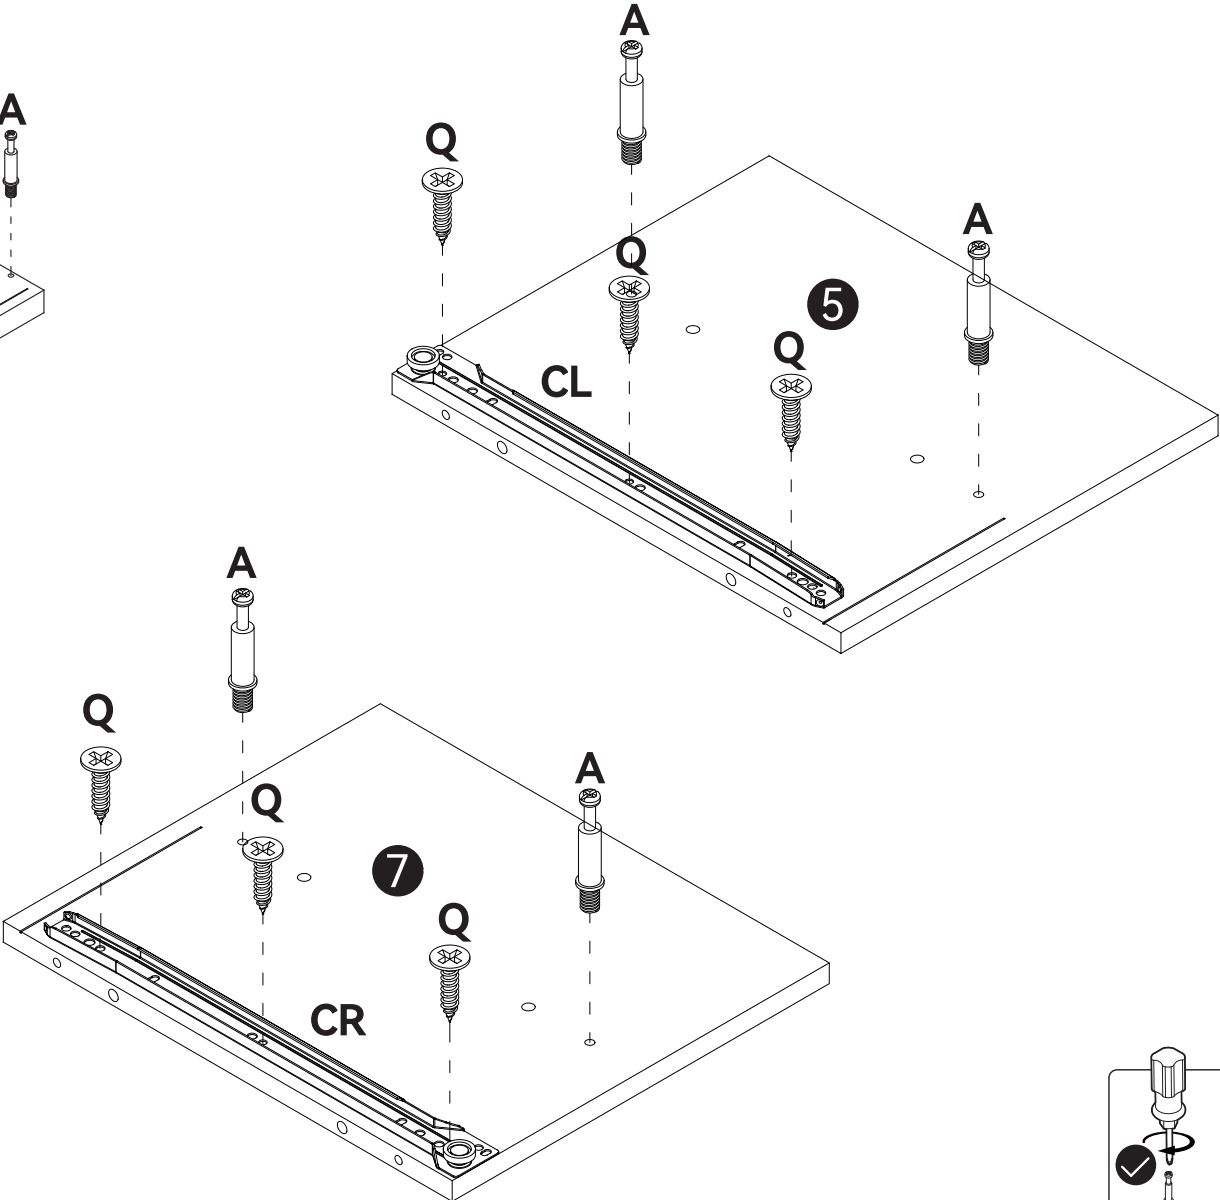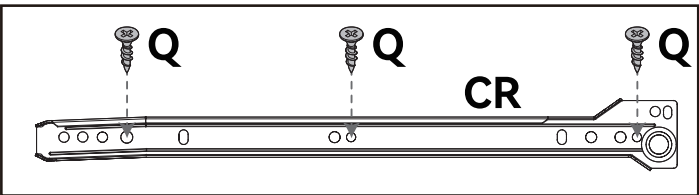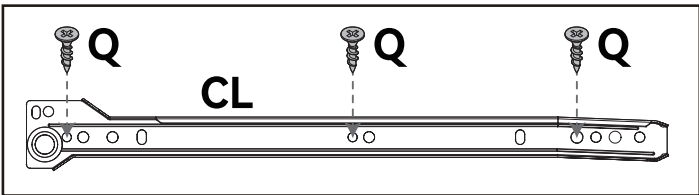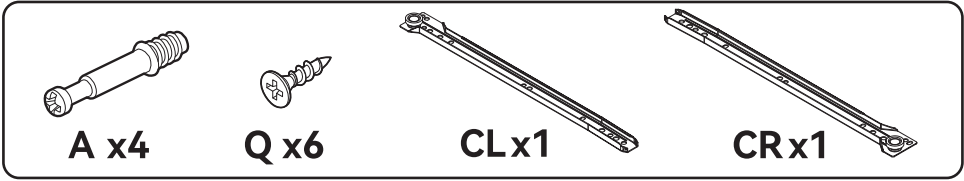     




3

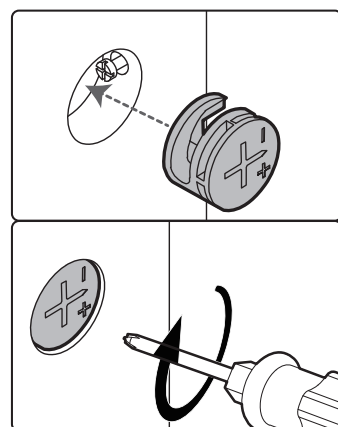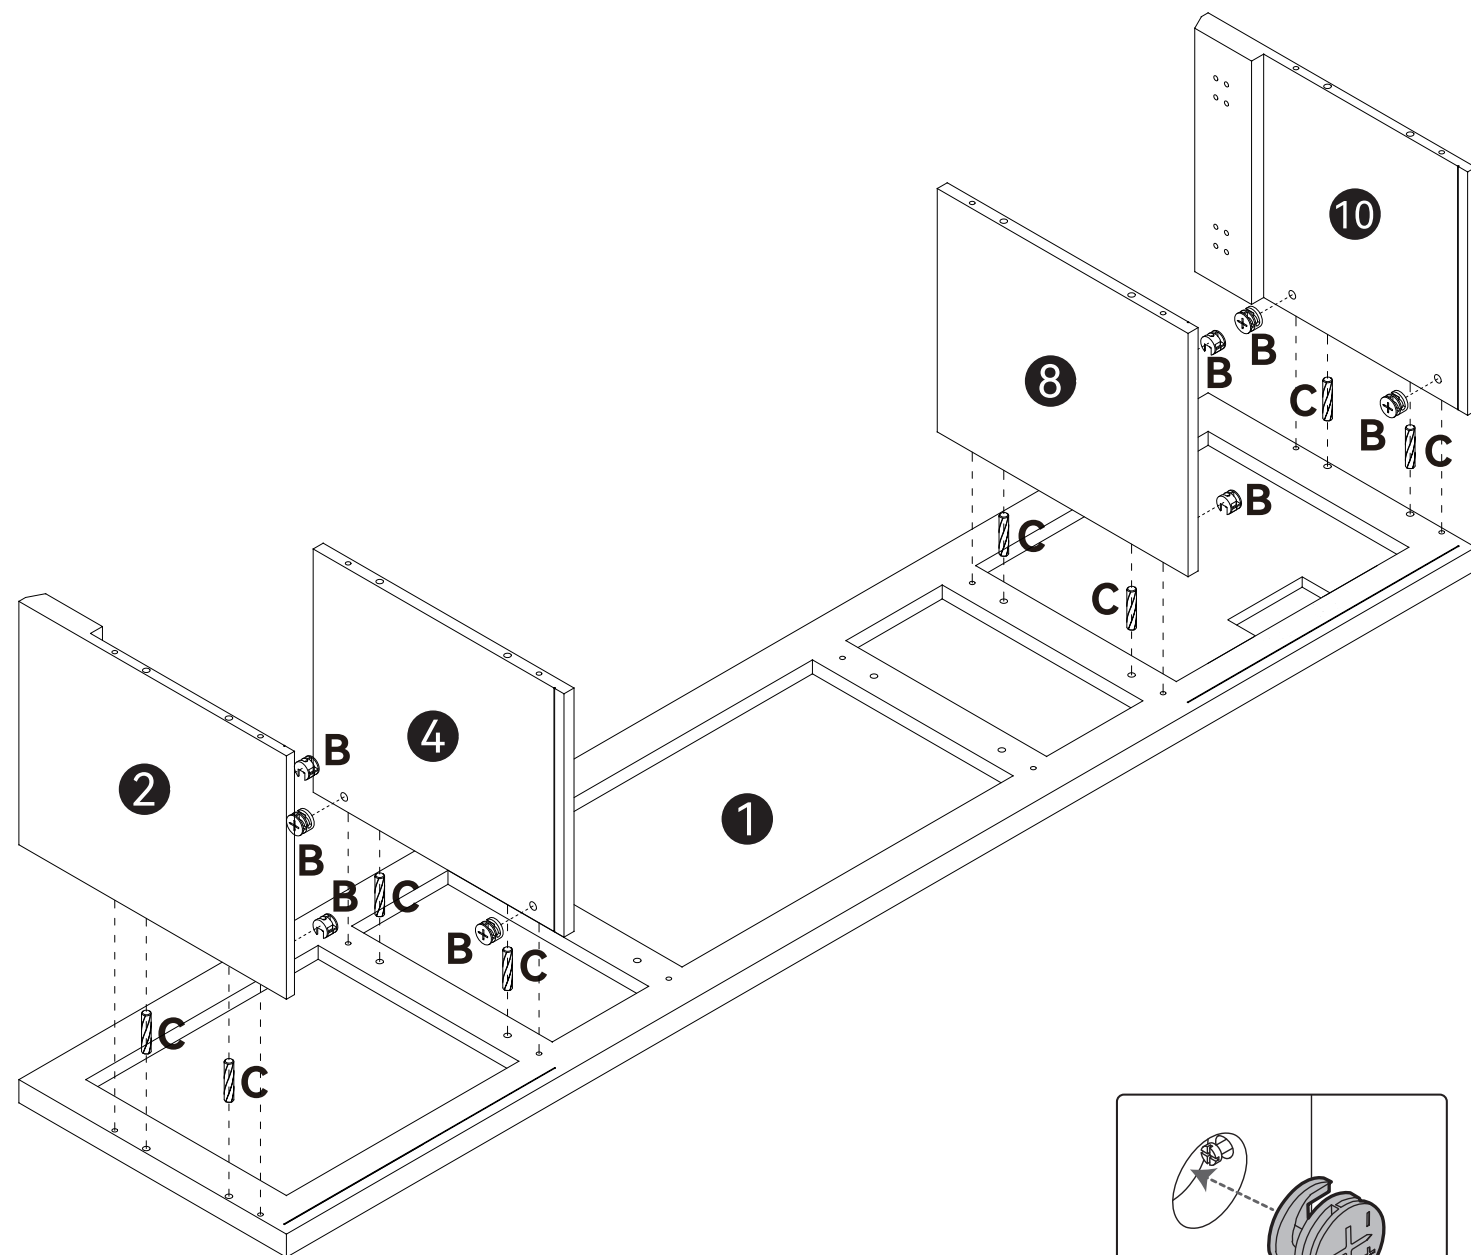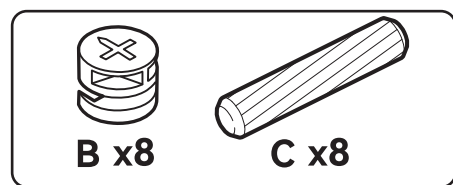   



4

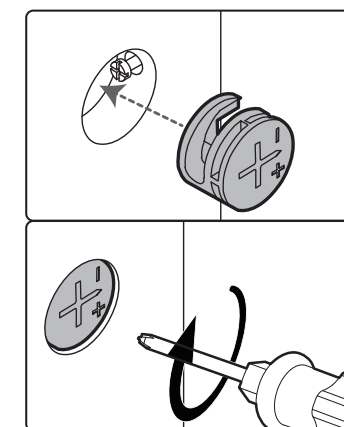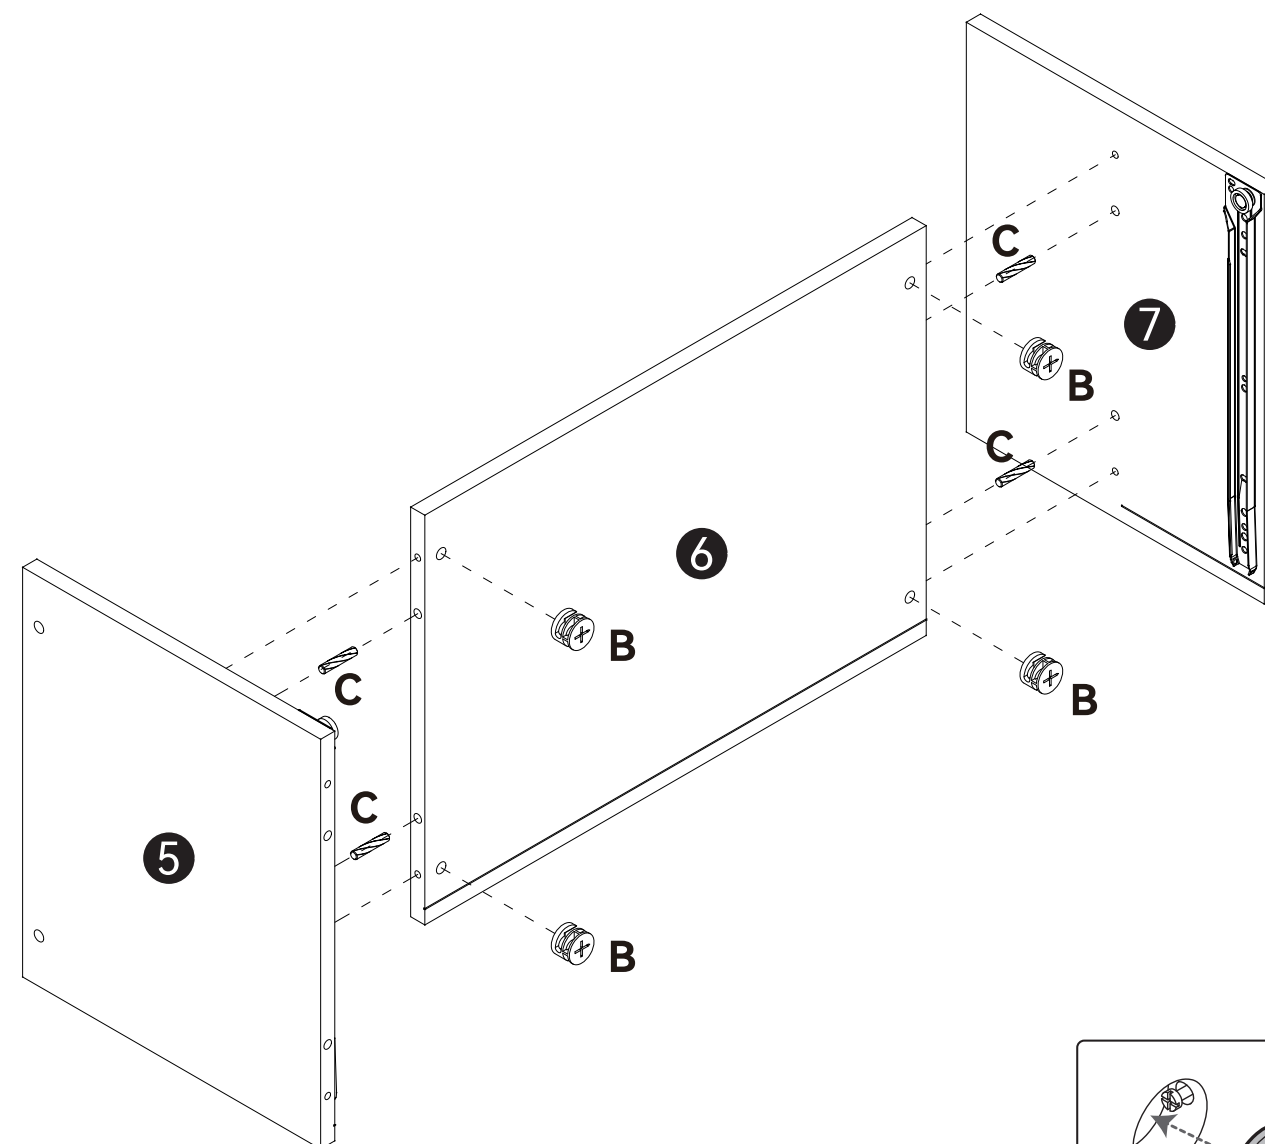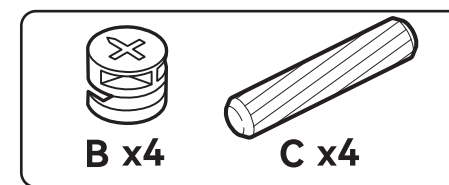   



5

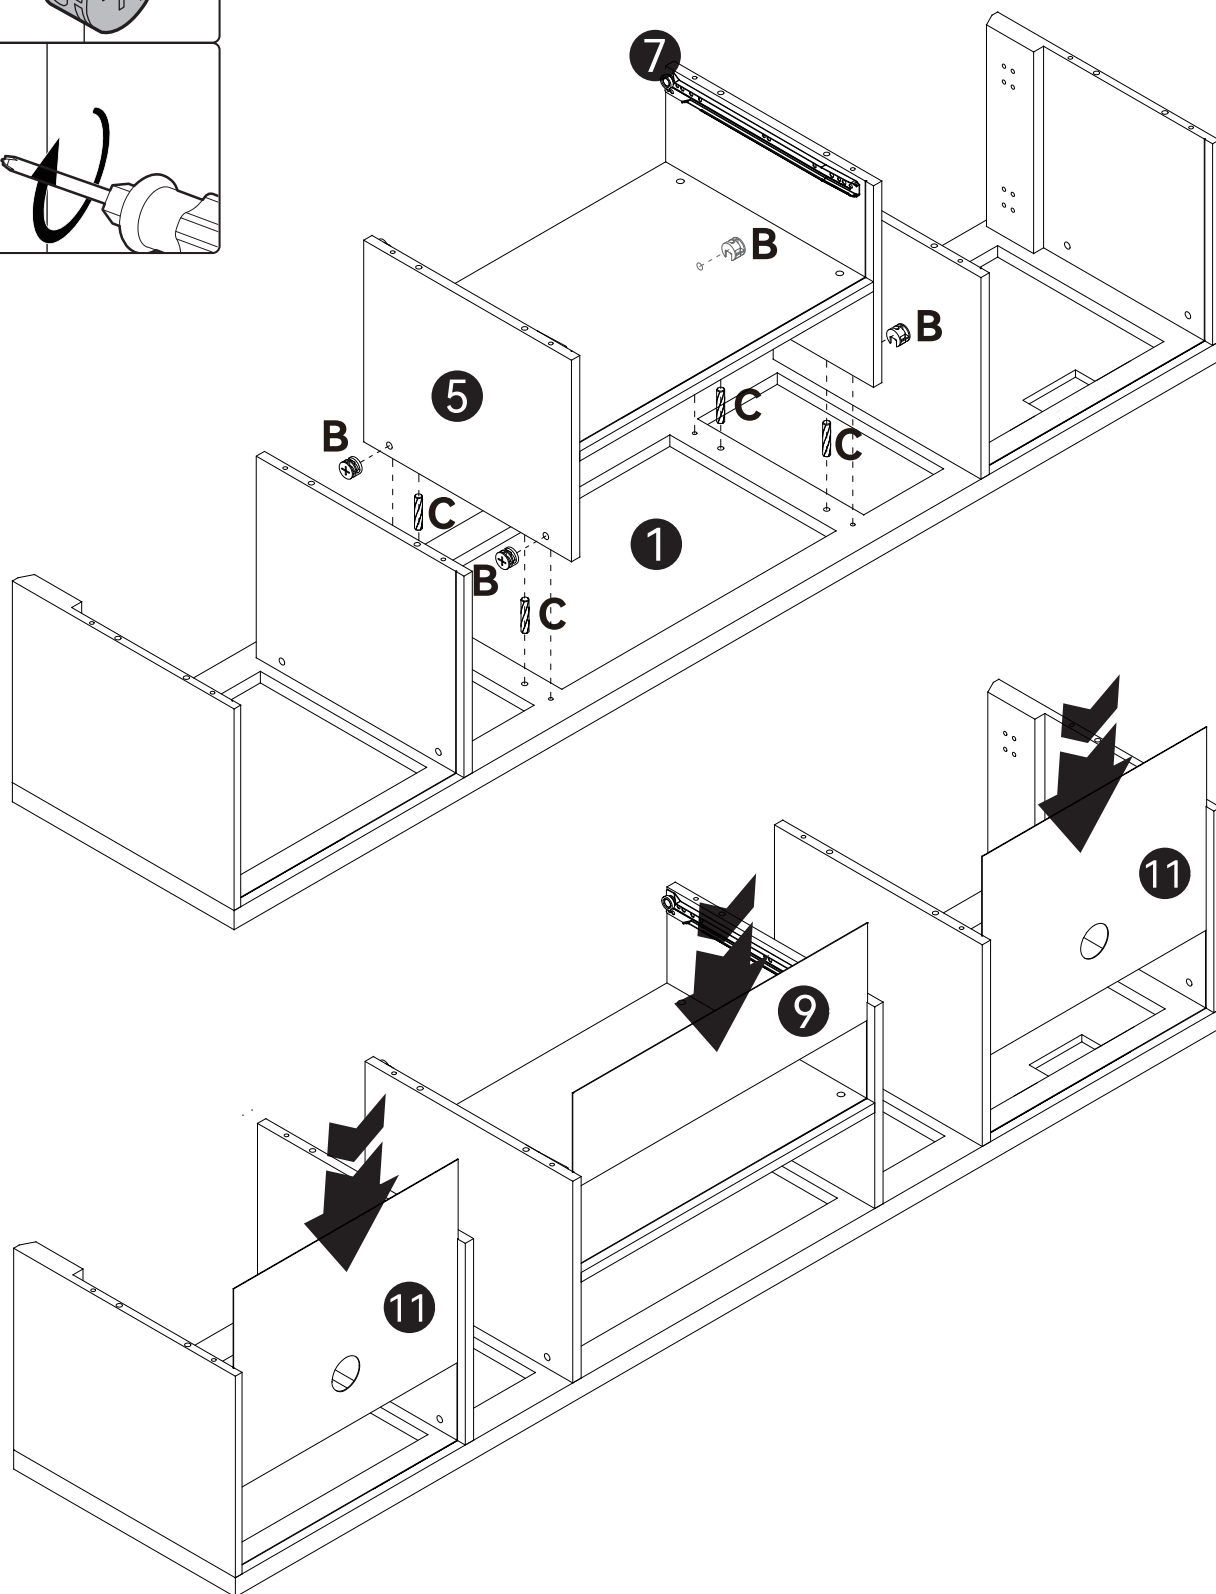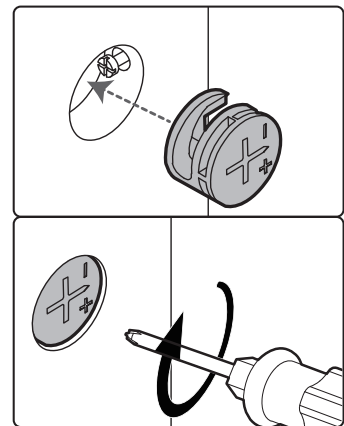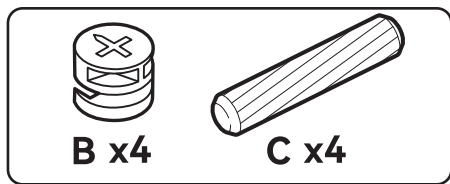   



6

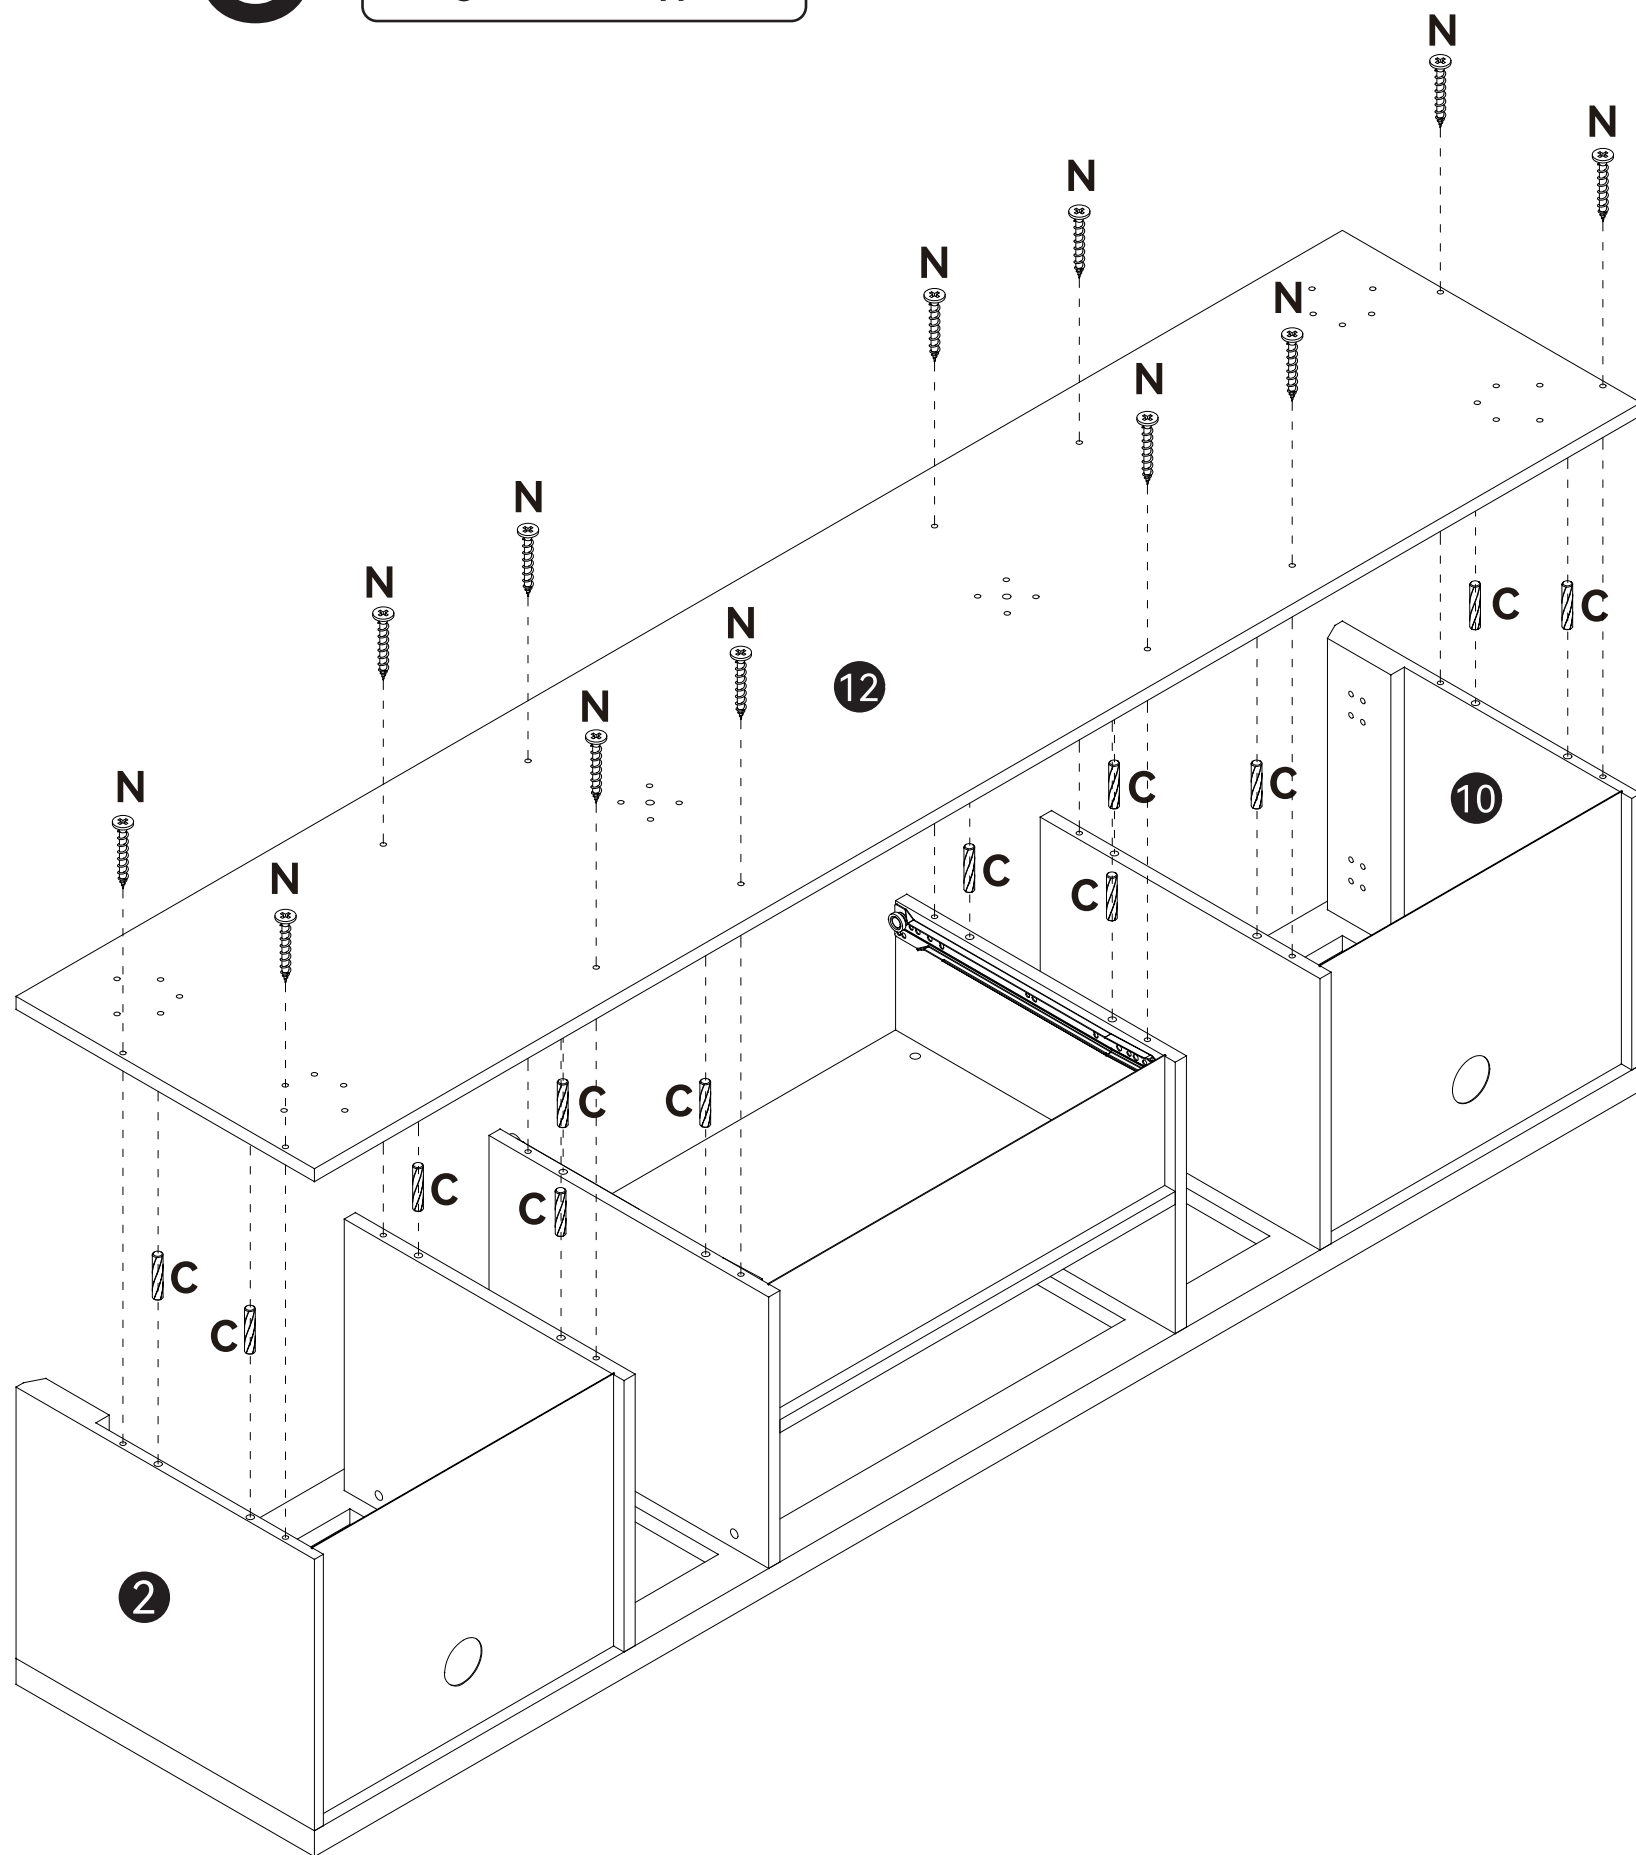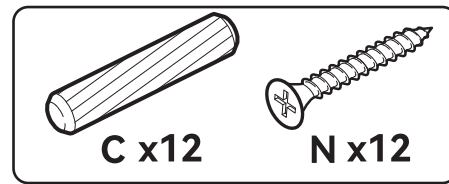  




7

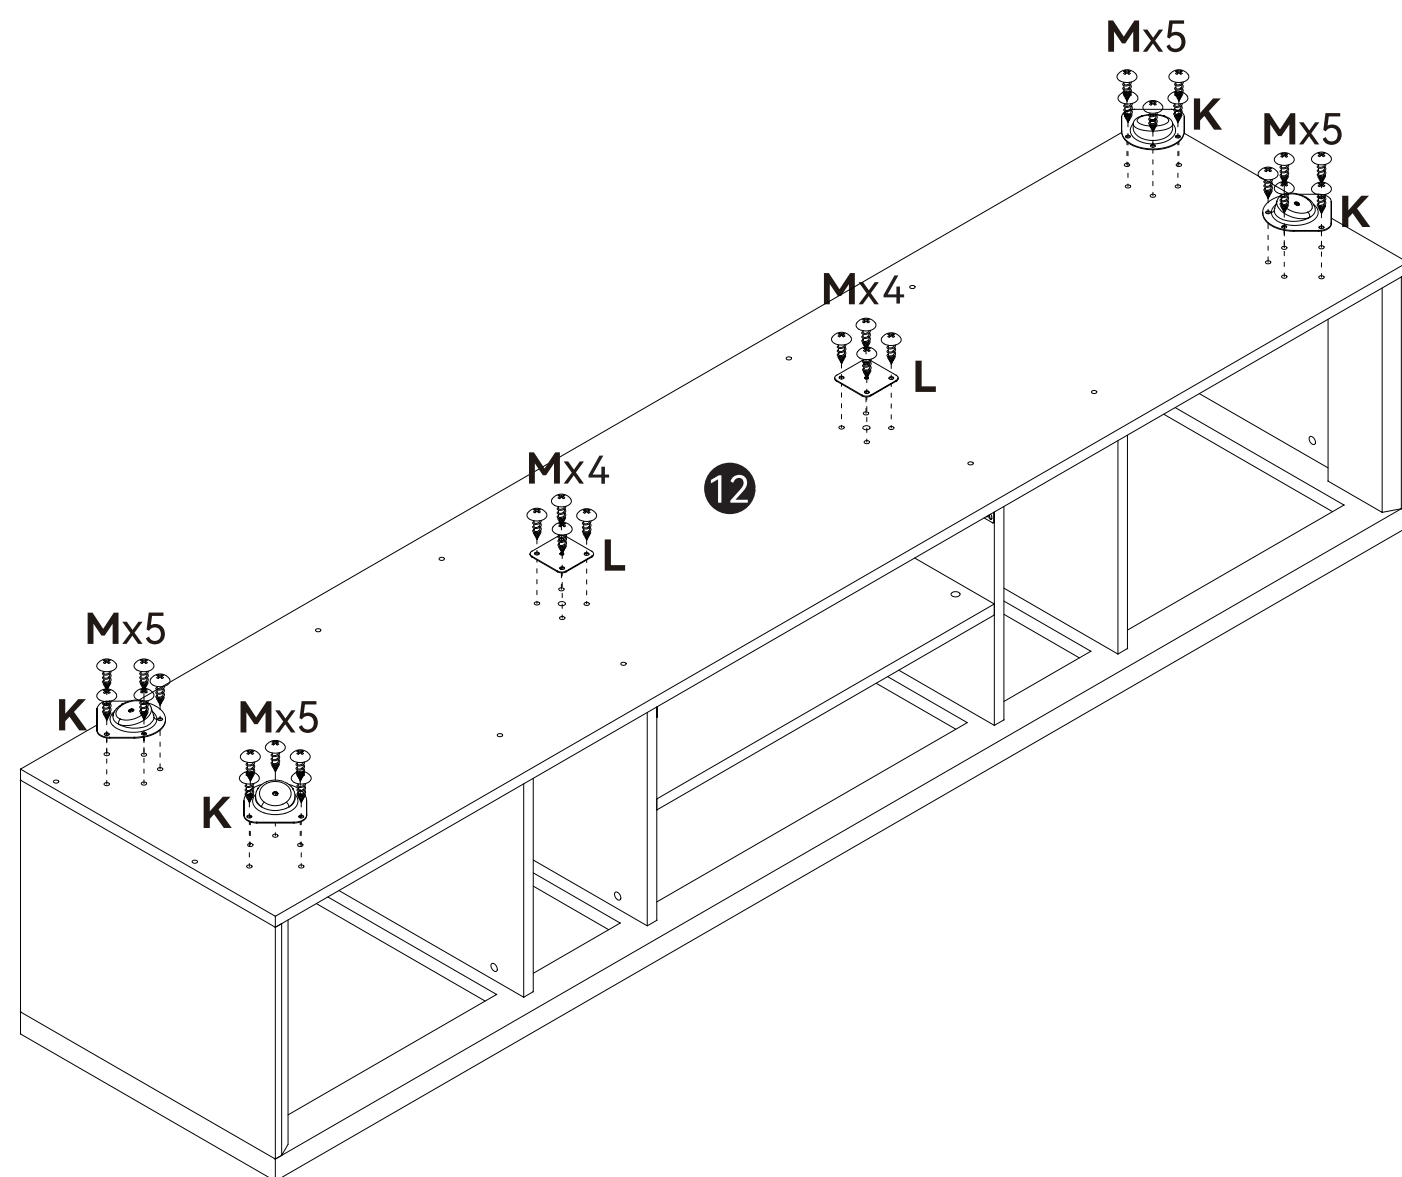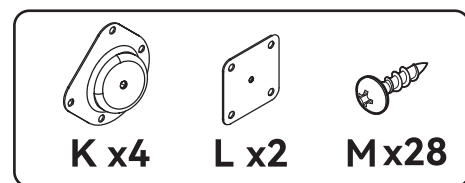  






8

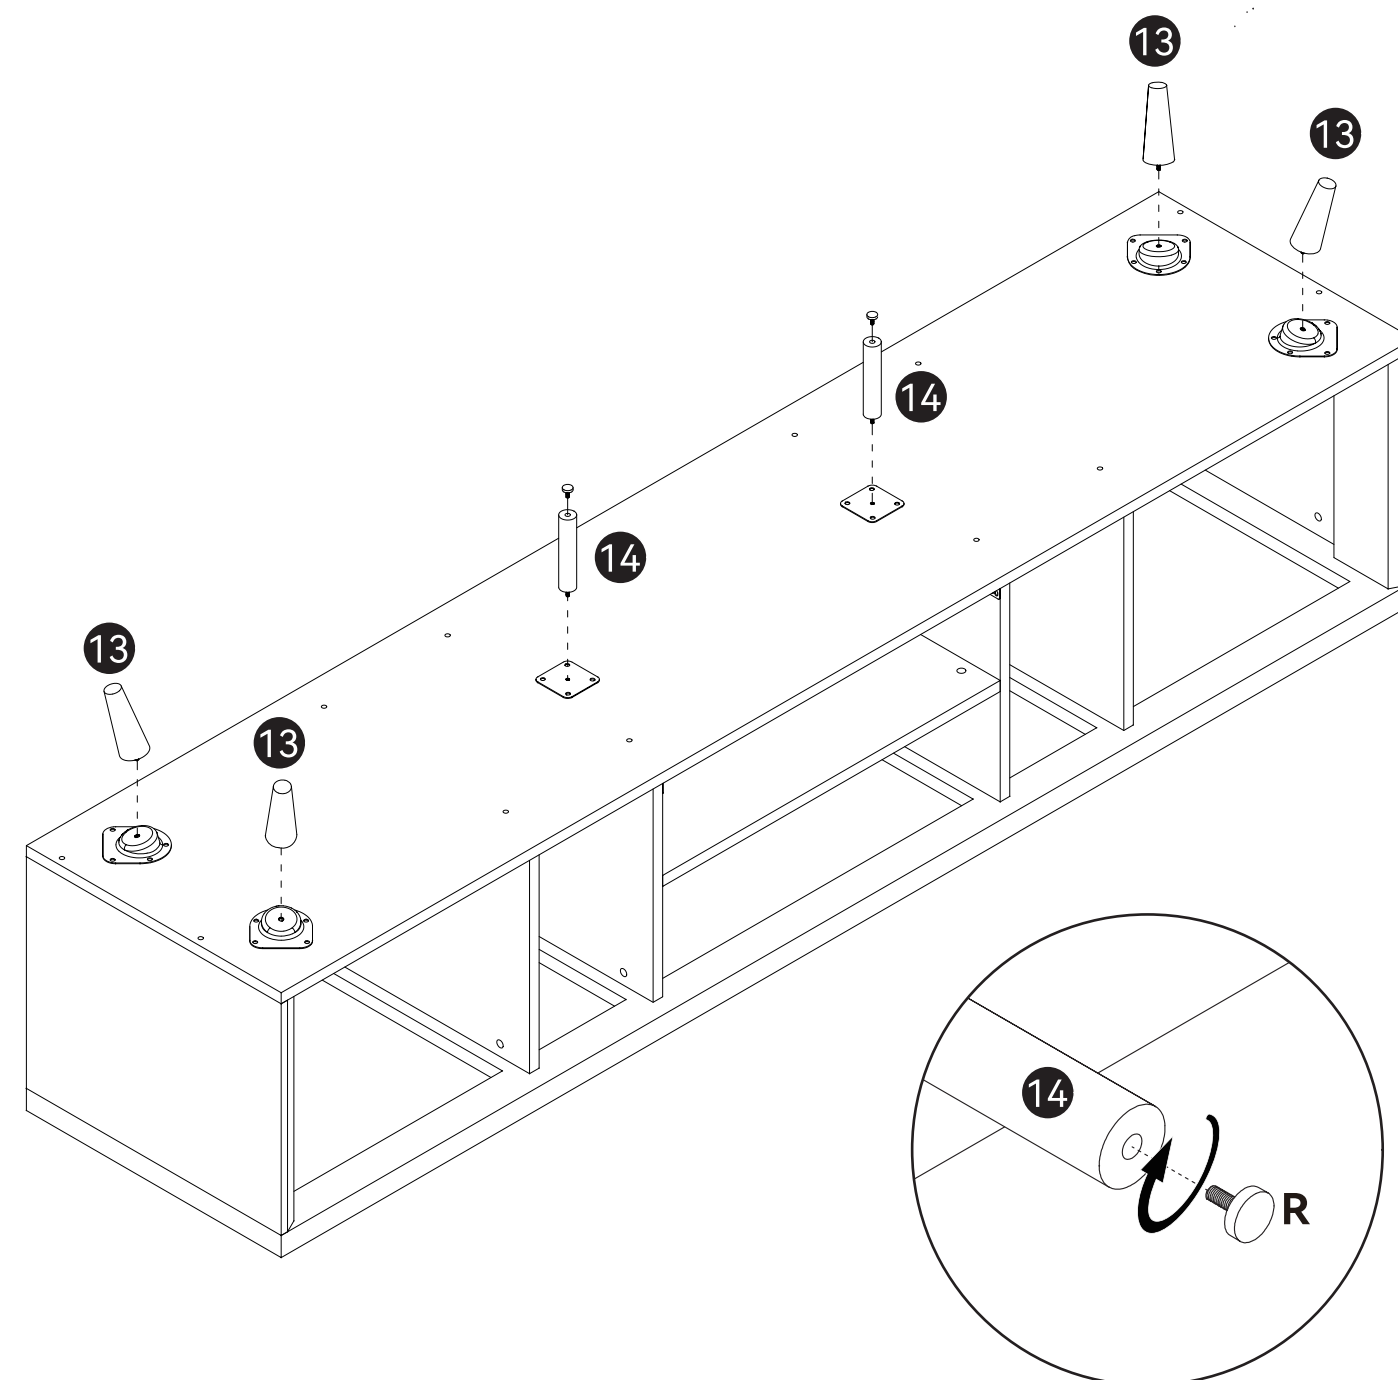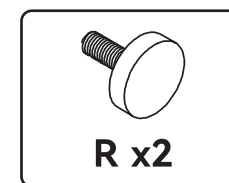  





9

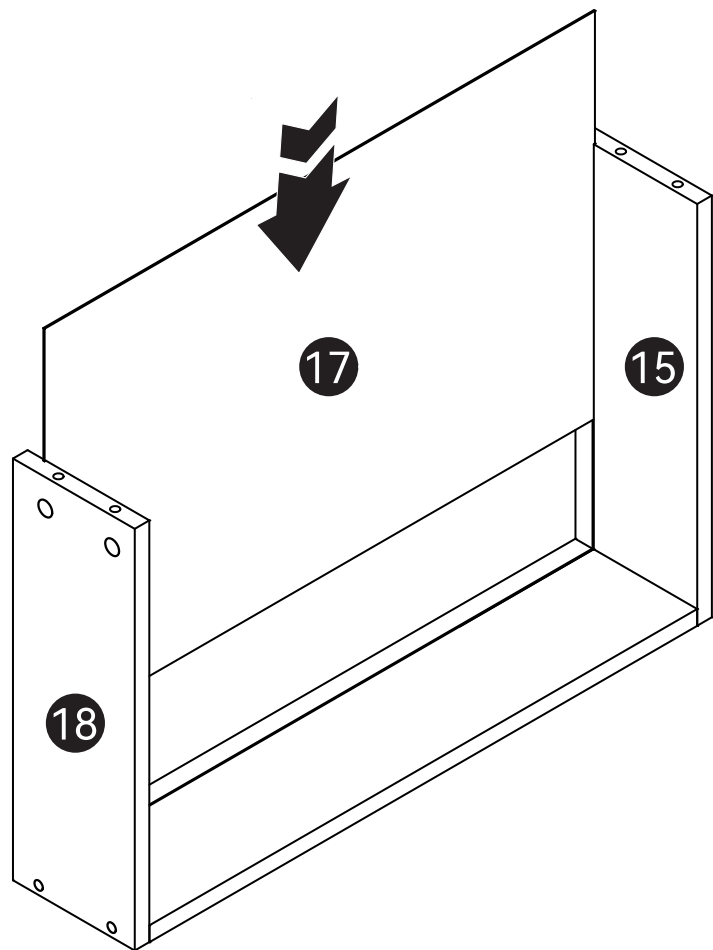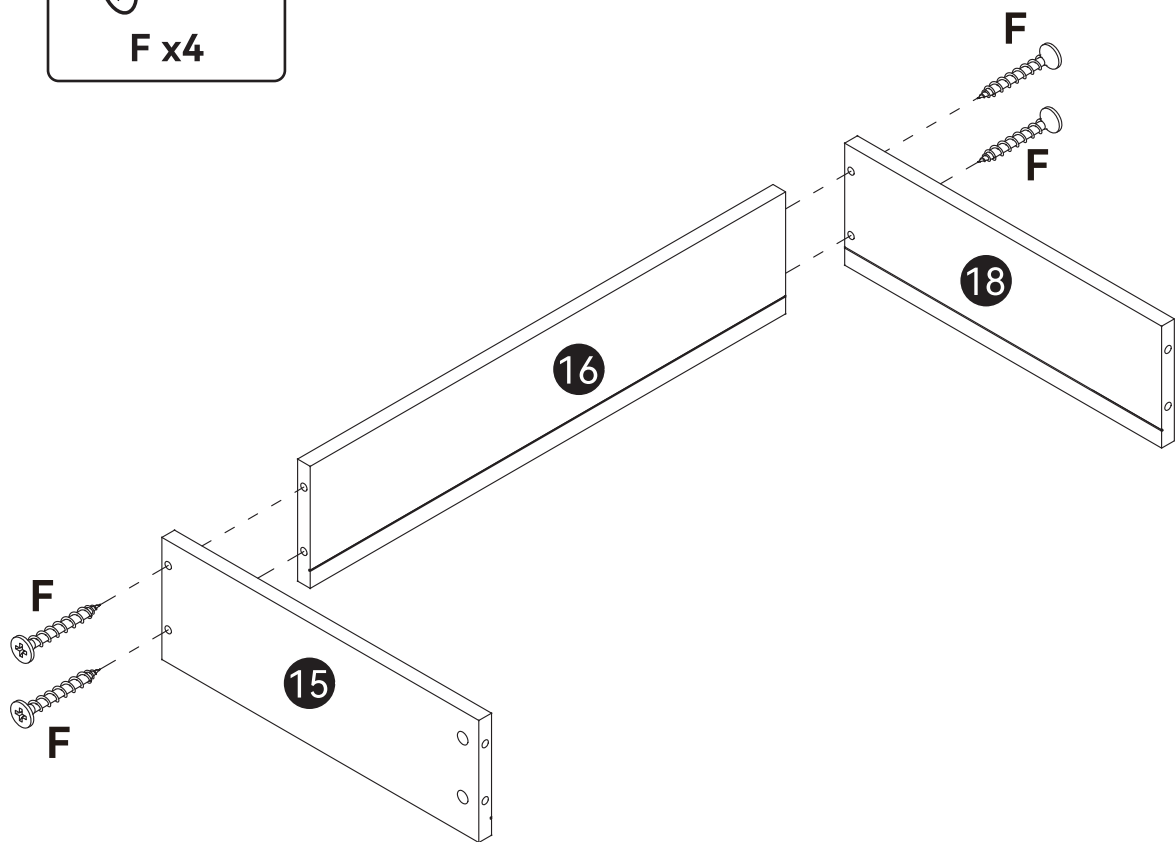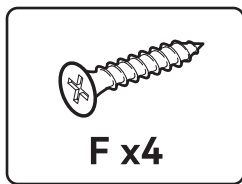   







10

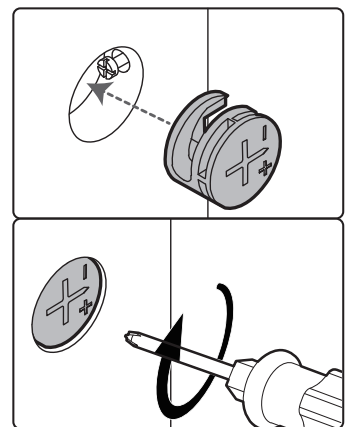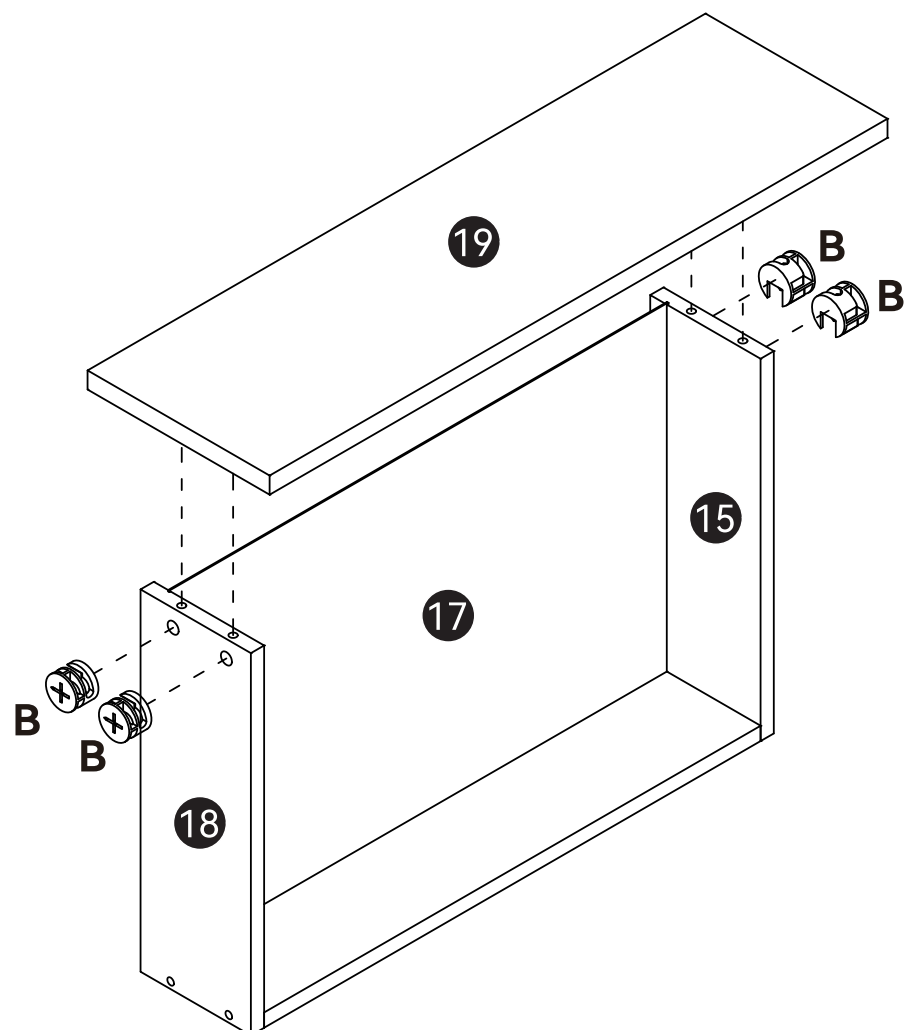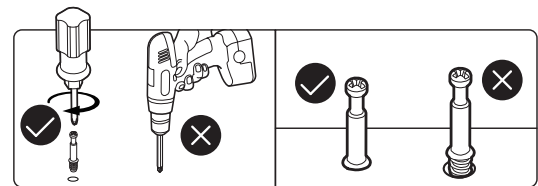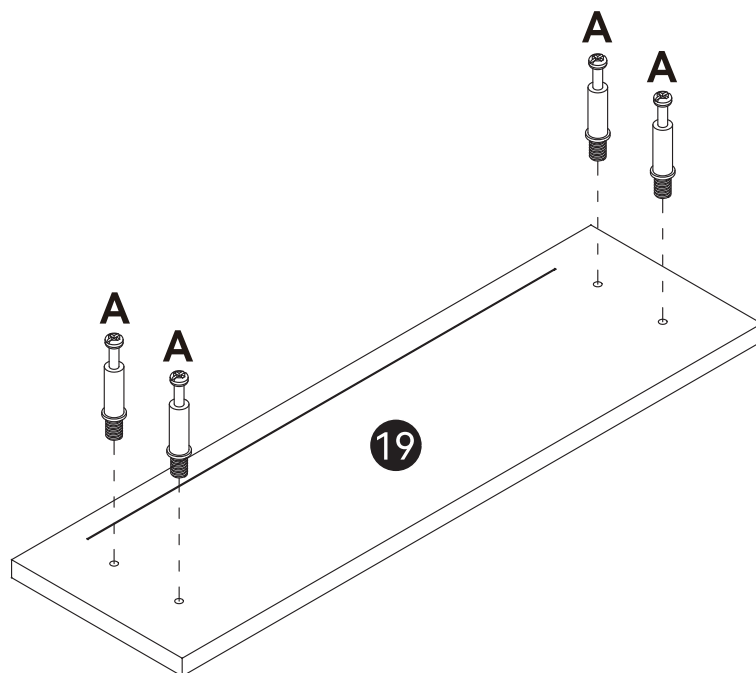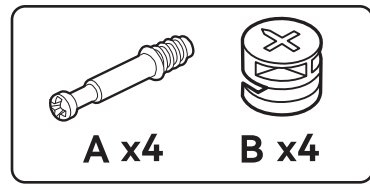     




11

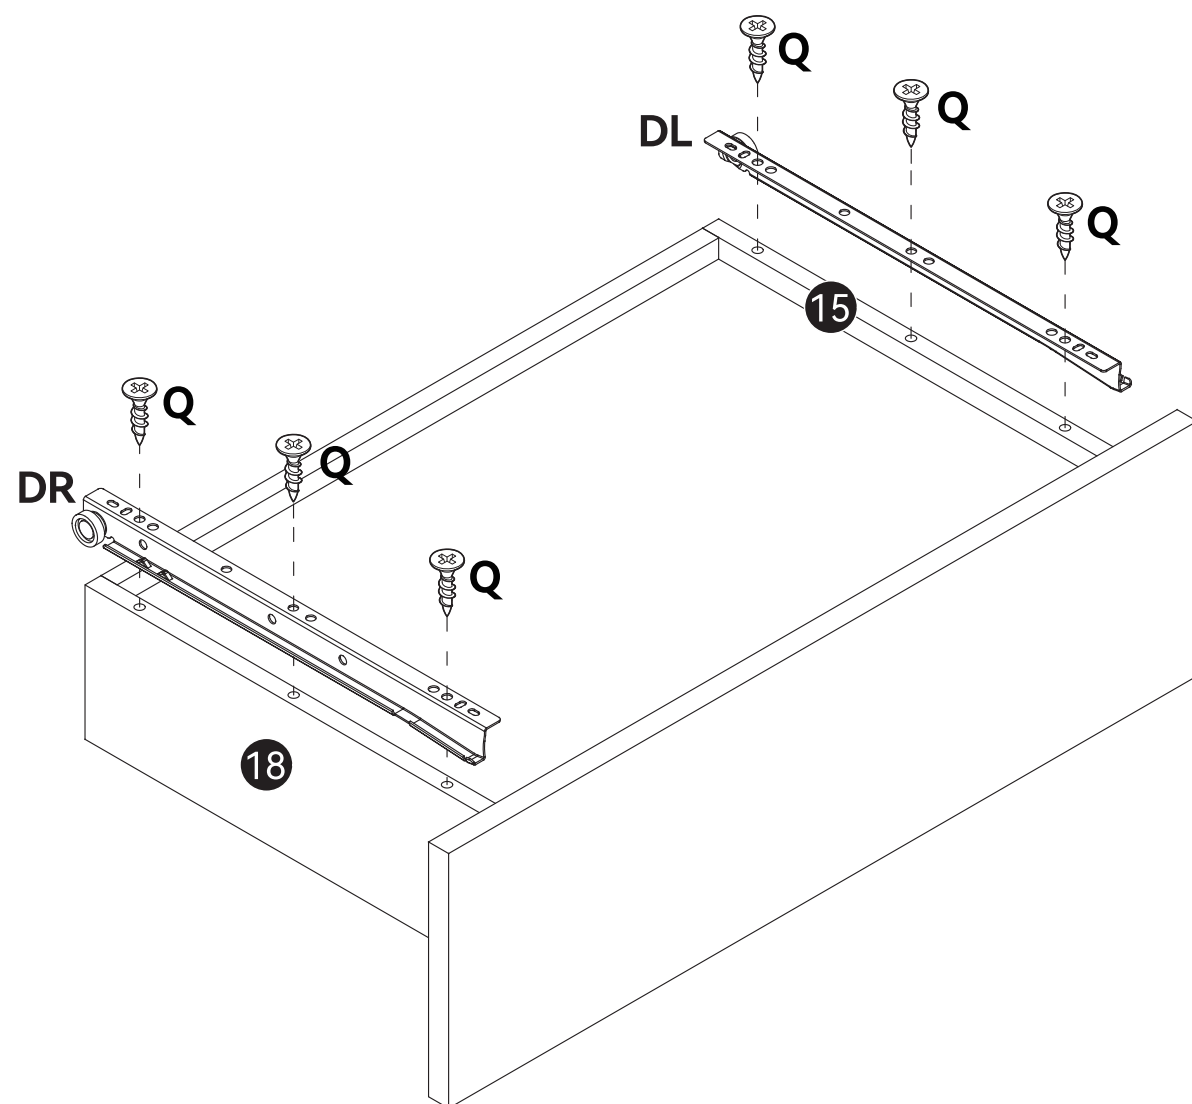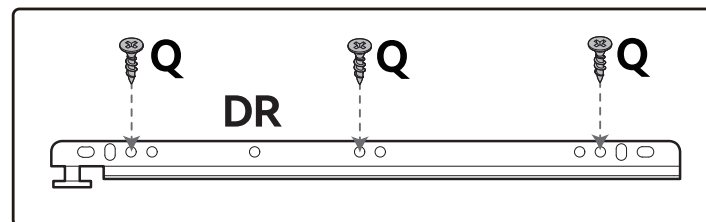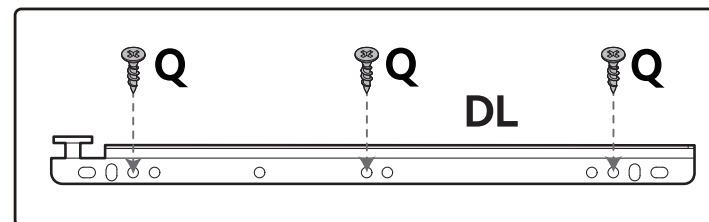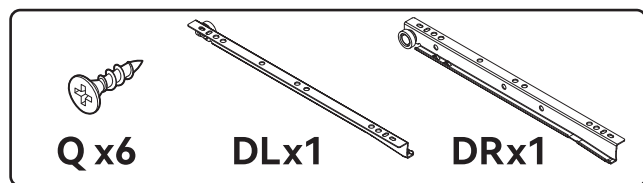    

12

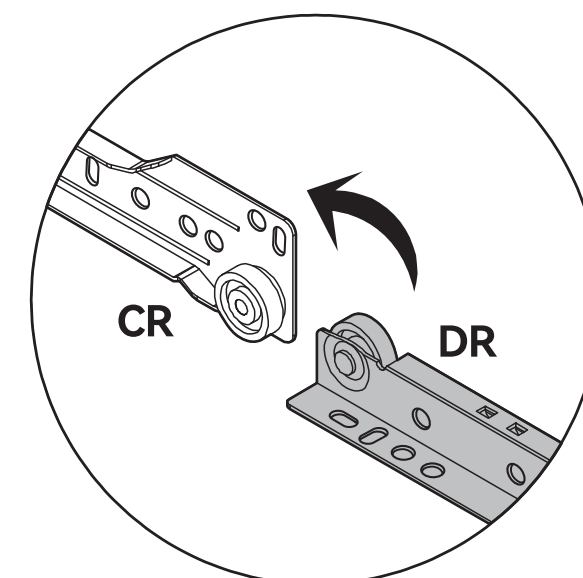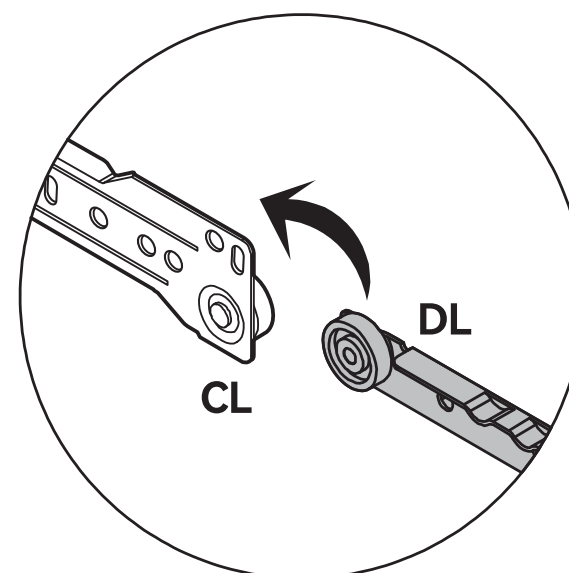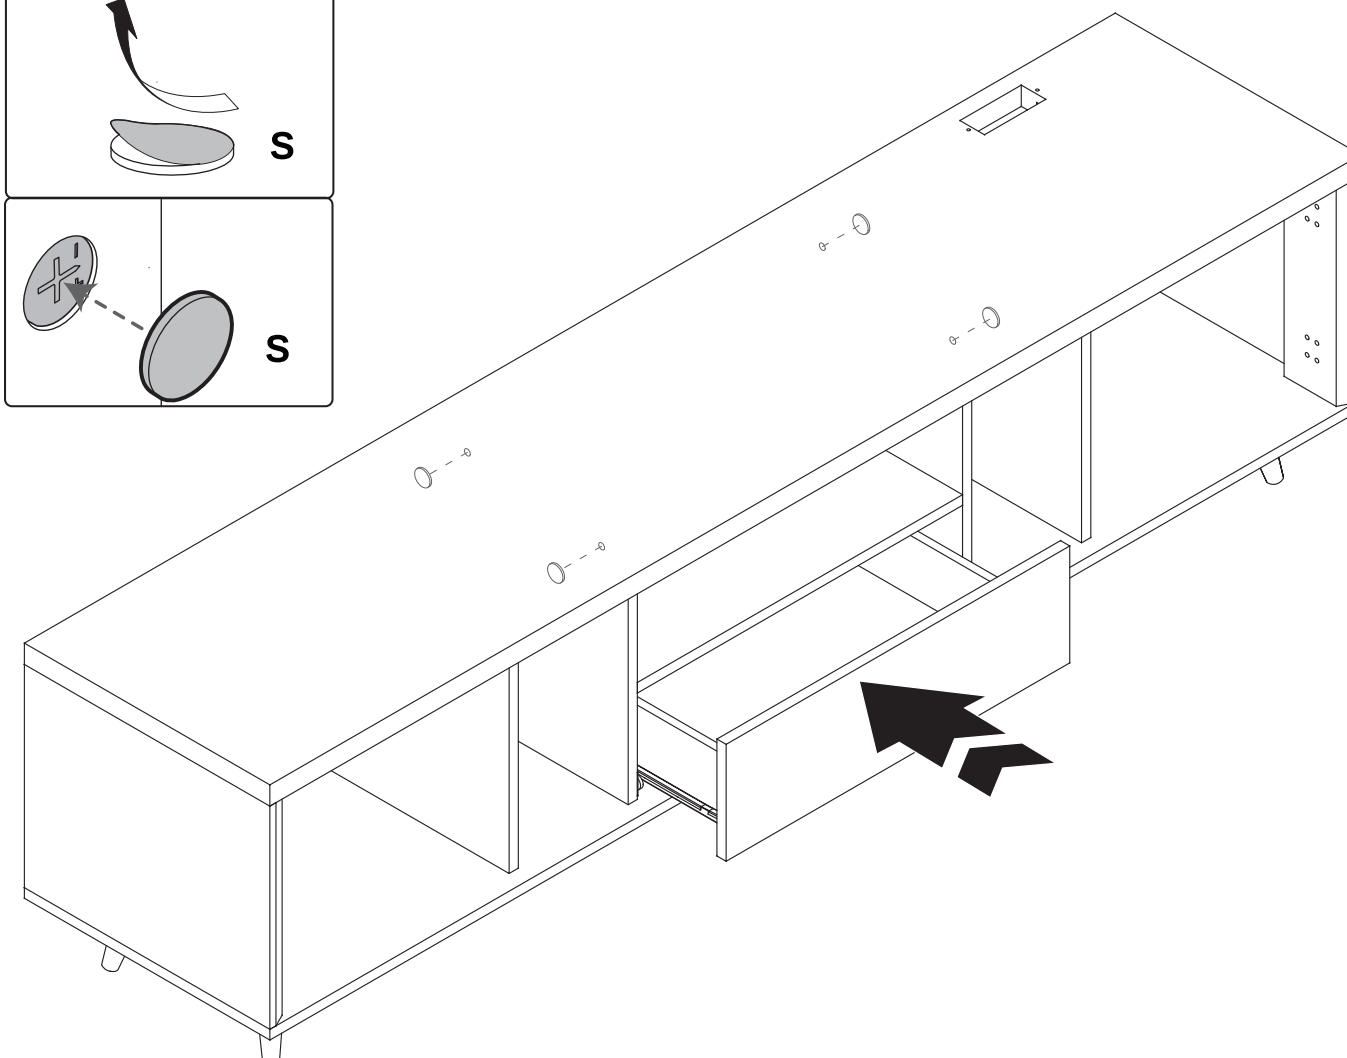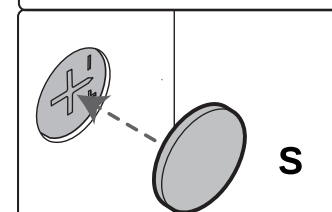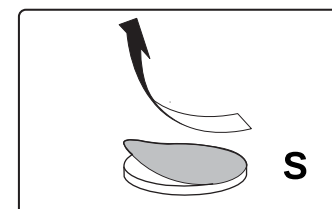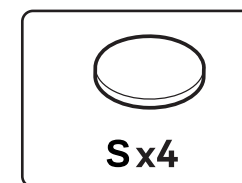      



13

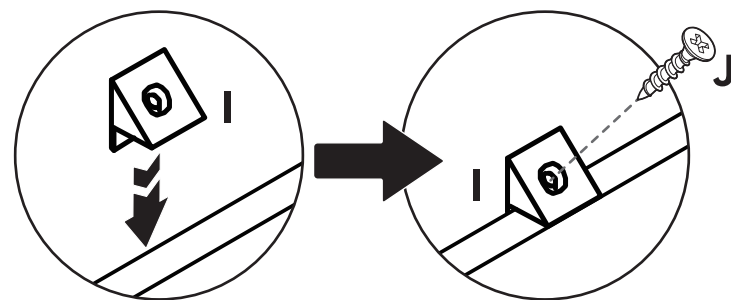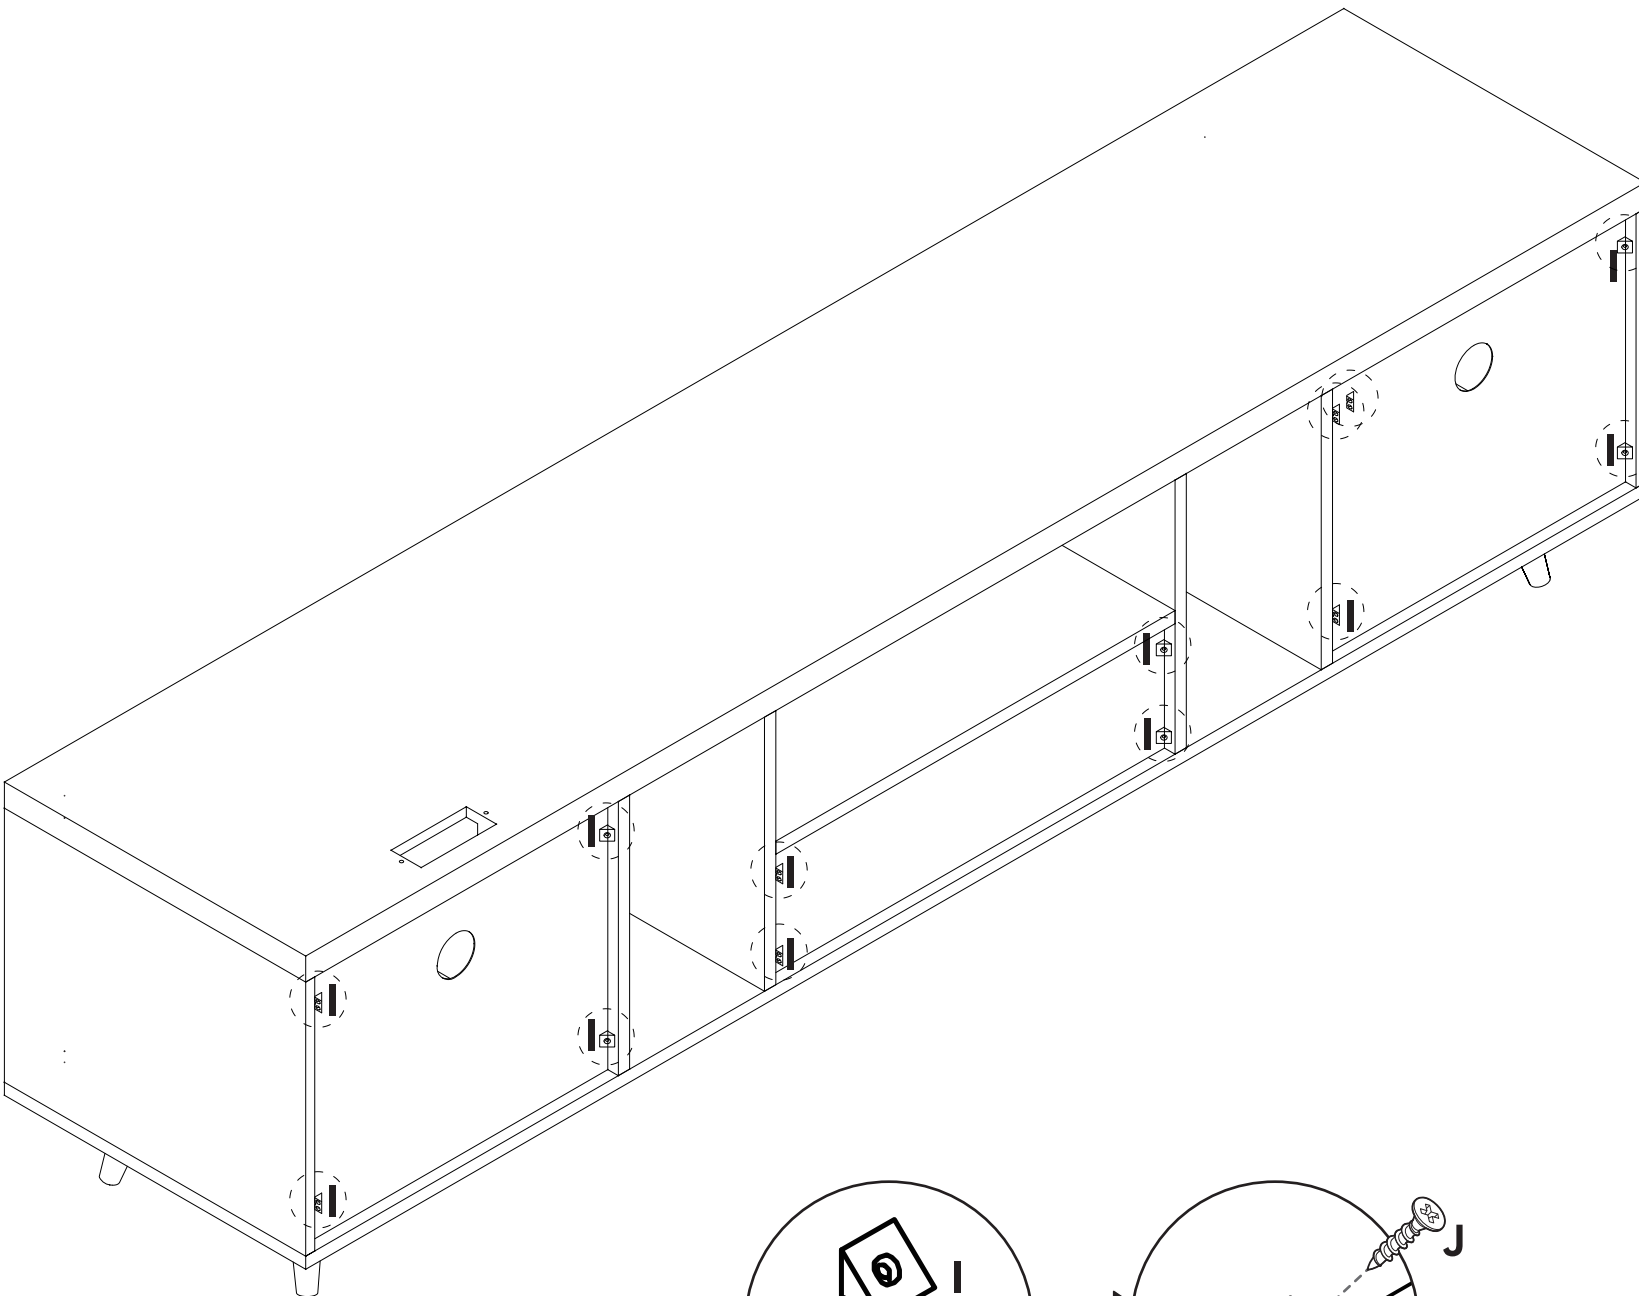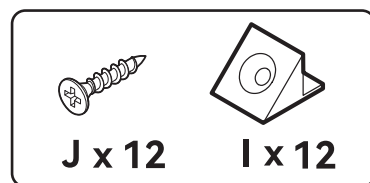   

Insert back panel clip into gap.

Secure with screw.

  14

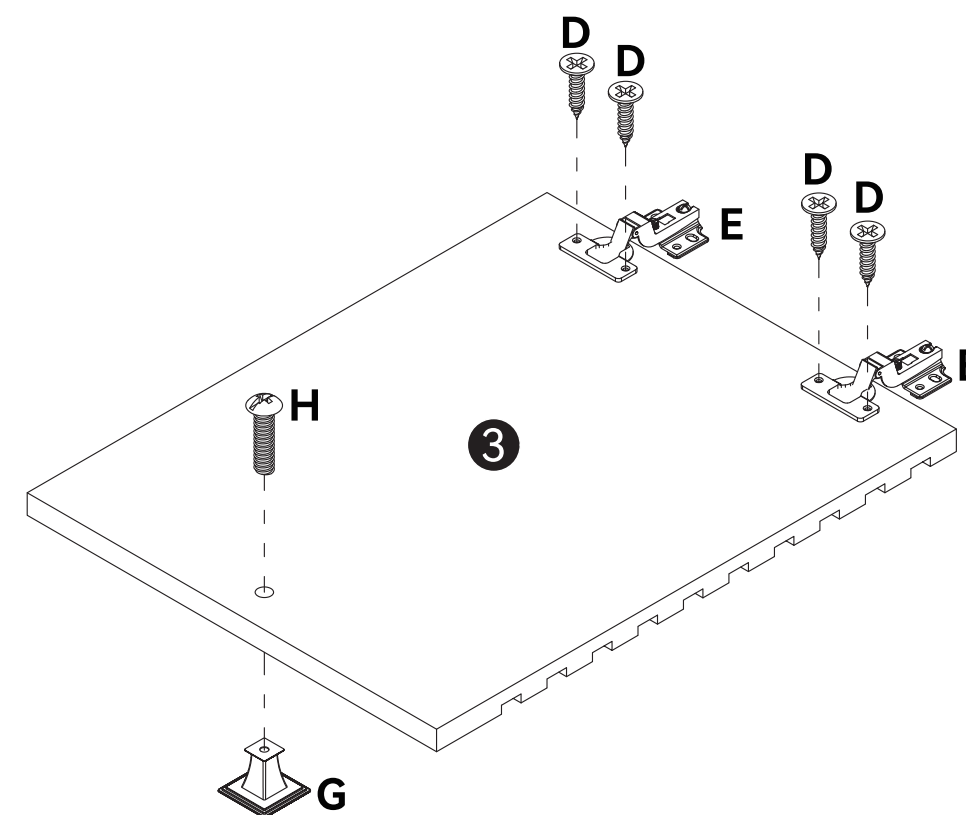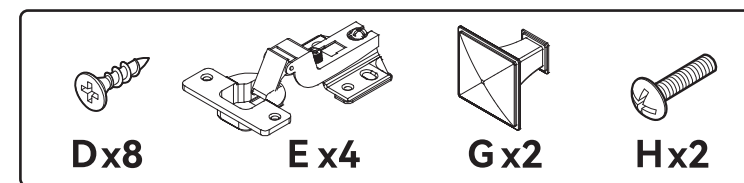

x2

15




Dx16

Dx4

E


3

 3

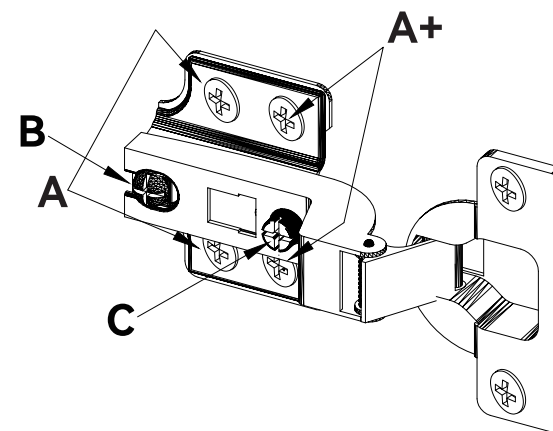


Up and Down Adjustment

 1. Remove the 2 screws "A+" on the hinge.
2. Loosen the 2 screws "A" on the hinge. Adjust up or down.
3. Tighten the screws "A" and reinstall "A+".

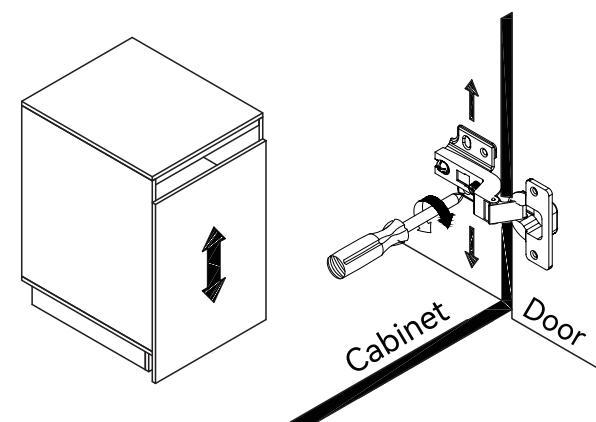


In and Out Adjustment

 1. Loosen the screw "B" and adjust the depth of the door.
2. If the depth of the door cannot be adjusted, simply loosen the screw "C" slightly to adjust the door forward and backward.
3. Tighten the screw "B" to secure in place.

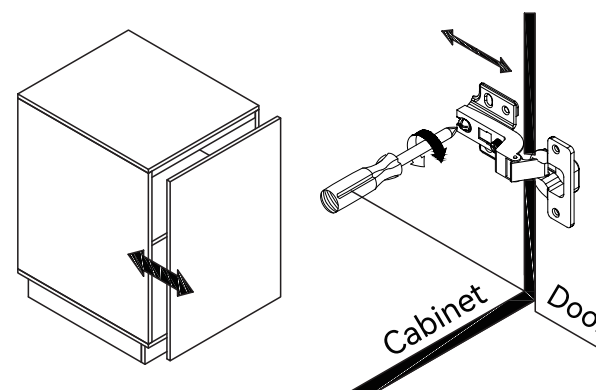

Side-to-Side Adjustment

 1. Loosen the screw "C" to align the door horizontally.
2. Tighten the screw "C" to secure in place.

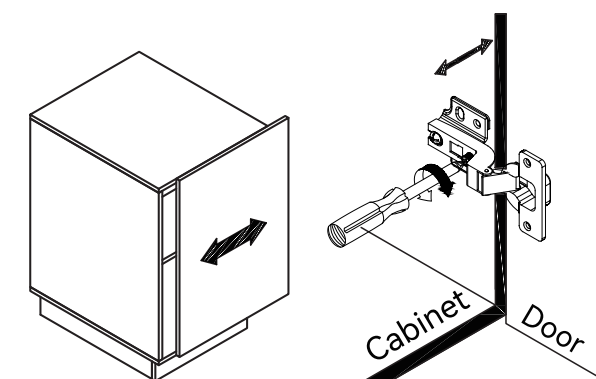

16

