

Troubleshooting Guide for Ironing Board Covers

Problem: Cover doesn't fit properly.

- Ensure that you have selected the correct size cover for your ironing board.
- Check that the elasticized skirt is stretched evenly over the edges of the board for a snug fit.
- If the cover is still loose, try adjusting and securing it more firmly.

Problem: Cover slips or slides during ironing.

- Ensure that the elasticized skirt is securely fastened around the edges of the ironing board.
- Check for any wrinkles or folds in the cover that may cause slipping and adjust it accordingly.
- If needed, you can fasten the clip to hold the cover in place.

Problem: Cover becomes stained or discolored.

- Promptly clean any spills or stains on the cover using a damp cloth or sponge with mild detergent.
- Avoid ironing over dirty or soiled garments that may transfer stains onto the cover.
- If the cover is heavily stained or discolored, follow the maintenance instructions for a thorough cleaning.