CARE AND MAINTENANCE

Store outdoor furniture indoors or cover well when not in use.

Remove wooden furniture from standing water. Dust regularly with small brush or vacuum Spills should be taken care of immediately before they harden or stain with a slightly dampened sponge.

SAFAVIEH OUTDOOR

NOTICE

- * Please make sure that you have all parts indicated before you begin assembly of this item
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly
- * This item may require periodic tightening

Weight Capacity: 600 Ibs

Warning: Do not stand on chair

Warning: Do not over torque bolts / screws







Part List and Hardware List

Tart List and Haraward List			
PIECE	DESCRIPTION	PICTURE	QUANTITY
А	Leg Table		4X
В	Frame Table		1X
С	Bolt	(e) M8x50	8X
D	Washer	M8.5/20X20	8X
Е	Allen key	LG4	1X

Model# CPT1014A

SProduct Dimensions:25.98" W x 46.65" D x 18.5" H



PREPARATION

tighten with allen key (E).

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 10 minutes.

Tools Required for Assembly (included): Allen Key

