 


HOMEVOL Slush Machine

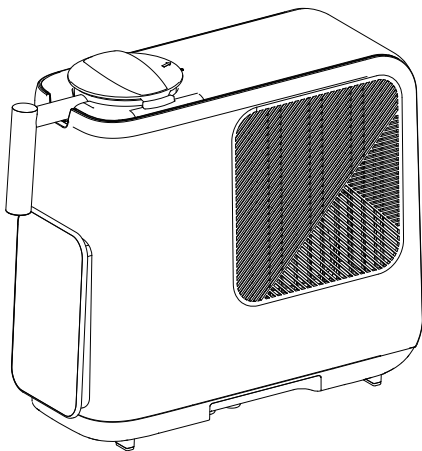

Important Safeguard

To reduce the risk of fire, explosion, electric shock or injury when using your frozen drink maker, follow these basic safety precautions.

1. Read all instructions prior to using the appliance and its accessories.
2. Carefully observe and follow all warnings and instructions. This unit contains electrical connections and moving parts that potentially present risk to the user.
3. Take inventory of all contents to ensure you have all parts needed to properly and safely operate your appliance.
4. After unboxing the unit for the first time, ensure the unit is upright for at least 12 hours before operating to let the refrigerant oils settle in the air conditioning system for best performance.
5. Turn the appliance OFF, then unplug the appliance from the outlet when not in use, before assembling or disassembling parts, and before cleaning.
6. Before use, wash all parts that may contact food. Follow washing instructions covered in this instruction manual.
7. **DO NOT** operate any appliance with a damaged cord or plug, or after the appliance malfunctions or is dropped or damage in any manner. This appliance has no user-serviceable parts. If damaged, contact authorized dealer for servicing.
8. Extension cords should NOT be used with this appliance.
9. To protect against the risk of electric shock, DO NOT submerge the appliance or allow the power cord to contact any form of liquid.
10. **DO NOT** allow the cord to hang over the edges of tables or counters. The cord may become snagged and pull the appliance off the work surface.
11. **DO NOT** allow the unit or the cord to contact hot surfaces, including stoves, and other heating appliances.
12. **ALWAYS** use the appliance on a dry and level surface.
13. **ONLY** use attachments and accessories that are provided with the product.
14. Keep hands, hair, and clothing out of the container when loading and operating.
15. During operation and handling of the appliance, avoid contact with moving parts.
16. **NEVER** leave the appliance unattended while in use.
17. Before operation, ensure all utensils are removed from containers. Failure to remove utensils can cause containers to shatter and potentially result in personal injury and property damage.
18. **WARNING:** DO NOT microwave the containers or accessories provided with the appliance.

Important Safeguard

19. **WARNING:** ALWAYS keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
20. **WARNING:** DO NOT use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
21. **WARNING:** DO NOT damage the refrigerant circuit.
22. **WARNING:** DO NOT use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
23. Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
24. **WARNING:** DO NOT add frozen fruit, frozen vegetables, or ice to the unit.
25. **WARNING:** DO NOT add hot ingredients to the unit.
26. **WARNING:** DO NOT submerge the motor base or control panel in water or other liquids.
27. **WARNING:** DO NOT fill vessel past the MAX FILL line.
28. **WARNING:** DO NOT process hard, loose ingredients or ice. This appliance is not intended to process loose frozen fruit, a block of solid ice, or ice cubes.
29. **ALWAYS** keep the unit upright.
30. This appliance is NOT intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance. (for CB)
31. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.(for CE)
32. Keep rear and sides of the unit open in order for the compressor to operate properly and not over heat.
33. **DO NOT** damage the refrigerant circuit. This warning is applicable only for appliances with refrigerating circuits that are accessible by the user.
34. When using appliance, make sure both sides and back of it are at least four inches (10.2 cm) away from walls.

Important Safeguard

35. Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
36. This appliance is intended to be used in household and similar applications such as
- staff kitchen areas in shops, offices and other working environments;
 - farm houses and by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments;
 - catering and similar non-retail applications.
37. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
38. To avoid contamination of food, please respect the following instructions:
- Clean regularly surfaces that can come in contact with food and accessible drainage systems.
 - Clean water tanks if they have not been used for 48h.
39. The appliance shall not be exposed to rain.



WARNING: Risk of fire / flammable materials

 
WARNING: When positioning the appliance, ensure the supply cord is not trapped or damaged. DO NOT locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.

WARNING: When handling, installing, and operating the appliance, care should be taken to avoid damage to the refrigerant tubing.


WARNING: Dispose of refrigerator in accordance with Federal and Local Regulations. The flammable refrigerant and flammable insulation blowing gas used in this product require special disposal procedures. Contact your local authorities for the environmentally safe disposal of your refrigerator.

SAVE THESE INSTRUCTIONS

Product Components

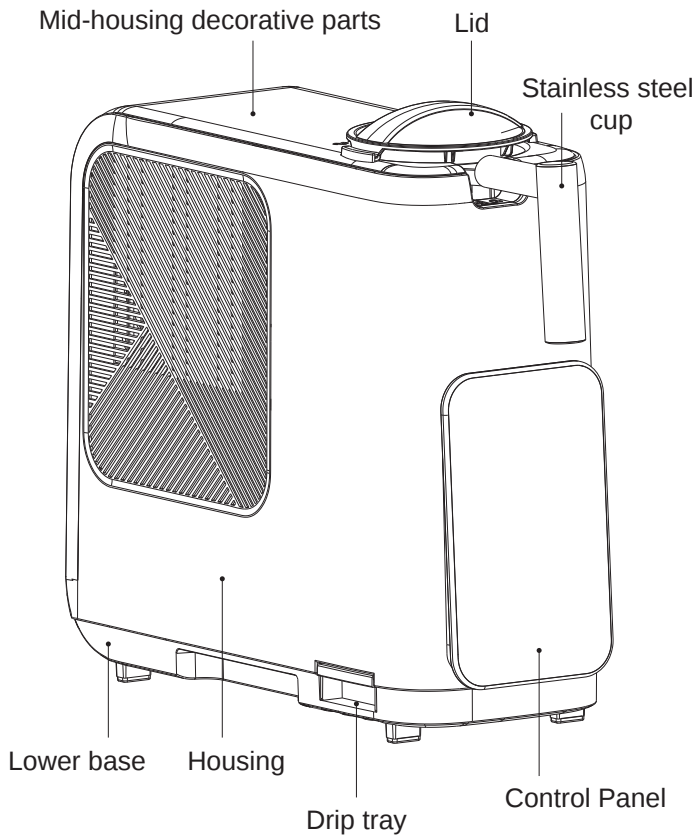

Usage Method

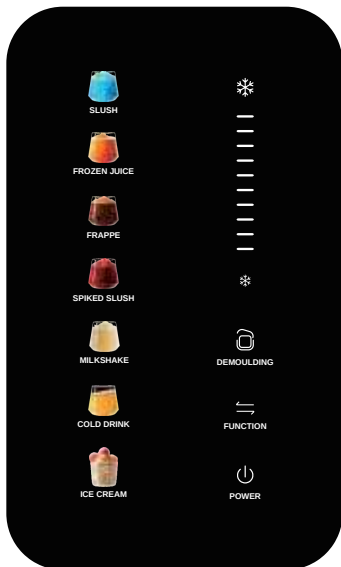 

	SLUSH	Change your daily drink Duration: ≤ 40min
	FROZEN JUICE	Naturally Sweetened Beverage Duration: ≤ 40min
	FRAPPE	A frozen dessert for the coffee enthusiast Duration: ≤ 40min
	SPIKED SLUSH	Alcoholic Beverages Duration: ≤ 60min
	MILKSHAKE	Beverages made with dairy and cream Duration: ≤ 40min
	COLD DRINK	Used to make cold, refreshing beverages Duration: ≤ 20min
	ICE CREAM	For making ice cream Duration: ≤ 40min
	Increase Time	Can extend the freezing time of the currently selected working mode. The longer the time, the more smoothies will be produced
	Decrease Time	Can reduce the freezing time of the currently selected working mode. The shorter the time, the fewer smoothies will be produced
	DEMouldING	During operation, if you no longer need to make ice, press the Demold button to activate the demoulding program and remove the cup
	FUNCTION	Switch between modes
	POWER (Green)	Standby/Stop Button

 
IMPORTANT!

Before first use, stand your slush machine upright for 12 hours before plugging it in.

After demoulding, the compressor is protected and will restart 3 minutes.

Usage Method




1. Clean the cup and wipe the outer wall dry

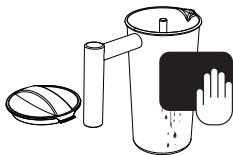


2. Pour the pre-mixed ingredients into the cup



   3. Place the cup into the machine, aligning the handle with the locking tab

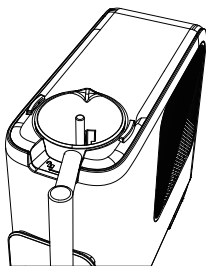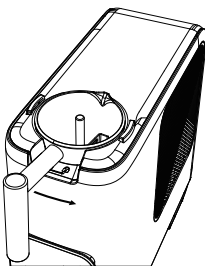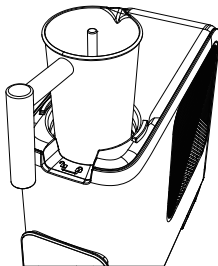

 4. Rotate the lid to align it with the locking catch

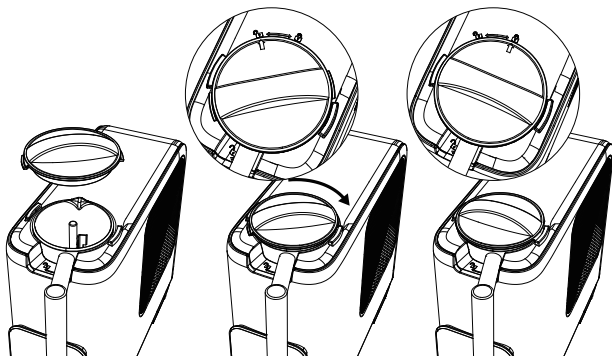

1. After power is connected, all interface indicators will light up briefly and then turn off, leaving only the power button flashing to indicate the unit is in standby mode.
2. Press the Function Selection Key to cycle through the preset modes. The indicator light for the unselected modes will turn off, leaving only the selected mode illuminated. The time level display will change according to the selected mode. At this point, you can press the Snowflake Key to adjust the time setting.
3. The Snowflake Key can also be pressed during the operation to adjust the process time.
4. After the cooling process is complete, the unit will automatically enter the release sequence. An audible beep will sound for 3 seconds to signal the completion of the release process.
5. If the lid is opened during operation, the release mode will activate immediately, and the mixing blade will stop rotating. Closing the lid will allow the unit to resume normal operation.
6. If the lid remains open for an extended period, the unit will automatically return to standby mode.

*All keys, except for the seven preset mode keys, remain illuminated during operation. In standby mode, only the power button's indicator remains active (flashing).

Technical Parameters

Model	XR01	LED Display	Each button is equipped with a corresponding LED indicator
Voltage	120V~ 60Hz	Compressor	Compressor with a displacement of 35 cc
Refrigeration Method	Evaporative Cooling with R290 Refrigerant	Power Cord	Grounded Power Cord (Standard equipment for safety.)
Max. Capacity	1.3L	Rotation Speed	40R
Power	EU: 180W(+20%) US/UK: 200W(+20%) JP: 160W(+20%)	Noise Level	≤60dB
Refrigeration Type	Compressor	Refrigerant type/weight	R290 / 45g

Cleaning & Maintenance

Important: Before cleaning or storing, always disconnect the unit from the power outlet and allow it to cool down completely.

1. Wipe the machine with only a soft, damp cloth, and then let it air dry naturally.
2. The cup is detachable and dishwasher-safe. Do not rinse or immerse the main machine unit directly in water.

Any other servicing should be performed by an authorized service representative.

Storage

Important: Always disconnect the plug from the power outlet and allow the unit to cool down completely before storage.

1. Store the product in a clean, well-ventilated environment with an ambient temperature between -5°C and $+40^{\circ}\text{C}$ and a relative humidity not exceeding 70%.
2. The storage area must be free of corrosive gases and substances that could impair electrical insulation. The product shall not be subjected to mechanical shock or heavy pressure.
3. Protect the product from moisture, water, and direct sunlight.

Common troubleshooting methods

Fault phenomenon	Cause of Failure	Elimination methods
Indicator light is off and the unit is unresponsive	Loose power plug	Check if the product is powered on
	Circuit board failure	Please send it to the designated service for repair
Indicator light is off and the unit is unresponsive	Circuit board failure	Please send it to the designated service for repair
Button failure	Control panel area dirty	Use after cleaning
	Circuit board failure	Please send it to the designated service for repair