



288mm

144mm

Automatic cat litter box

Certificate of product
Inspection date _____
The inspector Q1
Conclusion Qualified

Please read the instruction carefully before use and keep the instruction for reference.

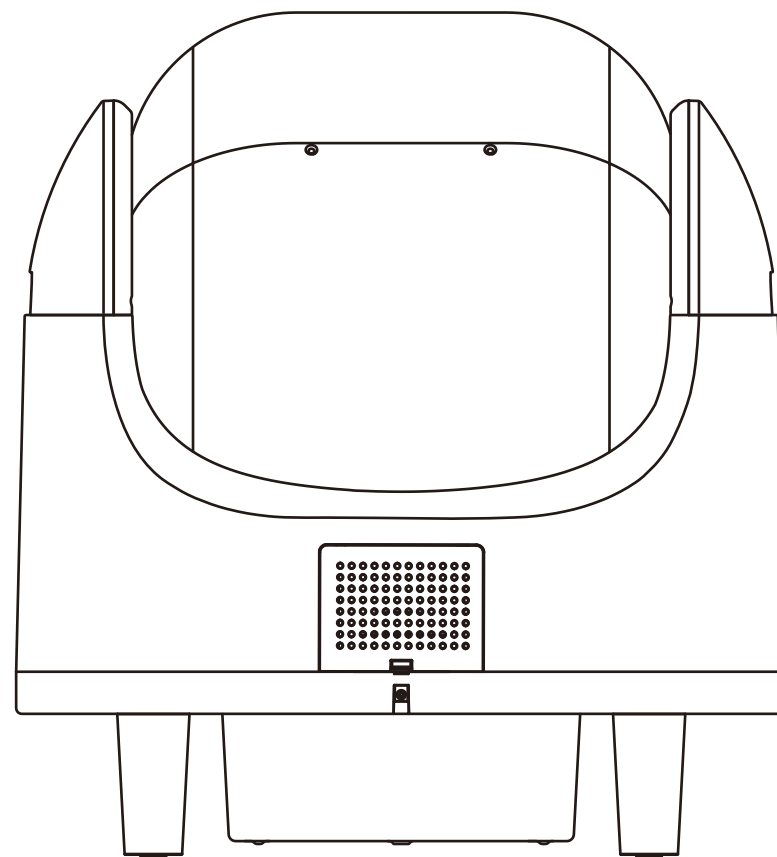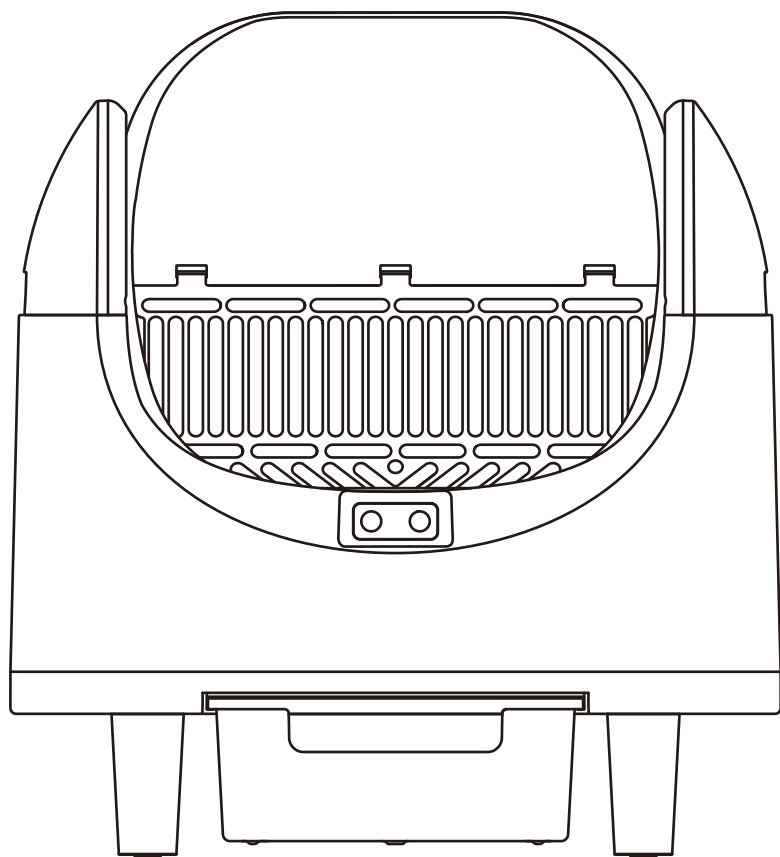

Directory

Device wifi network configuration instructions

Product Introduction

Body structure description 01
Operation Panel 02

Installation instructions

Complete Installation 03
Aromatherapy box replacement 07

Cleaning and maintenance

Daily Maintenance 05
Product Clean 06

Safety warning

No forced attention 08

Service guide

Product parameter 10
Fault self-test 11
Environmental Listing 12
Warranty Notice 13
Warranty card 14

WiFi network configuration instructions

This product can through the "Tuya Smart" APP


1. Search for "Tuya Smart" APP in the mobile app store to download and install.
2. Keep the phone open WiFi and bluetooth, WiFi button for 3 seconds after the yellow lights flashing and dripping sound - open the APP click add equipment - waiting for automatic search, found that after adding WiFi - input the password for the connection is successful.
3. If the route account or password of a device user is changed, the device cannot connect to the device. In this case, perform the preceding steps and hold down the WiFi button for 3 seconds to reconfigure the network.
4. Because the APP to upgrade or update, the actual operation may be slightly different with the description, please refer to our current APP guidance, or consult the official customer service.

Attention!

The device only supports 2.4G WiFi band. Please ensure that the router is in 2.4G band when connecting.

Product introduction

Main structure description

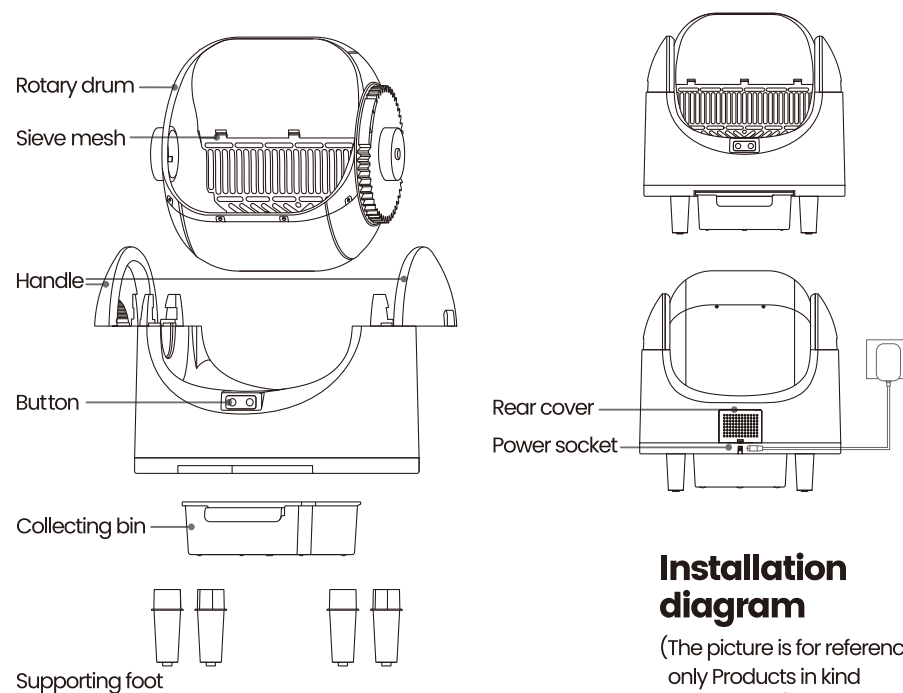

-01-

List of parts





Operating panel

WIFI button

- **Reset network:** Press and hold for about 3 seconds
- **Blinking yellow light:** The Internet is being connected to
- **White light on:** the connection is normal
- **Yellow light on:** Network status to be connected

Cleaning button


- **Cleaning cat litter function:** Short press  for 1 second and the buzzer will sound to activate the clean function.
- **Clear drum clean all cat litter function:** Press  for 3 seconds and the buzzer will sound to activate the clear function.
- **White light on:** Product is working
- **Blinking white light:** Indicates that the machine is suspended (manually press the cleaning button to stop)
- **Blinking yellow light:** Gravity anti-clamp is triggered
- **Yellow light on:** Indicates that the collection bin is full and the infrared anti-clip trigger in the collection bin

-02-


Installation instructions

Complete installation


Installation and calibration of weighing sensors for weight

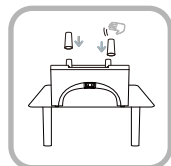


①. Take out the drum and other accessories, put the machine (as shown) upside down on the table, take out the four support legs and insert them into the corresponding positions in turn, pat them to ensure the installation.

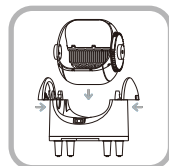

②. Place the machine on a hard and flat floor, install the drum first, and then press both sides of the handle inward by hand to install.

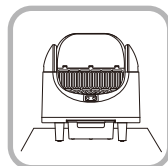

③. Place the machine on a hard and flat floor, install the drum, handle and collection bin, and ensure that the machine does not shake as the standard. (Prohibited from being placed on carpets.)

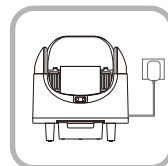


④. Connect to the power supply, connect to WiFi, place a known weight object (greater than 500 grams) in the machine, remove it after 10 seconds, and check if the displayed weight is accurate.


Aromatherapy box installation



①. Find the cover plate on the side and press the two clasps on the cover plate, and then remove the cover plate.

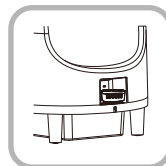

②. Put the aromatherapy box with the protective film removed in the product card slot and push it to the bottom.

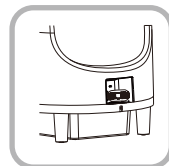


③. Reset the cover plate of the product.


Attention!

Before installation, please carefully read the instruction manual and check the accompanying accessories.
For cats under 3.3 lb, please use manual mode. In manual mode, you can use the app "Clean Now" to make the machine work or press the cleaning button to make the machine clean.


Add cat litter

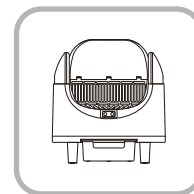

①. Unplug the power and the machine stops running

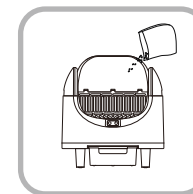


②. Pour appropriate amount of cat litter

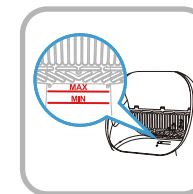


③. Do not pour more cat litter than the height of the mat in the bucket

Install bin garbage bags

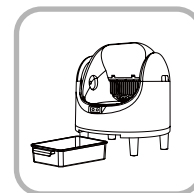

①. Pull out the collection bin

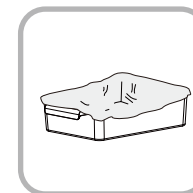


②. The garbage bag is first set to the rear two corners, and then pulled back and stuck on the front two clasps, and then smooth, reset the collection bin


- ①. The weight of cat litter should not exceed 5KG.
- ②. The amount of cat litter should not exceed the height of the mat in the bucket. Please unplug the power before adding cat litter each time, and plug in the power after adding cat litter. Or short press the cleaning button once after each cat litter addition to reset the gravity.
- ③. Suggest that the diameter of cat litter should not exceed 1.5MM.

Instructions for use

Operating instruction | Power on

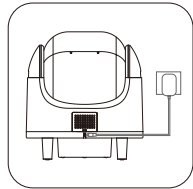

Insert the power adapter port into the rear hole of the product

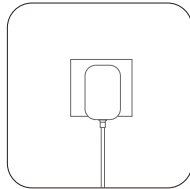

Plug the strip end of the power adapter into the electrical outlet


Daily maintenance

Note! Maintenance work is not within the scope of maintenance.


- A dedicated aromatherapy box should be used to ensure the deodorizing effect.
- Matching special garbage bags should be used to ensure the cleaning effect of products.

Replacement of toilet bowl and aromatherapy box


Clean the collection bin

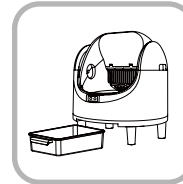

①. Pull out the collection bin

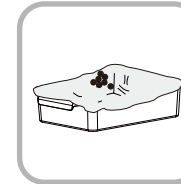


②. Take out the garbage bag and tighten the handle to seal it

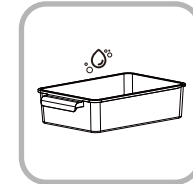


③. The collection bin can be washed with clean water, and then reset after loading a new garbage bag


Rotary cleaning

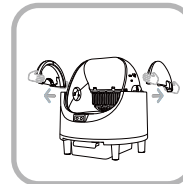


①. Pull the handle outward from both sides to remove the handle

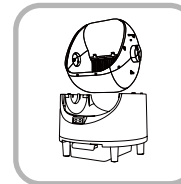


②. Put forward the cylinder

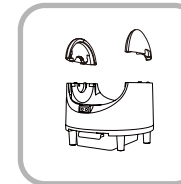


③. Wipe the inside with a dry towel

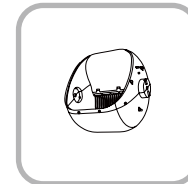


④. Lift from the root of the screen to make the screen fall off from the buckle

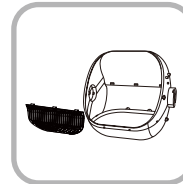

⑤. Take out the screen

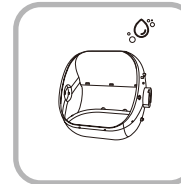

⑥. The rotary cylinder is cleaned directly with water

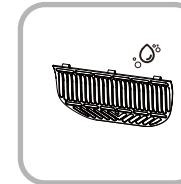

⑦. screen cleaning alone, dry after reset

Aromatherapy box replacement



①. Power off, find the back cover on the back and take it off



②. Pinch the bottom of the aromatherapy box and take it off



③. Put the good aromatherapy box at the product card slot and push it to the bottom.



④. Reset the rear cover of the product

Safety warning

Note!

To ensure safety and avoid injury and property damage to yourself and others, please observe the following safety precautions. Misuse may result in accidents.

⊘ Indicates prohibited content



Keep out the sun



No flammable articles



No wet area



Do not touch with wet hands



No washing



Do not place on uneven ground



Do not place on carpets and soft surfaces

- The machine should be placed in a cool and dry place in the room. Avoid the place exposed to strong sunlight, otherwise it will easily cause aging of product parts.
- Do not allow young children to handle, touch, approach or climb. Children and people with intellectual disabilities should use it with a guardian.
- Do not use gasoline and other organic solution to wipe the fuselage, the product is strictly prohibited to wash, water. Do not put the product in contact with or near inflammable and explosive materials.
- In order to save electricity, disconnect the corresponding power switch when not in use for a long time, and clean the remaining sand in the machine. Install and fix the machine before it can be used.
- Do not connect the booster transformer to the power plug.
- The machine is not allowed to be used in the place where there is water spraying, and electrical appliances are not allowed to be used in the cabinet. The device should be at least 10cm away from the wall, and no other items should be placed on the bottom and surrounding areas.
- The product must be placed on a clean and flat hard surface, and should not be placed on soft carpets or floors, otherwise it may cause inaccurate weighing, machine malfunction, and inability to recognize cats.

! Indicates mandatory content



Need profession-
als

- It is strictly prohibited to extend the power cord arbitrarily to avoid fire
- If the power cord is damaged, it must be replaced by the manufacturer, maintenance department or professionals to avoid danger

⚠ May cause minor injury or damage to property

- When cutting off the power supply, do not pull the power cord directly to prevent it from being broken. Keep flammable and volatile substances away from the machine. In the transportation and loading and unloading process, should be handled lightly, prevent a collision scratch products and accessories.
- The machine shall not be installed outdoors. Should be placed in a ventilated, dry, temperature of 4-40 °C, relative humidity does not exceed 90%. In an environment without corrosive gases. Please use the special matching cat litter. After the machine is out of service, empty the cat litter in the bucket and the cat feces in the collection bin.
- Keep the power plug clean. Do not insert or remove the power plug with wet hands.
- There will be slight vibration and noise when the drum is rotating, which is a normal phenomenon.
- Wet or dusty areas may cause circuit damage. High magnetic appliances are nearby, which may cause fire, product damage or circuit failure.
- When moving the product, handle it gently and avoid dragging it.
- Do not place other items on the top of the product, which may affect the normal work of the product.
- The product can only be used on the special accessories provided by our company.
- Cats smaller than 3.3lb, please enable manual mode.

Precautions and Troubleshooting Causes for networking failure:

- To ensure smooth networking of the product, please ensure that the whole machine is installed in a place with strong wireless network.
- This equipment contains a radio transmitting module with model approval code CMIID:2020DP6462 and device model :WBR3.

Service guide

Product parameter

Due to product improvement, the following parameters are subject to change, mainly the product nameplate
The recommended ambient temperature is 4-40 degrees Celsius.

Model number	
Rated voltage	12V ===
Rated power	9W
Product size	535*535*600mm
Product package size	560*560*440mm
Litter Container Capacity	8L

Fault self-test

Note!

The following is the common judgment and inspection, if simple treatment cannot be eliminated, please send to the maintenance network or Call the customer service hotline for consultation. Please do not disassemble and repair by yourself to avoid danger or Cause damage to the product.

Problem	Cause	Treatment method
Networking failure	The product is not energized.	Electrify the product
	No network exists in the place where the product is located	Check whether there is a network
	The phone did not turn on Bluetooth	Turn on Bluetooth
	WiFi is not a 2.4G signal	WiFi is adjusted to 2.4G signal Press and hold the Wi-Fi button to refresh the network
The product is energized, and the drum does not rotate	Product accessories are not installed in place; The required adapter is not used	Check and reinstall product accessories; Check that the adapter power matches that of the machine nameplate
The cleaning button turns yellow and the light flashes	The product senses weight	Check the weight of the object in the drum; Check the machine and drum for foreign objects
The product cleaning button is steady yellow	The infrared induction of the collection bin is triggered, and the APP pop-up prompts "the collection bin is full"	Clearing the collection bin; Check whether the collection bin sensor is blocked by foreign objects

10 The "environmental protection life" of this product under normal conditions described in the manual is 10 years, which is quoted from the "Guidance Opinions on the Environmental Protection Life of Household Appliances" of China Household Electrical Appliances Association

Skills:

- 1. The machine is placed on a flat hard ground, and there are four black parts on the bottom that should be in contact with the same plane.
- 2. Make sure the cat weighs more than 1kg, otherwise it may cause the cat to be injured.



Warranty instructions

Maintenance service guarantee

In case of product failure, please contact our local distribution service network or customer service center. The litter box is guaranteed for one year. Consumables are not covered by warranty, please purchase them by yourself after use.

The start date of the warranty period is subject to the invoice of the product. The following conditions are not covered by the warranty:

1. Damage caused by improper use, storage and maintenance of consumers.
2. Damage caused by disassembly and repair without the company's designated maintenance department.
3. The model of the invoice is inconsistent with the model of the maintenance product or altered.
4. No valid invoice.
5. Force majeure causes damage.
6. We are not responsible for the quality accidents caused by the non-standard gifts or accessories of our company.
7. This product is used for non-household purposes, the whole machine warranty will be implemented for half a year.
8. Failure caused by human or improper use is not covered by warranty.
9. Please use the spare parts provided by our company. Old parts cannot be reused.
10. Failure or damage caused by forced use of the product beyond normal conditions is not covered by the warranty. For products not covered by warranty, our customer service center is still willing to serve you.

Product implementation standards:
GB 4706.1-2005

Note!

All contents in this manual have been checked. If there is any typographical error or misunderstanding in the content, please refer to the company. If there is any technical improvement, it will be included in the new manual without prior notice. If the appearance and color of the product are changed, the physical object shall prevail.

Warranty Card (customer deposit)

Product Name _____ Specifications and Models _____

Date of Purchase _____ Invoice No _____

Purchase address and Mail _____

User Name _____ Contact Number _____

User Address _____

Description

- 1.To facilitate accurate contact and protect your legitimate rights and interests, please fill in the above information carefully.
- 2.This warranty card shall be valid only after being verified and confirmed by the salesperson on site and the user.
- 3.This warranty card shall be used as the warranty basis together with the valid purchase certificate.

Warranty, replacement parts registration form

Model/Article No _____ The product number _____

Date of Purchase _____ Invoice No _____

Purchase address and Mail _____

User Name _____ Contact Number _____

User Address _____