 
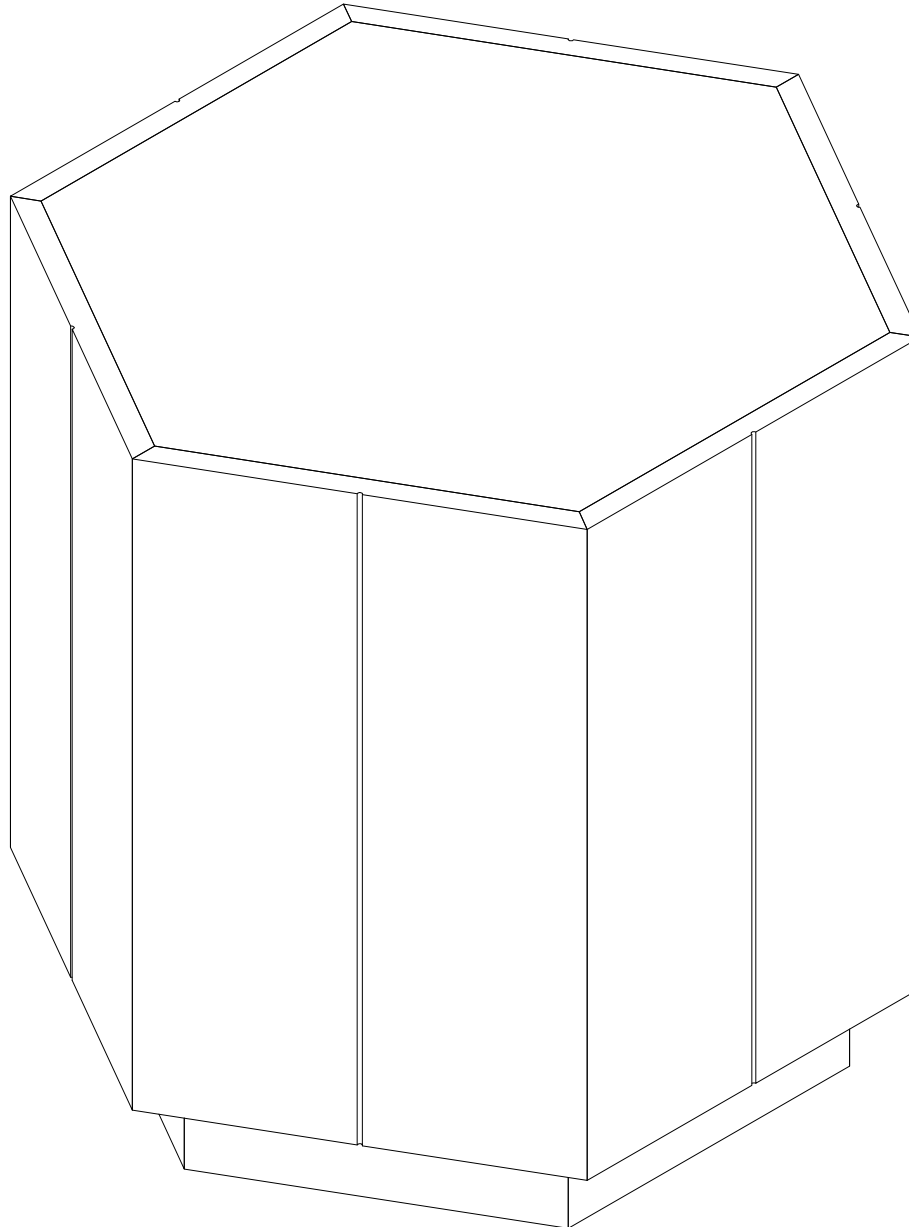 
 
 




User Manual

ASSEMBLY INSTRUCTION







Parts List




NO.	Drawing	Dimension	QTY
1		485*420*15mm	1
2		485*420*15mm	1
3		485*420*15mm	1
4		385*420*15mm	1
5		385*420*15mm	1
6		440*260*15mm	5

  NO.	Drawing	Dimension	QTY
7		440*260*15mm	1
8		350*200*15mm	1
9		350*200*15mm	1
10		156*200*15mm	1
11		166*344*4mm	1
12		220*70*25mm	6

  
Hardware Fitting

NO.	Drawing	QTY
A		32
B		32
C	 3.5*14mm	8
D	 3.5*35mm	4

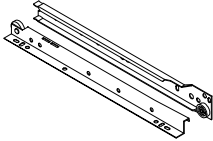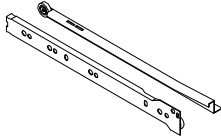  
NO.	Drawing	QTY
E	 6*25mm	2
F	 6*75mm	12
G		1
H		1
I		1

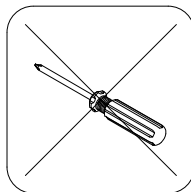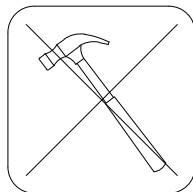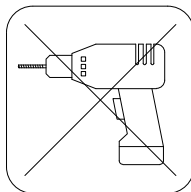   

Split Graph

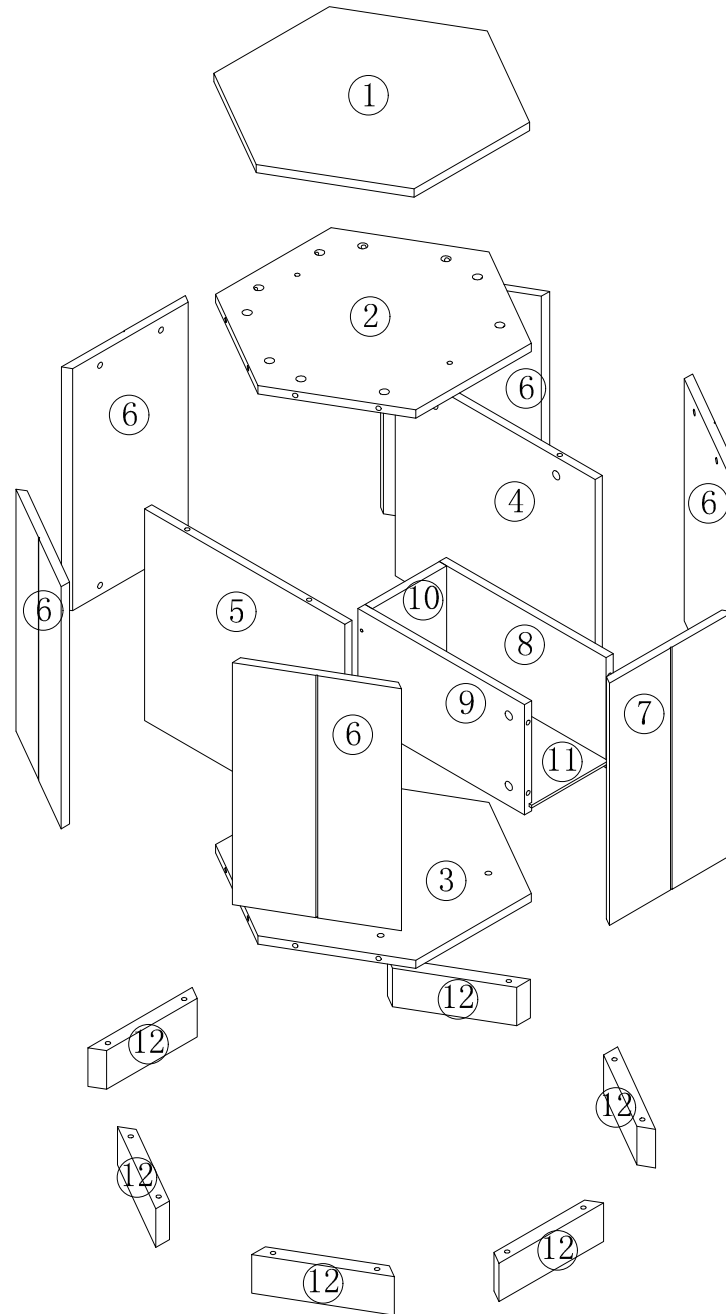 


Cam Coupling Using Methods

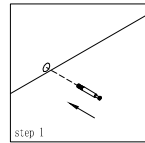 


Step1.

 Connect the cam coupling A as directed in the assembly instructions using hand.

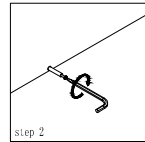


Step2.

 Screw the cam coupling A as directed in the assembly instructions.

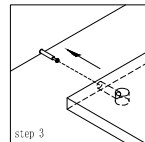


Step3.

 Push the cam coupling A into the entry hole.

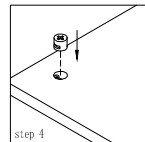


Step4.

 Insert the cam coupling B as shown in the instructions.

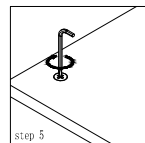


Step5.

 Turn the cam coupling B clockwise with a screwdriver

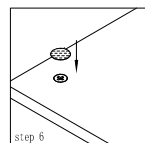

Step6.

 
Put on Beautycam.

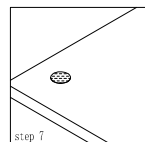



Step7.



Finished.

  
You should feel a click when the camlock is locked in place.
The joint is now secure.

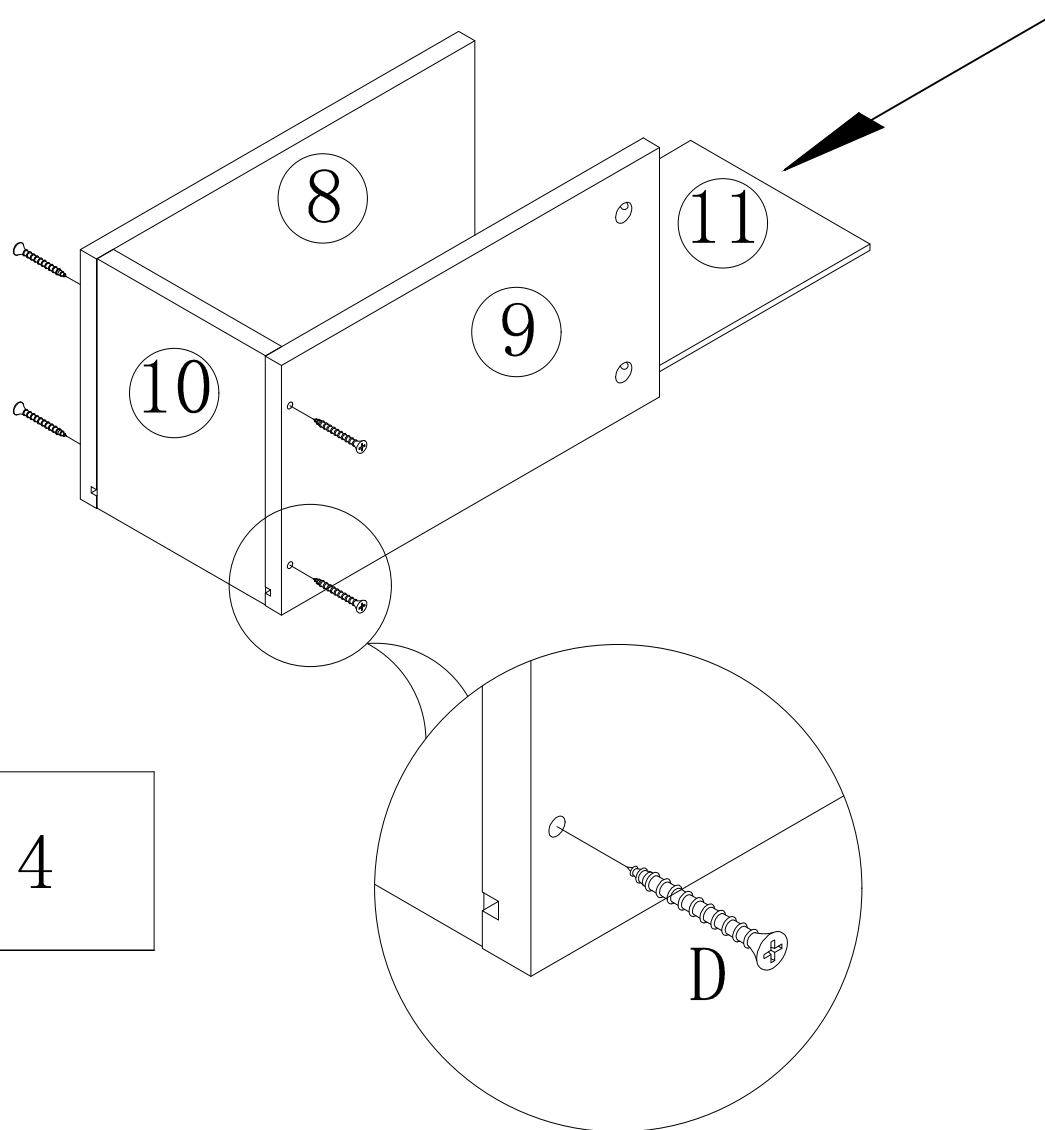




D	 3.5*35mm	4
---	---	---

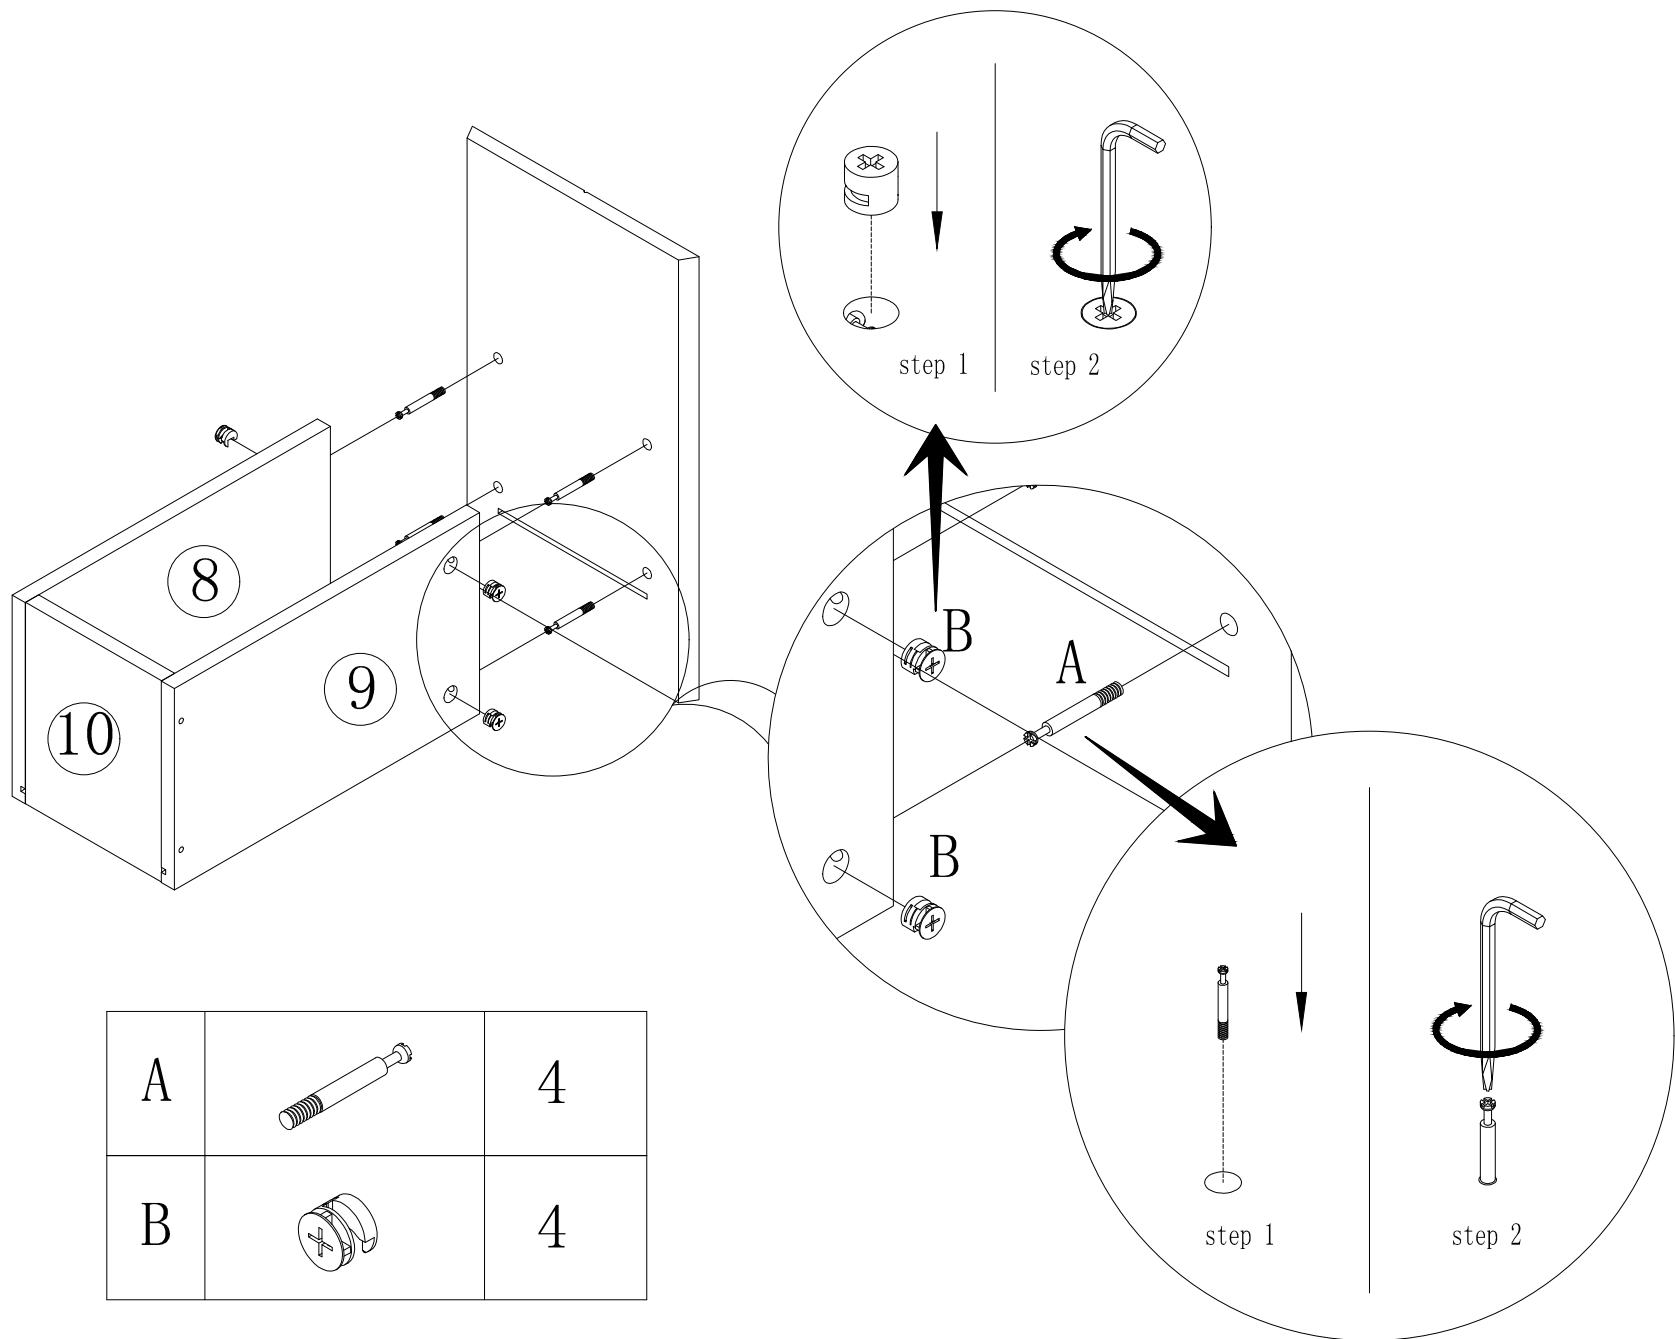 


  
C	 3.5*14mm	4
G		1
H		1

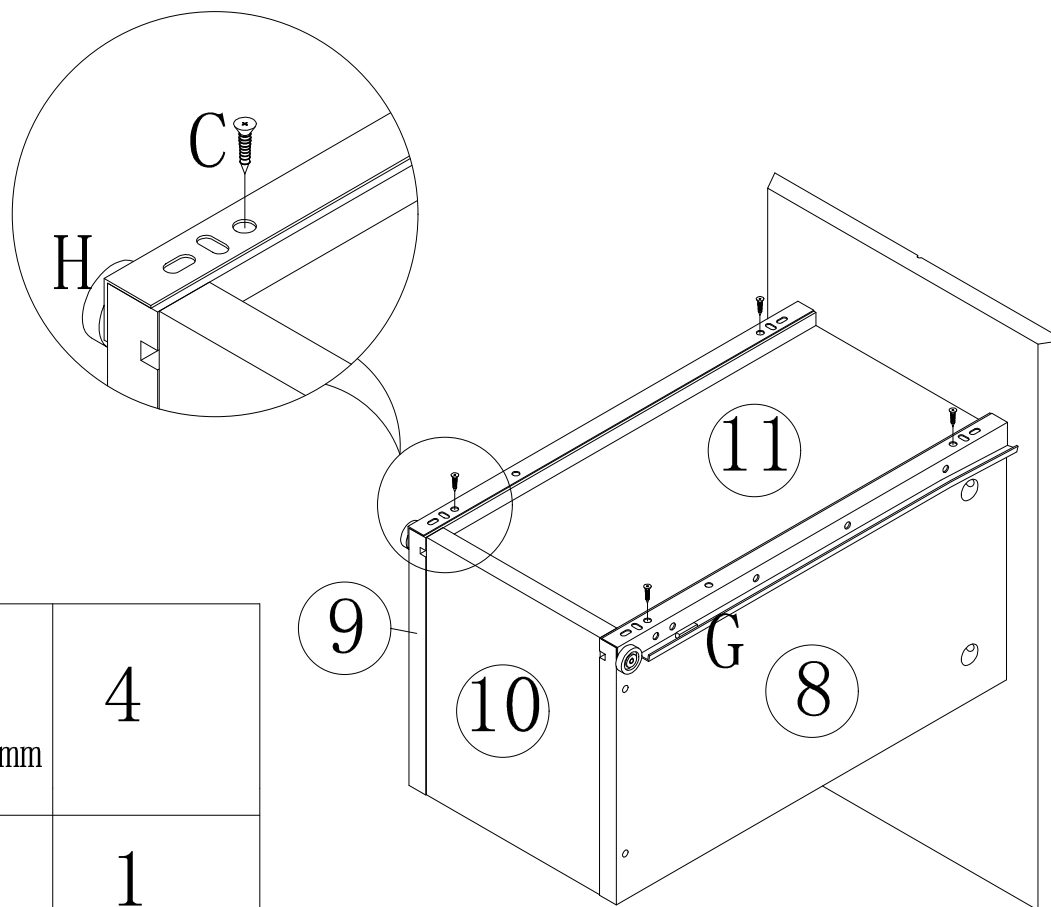 


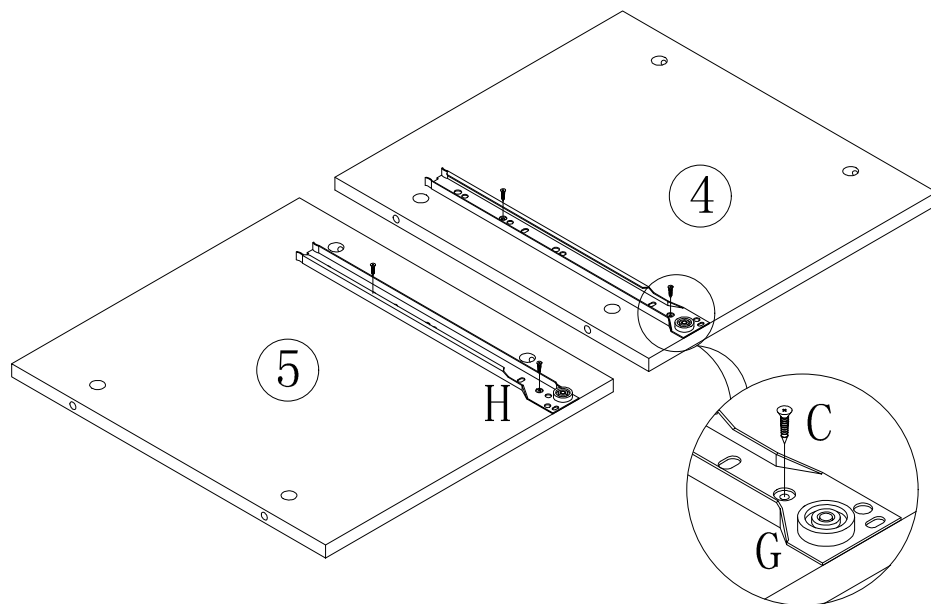 


  
C	 3.5*14mm	4
G		1
H		1

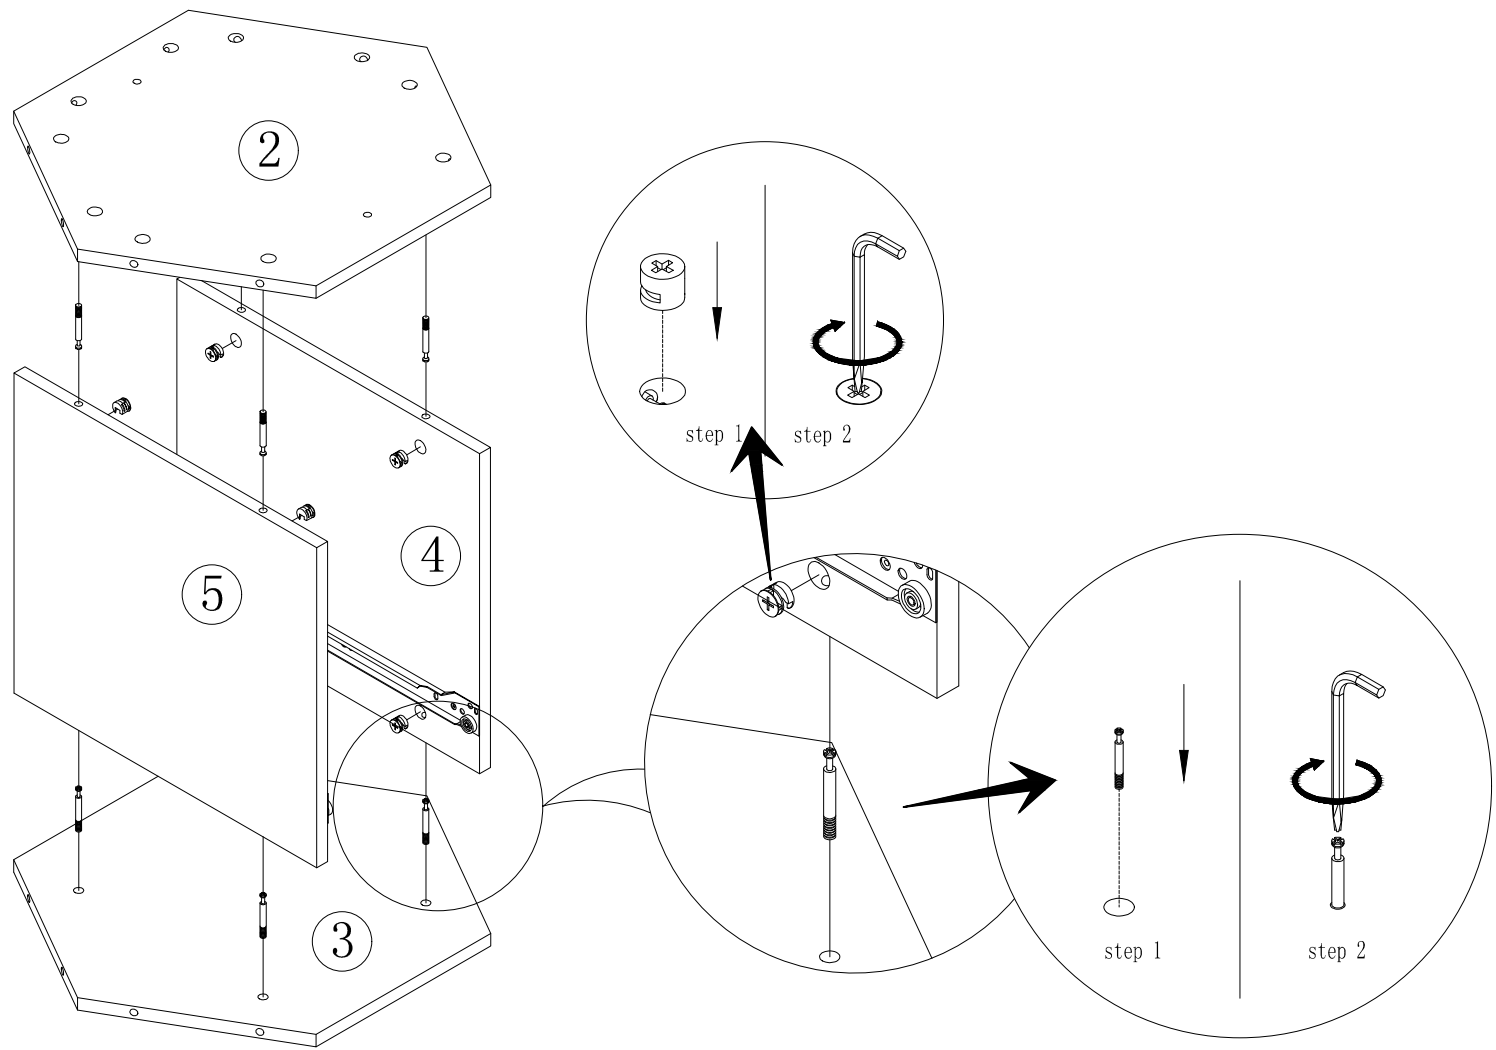 

 A		8
B		8

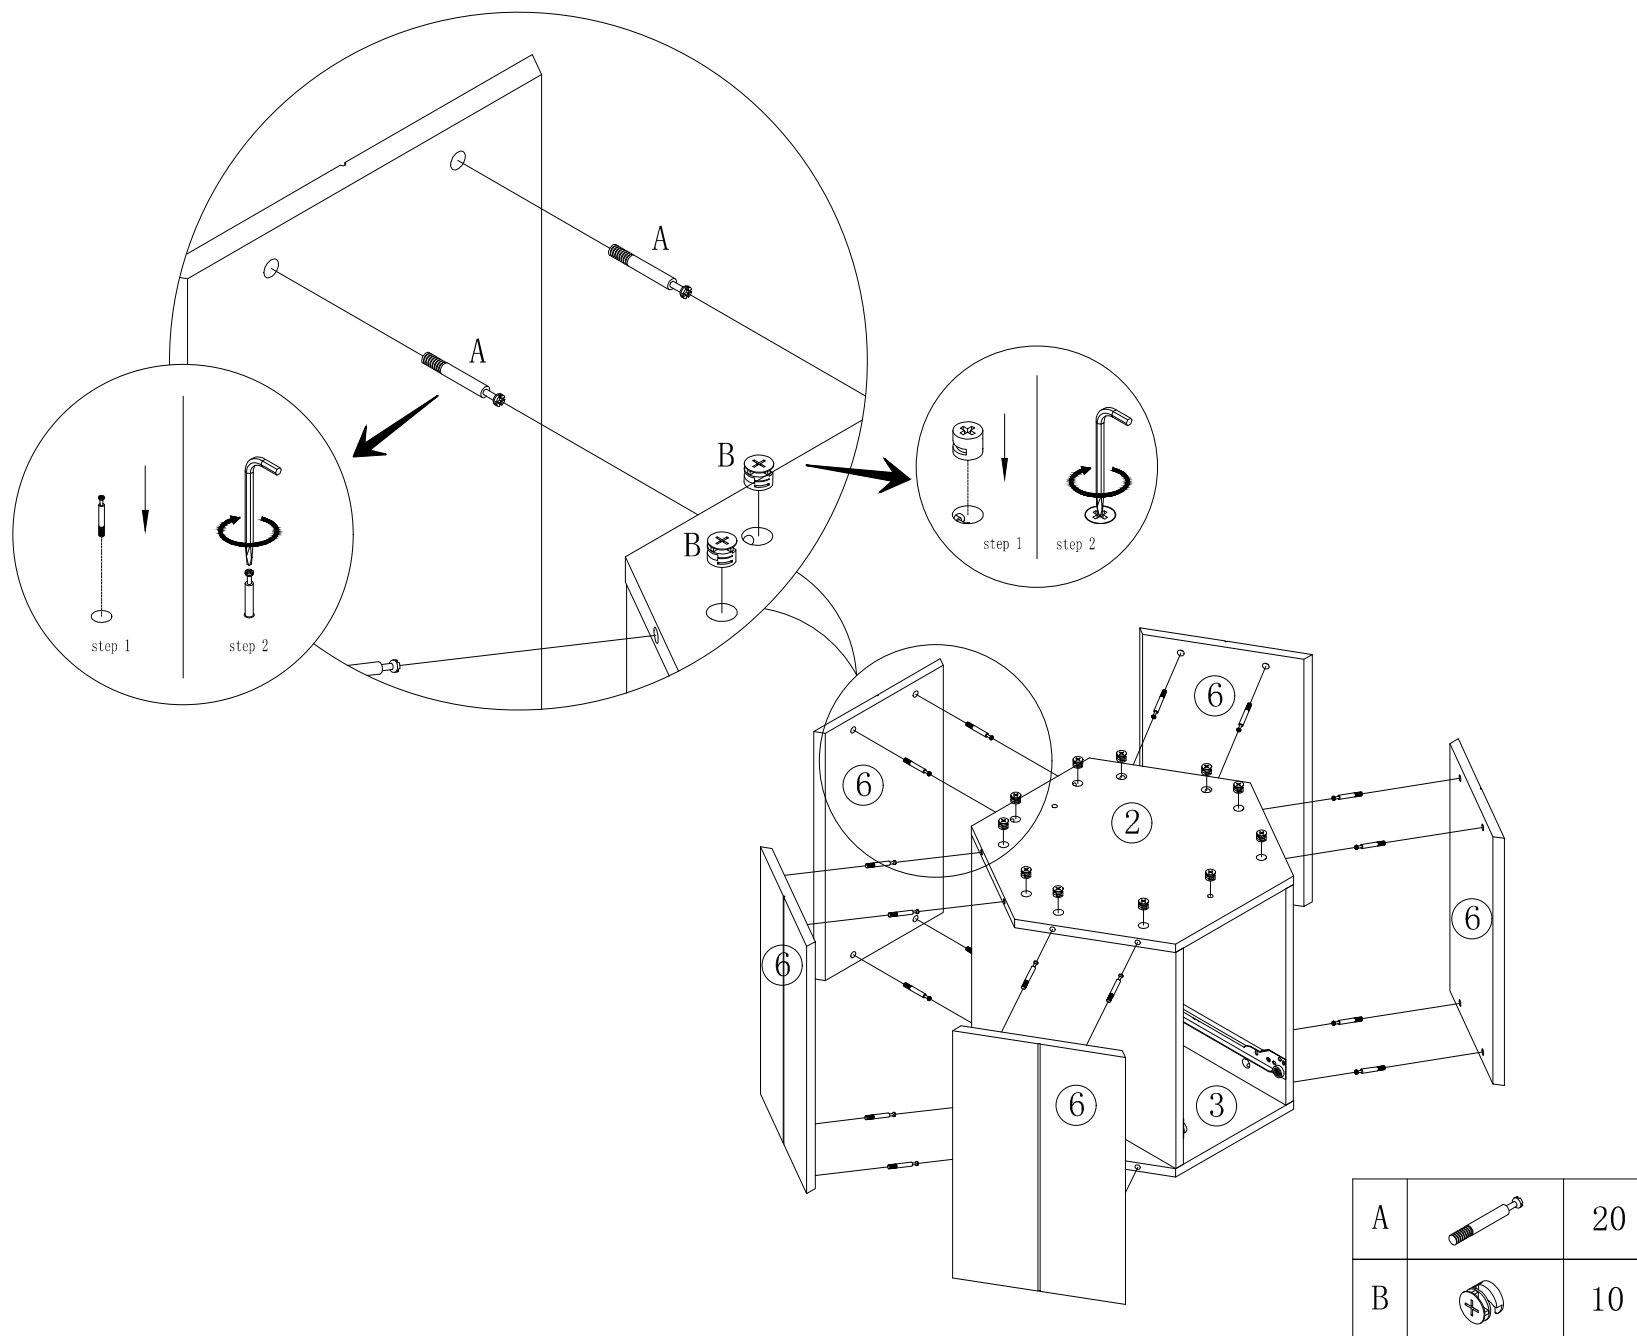 

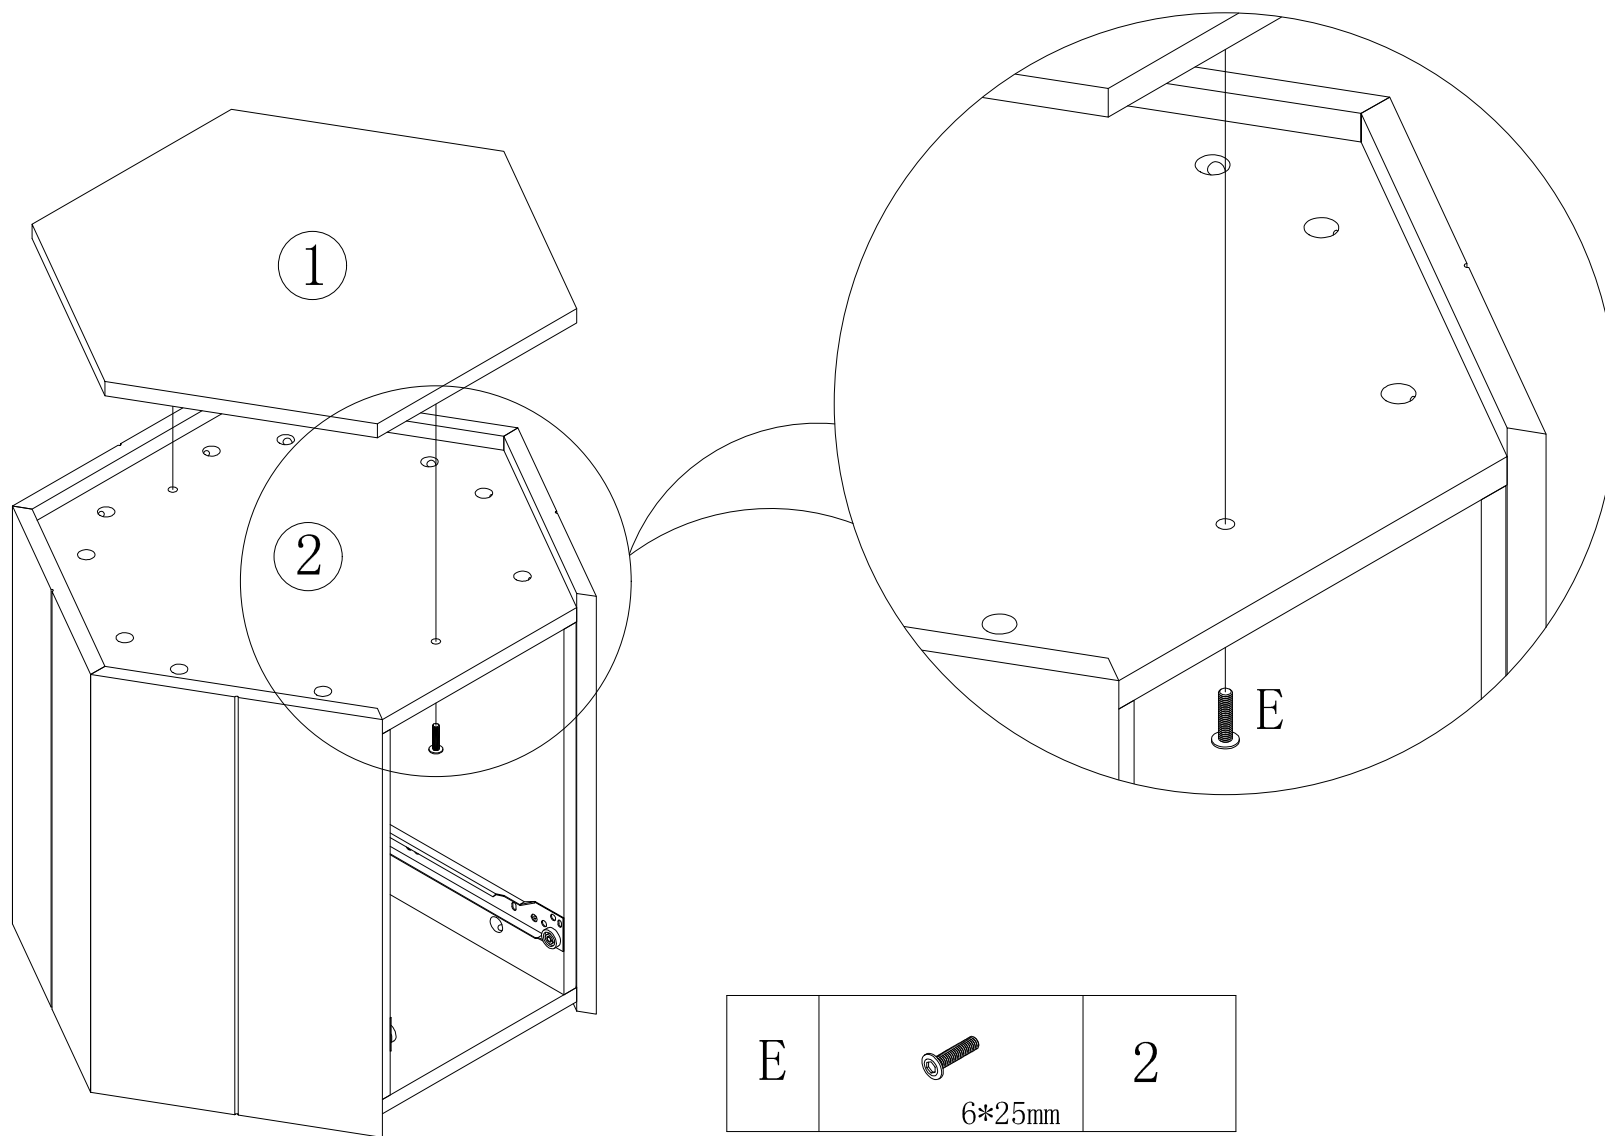 

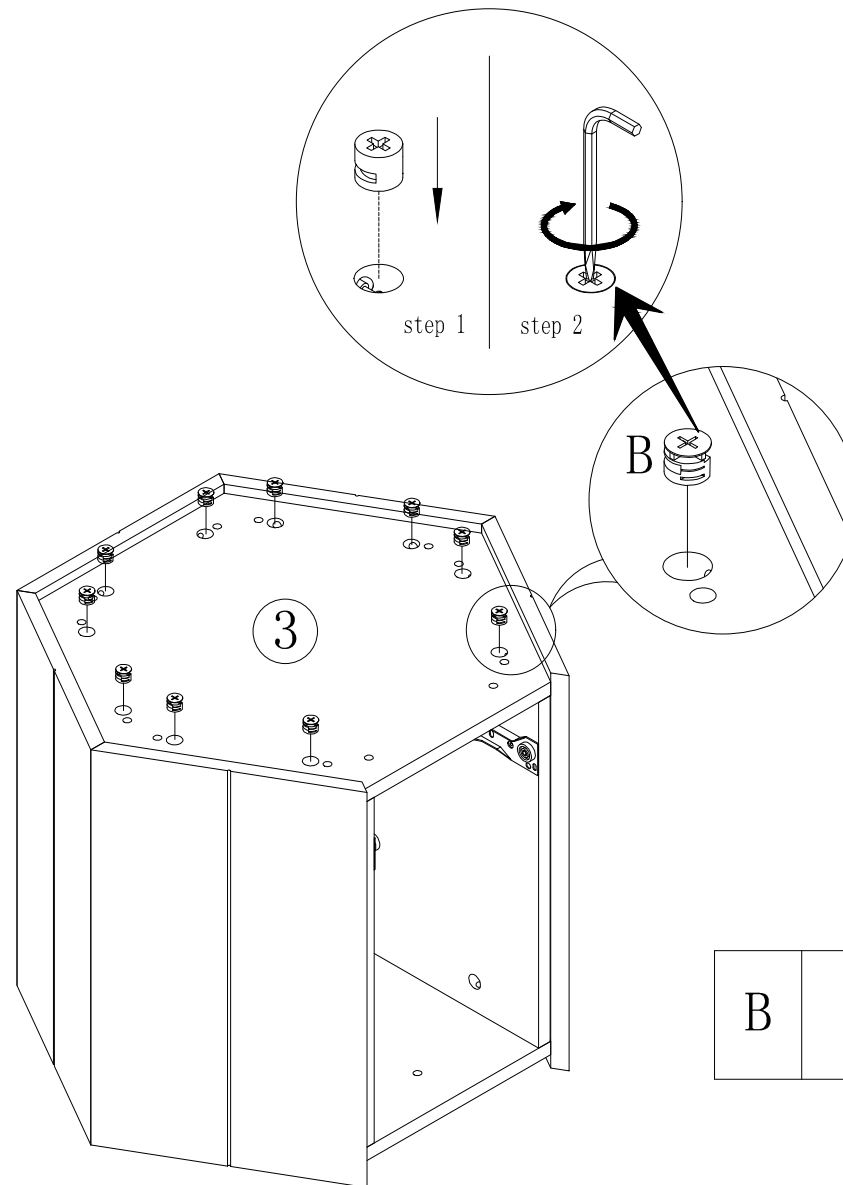 

B		10
---	---	----

