



Ax2	Bx1	Cx1	Dx1	Ex2	
Fx2	Gx4	Hx2	Ix1	Jx8 6x35mm	
Kx8 8x25mm	Lx40 6x16mm	Mx48	Nx1	Ox8	Px48
SPARE(Ersatzteile)					
Jx1 6x35mm	Kx1 8x25mm	Lx1 6x16mm	Mx1	Ox1	
Px1					



### Step1

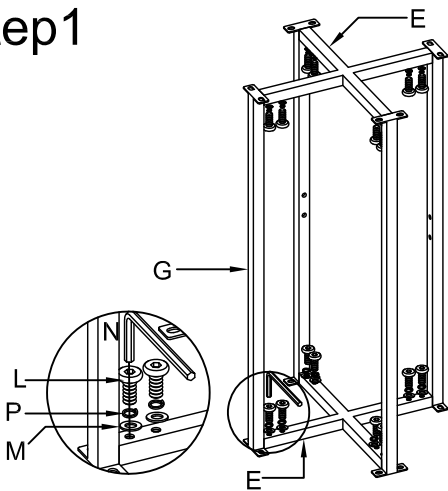

 
### Step2

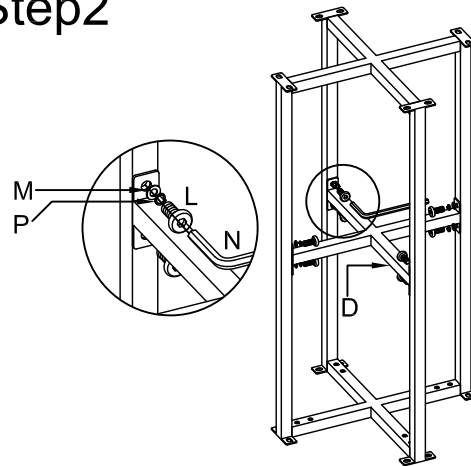



### Step3

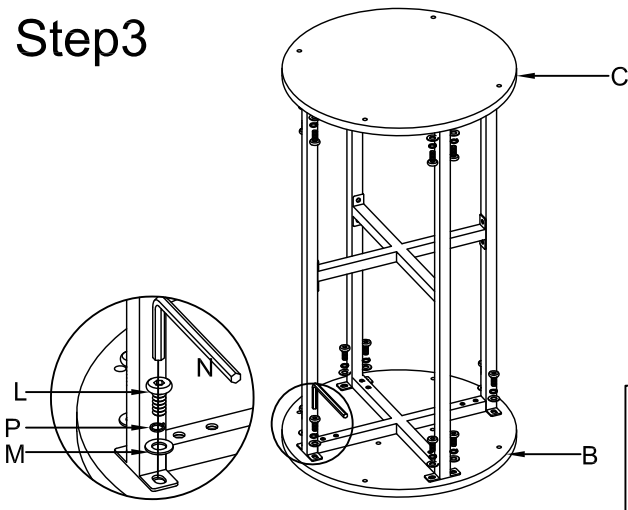

### Step4

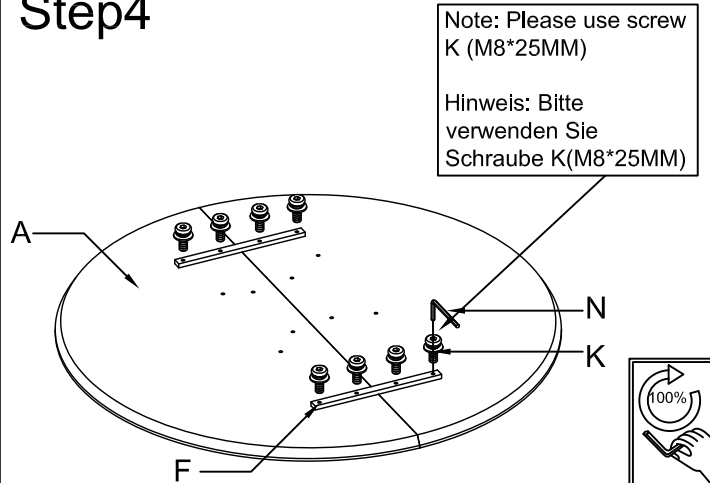

### Step5

 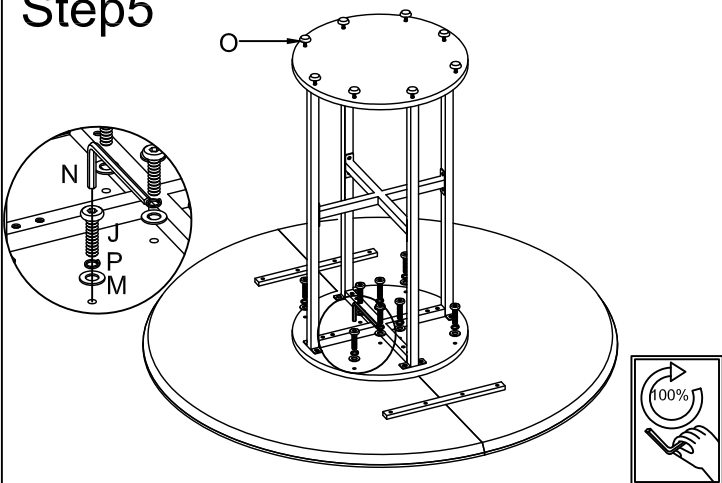

### Step6

