


ASSEMBLY INSTRUCTIONS

PARTS LIST

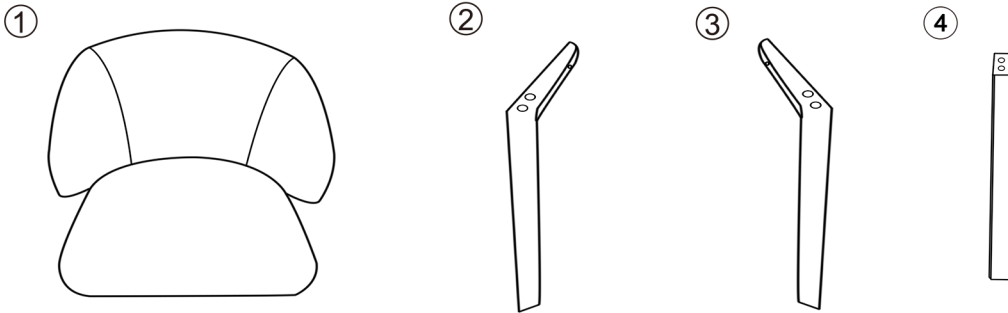


Part	Description	Qty
1	Seat Frame	1
2	Rear Leg (left)	1
3	Rear Leg (right)	1
4	Front Leg	2

HARDWARE LIST


Part	Diagram	Description	Qty
A		Blot M8x45MM	8
B		Blot M6x45MM	2
C		Spring Washer	8
D		Flat Washer	8
E		Allen Key	1
F		Plastic cap	2

①

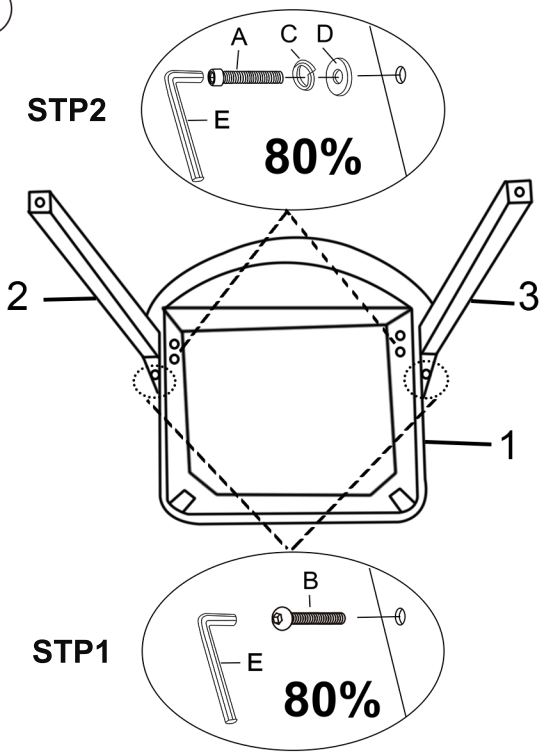


Put the screws in the holes, tight the screws, but not too tight, 80% is ok.

②

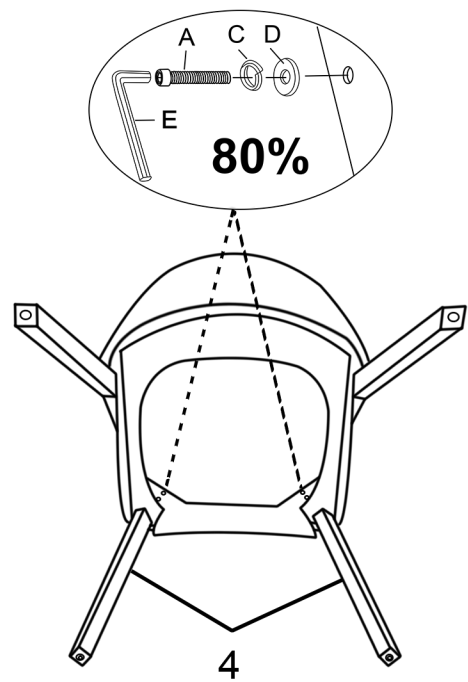


Put the screws in the holes, tight the screws, but not too tight, 80% is ok.

③

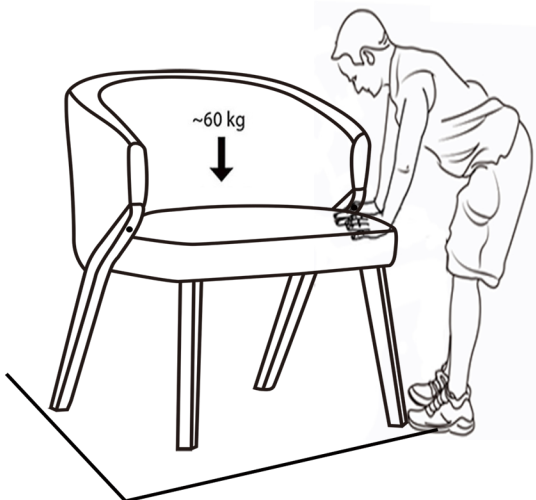

Ensure the chair is placed on a level surface.
Put a load of approx. 60KG on to the seat.
Adjust until all 4 legs are level –
before you carefully tighten the screws.

④

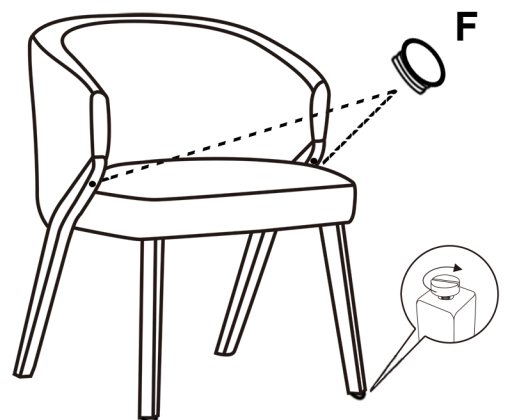

Turn the pin at the bottom of the front legs to make chair level.
NOTE! The screws must be tightened after a period of use, and thereafter as required.