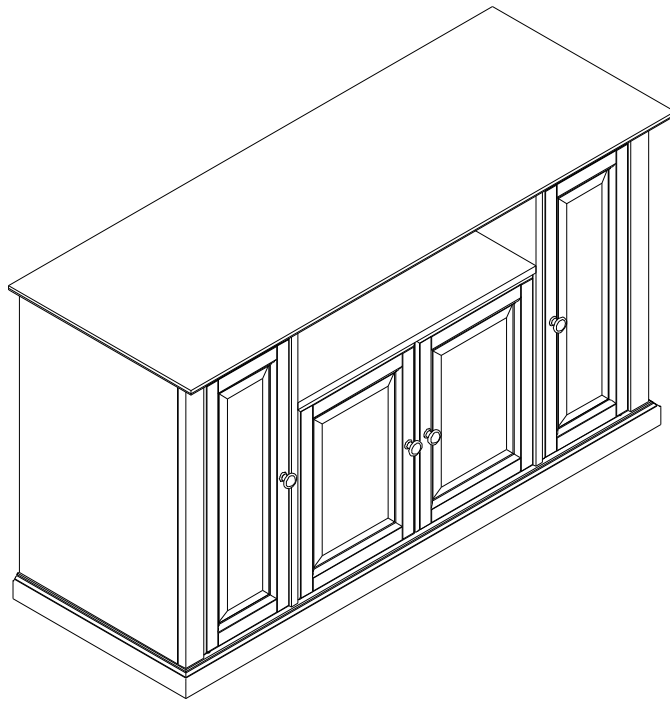 




















60" TV Stand Cabinet











Congratulations! You have purchased a stylish piece . We strive to provide fine furniture products, built with quality materials and hand finished details. Please carefully follow the assembly instructions to ensure your furniture is assembled correctly to provide long lasting enjoyment.

Care: Use a soft clean cloth that will not scratch the surface when dusting. Use of furniture polish is not necessary. Should you choose to use polishes, test in an inconspicuous area first. Use of solvents of any kind may damage your furniture's finish. To clean, simply use a soft clean cloth moistened with lukewarm water, then buff with a dry soft clean cloth.

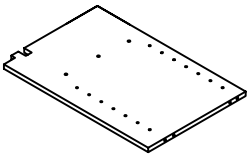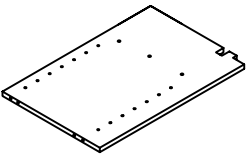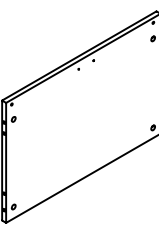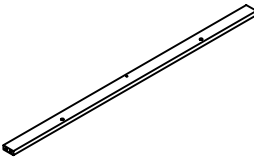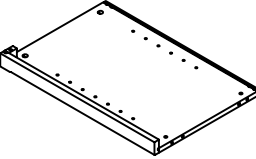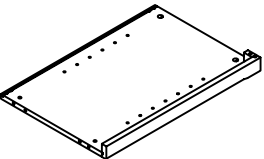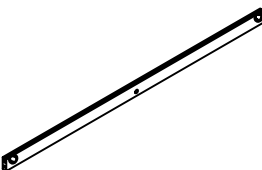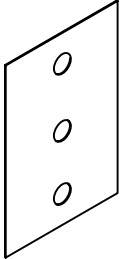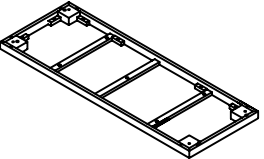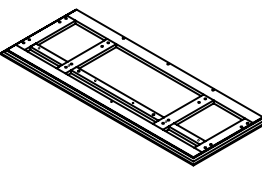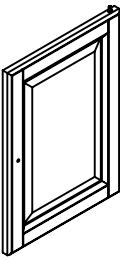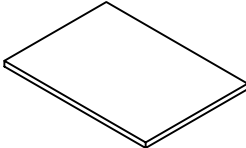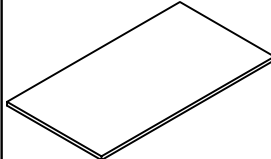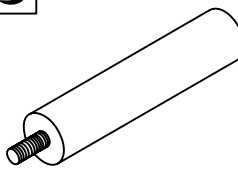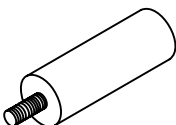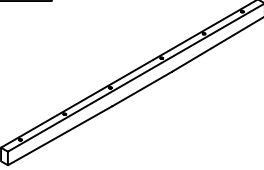                  PART LIST

A 	B 	C 	D 	E 
1 PC	1 PC	1 PC	1 PC	1 PC
F 	G 	H 	I 	J 
1 PC	2 PCS	2 PCS	1 PC	2 PCS
K 	L 	M 	N 	O 
1 PC	1 PC	1 PC	1 PC	1 PC
P 	Q 	R 	S 	T  For use only with Bun Foot
1 PC	4 PCS	1 PC	1 PC	1 PC
U 				
1 PC				

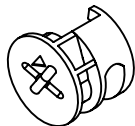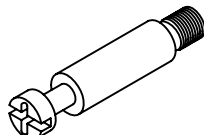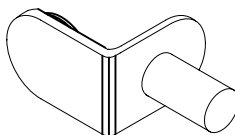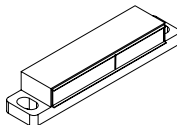        
HARDWARE LIST

1		2		3		4	 1-1/4"*Ø4*D8mm	5	
CAM LOCK 20 PCS		CAM BOLT 20 PCS		WOOD DOWEL 42 PCS		SCREW 9 PCS		HEX SOCKET HEAD BOLT 8 PCS	
6		7		8		9		10	
BARREL NUT 8 PCS		SHELF HOLDER 20 PCS		KNOB 4 PCS		ROUND HEAD BOLT 4 PCS		DOOR CATCH 2 PCS	
11		12		13					
MAGNET 1 PC		ROUND HEAD SCREW 6 PCS		ALLEN KEY 1 PC					




Tools needed: Allen key (part #13)(included)
Phillips Head Screw Driver (Not included)

Note: Wood dowels are intended for alignment purposes only when assembling your furniture. Additional clearance between the wood dowel & pre-drilled hole is intentional for ease of assembly.

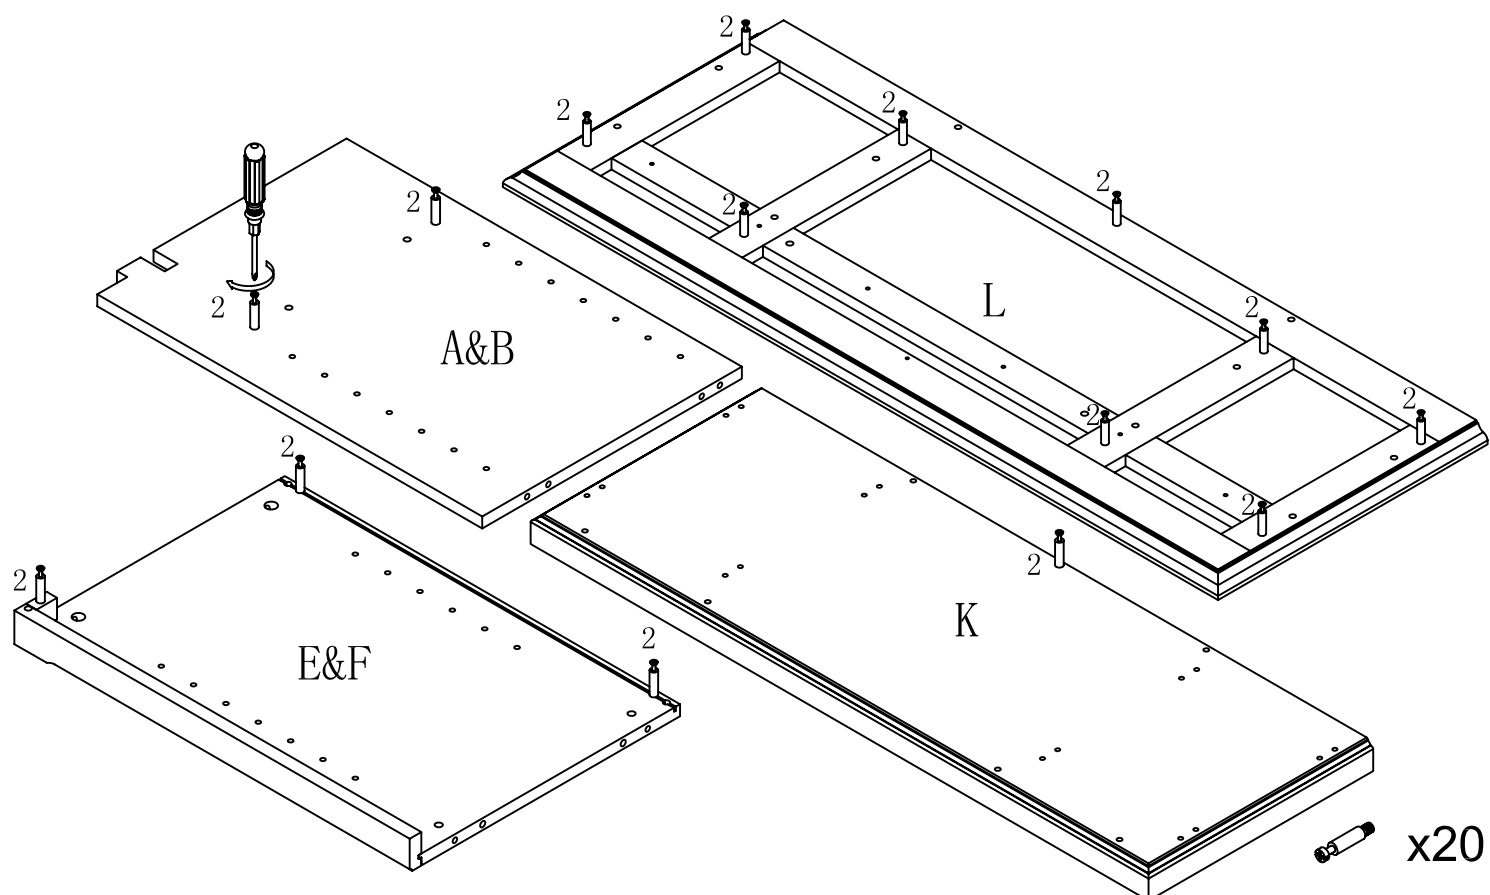 
Step 1. Insert Cam Bolts (part #2) into pre-drilled holes of parts A,B,E,F,K & L using a Phillips head screw driver.



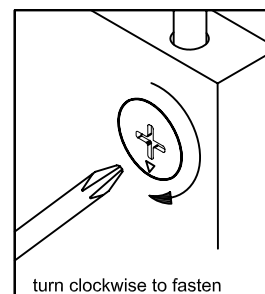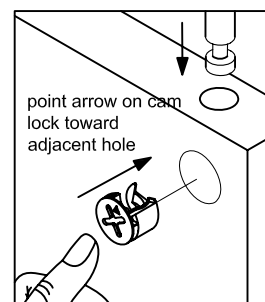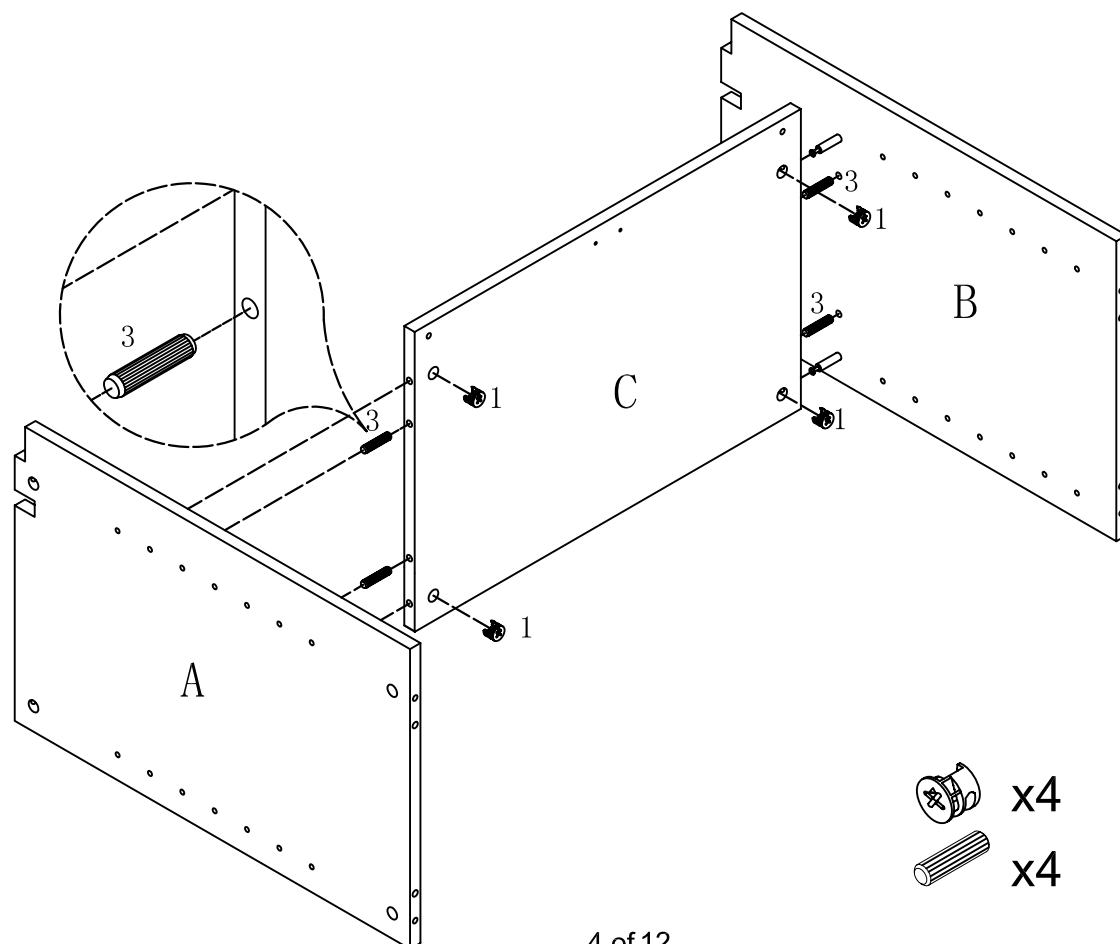   
Step 2. Attach panels A & B to shelf C using Cam locks & wood dowels as shown.



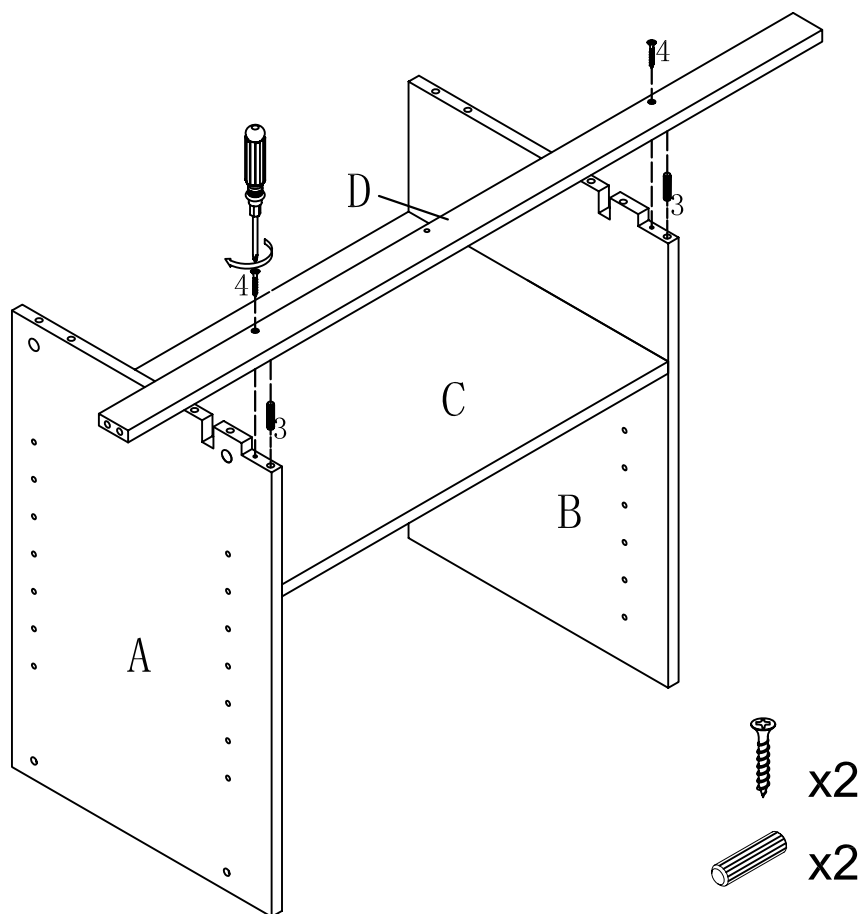 
Step 3. Turn assemble parts A,B & C upright with notched cutouts facing upward. Attach Rail D using Wood Screws (part #4) & Wood dowels as shown.



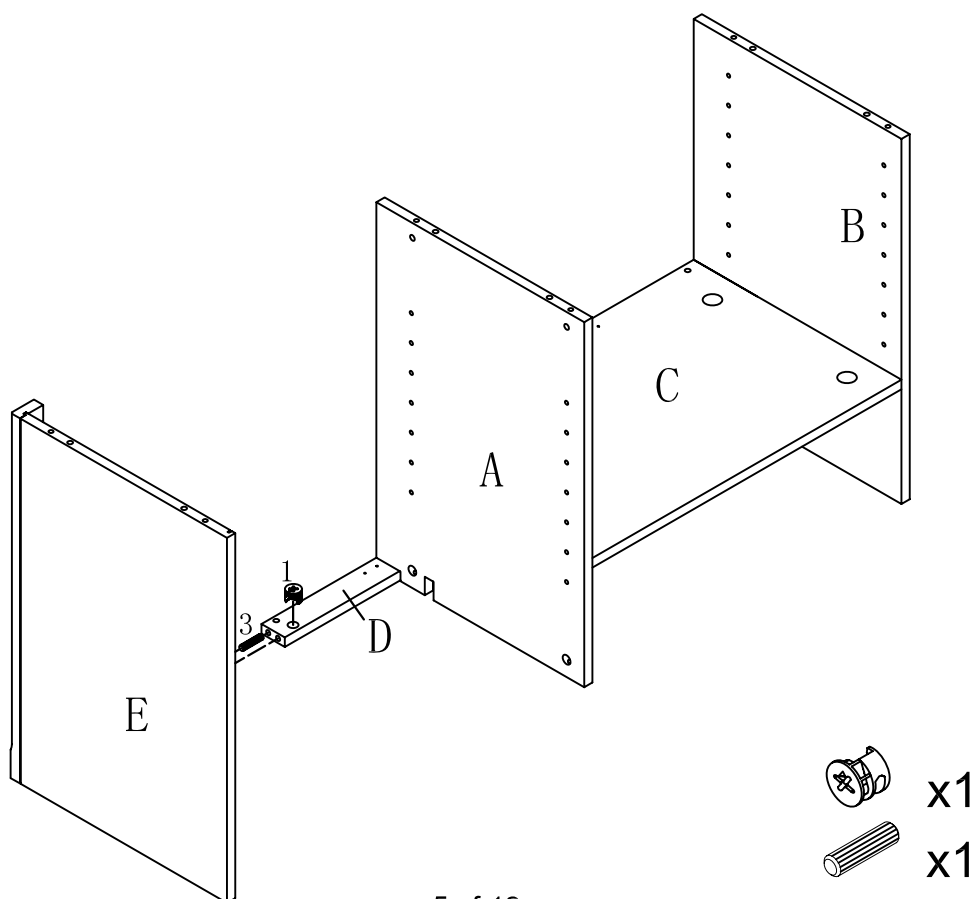 
Step 4. Turn unit over with Rail D flat on floor as shown. Attach Panel E to Rail D using Cam lock & Wood dowel as shown.



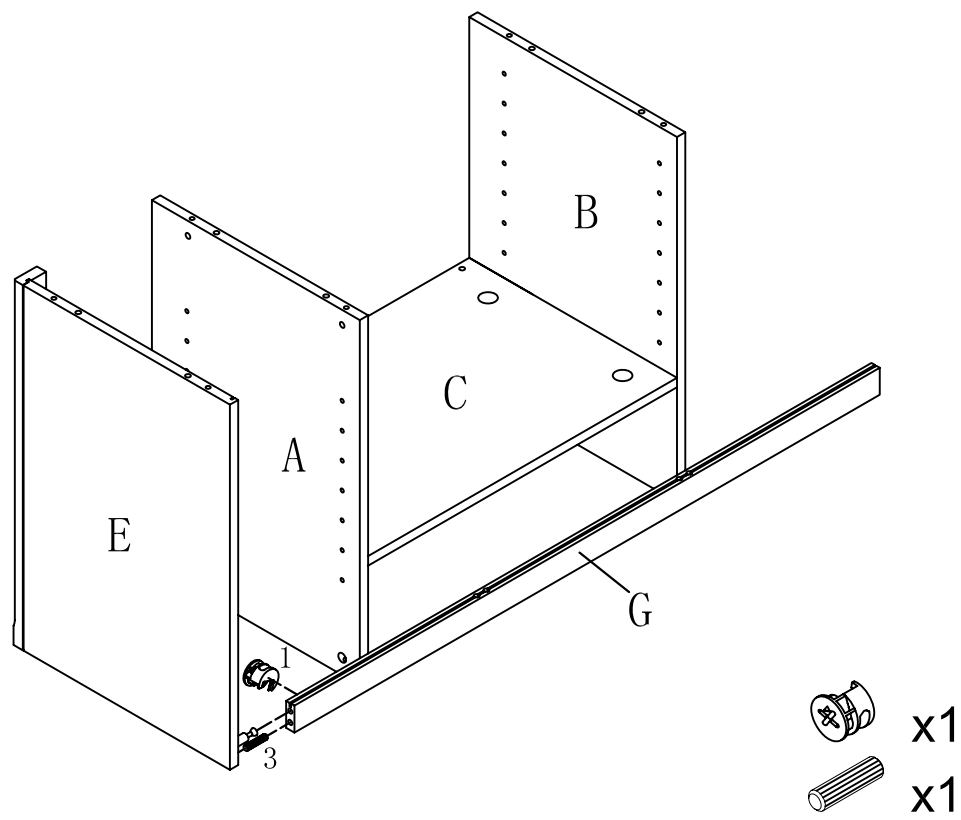 
Step 5. Attach Rail G to the unit using Cam lock & Wood dowel as shown.



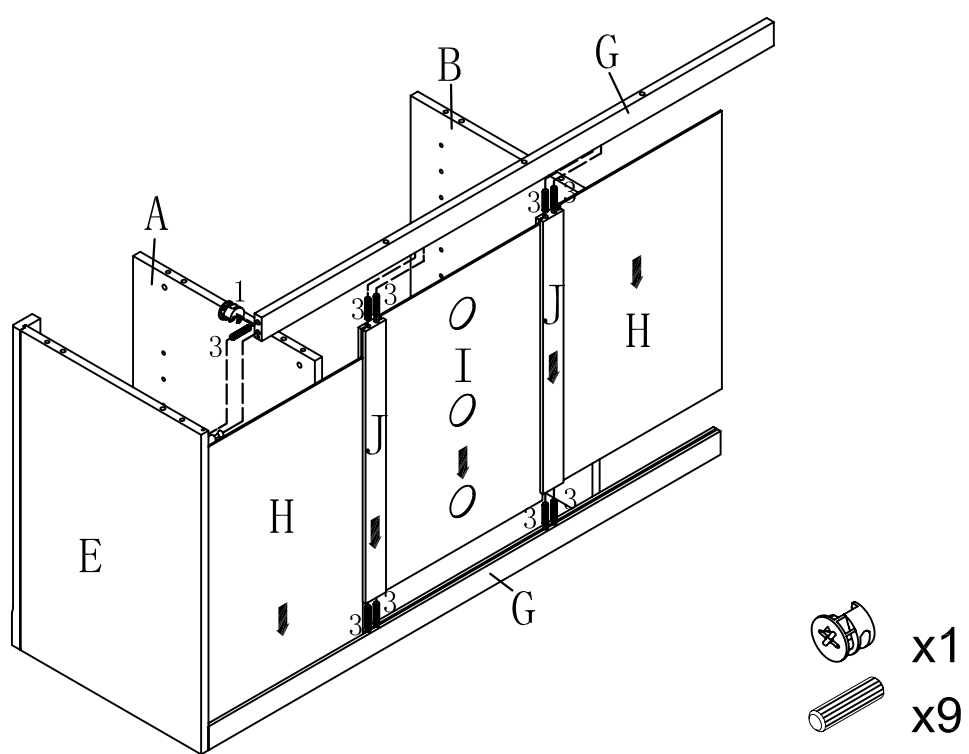 
Step 6. Place Rails J into place on Rail G using Wood dowels as shown. Slide Back panels H & Panel I into the grooves as shown. Insert Wood dowels into the top end of Parts J. Attach rail G to Panel E & Rails J using Wood dowels & Cam lock as shown.



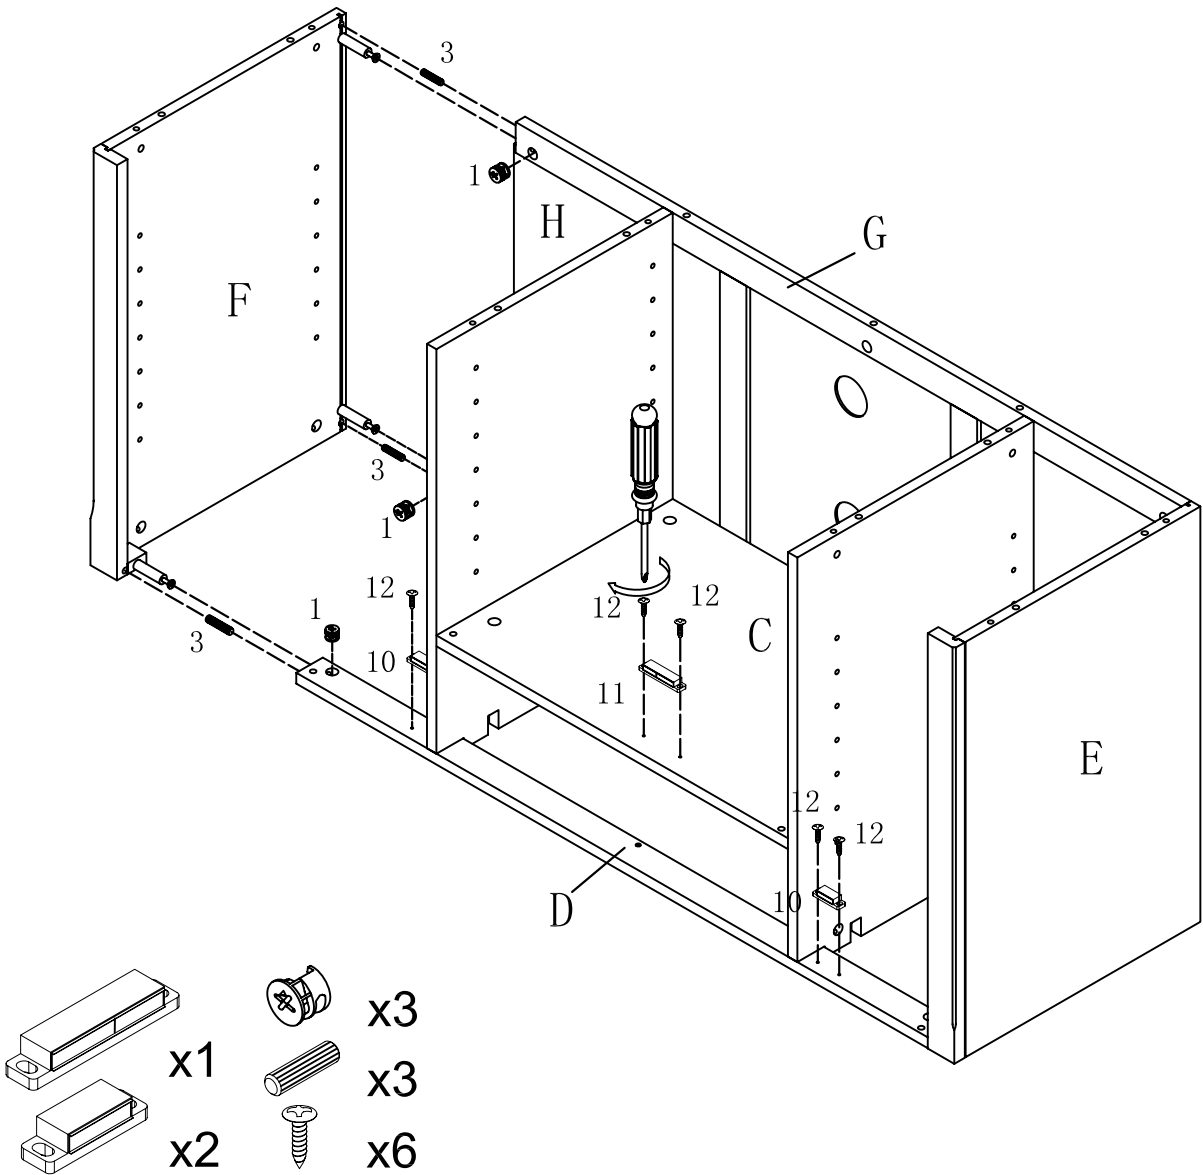 
Step 7. Attach Side Panel F using Wood dowels & Cam locks as shown. Attach Magnet (part #11) to Shelf C using Round Head screws (Part #12) as shown. Attach Door Catch Magnet (Part #10) to Rail D using Round Head Screws (Part #12) as shown.



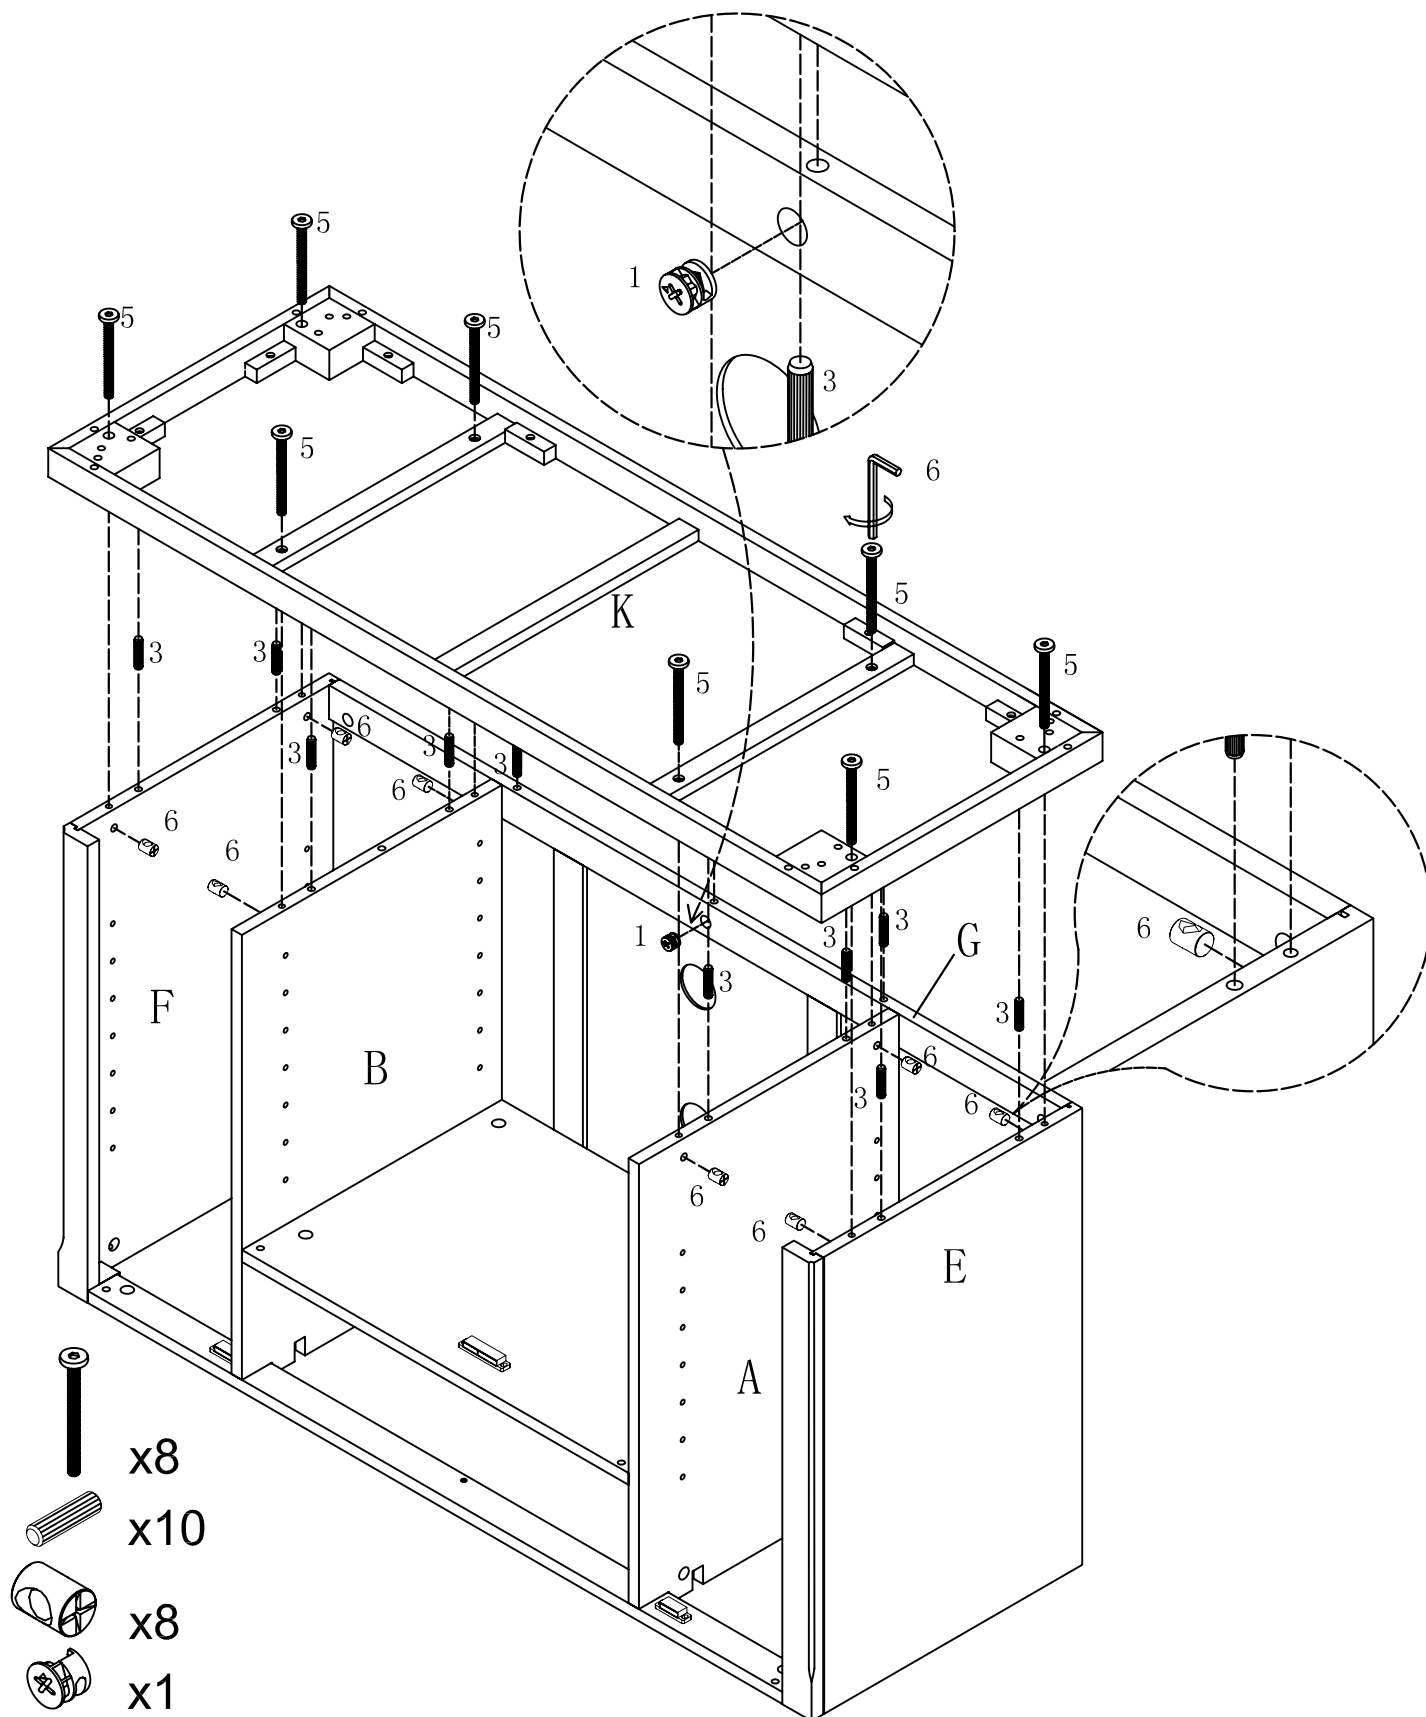 
Step 8. With bottom side facing up, attach Base K to cabinet using Wood Dowels, Hex Socket Head Bolt (Part #5) & Barrel Nuts (Part #6) as shown. Attach legs using Hex Socket Head Bolts & Wood dowels (as shown in instruction manual included in carton with legs). **IMPORTANT! - DO NOT ATTACH THE CENTER SUPPORT LEG AT THIS TIME.** Carefully turn cabinet over so that Base K is now on the bottom.



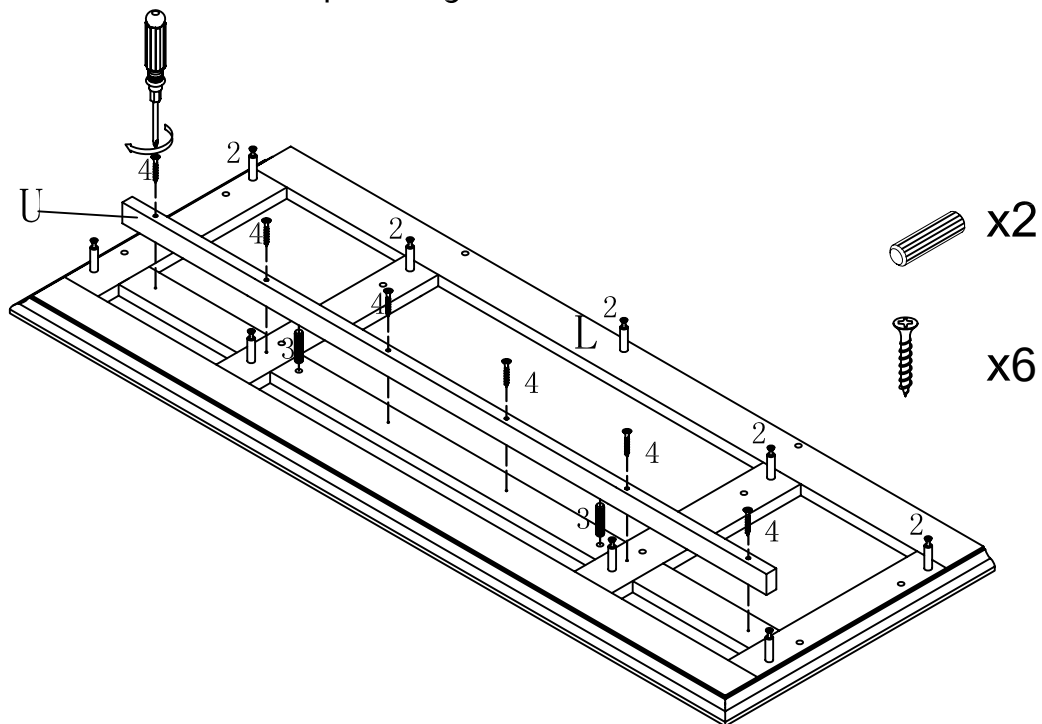 
Step 9. Attach Rail U to Top L using Wood Dowels & Screws as shown.



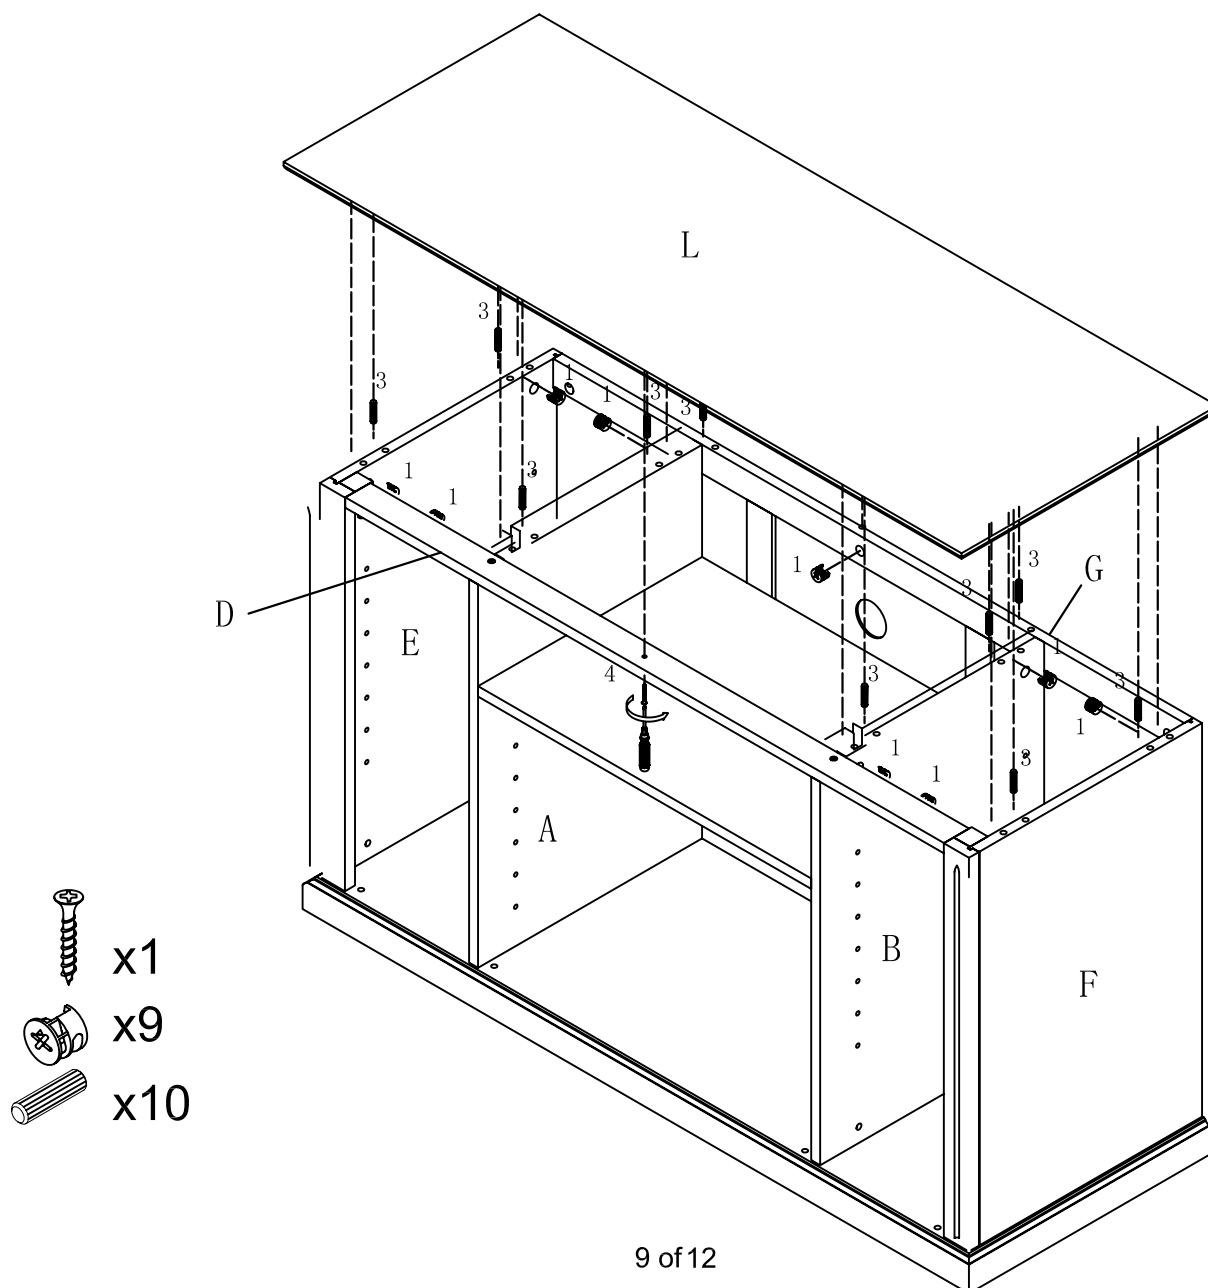 
Step 10. Attach Top L to cabinet using Wood Dowels & Cam Locks as shown. Secure Rail D to Top L using one Wood Screw (Part #4) through pre-drilled hole as shown



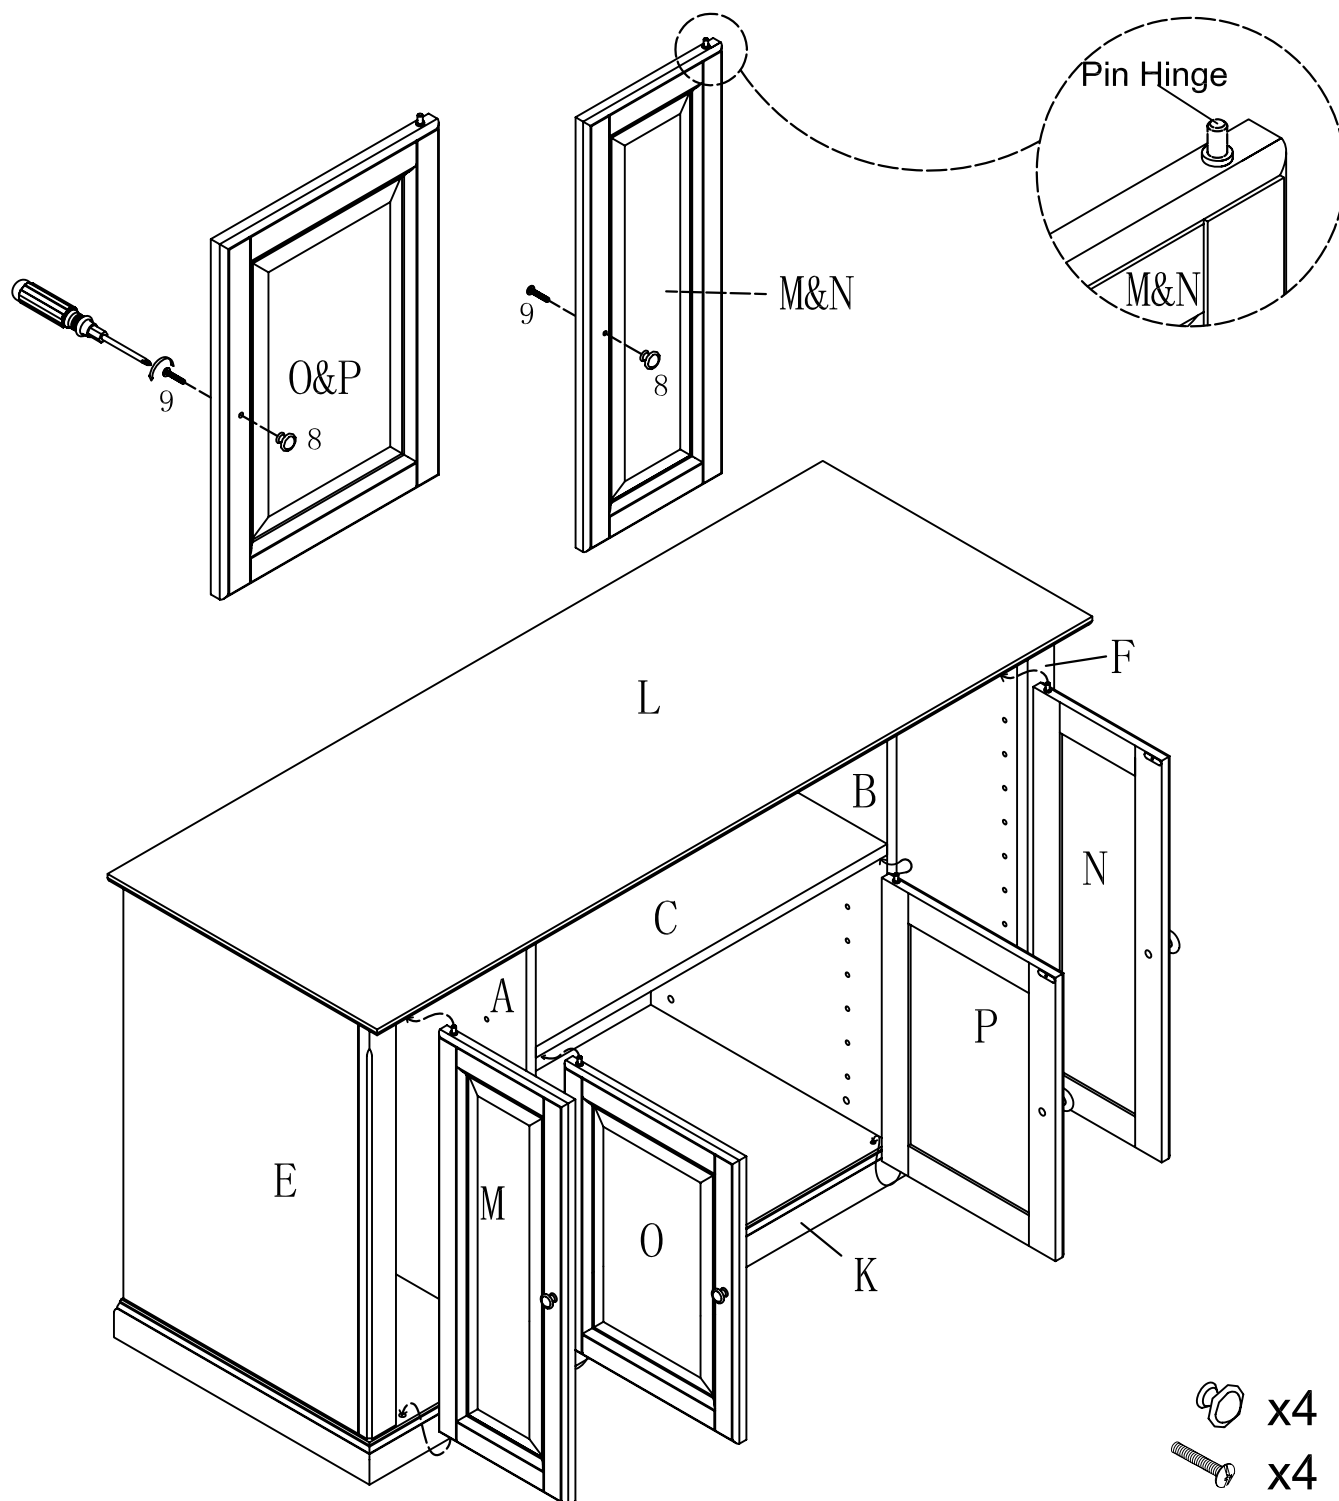 Step 11. Attach hardware knobs (Part #8) to Doors M,N,O&P using Round Head Bolts (Part #9) and a Phillips Head screw driver. Attach doors to cabinet by placing bottom Pin Hinge into pre-drilled holes at the bottom & depressing top spring loaded Pin Hinge to fit door into place. Note: Be sure Pin Hinges (top & bottom) have fully extended into the pre-drilled holes to secure doors into place.



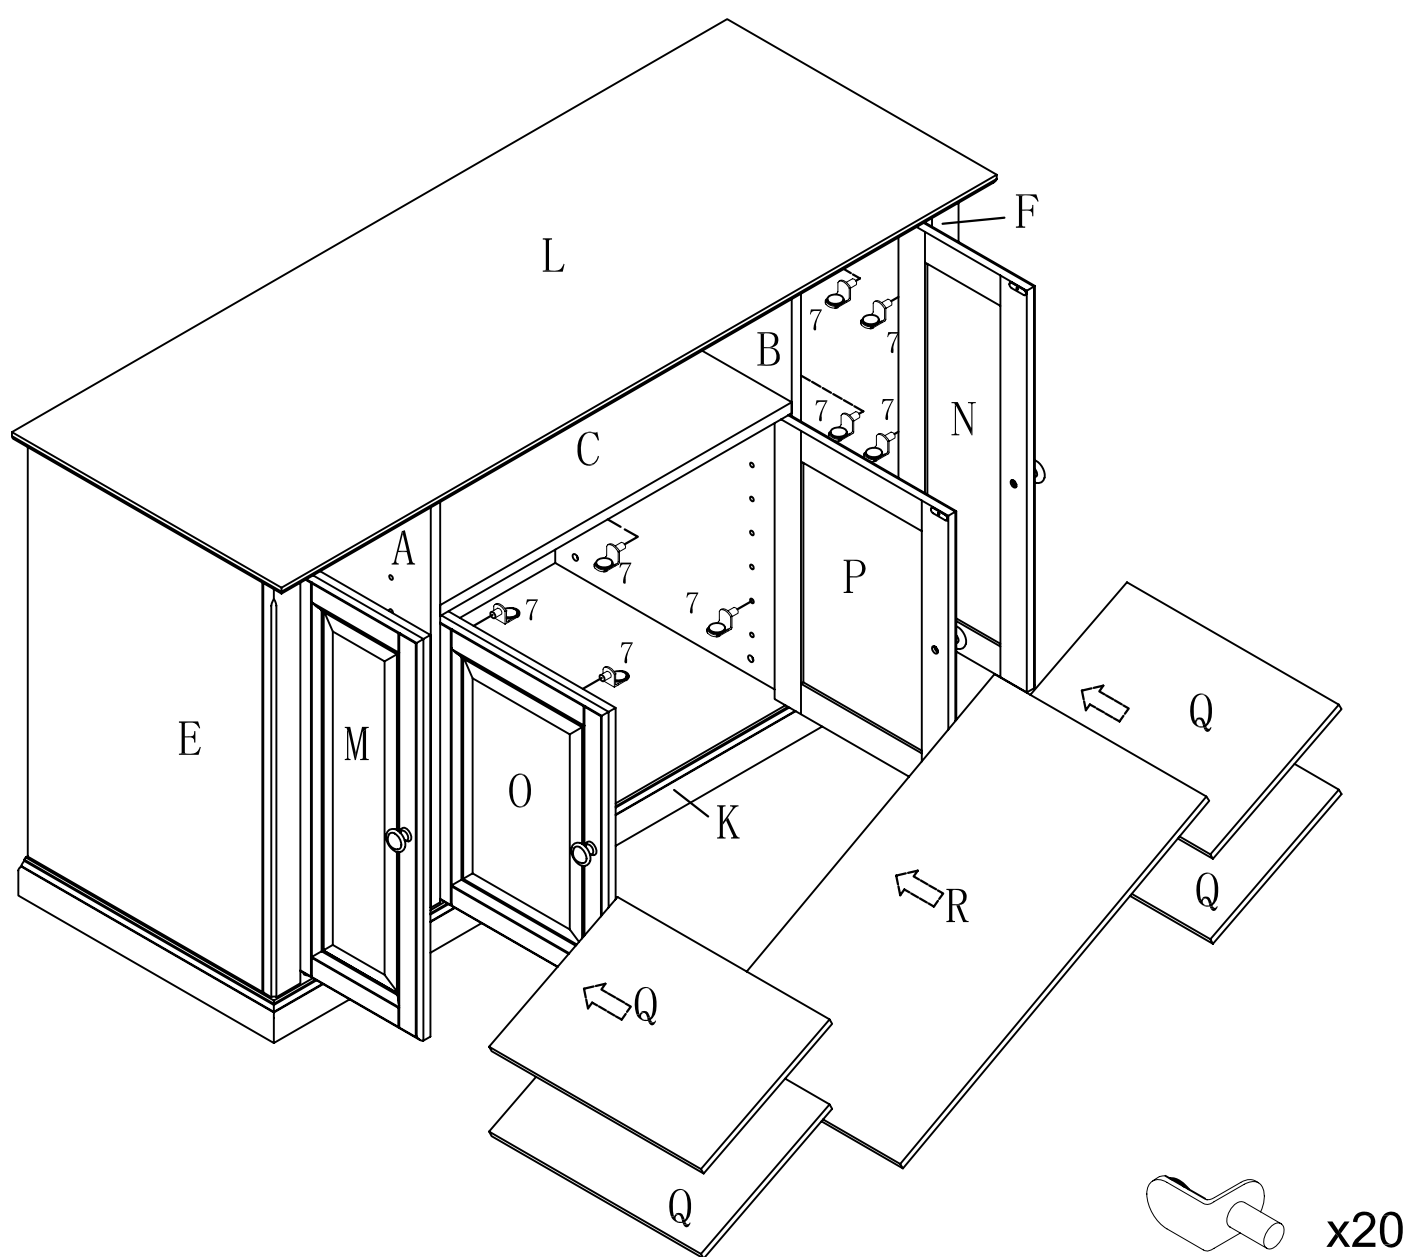 Step 12. Insert the Shelf Holders (Part #7) into desired position and add shelves.



Step 13. Place your assembled cabinet into the desired spot in your home. Attach the Center Support Leg S or T now by turning clockwise into the pre-drilled hole. **Support Leg T is for use only with Bun Foot. All other Leg styles will use support leg S.** NOTE: The adjustable leveler on the bottom of the Center Support Leg S/T should not be extended until after installation. Adjust the leveler on the bottom of the Center Support leg S/T until it fits tightly against the floor. Use of the support leg is important to support the center of the cabinet.

IMPORTANT! - IF YOU WISH TO RELOCATE YOUR CABINET, BE SURE TO REMOVE THE CENTER SUPPORT LEG. RE-INSTALL AFTER THE CABINET HAS BEEN MOVED.

